


---

# ILLUSTRATED PARTS MANUAL

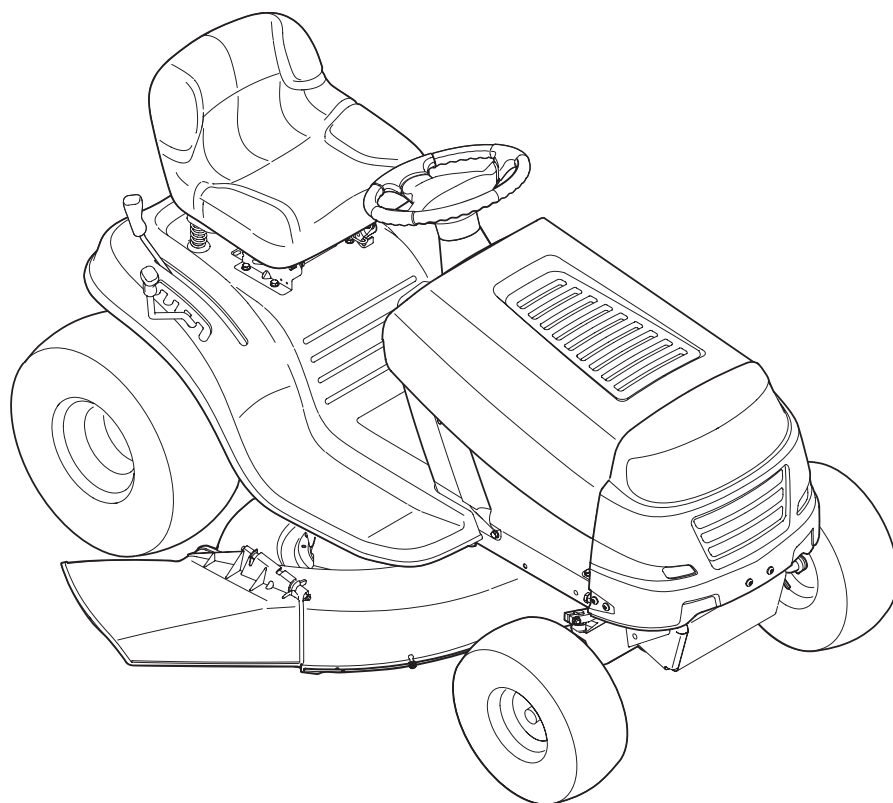


## Transmatic Lawn Tractor — Model Series 700

---

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

---

# 1 Style Hood

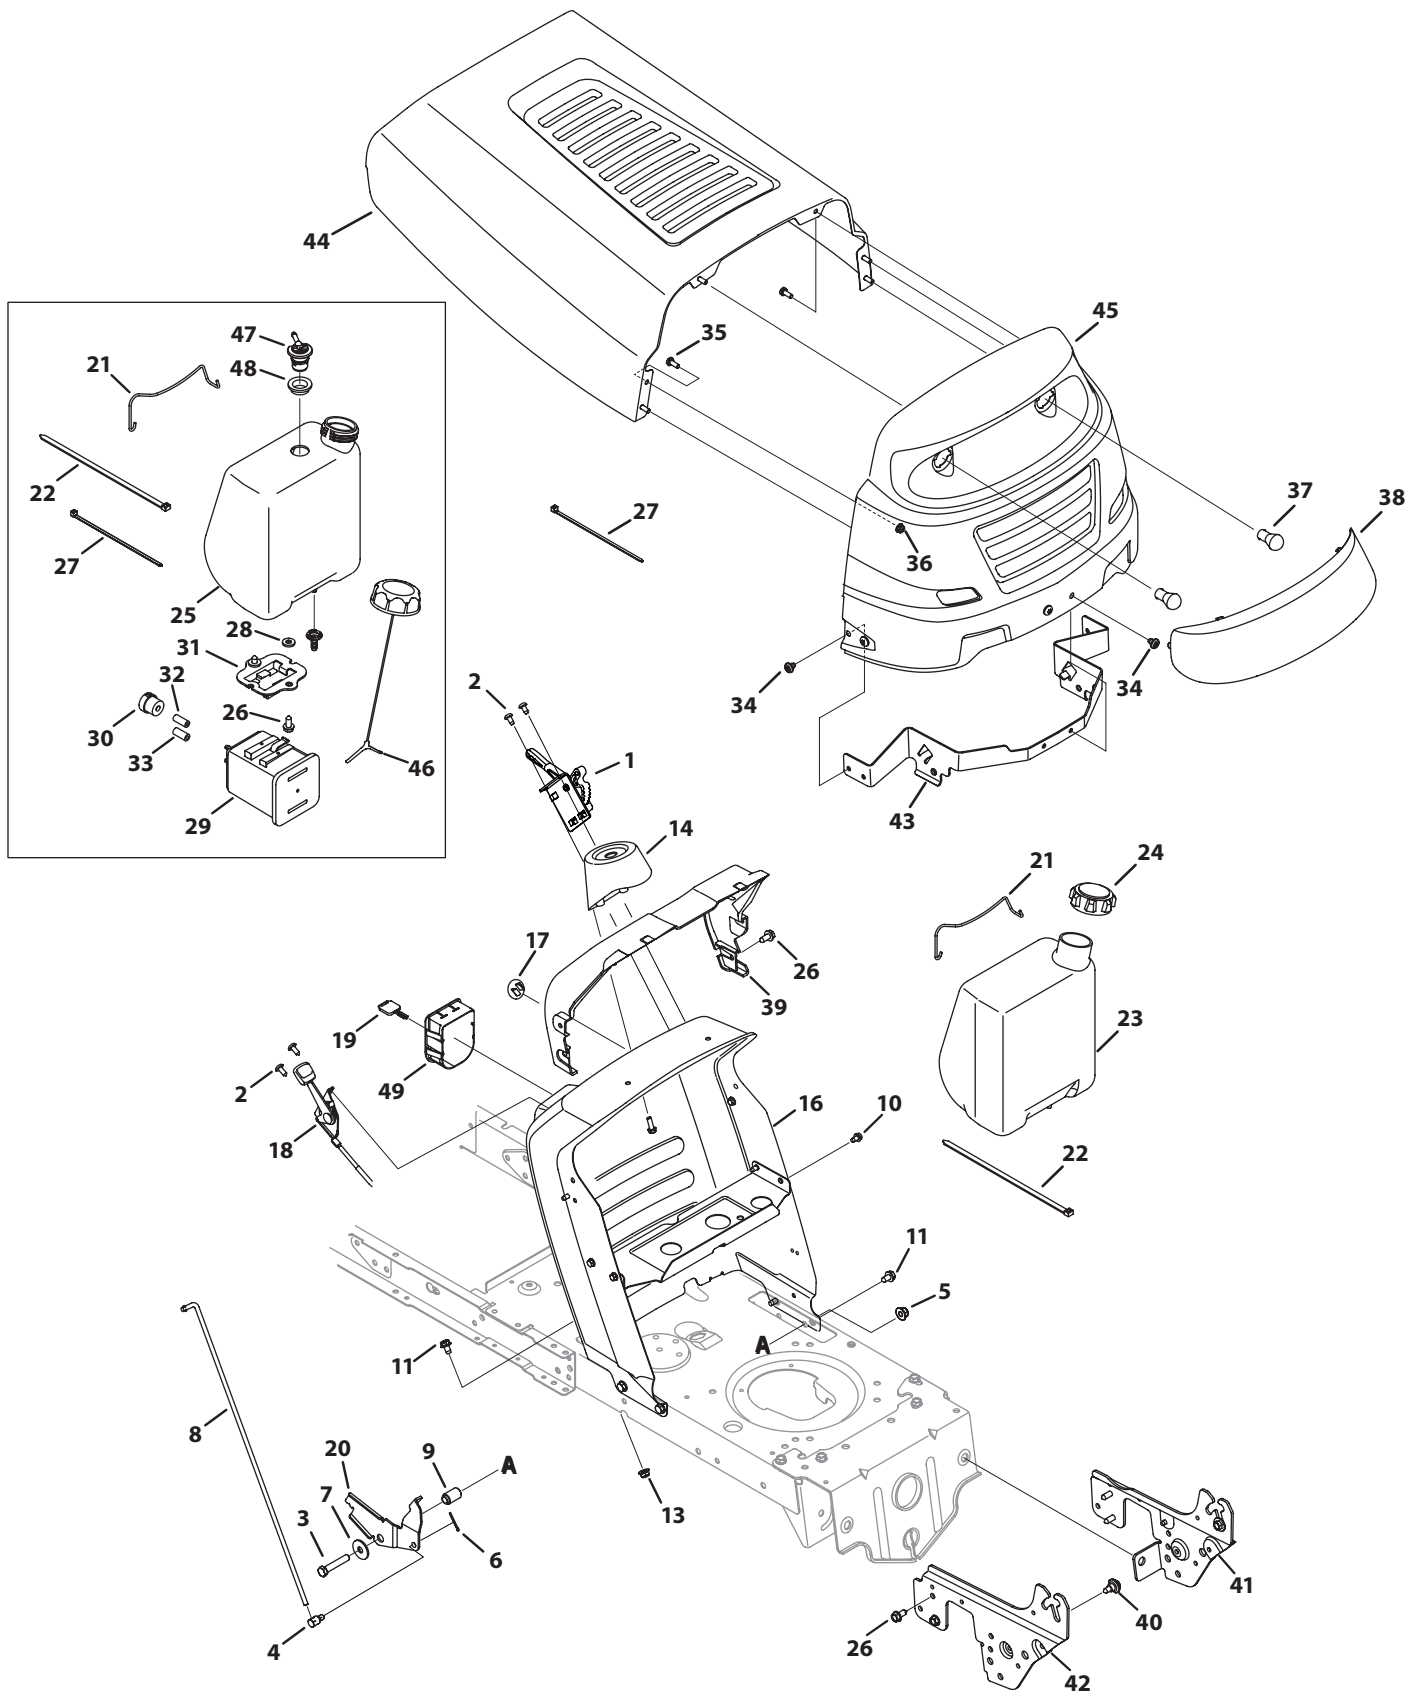


# 1 Style Hood

Ref. No.	Part No.	Description
1	983-04216	7-Speed Control Assembly
	983-04503	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-04483	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	914-0111	Cotter Pin, 3/32 x 1.0
7	936-0133	Flat Washer, .411 x 1.25 x .100
8	747-04430	Speed Selector
9	750-04465	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-0895	Screw, 1/4-15 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A-0637	Gas Tank Support Bracket
16	783-04873A-0637	Dash, No RMC - Powder Black
	783-04873A-0691	Dash, No RMC - Black Jack
	783-04873A-0665	Dash, No RMC - Green
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04903	Speed Latch - No RMC
21	683-04448-0637	Battery Assembly Rod
22	726-0230	Cable Tie
23	751-0555B	1.5 Gallon Fuel Tank
24	751-0603A	Fuel Cap
25	751-10782	1.36 Gallon Fuel Tank
26	710-04484	Screw, 5/16-18 x .750

Ref. No.	Part No.	Description
27	725-0157	Cable Tie
28	936-3008	Flat Washer, .344 x .750 x .120
29	951-10589	5 Gallon Carbon Canister
30	951-10590	Vent Filter Canister
31	951-10610	Canister Adapter
32	751-10749-30	Fuel Hose, White
33	751-10750-28	Fuel Hose, Yellow
34	710-04593	Screw, 5/16-18 x .375
35	710-0751	Hex Screw, 1/4-20 x .620
36	712-04064	Flangelock Nut, 1/4-20
37	925-0963	Miniature Lamp 12V Socket
38	731-04949A	Lens Grill
39	731-05078C	Dash
40	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29
41	783-05327B-0637	Left Support Pivot Bracket
42	783-05328A-0637	Right Support Pivot Bracket
43	783-05454-0637	Hood Pivot Bracket
44	783-05684-0638	Hood - Red
	783-05684-0674	Hood - Yellow
	783-05684-0662	Hood - Gray
	783-05684-0709	Hood - Green
45	783-05685-0638	Grill - Red
	783-05685-0674	Grill - Yellow
	783-05685-0662	Grill - Gray
	783-05685-0709	Grill - Green
46	951-10947	Fuel Cap, 2.25"
47	751-10441	Rollover Valve
48	735-04081	Rubber Grommet, 23 x 3.55
49	925-04659	Key Switch

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 2 Style Hood

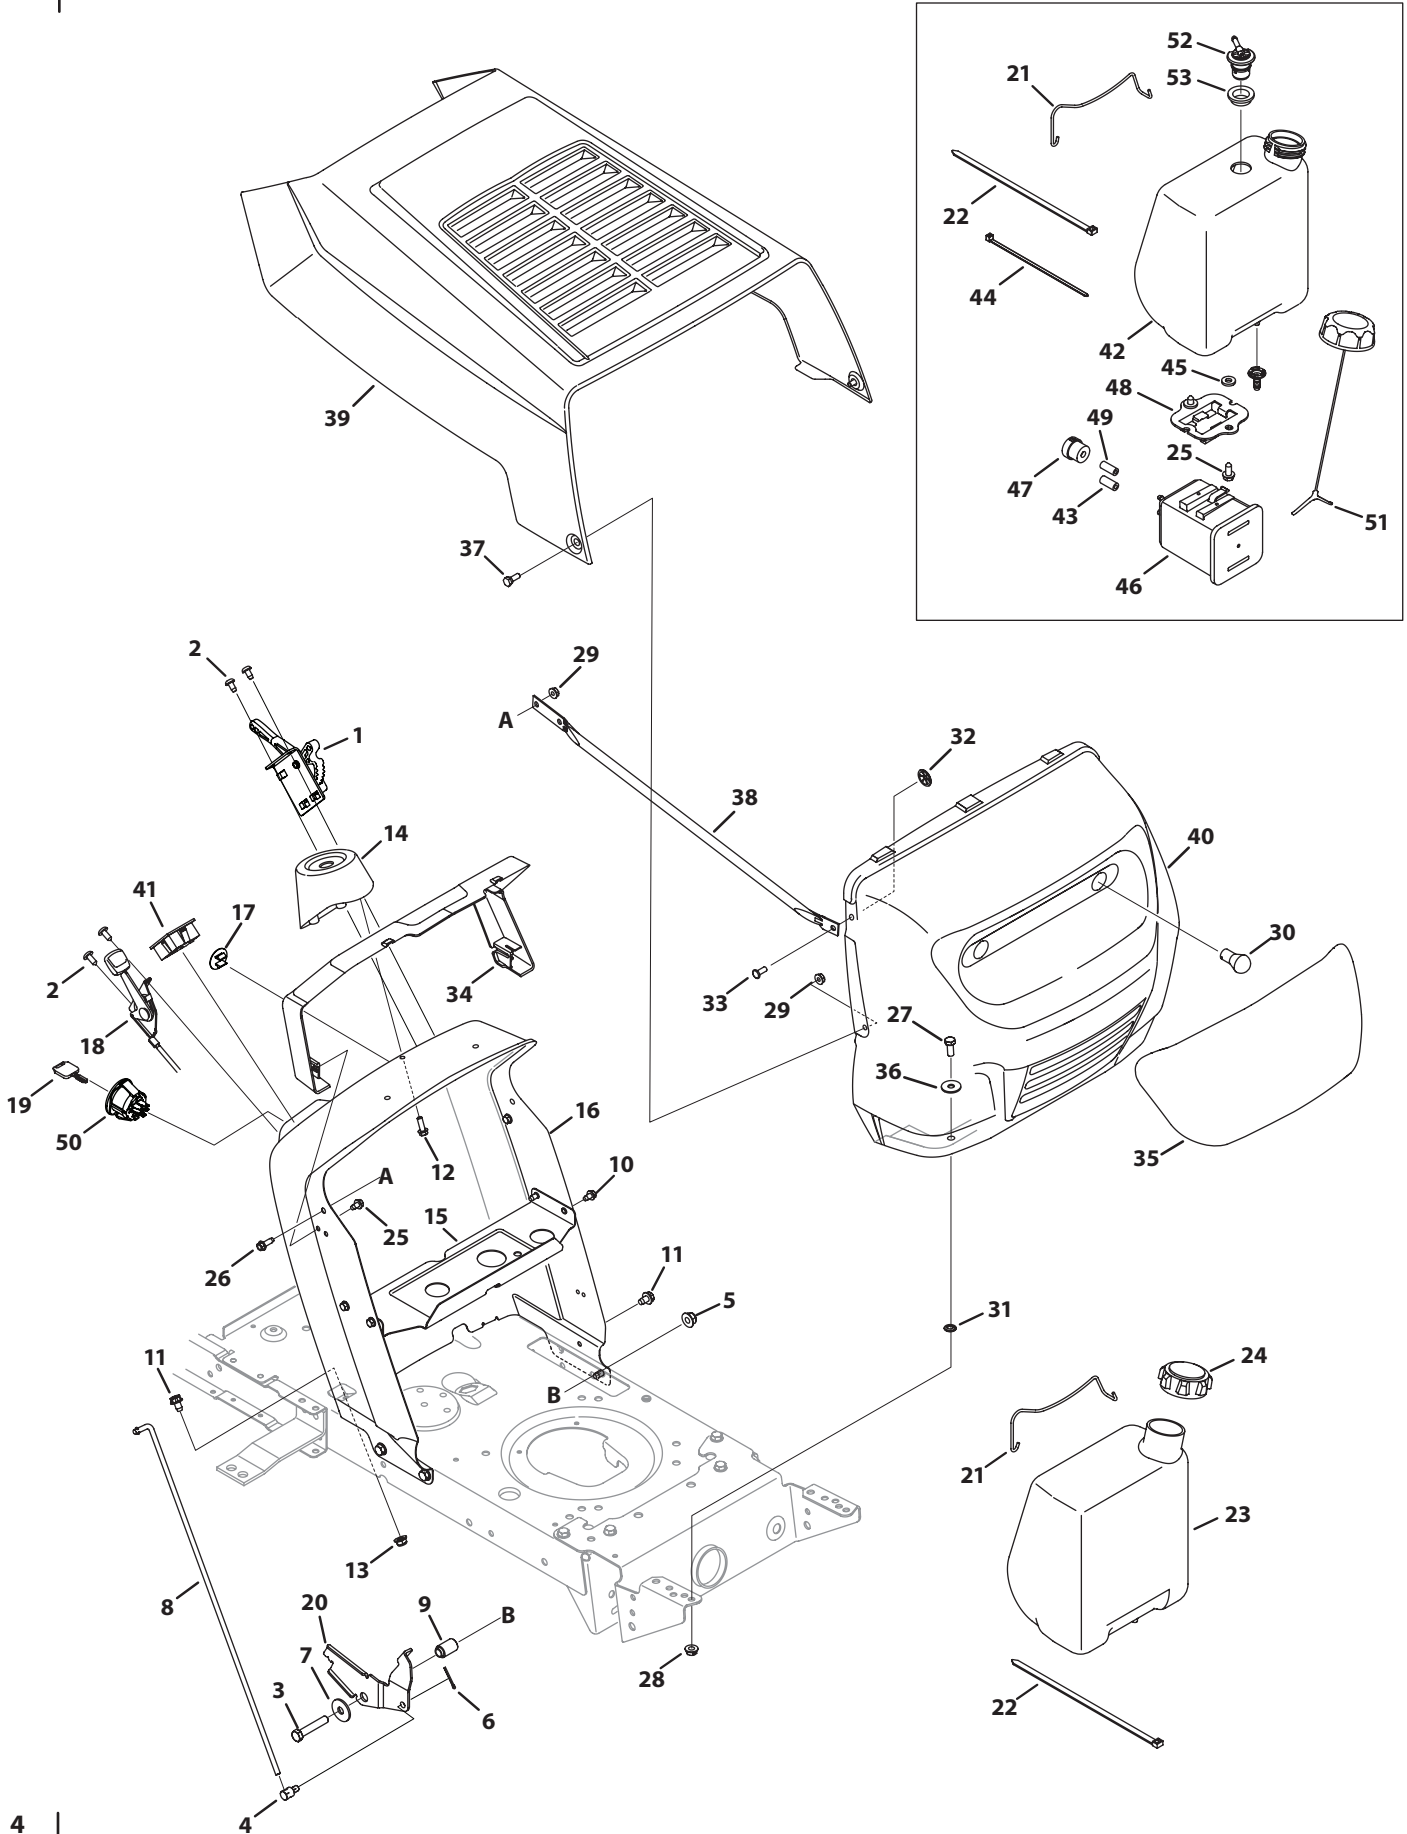


## 2 Style Hood

Ref. No.	Part No.	Description
1	983-04216	7-Speed Control Assembly
	983-04225	6-Speed Control Assembly
2	710-04483	Screw, 1/4-20 x .500
3	710-3144	Hex Screw, 3/8-16 x 2.0
4	711-0736	Ferrule, 1/4-20 x 1.00
5	710-04065	Flangelock Nut, 3/8-16
6	914-0111	Cotter Pin, 3/32 x 1.0
7	936-0133	Flat Washer, .411 x 1.25 x .100
8	747-04430	Speed Selector
9	750-04465	Flange Spacer, .390 x .671 x 1.095
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-0604A	Screw, 5/16-18 x .625
12	710-0895	Screw, 1/4-15 x .750
13	712-04063	Flangelock Nut, 5/16-18
14	731-04945	Steering Support
15	783-04584A-0637	Gas Tank Support Bracket
16	783-04889A-0637	Dash, RMC
	783-04873A-0637	Dash, No RMC - Powder Black
	783-04873A-0665	Dash, No RMC - Green
17	731-05265	Choke Plug
18	746-04364	Throttle/Choke Cable
19	925-1745A	Key
20	783-04862	Speed Latch. RMC
	783-04903	Speed Latch, No RMC
21	683-04448-0637	Battery Assembly Rod
22	726-0230	Cable Tie
23	751-0555B	1.5 Gallon Fuel Tank
24	751-0603A	Fuel Cap
25	710-04484	Screw, 5/16-18 x .750
26	710-0642	Screw, 1/4-20 x .750

Ref. No.	Part No.	Description
27	710-3008	Hex Screw, 5/16-18 x .75
28	712-04063	Flangelock Nut, 5/16-18
29	712-04064	Flangelock Nut, 1/4-20
30	925-0963	Miniature Lamp 12V Socket
31	726-0201	Speed Nut, .3125
32	926-04012	Push-On Nut, .25
33	728-0162	Flat Head Rivet, 1/4"
34	731-05012B	Dash
35	731-06042	Lens
36	736-3078	Flat Washer, .344 x 1.0 x .063
37	938-0952A	Shoulder Bolt, 1/4-20 x .375 x .125
38	749-04220-0637	Grill Support Rod
39	783-04608-0638	Hood - Red
	783-04608-0674	Hood - Yellow
40	783-05656-0638	Grill - Red
	783-05656-0674	Grill - Yellow
41	925-04156	Ammeter
42	751-10782	Fuel Tank, 1.36 Gallons
43	751-10750	Fuel Hose, Yellow
44	725-0157	Cable Tie
45	936-3008	Flat Washer, .344 x .750 x .120
46	951-10589	5 Gallon Carbon Canister
47	951-10590	Vent Filter Canister
48	951-10610	Canister Adaptor Bracket
49	751-10749-30	Fuel Hose, White
50	925-04659	Key Switch
51	951-10947	Fuel Cap, 2.25"
52	751-10441	Rollover Valve
53	735-04081	Rubber Grommet, 23 x 3.55

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# K Style Hood

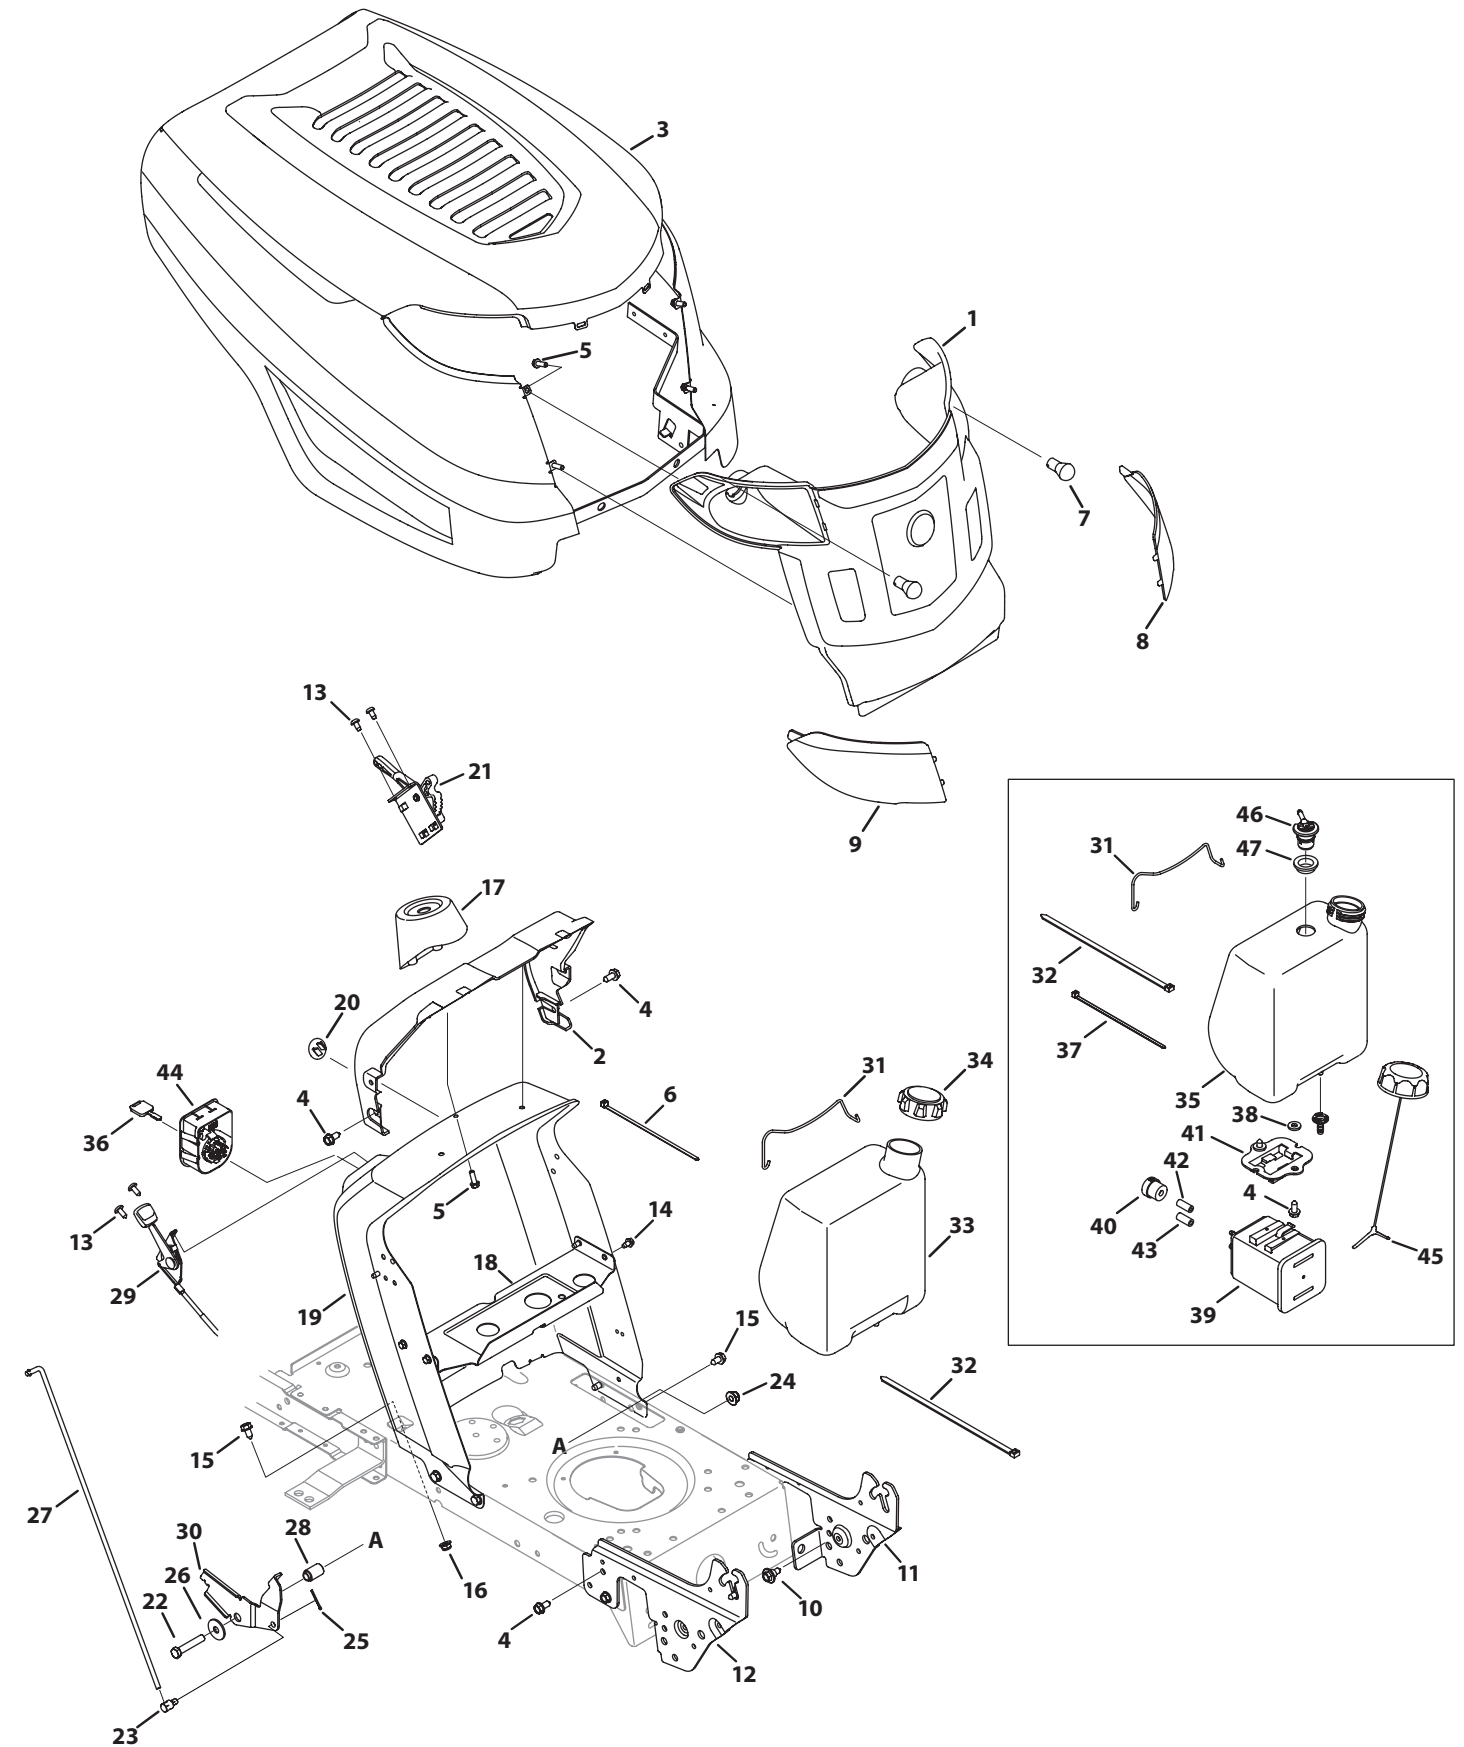


## K Style Hood

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	631-04272	Grill Assembly, Troy-Bilt	23	711-0736	Ferrule, 1/4-20 x 1.00
	931-06796	Grill Assembly, Orange	24	710-04065	Flangelock Nut, 3/8-16
2	731-05078C	Dash Assembly	25	914-0111	Cotter Pin, 3/32 x 1.0
	731-06404	K-Style Bumper	26	936-0133	Flat Washer, .411 x 1.25 x .100
	710-04261	Screw, #12-16 x .50	27	747-04430	Speed Selector
3	683-04441-0638	Hood Assembly	28	750-04465	Flange Spacer, .390 x .671 x 1.095
4	710-04484	Screw, 5/16-18 x .750	29	746-04364	Throttle/Choke Cable
5	710-0895	Screw, 1/4-15 x .750	30	783-04903	Speed Latch - No RMC
6	725-0157	Cable Tie	31	683-04448-0637	Battery Assembly Rod
7	925-0963	Lamp	32	726-0230	Cable Tie
8	731-06095	Left Lens	33	751-0555B	1.5 Gallon Fuel Tank
9	731-06096	Right Lens	34	751-0603A	Fuel Cap
10	738-04091A	Shoulder Screw, 5/16-18 x .43 x .29	35	751-10782	1.36 Gallon Fuel Tank
11	783-05327B-0637	Left Support Pivot Bracket	36	925-1745A	Key
12	783-05328A-0637	Right Support Pivot Bracket	37	725-0157	Cable Tie
13	710-04483	Screw, 1/4-20 x .500	38	936-3008	Flat Washer, .344 x .750 x .120
14	710-0599	Hex Washer Screw, 1/4-20 x .500	39	951-10589	5 Gallon Carbon Canister
15	710-0604A	Screw, 5/16-18 x .625	40	951-10590	Vent Filter Canister
16	712-04063	Flangelock Nut, 5/16-18	41	951-10610	Canister Adapter Bracket
17	731-04945	Steering Support	42	751-10749-30	Fuel Hose, White
18	783-04584A-0637	Gas Tank Support Bracket	43	751-10750-28	Fuel Hose, Yellow
19	783-04873A-0638	Dash, No RMC - Red	44	925-04659	3 Position Key Switch
20	731-05265	Choke Plug	45	951-10947	Fuel Cap, 2.25"
21	983-04216	7-Speed Control Assembly	46	751-10441	Rollover Valve
22	710-3144	Hex Screw, 3/8-16 x 2.0	47	735-04081	Rubber Grommet, 23 x 3.55

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 5 Style Hood with Plenum

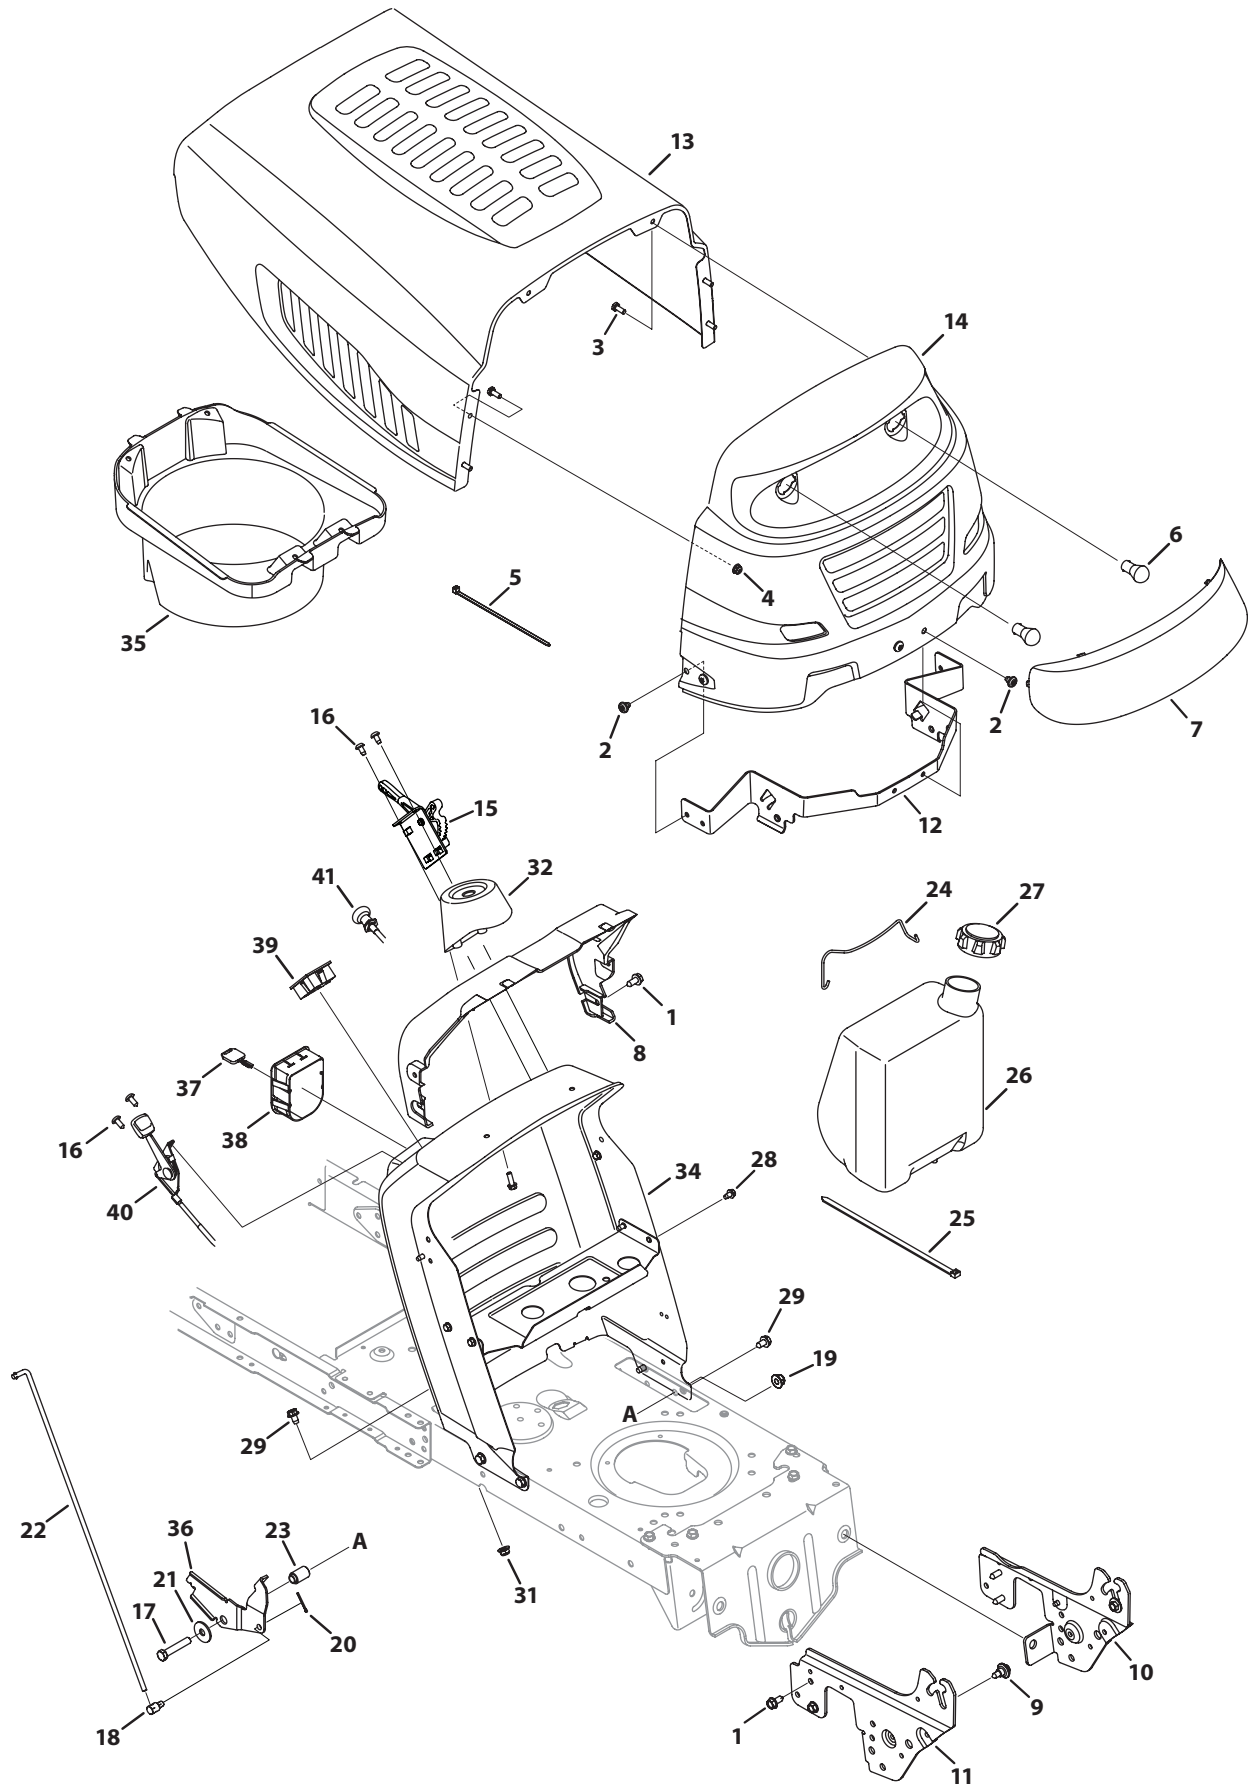




## 5 Style Hood with Plenum

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04484	Screw, 5/16-18 x .750	22	747-04430	Speed Selector Control Rod
2	710-04593	Screw, 5/16-18 x .375	23	750-04465	Flange Spacer, .390 x .671 x 1.095
3	710-0751	Hex Screw, 1/4-20 x .620	24	683-04448-0637	Battery Rod
4	712-04064	Flangelock Nut, 1/4-20	25	726-0230	Cable Tie
5	725-0157	Cable Tie	26	751-0555B	Fuel Tank, 1.5 Gallon
6	925-0963	Miniature Lamp, 12V	27	751-0603A	Fuel Cap
7	731-04949A	Grill Lens	28	710-0599	Hex Index Washer Screw, 1/4-20 x .500
8	731-05078C	Dash	29	710-0604A	Screw, 5/16-18 x .625
9	738-04091A	Shoulder Screw, 5/16-18, .43 x .29	30	710-0895	Screw, 1/4-15 x .750
10	783-05327B-0637	Left-hand Support Pivot Bracket	31	712-04063	Flangelock Nut, 5/16-18
11	783-05328A-0637	Right-hand Support Pivot Bracket	32	731-04945	Steering Support
12	783-05454-0637	Hood Pivot Bracket	33	783-04584A-0637	Gas Tank Support Bracket
13	783-05683	Hood	34	783-04889A	Dash, RMC
14	783-05685	Grill	35	731-06216	Plenum
15	983-04216	7-speed Control Assembly	36	783-04862	Speed Latch
16	710-04483	Screw, 1/4-20 x .500	37	925-1745A	Key
17	710-3144	Hex Screw, 3/8-16 x 2.0	38	925-04227B	Key Switch
18	711-0736	Ferrule, 1/4-20 x 1.0	39	925-04156	Ammeter Monitor
19	712-04065	Flangelock Nut, 3/8-16	40	746-04365	Throttle Cable
20	914-0111	Cotter Pin, 3/32 x 1.0	41	746-1085A	Choke Control
21	936-0133	Flat Washer, .411 x 1.25 x .100			

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 5 Style Hood

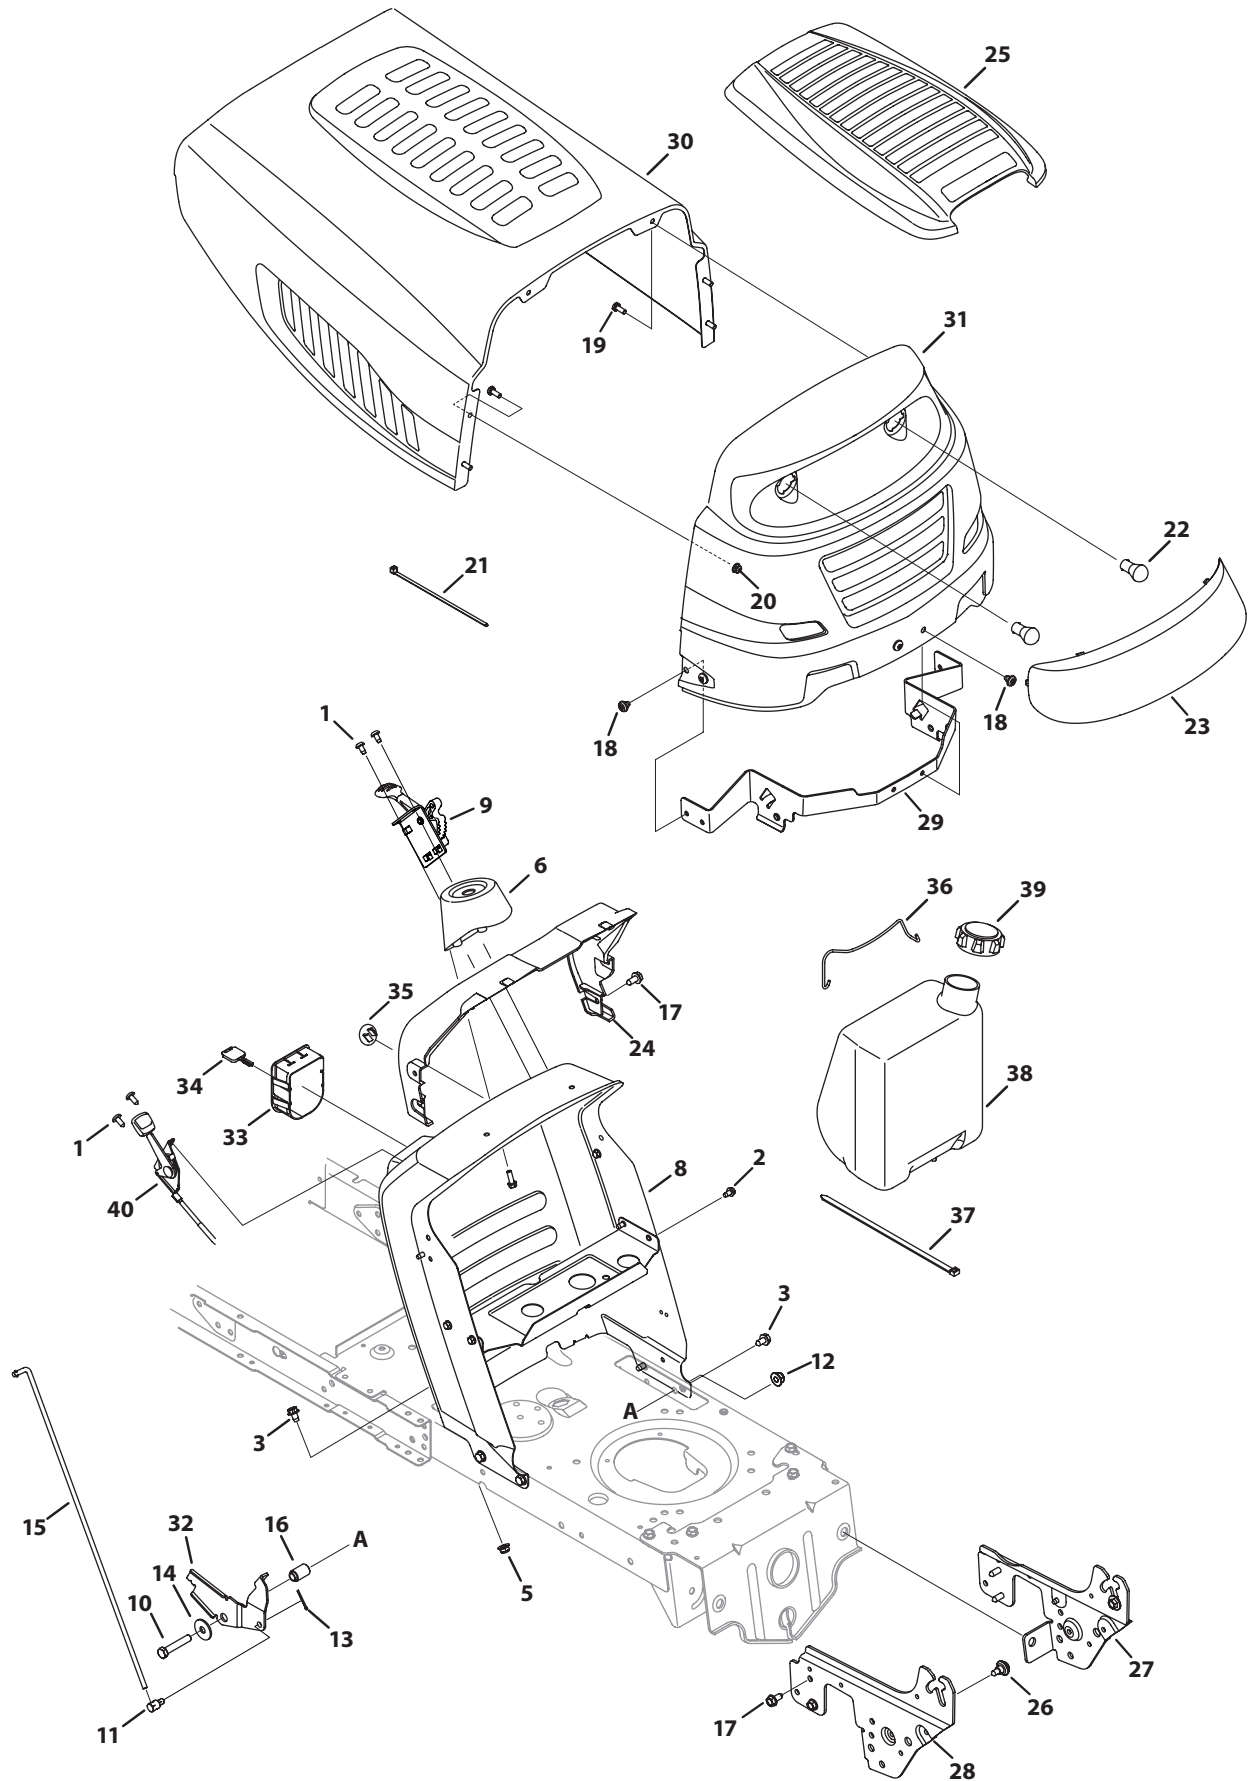


## 5 Style Hood

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04483	Screw, 1/4-20 x .500	21	725-0157	Cable Tie
2	710-0599	Hex Index Washer Screw, 1/4-20 x .500	22	925-0963	Miniature Lamp, 12V
3	710-0604A	Screw, 5/16-18 x .625	23	731-04949A	Grill Lens
4	710-0895	Screw, 1/4-15 x .750	24	731-05078C	Dash
5	712-04063	Flangelock Nut, 5/16-18	25	731-05522A	Hood Cover
6	731-04945	Steering Support	26	738-04091A	Shoulder Screw, 5/16-18, .43 x .29
7	783-04584A-0637	Gas Tank Support Bracket	27	783-05327B-0637	Left-hand Support Pivot Bracket
8	783-04873A-0637	Dash, No RMC	28	783-05328A-0637	Right-hand Support Pivot Bracket
9	983-04274	7-speed Control Assembly	29	783-05454-0637	Hood Pivot Bracket
10	710-3144	Hex Screw, 3/8-16 x 2.0	30	783-05683-0638	Hood - Red
11	711-0736	Ferrule, 1/4-20 x 1.0	31	783-05685-0638	Grill - Red
12	712-04065	Flangelock Nut, 3/8-16	32	783-04903	Speed Latch, No RMC
13	914-0111	Cotter Pin, 3/32 x 1.0	33	925-04659	Key Switch
14	936-0133	Flat Washer, .411 x 1.25 x .100	34	925-1745A	Key
15	747-04430	Speed Selector Control Rod	35	731-05265	Choke Plug
16	750-04465	Flange Spacer, .390 x .671 x 1.095	36	683-04448-0637	Battery Rod
17	710-04484	Screw, 5/16-18 x .750	37	726-0230	Cable Tie
18	710-04593	Screw, 5/16-18 x .375	38	751-0555B	Fuel Tank, 1.5 Gallon
19	710-0751	Hex Screw, 1/4-20 x .620	39	751-0603A	Fuel Cap
20	712-04064	Flangelock Nut, 1/4-20	40	746-04364	Throttle/Choke Cable

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# G Style Hood

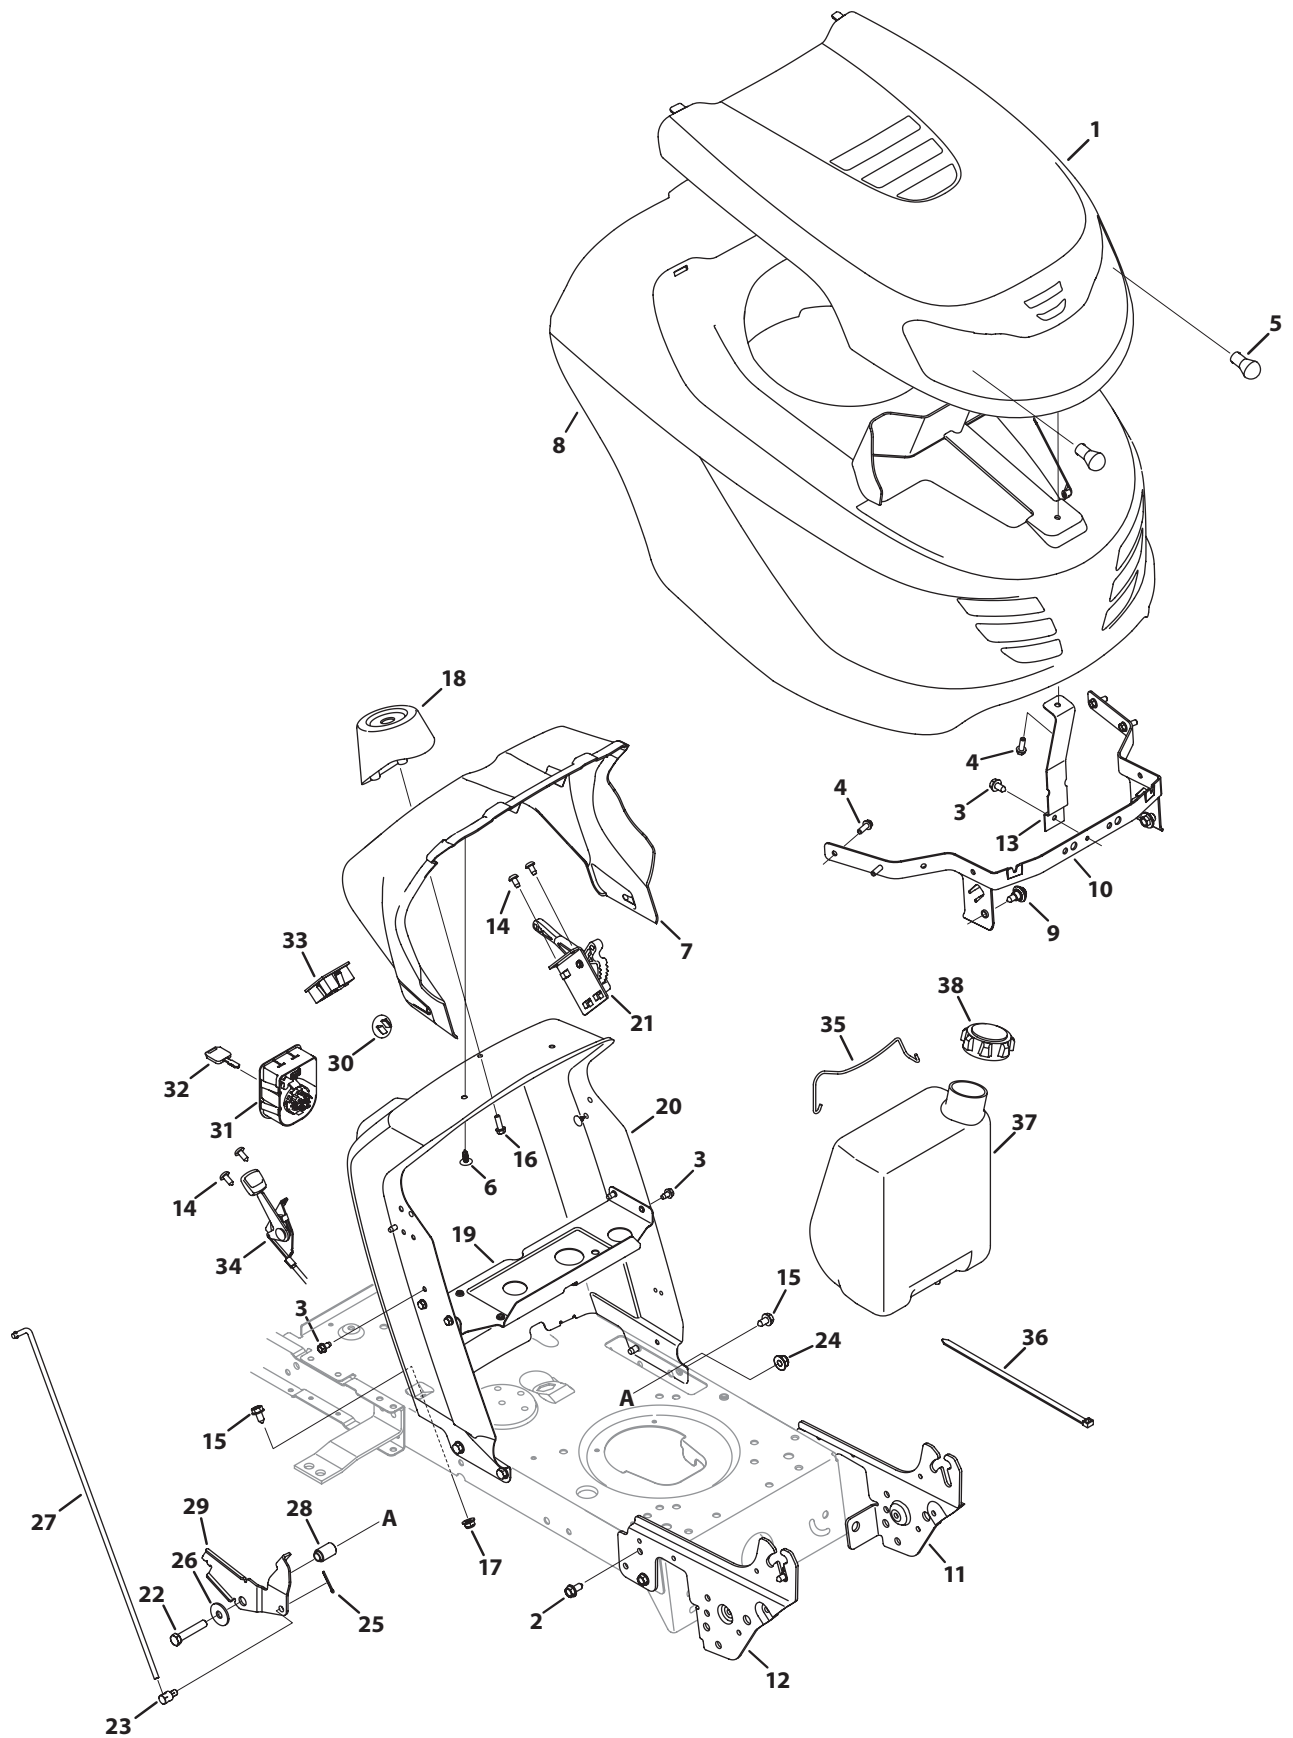


## G Style Hood

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	931-06560	G Style Hood, Upper Assembly	19	783-04584A-0637	Gas Tank Support Bracket
	931-06564	Lens, G Style Hood	20	983-04889A-0637	Dash
	777X43285	Label, Reflective G Style	21	983-04216	7 Speed Control Assembly
2	710-04484	Screw, 5/16-18 x .750	22	710-3144	Hex Screw, 3/8-16 x 2.00
3	710-0599	Screw, 1/4-20 x 0.500	23	711-0736	Ferrule, 1/4-20 x 1.00
4	710-0895	Screw, 1/4-15 x 0.750	24	712-04065	Flangelock Nut, 3/8-16
5	925-0963	Lamp	25	914-0111	Cotter Pin, 3/32:1.0
6	726-3046	Ratchet Clip, .250 DIA	26	936-0133	Flat Washer, .411 x 1.25 x .100
7	931-06470	Dash Collar	27	747-04430	Speed Selector Control Rod
8	931-06537	G Style Hood	28	750-04465	Flange Spacer, .390 x .671 x 1.095
9	738-04091A	Shoulder Screw, 5/16-18, .43 x .29	29	783-04862	Speed Latch
10	783-04606C-0637	Pivot Hood Bracket	30	731-05265	Choke Plug
11	783-05327B-0637	LH Pivot Support Bracket	31	925-04227B	Key Switch Module
12	783-05328A-0637	RH Pivot Support Bracket	32	925-1745A	Key
13	783-06117-0637	Hood Support Bracket	33	925-04156	Indicator Monitor
14	710-04483	Screw, 1/4-20 x .500	34	746-04364	Throttle/Choke Cable
15	710-0604A	Screw, 5/16-18 x 0.625	35	683-04448-0637	Battery Rod
16	710-0895	Screw, 1/4-15 x 0.750	36	726-0230	Cable Tie
17	712-04063	Flangelock Nut, 5/16-18	37	751-0555B	Fuel Tank
18	731-04945	Steering Support	38	751-0603A	Fuel Cap

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Frame and PTO Lift

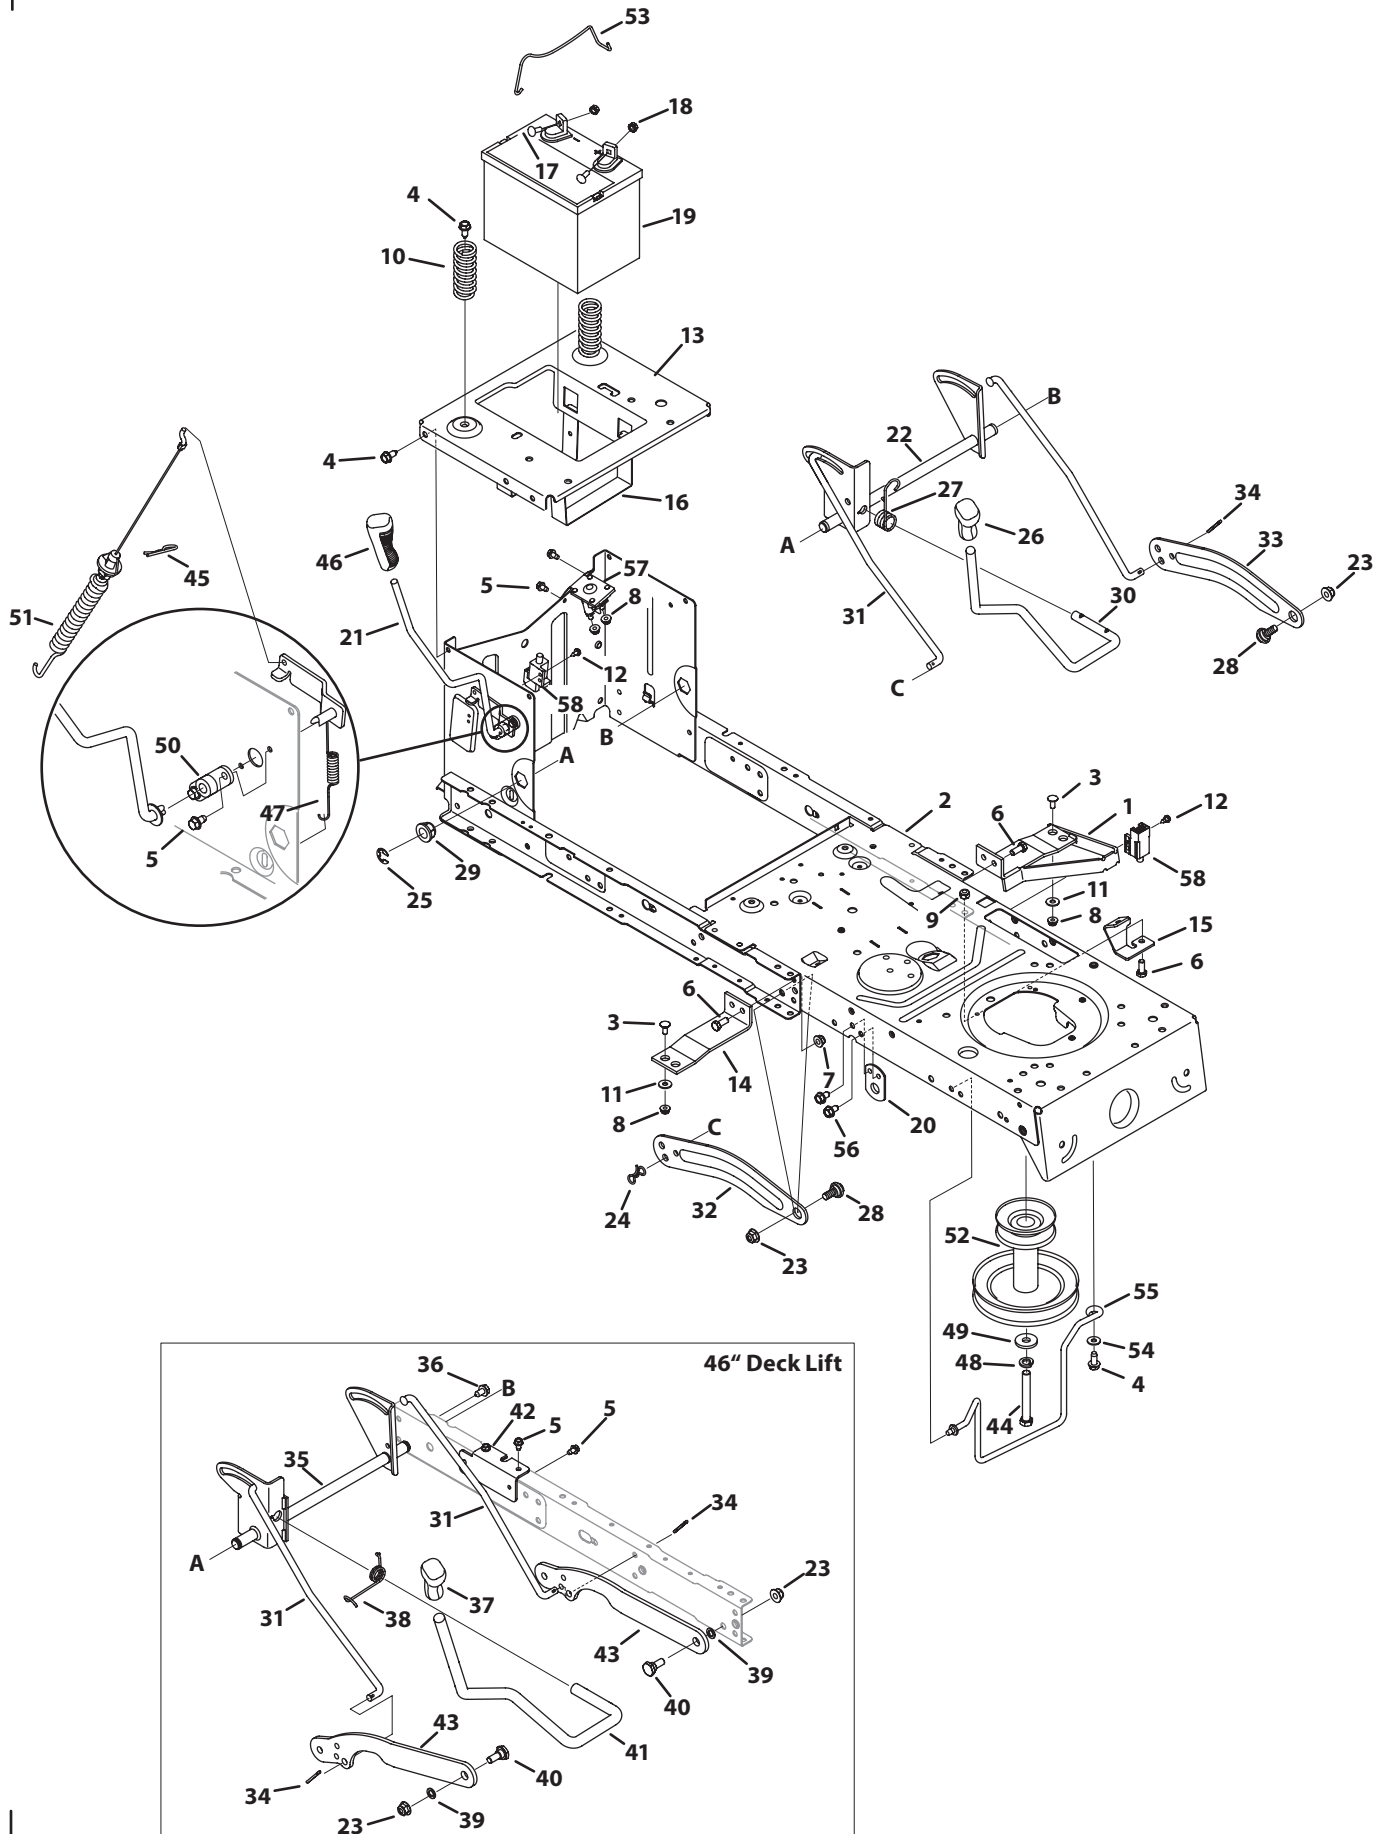


## Frame and PTO Lift

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	683-04195-0637	Support Bracket	30	747-04282	Deck Lift Handle
2	683-04450-0637	Frame Assembly - Powder Black	31	747-04393	Lift Rod
	683-04450-0665	Frame Assembly - Green	32	783-04494B-0637	38/42" Lift Arm, RH
	683-04450-0691	Frame Assembly - Black Jack	33	783-04711B-0637	38/42" Lift Arm, LH
	683-04450-0638	Frame Assembly - Red	34	914-0115	Cotter Pin, 1/8 x 1.0
3	710-0134	Screw Carriage, 1/4-20 x .62	35	683-04334-0637	Lift Assembly, 46"
4	710-04484	Screw 5/16-18 x .750	36	710-0604A	Screw, 5/16-18 x .625
5	710-0599	Screw, 1/4-20 x .500	37	720-0298	Handle Grip, 5/8
6	710-3008	Hex Screw, 5/16-18 x .75	38	732-04438	Torsion Spring Handle, 46"
7	712-04063	Flangelock Nut, 5/16-18	39	936-0140	Flat Washer, .385 x .62 x .063
8	712-04064	Flangelock Nut, 1/4-20	40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
9	912-0429	Hexlock Nut, 5/16-18	41	747-04653	46" Lift Handle
10	732-04035	Compression Spacer, 1.28 x 3.125	42	783-05389-0637	Frame Brace Bracket
11	736-0173	Flat Washer, .28 x .74 x .063	43	783-0678C-0637	Lift Deck Link
12	738-04237A	Shoulder Spacer, 10-32 x .500	44	710-04607	Hex Screw, 7/16-20 x 2.75, 46"
13	783-04548C-0637	Seat Frame Bracket		710-04608	Hex Screw, 7/16-20 x 3.25, 38/42"
14	783-04637-0637	Runningboard Bracket	45	914-0145	Click Pin, .092 x 1.64
15	783-04753-0637	Support Frame Bracket	46	720-04049A	Handle Grip, 3/8
16	783-04869A-0637	Battery Bracket	47	732-04276A	PTO Spring Extension
17	710-04666	Hex Head Flange, 1/4-20 x .75	48	936-0171	Regular Duty Washer Lock, 7/16
18	712-0271	Sems Nut, 1/4-20	49	736-0322	Flat Washer, .450 x 1.250 x .164
19	925-1707D	155 CCA Battery	50	741-04119	PTO Bearing
	925-1707D	230 CCA Battery	51	746-04173B	Deck Engage Cable
20	783-04536B-0637	Support Bracket	52	756-04207A	Engine Pulley, 3.39 x 6.12, 46"
21	647-04096-0637	PTO Handle Assembly		756-04196A	Engine Pulley, 3.39 x 6.12, 38/42"
22	683-04155A-0637	Lift Assembly, 38/42"	53	747-04744	Battery Hold Down Rod
23	712-04065	Flangelock Nut, 3/8-16	54	936-0300	Flat Washer, .406 x .875 x .059
24	714-04043	Bow-tie Cotter Pin	55	747-04332A	38" Belt Keeper
25	716-0106A	E Ring		747-04857	42" Belt Keeper
26	720-0311	Handle Grip, 1/2		683-04414-0637	46" Belt Keeper
27	732-04225	Torsion Spring	56	710-0604A	Screw, 5/16-18.0 x .625
28	738-04130	Shoulder Bolt, 3/8-16 x .625 x .175	57	725-04439	12V Solenoid
29	941-0225	Hex Flange Bearing	58	725-04363	Switch Interlock

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Front End Steering

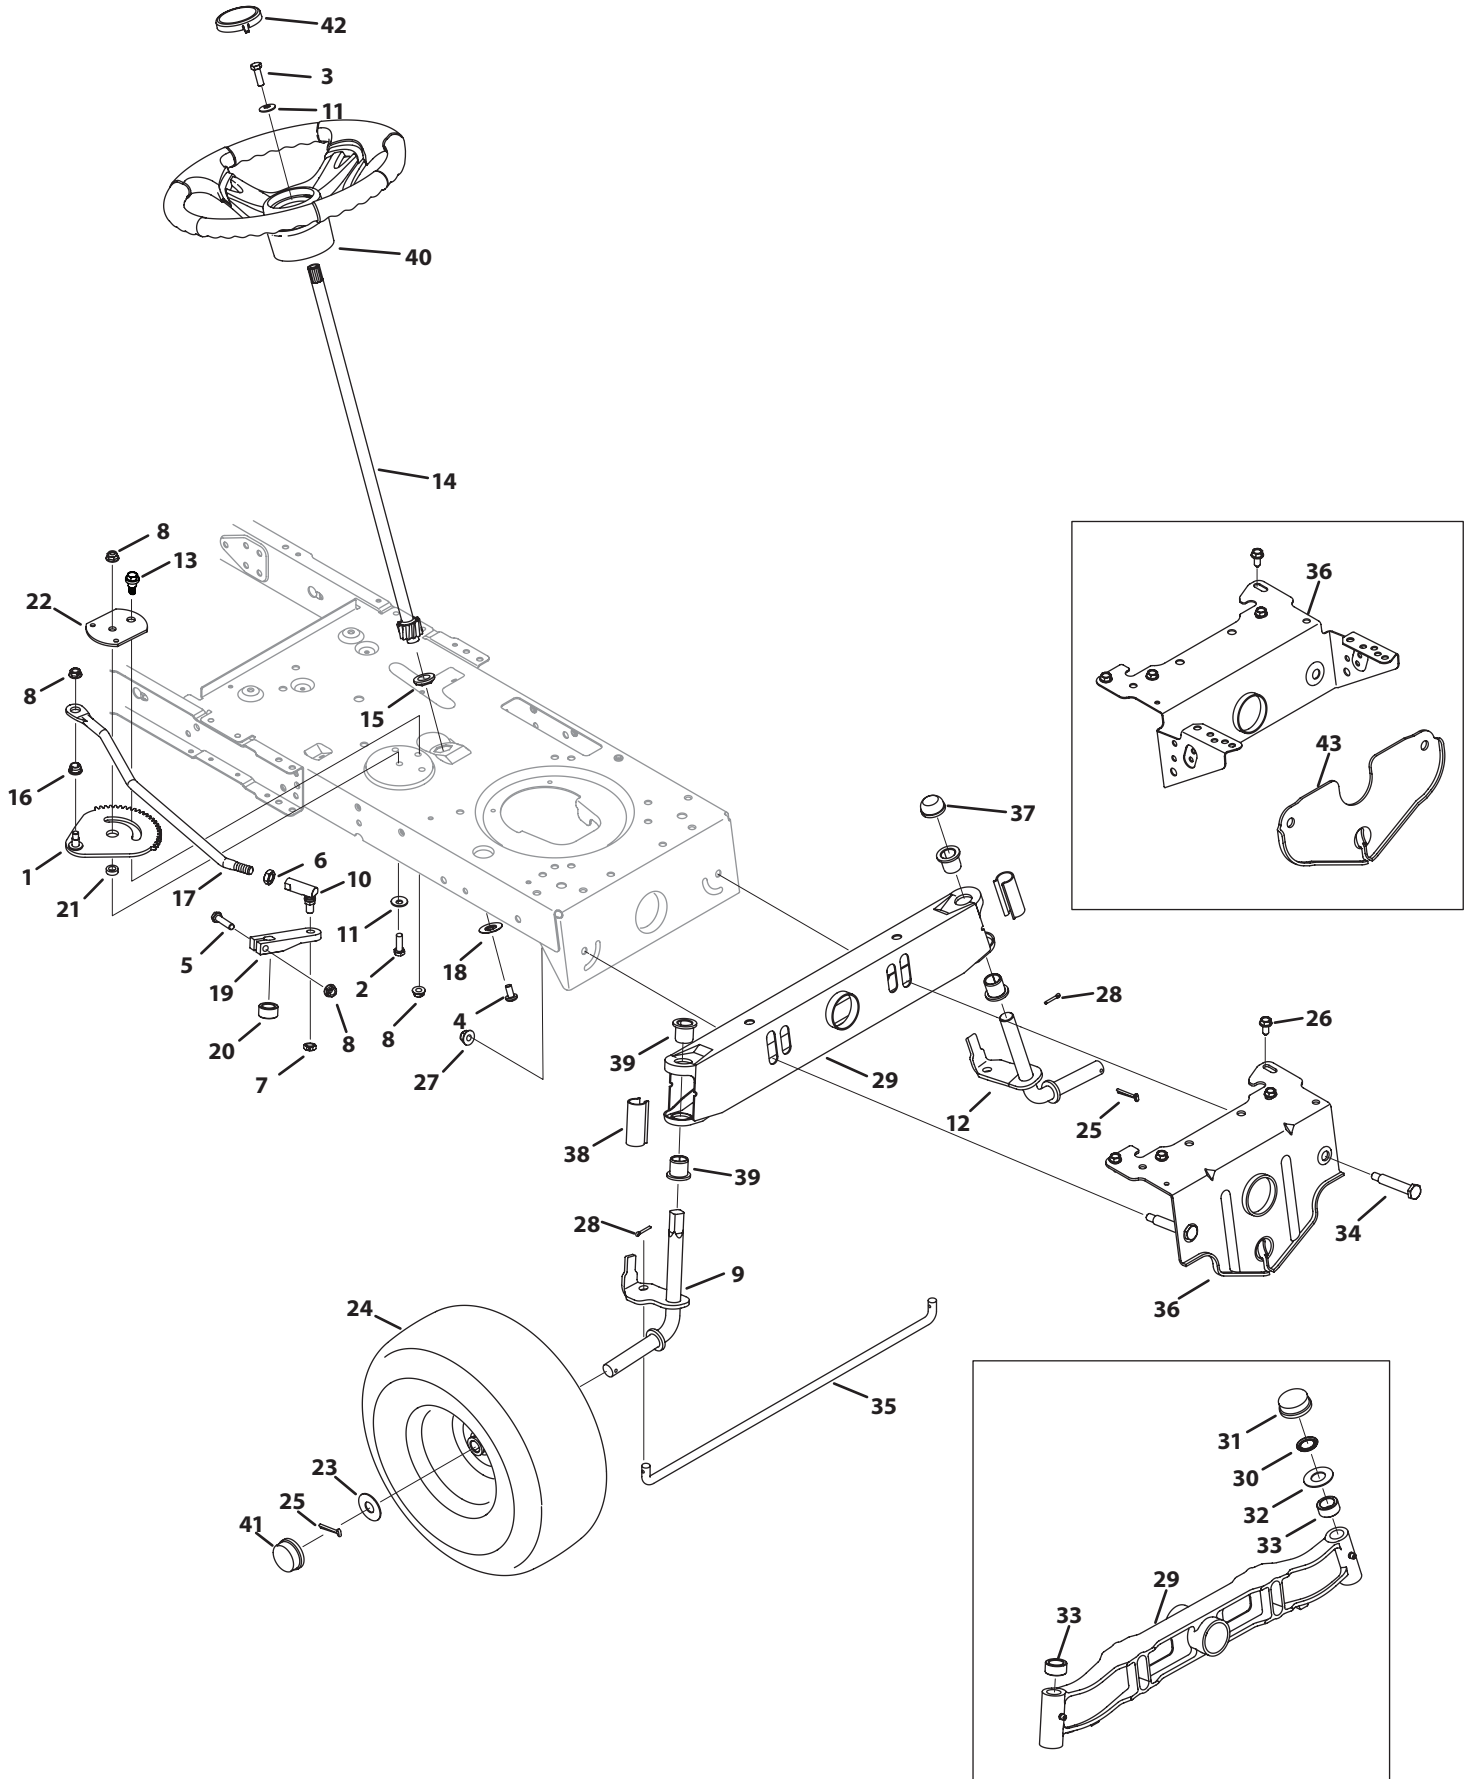




## Front End Steering

Ref. No.	Part No.	Description
1	617-04024	Front Steering Gear Assembly
2	710-0376	Hex Screw, 5/16-18 x 1.00, Standard
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	712-0262	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	638-04007A-0637	Front LH Axle
	638-04014A-0637	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	738-0919A	Steering Shaft, 5/8 x 22.08
15	941-04124	Flange Bearing, 5/8
16	941-0475	Plastic Bushing, .380 ID
17	747-04298	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04065-0637	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	750-04418	Spacer, .322 x .625 .21
22	783-04644	Gear Segment Stabilizer Plater
23	736-04228A	Flat Washer, .781 x 1.590
24	634-04086-0911	Wheel Assembly, 46" - Gray
	634-04086-0941	Wheel Assembly, 46" - Yellow
	634-04325-0911	Wheel Assembly, 42"/38" - Gray
	634-04325-0941	Wheel Assembly, 42"/38" - Yellow

Ref. No.	Part No.	Description
25	714-04039	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	719-04177A	Pivot Axle
	683-0128B-0637	Pivot Axle
30	726-04035	Push Nut, 3/4
31	731-04693	Hub Cap
32	936-0316	Flat Washer, .78 x 1.59 x .060
33	748-04068	Spacer, .71 x .125 x .56
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326-0637	Pivot Bar Bracket
	783-04601C-0637	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	631-04028	Steering Wheel
41	931-0484A	Hub Cap
42	731-04039	Cap
	731-04040	Sprig Cap
	731-04681	Cap, Troy-Bilt
43	783-04568-0637	Front Deck Hanger Bracket

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Seat and Fender

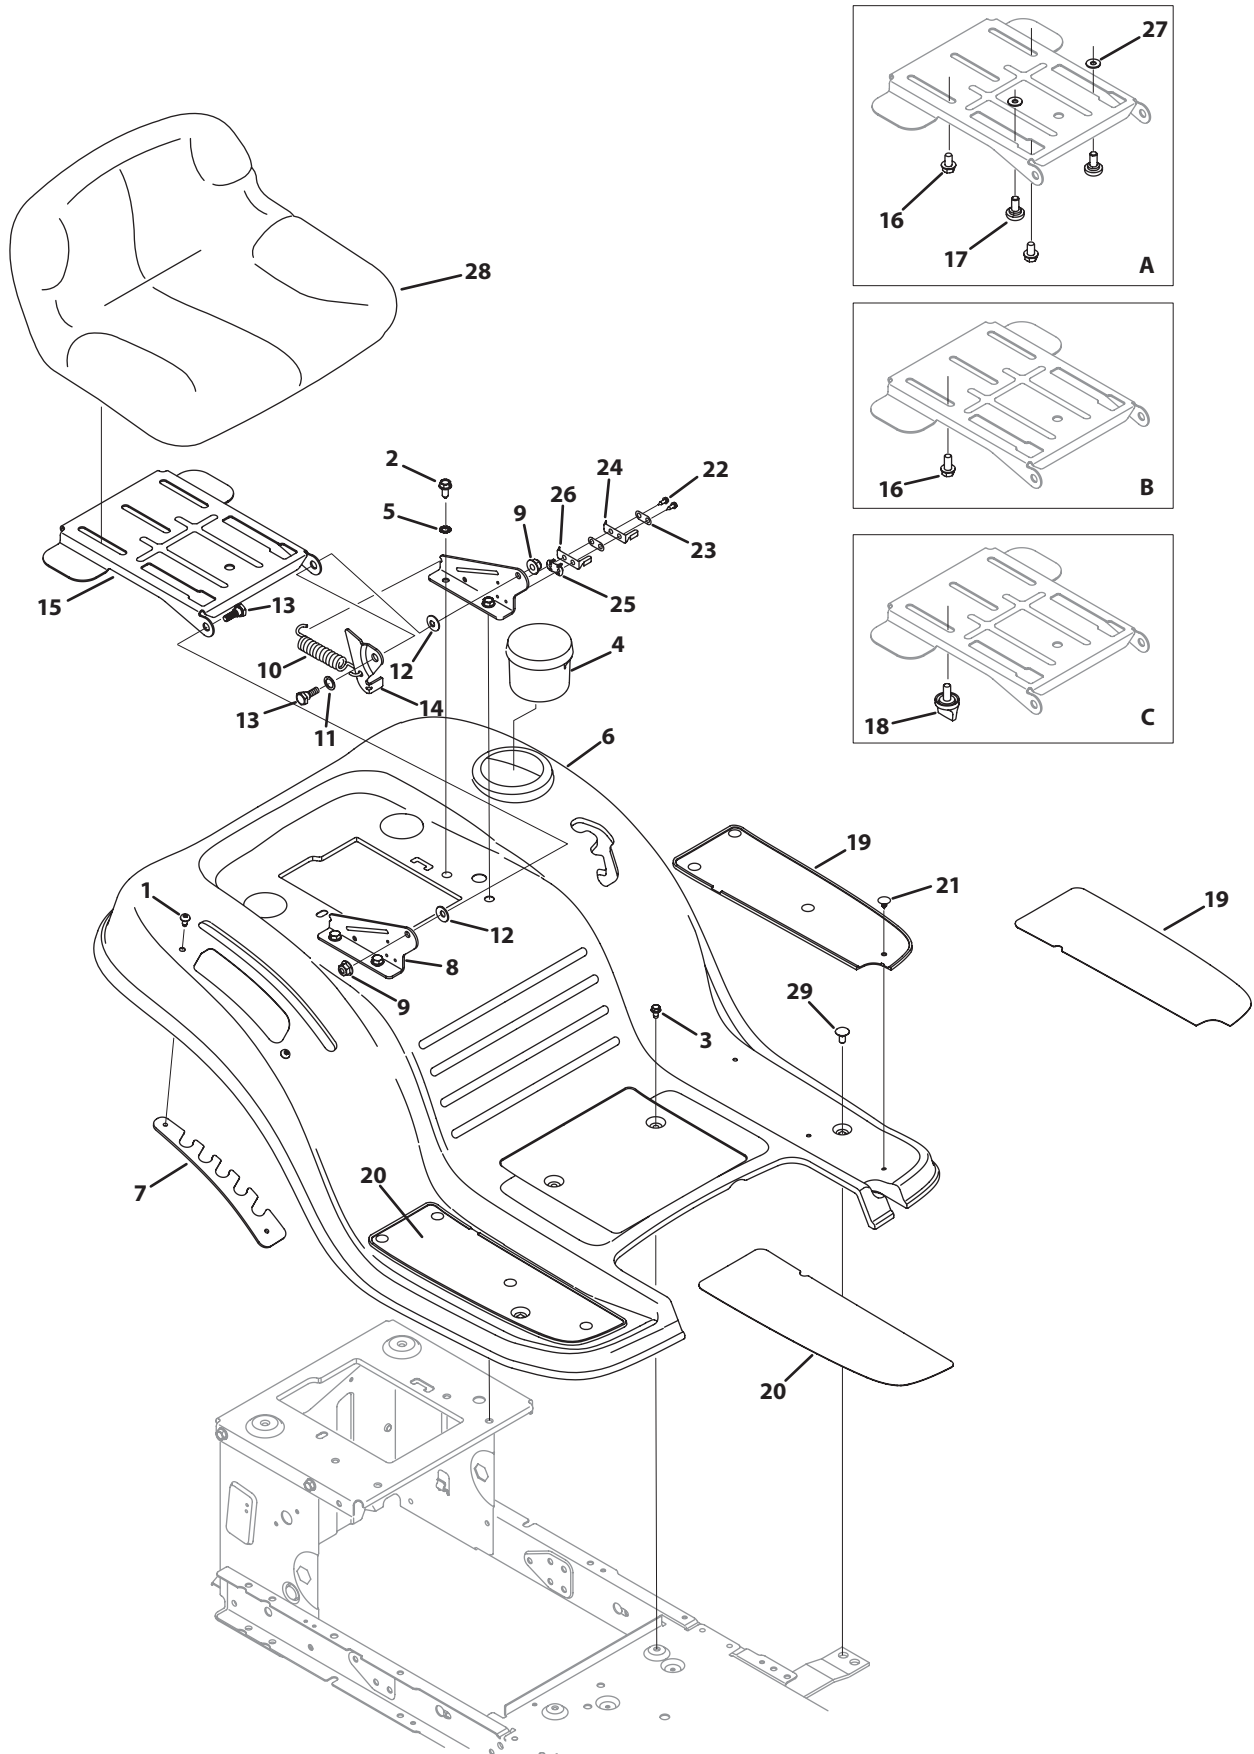


## Seat and Fender

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	710-04483	Screw, 1/4-20 x .500	17	738-04012A	Shoulder Screw, 3/8-16 x .625 x .145
2	710-04484	Screw, 5/16-18 x .750	18	720-04061	Knob, 3/8-16 x .875
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500	19	735-04047	Foot Pad, LH
4	731-04591A	Cup Holder		723-04026	Foot Pad, Abrasive, LH
5	736-0607	Loack Washer, 5/16	20	735-04048	Foot Pad, RH
6	783-04587A-0638	Fender - Red		723-04025	Foot Pad, Abrasive, RH
	783-04587A-0665	Fender - Yard Man Green	21	726-04072A	Ratchet Clip, .250 x .500
	783-04587A-0691	Fender - Black Jack	22	710-0227	Screw, 8-18 x .500
	783-04587A-0709	Fender - Mastercraft Green	23	726-0279	Insulator Plate
7	783-04843-0637	Lift Adjuster Bracket - Powder Black	24	925-1303	Outer Seat SPring
	783-04843-0638	Lift Adjuster Bracket - Red	25	726-0278	Insulator Boss Plate
8	783-1489C-0637	Seat Mount Bracket - Powder Black	26	725-1439	Inner Seat Spring
	783-1489C-0638	Seat Mount Bracket - Red	27	936-0140	Flat Washer, .385 x .62 x .063
9	712-04063	Flangelock Nut, 5/16-18	28	957-04037	Medium Back Seat, Set-up A
10	732-1184	Extension Spring		757-04083	Medium Back Seat, Black, Set-up B
11	936-0108	Flat Washer, .510x .750 x .033		757-04084	Medium Back Seat, Yellow, Set-up B
12	736-0242	Bell Washer, .340 x .872 x .060		757-04099	Low Back Seat, Black, Set-up B or C
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268		757-04100	Low Back Seat, Yellow, Set-up B
14	783-0209D	Lift Seat Bracket		757-04088	High Back Seat, Black, Set-up B
15	783-04081C-0637	Pivot Seat Manual Adjust Bracket	29	710-0134	Screw Carriage, 1/4-20 x .62
16	710-04482	Hex Head Flange, 3/8-16 x .875			

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# Transmission

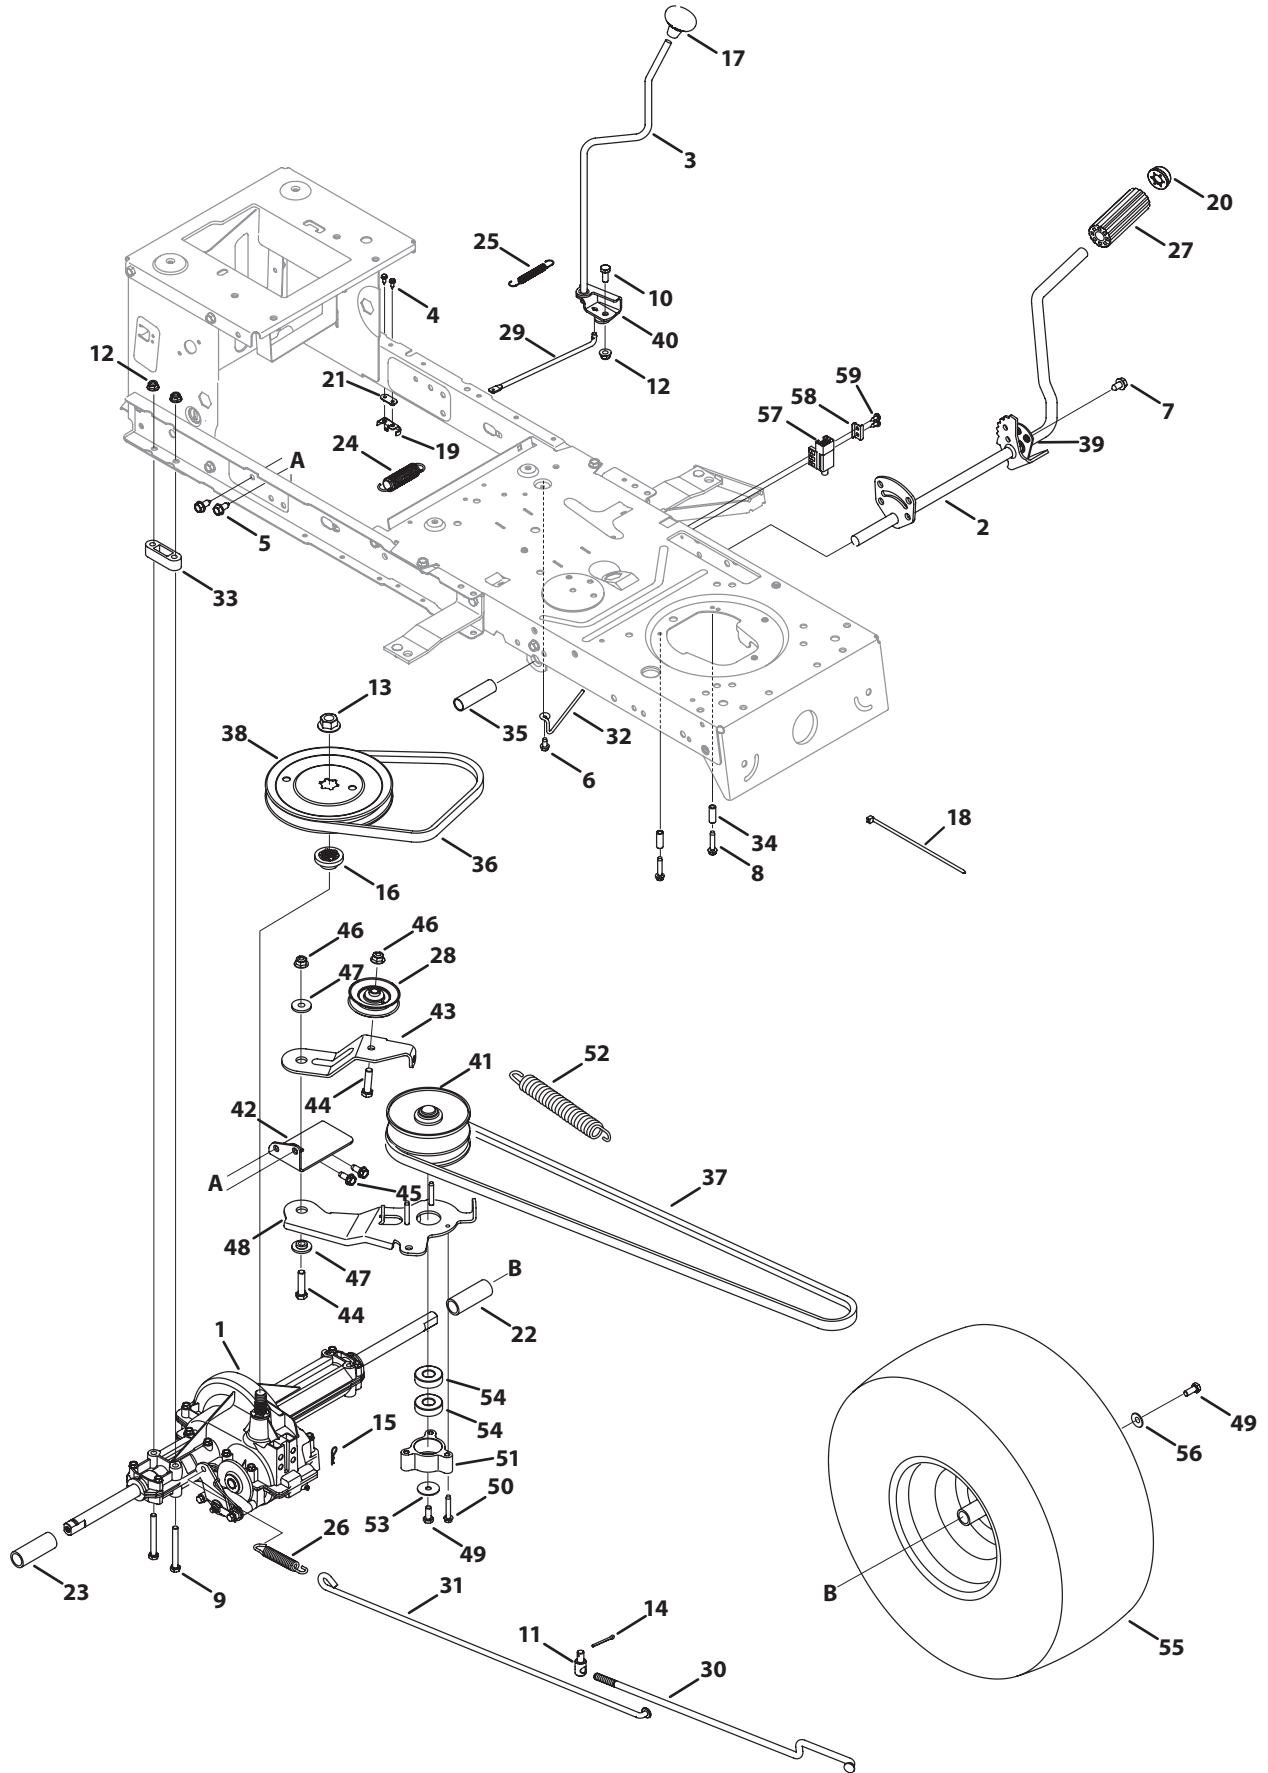


# Transmission

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04566	Transmission Drive Assembly	31	747-04733A	Brake Rod
2	647-04034C-0637	Pedal Assembly	32	747-04969	Belt Keeper Rod
3	647-04035	Shaft Lever Assembly	33	948-0334	Spacer, T-Axle, 46" Only
4	710-0227	Screw, 8-18:0.500	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
5	710-04484	Screw, 5/16-18 x .750	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
6	710-0599	Screw, 1/4-20 x 0.500	36	954-0241A	V Belt, 5L:35.25:POLY
7	710-0604A	Screw, 5/16-18 x 0.625	37	954-04001A	V Belt, 5L:68.90:POLY
8	710-0809	Screw, 1/4-20 x 1.250	38	956-04002	V Pulley:7.25 DIA SPUN
9	710-1266	Hex Screw, 5/16-18 x .625	39	783-04536B-0637	Pedal Support Bracket
	710-0176	Hex Screw, 5/16-18 x 2.75	40	783-04595A	Shaft Adjust Bracket
10	710-3008	Hex Screw, 5/16-18 x .75	41	956-04015A	Variable Speed Pulley Assembly
11	911-04075A	Ferrule, 3/8-24 X .375 DIA.	42	683-04176A	Transmission Bracket Assembly
12	712-04063	Flangelock Nut, 5/16-18	43	753-05147	Idler Bracket Assembly
13	712-0700	Flange Nut, 9/16-18	44	710-0347	Hex Screw, 3/8-16 x 1.75
14	914-0115	Cotter Pin, 1/8 x 1.0	45	710-1260A	Screw, 5/16-18 x 0.750
15	914-0209	Cotter Pin INT- .125 DIA	46	712-04065	Flangelock Nut, 3/8-16
16	718-04407	Pulley Hub, 5/8 SPLINE	47	938-0347	Shoulder Spacer, .625 ID x .169
17	720-04028	Shift Knob	48	753-05147	Bracket Assembly
18	725-0157	Cable Tie	49	710-0627	Hex Screw, 5/16-24 x .750
19	725-1644	Short Spring Switch	50	710-0778	Screw, 1/4-20 x 1.500
20	726-0214	Push Cap, 5/8	51	718-04261	Bearing Cup
21	926-0320	Plate Insulator Nut	52	732-04076A	Extension Spring, 1.15 OD x 7.90 LG
22	731-04602	Sleeve, .758 x .821 x 3.3125	53	736-0362	Flat Washer, .330 x 1.25 x .06:HT
23	731-04604	Sleeve, .758 x .821 x 2.4375	54	941-0124	Ball Bearing, 17 x 40 x 12
24	732-04306	Spring Extension, .80 OD x 3.28 LG	55	634-04324-0911	Wheel, 20 x 8 x 8, 46" - Gray
25	732-04488	Spring Extension, .38 OD x 3.25 LG		634-04324-0941	Wheel, 20 x 8 x 8, 46" - Yellow
26	732-0716D	Spring Extension, .59 OD x 4.00 LG		634-0104-0911	Wheel, 20 x 8 x 8, 42" - Gray
27	735-0239	Foot Pad, 4.0 LONG		634-0104-0941	Wheel, 20 x 8 x 8, 42" - Yellow
28	756-04325	Idler Pulley	56	736-0242	Bell Washer, .340 x .872 x .060
29	747-04568	Shift Rod, 46"	57	725-04363	Switch Interlock
	747-04277	Shift Rod. 38/42"	58	17962	Plate Switch
30	747-04265	Variable Speed Control Rod	59	738-04237A	Shoulder Screw, #10-32 x .500

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.


# 38" Deck

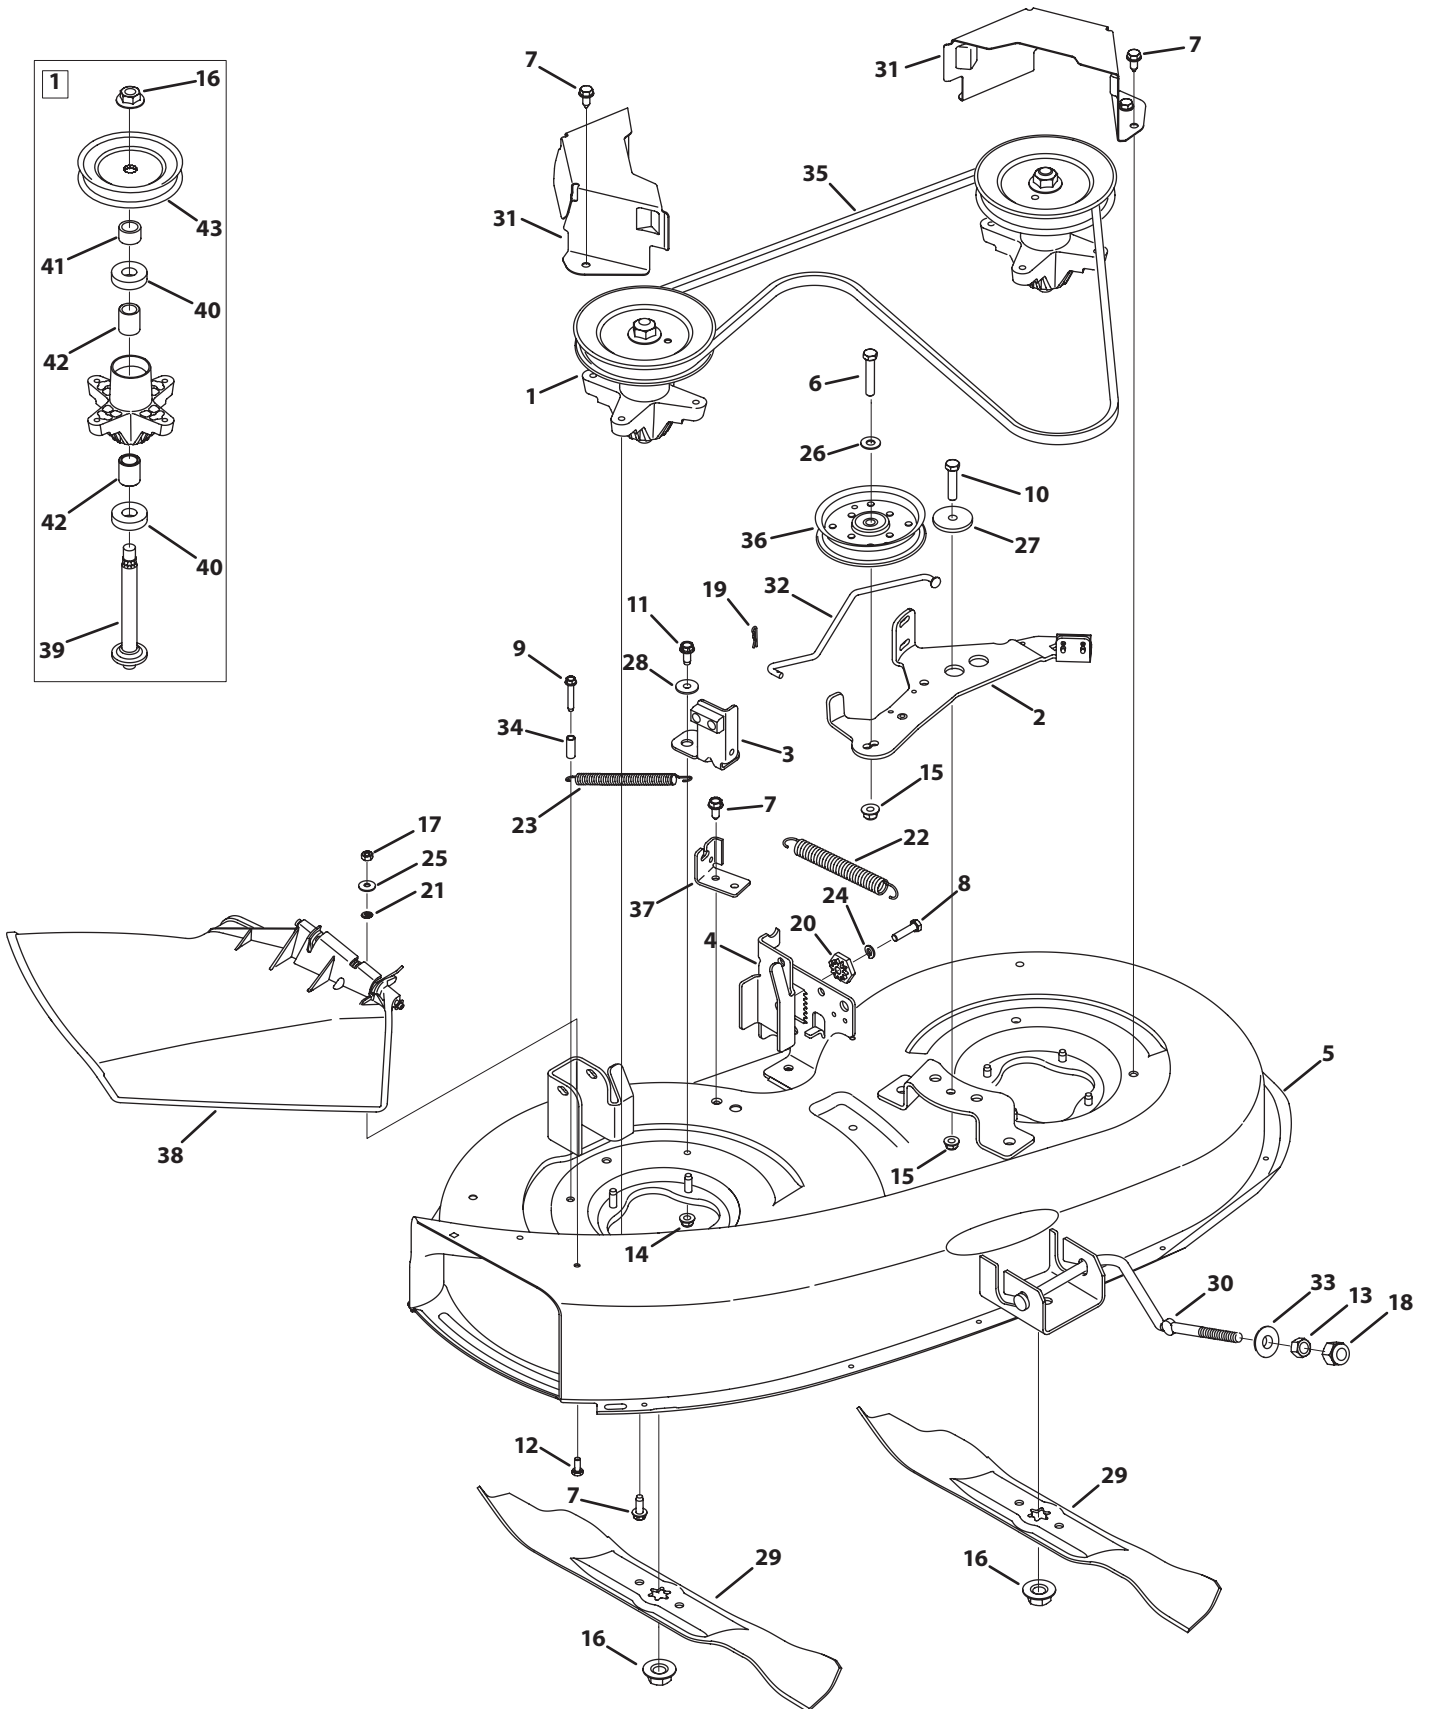

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	918-04474	5.75" Pulley Spindle Assembly	23	732-04287	Extension Spring, .500 x 6.375
2	683-04138B-0637	Deck Brake Assembly	24	936-0119	Lock Washer, 5/16
3	983-04167	Deck Brake Assembly	25	736-0270	Bell Washer, .265 x .75 x .062
4	683-04228-0637	LH Deck Hanger Bracket	26	936-0300	Flat Washer, .406 x .875 x .059
5	983-04263-0637	38" Deck Assembly	27	738-04162A	Shoulder Spacer, .8840 x .190
6	710-0347	Hex Screw, 3/8-16 x 1.75	28	738-04166	Shoulder Spacer, .5000 x .1475
7	710-04484	Screw, 5/16-18 x .750	29	942-0610A	3 in 1 Blade
8	710-0528	Hex Screw, 5/16-18 x 1.25	30	747-04322	38" Front Adjust Deck Rod
9	710-0778	Screw, 1/4-20 x 1.50	31	783-04602A-0637	Belt Cover
10	710-3005	Hex Screw, 3/8-16 x 1.25	32	747-04381	38" Brake Control Rod
11	710-3008	Hex Screw, 5/16-18 x .75	33	748-04069	Deck Lift, Pivot Cup
12	710-3015	Hex Screw, 1/4-20 x .75	34	750-0566A	Spacer, .260 x .375 x 1.030
13	712-0206	Hex Nut, 1/2-13	35	954-04062	V Type Belt
14	712-04063	Flangelock Nut, 5/16-18	36	756-04129B	Idler Pulley
15	712-04065	Flangelock Nut, 3/8-16	37	783-04740-0637	Deck Engage Cable Bracket
16	712-0417A	Flange Nut, 5/8-18	38	631-0216A	Chute Assembly
17	712-3006	Hex Nut, 1/4-20		931-1032B	Chute Assembly
18	712-3083	Hexlock Nut, 1/2-13	39	938-04241	Spindle Shaft, 5.50
19	914-0104	Cotter Pin, .072 Diameter	40	941-0919	Ball Bearing, .787ID x 1.85 OD x .551
20	917-04074	Deck Adjuster Gear	41	750-04739	Spacer, .820 x 1.150 x .480 LG
21	726-0233	Push Nut, .25 x .50	42	750-1000	Spacer, .80 x 1.10 x 1.322 LG
22	732-04280B	Extension Spring, .75 x 6.375	43	756-1188	Deck Pulley, 5.75

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

# 42" Deck

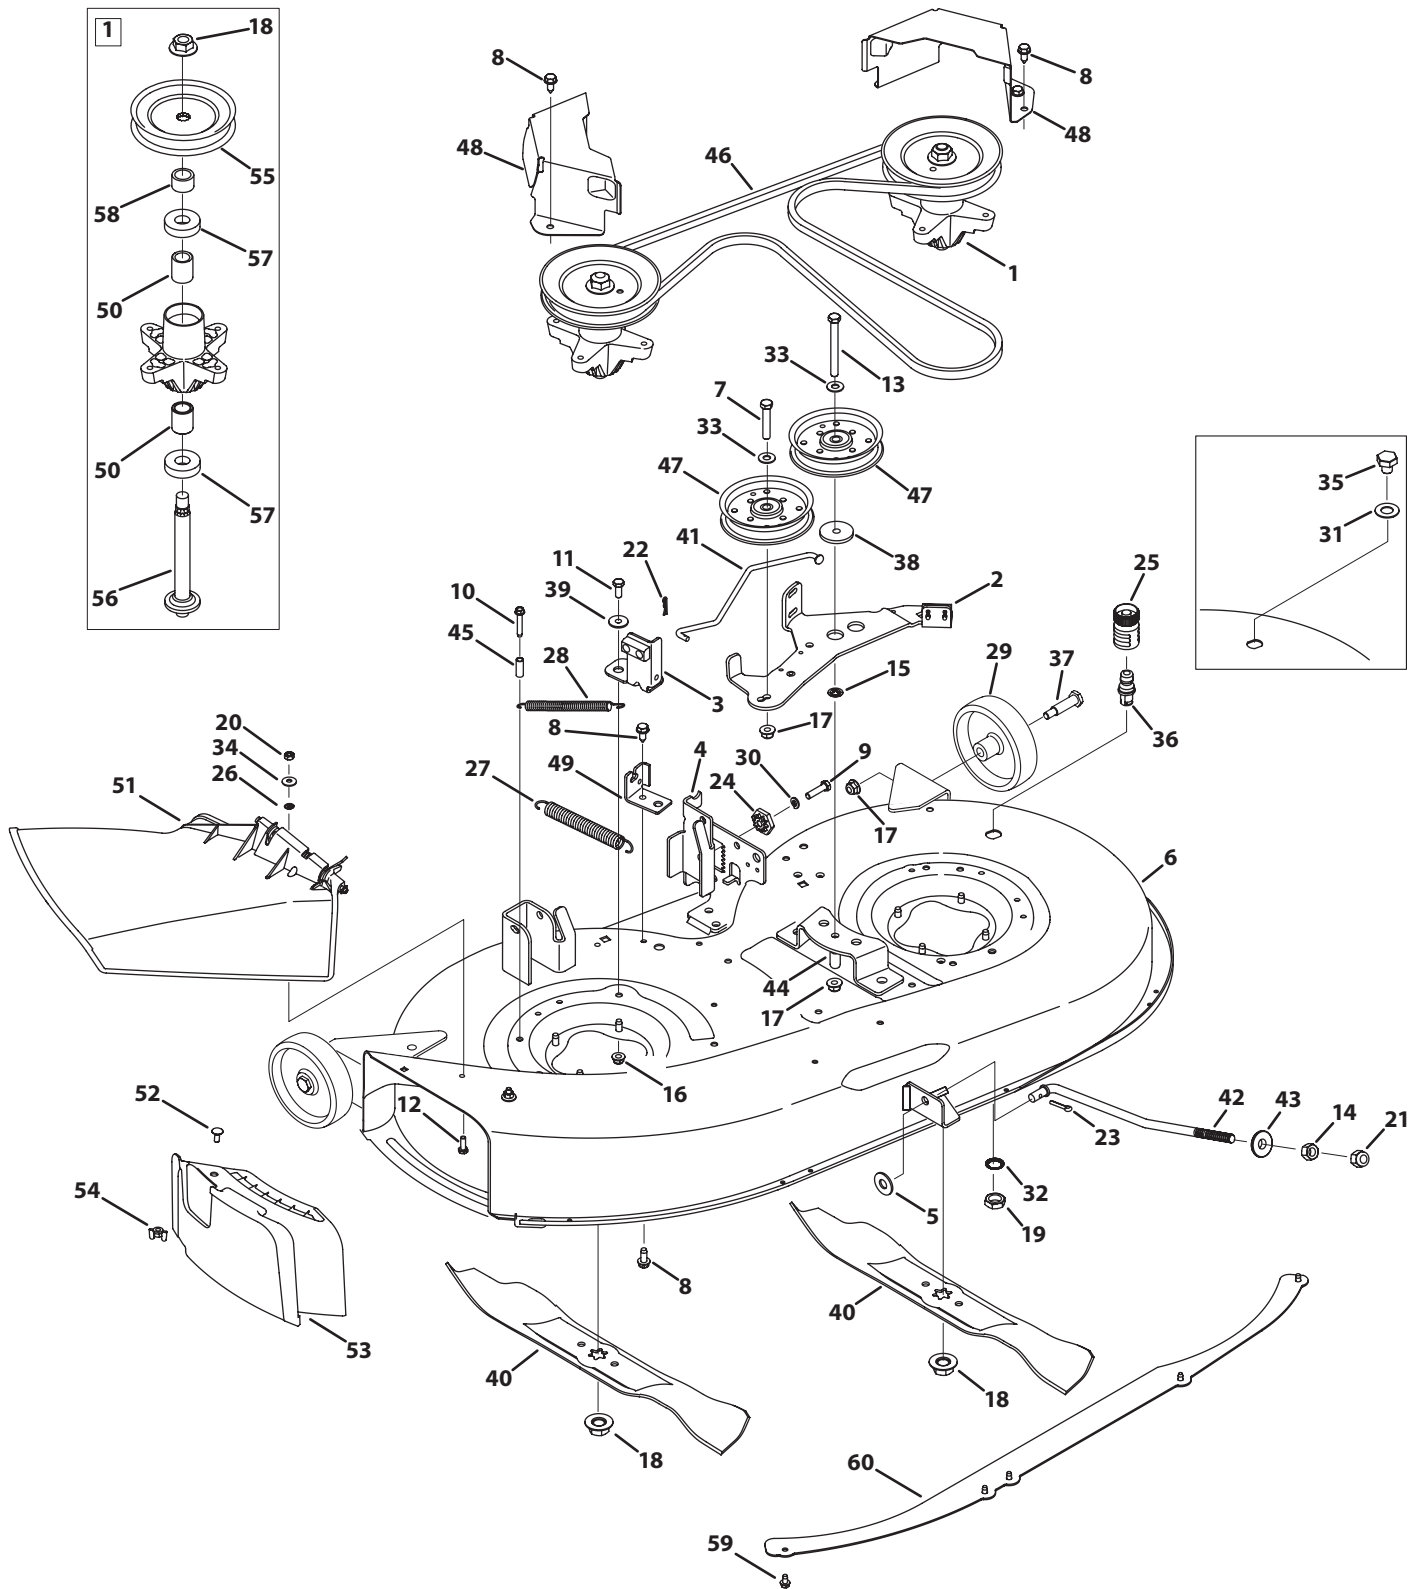



Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	618-04456	Pulley Spindle Assembly, 6.3 DIA	32	736-0225	Lock Washer, 5/8
2	683-04138B-0637	Deck Brake Assembly	33	936-0267	Flat Washer, .385 x .87 x .06
3	983-04167	Deck Brake Assembly		936-3000	Flat Washer, .406 x .875 x .059
4	683-04228-0637	Deck Hanger Bracket LH	34	736-0270	Bell Washer, .265 X.75 x .062
5	936-0179	Flat Washer, .531 x 1.25 x .100	35	738-04146	Bolt Plug, M16 x 1.5
6	983-04547-0691	Deck Assembly, 42" w/ Wheel	36	737-04003D	Water Nozzle
	983-04546-0637	Deck Assembly, 42" w/o Wheel - Black	37	938-0373	Shoulder Bolt. .496 x 1.525:3/8-16
	983-04546-0665	Deck Assembly, 42" w/o Wheel - Green	38	738-04162A	Shoulder Spacer, .8840 x .190
	983-04546-0638	Deck Assembly, 42" w/o Wheel - Red	39	738-04166	Shoulder Spacer, .5000 x .1475
7	710-0347	Hex Screw, 3/8-16 x 1.75	40	942-0616A	3 in 1 Blade
8	710-04484	Screw, 5/16-18 x .750	41	747-04379A	Brake Control Rod
9	710-0528	Hex Screw, 5/16-18 x 1.25	42	747-04944A	Deck Lift Rod
10	710-0778	Screw, 1/4-20 x 1.500	43	748-04069	Deck Lift Pivot
11	710-3008	Hex Screw, 5/16-18 x .75	44	750-04446	Spacer, 3/8 ID x .68 OD x 1.46 LG
12	710-3015	Hex Screw, 1/4-20 x .75	45	750-0566A	Spacer, .260 x .375 x 1.030 LG
13	710-3085	Hex Screw, 3/8-16 x 3.50	46	954-04060B	V-Type Belt
14	712-0206	Hex Nut, 1/2-13:GR5	47	756-04129B	Idler Pulley
15	712-0229	Push Nut, 3/8	48	783-04327B-0637	Belt Cover - Powder Black
16	712-04063	Flangelock Nut, 5/16-18		783-04327B-0638	Belt Cover - Red
17	712-04065	Flangelock Nut, 3/8-16		783-04327B-0665	Belt Cover - Green
18	712-0417A	Flange Nut, 5/8-18		783-04327B-0691	Belt Cover - Black Jack
19	912-0641	Hex Nut, M16-1.5	49	783-04740-0637	Deck Engage Cable Bracket
20	712-3006	Hex Nut, 1/4-20	50	750-1000	Spacer, .80 x 1.10 x 1.322
21	712-3083	Hex Locknut, 1/2-13	51	931-1032B	Chute Assembly
22	914-0104	Cotter Pin, .072 DIA. x 1.13 LG		631-0216A	Chute Assembly
23	714-3002	Cotter Pin, 3/16 x 1.00	52	710-0134	Carriage Screw, 1/4-20 x .62
24	917-04074	Deck Gear Adjuster	53	731-2363	Mulch Plug
25	921-04041	Water Nozzle Adaptor	54	712-3087	Wing Nut, 1/4-20
26	726-0233	Push Nut, .25 ID X .50 OD	55	956-1227	Deck Pulley, 6.3 Diameter
27	732-04280B	Extension Spring, 0.75 OD x 6.375	56	938-04241	Spindle Shaft, 5.50 LG
28	732-04287	Extension Spring, .500 DIA x 6.375	57	941-0919	Ball Bearing, .787ID x 1.85OD x .551
29	734-0973	Deck Wheel, 5.0 x 1.38	58	750-04739	Spacer, .820 x 1.150 x .480
30	936-0119	Lock Washer, 5/16	59	710-0599	Screw, 1/4-20 x .500
31	736-0187	Flat Washer, 1/2 x 1.25 x .10	60	753-0884	42" Deck Skirt

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.



Ref. No.	Part No.	Description
1	97116	Deck Brake Assembly
2	71258E	46" Deck Belt Cover, RH
3	918-0430B	Spindle Assembly, 5.00 Dia. w/ Stud
4	918-04134C	Spindle Assembly, Double Pulley
5	683-0254B-0637	Deck Hanger Bracket Assembly - Powder Black
	683-0254B-0665	Deck Hanger Bracket Assembly - Green
	683-0254B-0691	Deck Hanger Bracket Assembly - Black Jack
6	683-04250A-0637	46" LH Idler Bracket
7	683-04251A-0637	46" RH Idler Bracket
8	983-04413A-0637	46" Side Deck Assembly - Powder Black
	983-04413A-0665	46" Side Deck Assembly - Green
	983-04413A-0691	46" Side Deck Assembly - Black Jack
9	712-3087	Wing Nut, 1/4-20
10	731-05264	Mulch Plug
11	710-04754	Hex Screw, 3/8-16 x 3.50
12	710-0514	Hex Screw, 3/8-16 x 1.0
13	710-0528	Hex Screw, 5/16-18 x 1.25
14	710-0599	Screw, 1/4-20 x .500
15	710-0778	Screw, 1/4-20 x 1.500
16	710-0805	Hex Screw, 5/16-18 x 1.50
17	710-1007	Screw, 3/8-16 x 1.500
18	710-1026	Screw, 1/4-20 x 1.750
19	710-1260A	Screw, 5/16-18 x .750
20	710-1315	Screw, 3/8-16 x 1.250
21	710-3015	Hex Screw, 1/4-20 x .75
22	711-04636	Pin, 1/4-20 x 3/8 x x 2.685
23	711-04669	Clevis Pin, 3/8 x 2.75
24	911-0993	Belt Guard Pin, 1/4 x 1.43
25	912-0206	Hex Nut, 1/2-13
26	712-04063	Flangelock Nut, 5/16-18
27	712-04064	Flangelock Nut, 1/4-20
28	712-04065	FLangelock Nut, 3/8-16
29	712-0417A	Flange Nut, 5/8-18
30	912-0641	Hex Nut, M16-1.5
31	712-3006	Hex Nut, 1/4-20
32	712-3083	Hexlock Nut, 1/2-13


Ref. No.	Part No.	Description
33	714-04043	Cotter Pin, Bow-Tie
34	917-04074	Deck Adjuster Gear
35	921-04041	Water Nozzle Adapter
36	726-0233	Push Nut, .25 x .50
37	932-0429A	Extension Spring, .50 x 3.97
38	732-04400	Extension Spring, .75 x 6.835
39	932-0594A	Extension Spring, .91 x 7.33
40	732-0814	Extension Spring, .56 x 5.52
41	734-0973	Deck Wheel, 5.0 x 1.38
42	936-0119	Lock Washer, 5/16
43	936-0211	Flat Washer, .285 x 1.25 x .06
44	736-0225	Lock Washer, 5/8
45	736-0258	Flat Washer, .385 x 1.0 x .135
46	736-0270	Bell Washer, .265 x .75 x .062
47	936-0300	Flat Washer, .406 x .875 x .059
48	736-0418A	Flat Washer, .34 x 2.25 x .10
49	737-04003D	Deck Water Nozzle
50	710-0134	Carriage Screw, 1/4-20 x .62
51	938-0347	Shoulder Spacer, .625 x .169
52	938-0373	Shoulder Bolt, 3/8-16 x .496 x 1.525
53	738-04091A	Shoulder Screw, .5/16-18 x 43 x .29
54	942-0611A	3 in 1 Blade, 16.28
55	942-0612A	3 in 1 Blade, 14.88
56	747-04530	Belt Keeper Rod
57	747-04645	46" Front Deck Rod
58	748-0234	Shoulder Spacer
59	748-04069	Deck Lift Pivot
60	750-04456	Spacer, .260 x .372 x 1.420
61	750-04999	Spacer, .380 x .625 x 2.515
62	750-0566A	Spacer, .260 x .375 x 1.030
63	750-1320	Spacer, .375 x .63 x .595
64	954-0349	V-Type Belt, 79.10
65	954-04142	V-Type Belt, 91.4
66	756-04129B	Idler Pulley, 4.25 Diameter
67	931-1032B	Chute Assembly Side Discharge
68	783-0141-0637	46" Deck Center Skirt
69	783-0142-0637	46" Deck RH Skirt
70	783-04641A-0637	46" Idler Bracket
71	783-05321-0637	46" Brake Bracket
72	783-05360-0637	Deck Stop Bracket
73	750-1304	Spacer, .792 x 1.060 x .400

**NOTE:** Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.

## 46" Deck


<b>Ref. No.</b>	<b>Part No.</b>	<b>Description</b>
74	783-1348D-0637	46" LH Belt Cover - Powder Black
	783-1348D-0665	46" LH Belt Cover - Green
	783-1348D-0691	46" LH Belt Cover - Black Jack
75	941-0919	Ball Bearing, .787 x 1.85 x .551
76	938-1128	Spindle Shaft, 6.58
77	738-0927	Spindle Shaft, 4.450
78	748-0434	Spacer, .750 x 1.150 x .230
79	750-04936	Spacer, .792 x 1.060 x 1.860
80	756-1187	Deck Pulley, 5.00 Diameter
81	756-1188	Deck Pulley, 5.75 Diameter
82	736-0315	Flat Washer, .760 x 1.50 x .120
83	750-04440	Spacer, .792 x 1.060 x 1.680
84	756-04094	Deck Pulley, 5.00 x .80



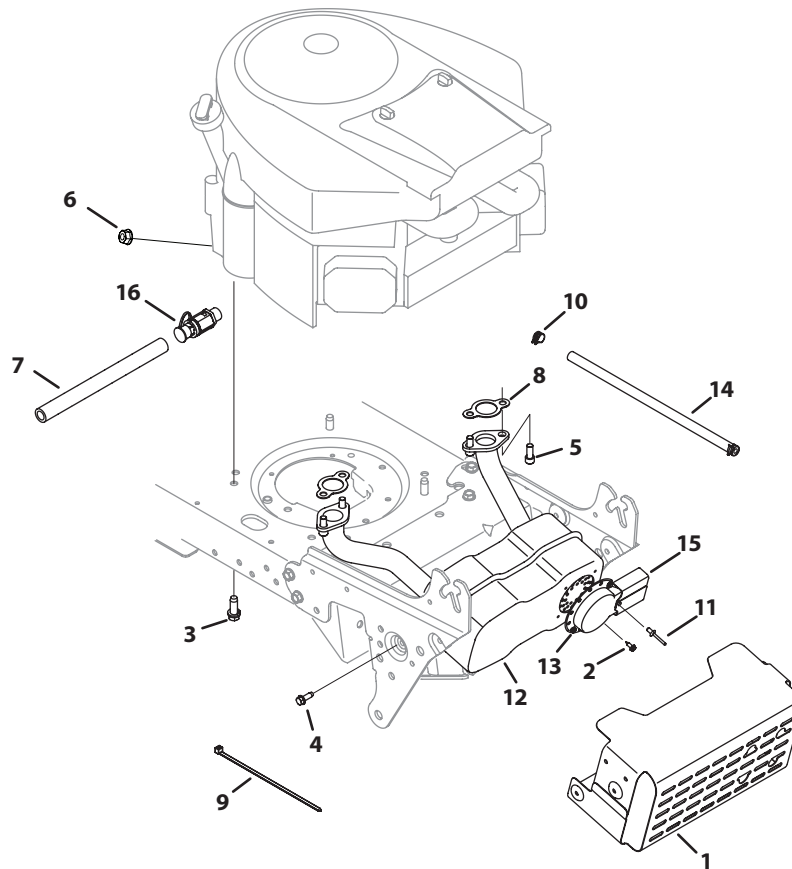

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	751-3141-14	Extension Hose, Oil Drain
8	721-0460	Twin Intek, Exhaust Gasket
9	725-0157	Cable Tie
10	726-0205	Clamp Hose, .490 diameter
11	728-04000	Rivet, .188 x .300
12	751-10542	Briggs Intek, Twin Muffler
13	751-0564B	Muffler Deflector
14	751-10349-28	Fuel Hose, Low Permeation
15	751-10353	Muffler Deflector Long
16	951-10517A	Oil Drain


NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

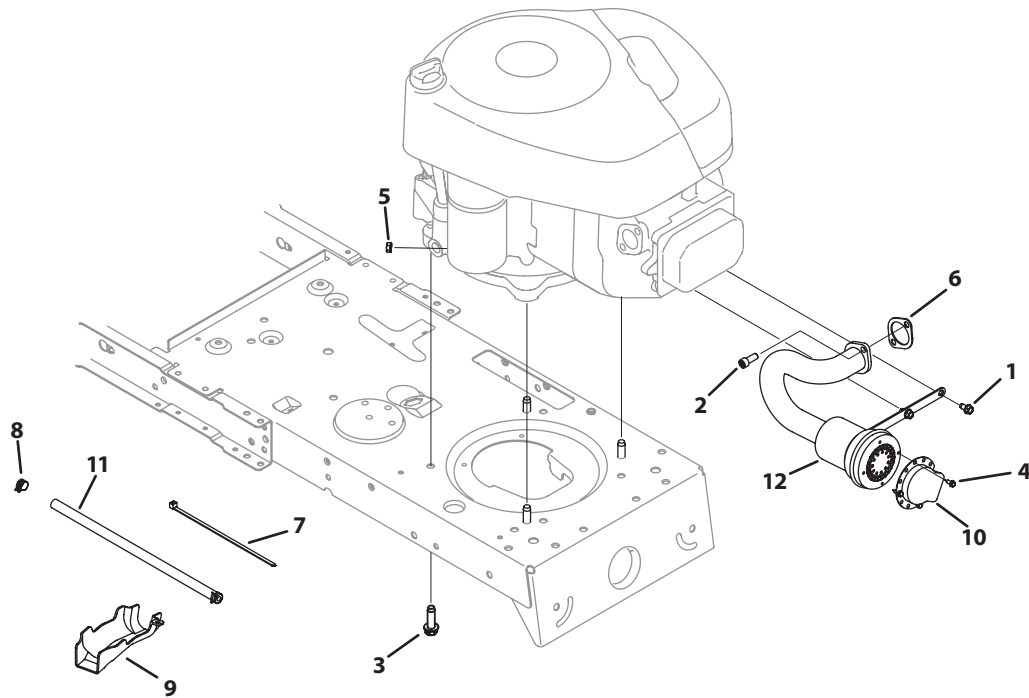

Ref. No.	Part No.	Description
1	710-0599	Screw, 1/4-20 x .500
2	710-1314A	Socket Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0227	Screw, 8-18 x .500
5	712-0271	Sems Nut, 1/4-20
6	BS-692236	Exhaust Gasket, 10 HP Briggs
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	731-05628	Oil Drain Sleeve
10	751B222261	Muffler Deflector
11	751-10349-28	Fuel Hose, Low Permeation
12	751-9986A	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.


# B&S Model 28

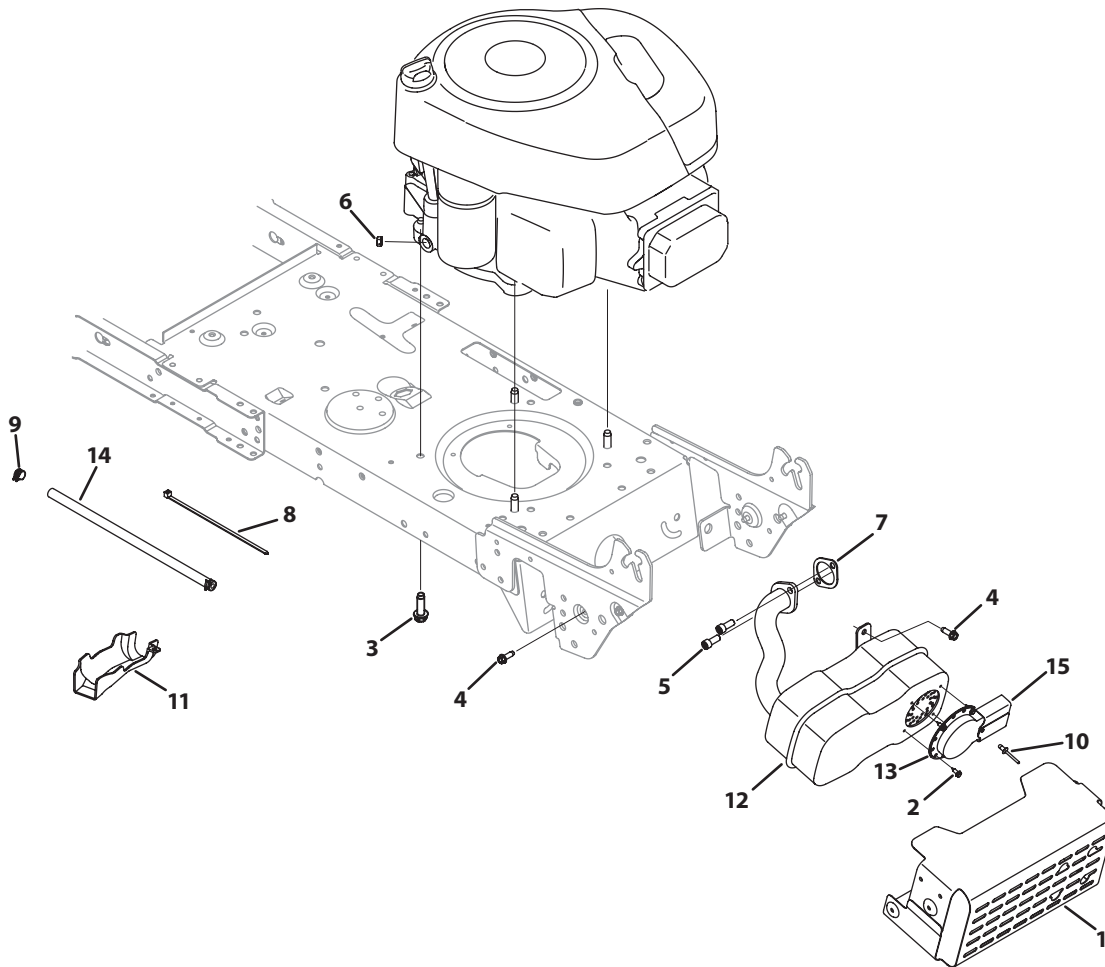

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	728-04000	Rivet, .188 x .300
11	731-05628	Oil Drain Sleeve
12	751-10448A	Muffler, Single Inlet
13	751-0564B	Muffler Deflector
14	751-10349-28	Fuel Hose, Low Permeation
15	751-10353	Muffler Deflector Long


NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.



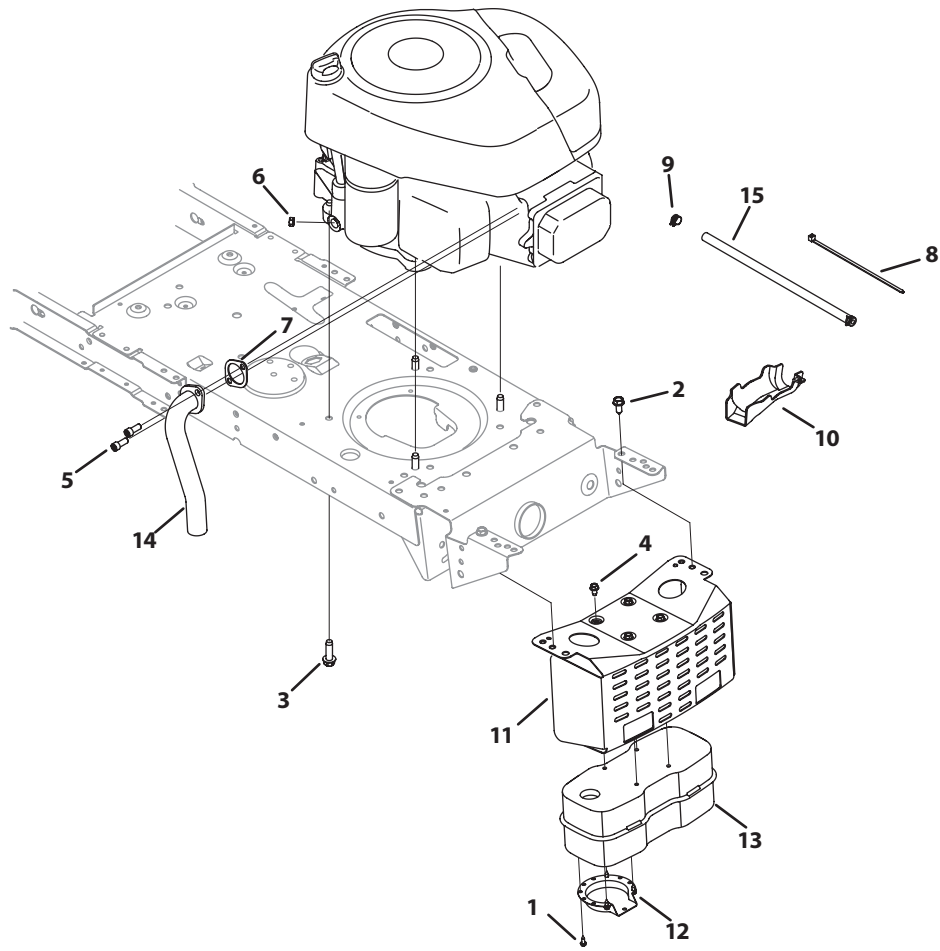


Ref. No.	Part No.	Description
1	710-0227	Screw, 8-18 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-04683	Screw, 3/8-16 x 1.000
4	710-0599	Screw, 1/4-20 x .500
5	710-1214	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Hose Clamp, .490 Diameter
10	731-05628	Oil Drain Sleeve
11	783-0615E-0637	Muffler Bracket
12	751-0564B	Muffler Deflector
13	751-0617C	Single Inlet Muffler
14	751-0619A	Exhaust Pipe, Single Briggs
15	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

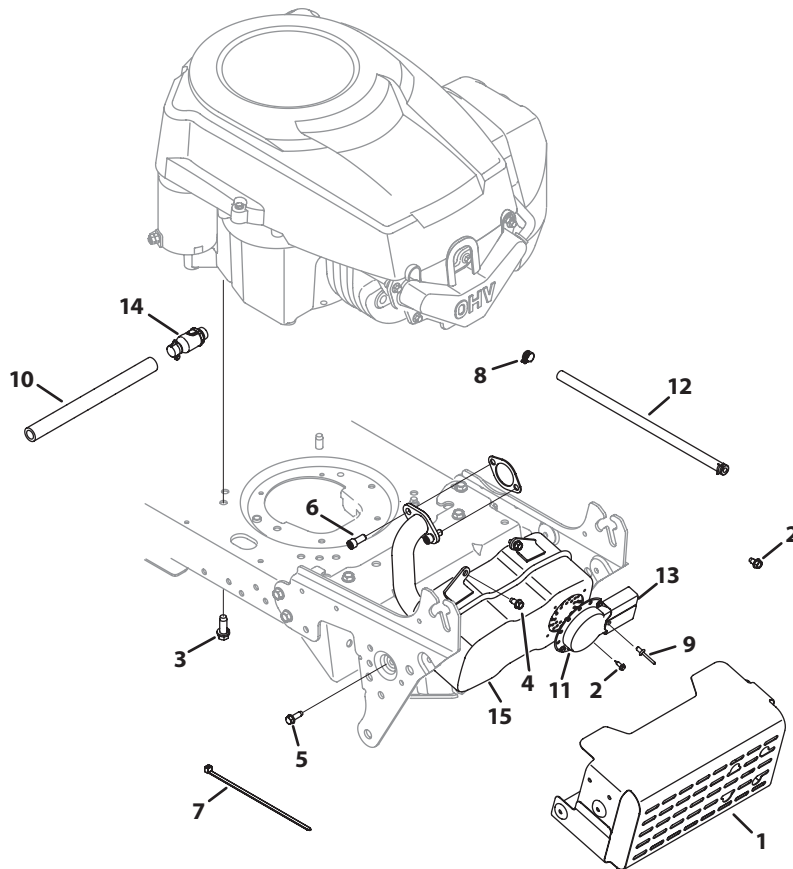

Ref. No.	Part No.	Description
1	683-04549-0637	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683	Screw, 3/8-16 x 1.0
4	710-0599	Screw, 1/4-20 x .500
5	710-0642	Screw, 1/4-20 x .750
6	710-1314A	Socket Screw, 5/16-18 x .750
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	728-04000	Rivet, .188 x .300
10	751-3141-14	Oil Drain, Extension Hose
11	751-0564B	Muffler Deflector
12	751-10349-28	Fuel Hose, Low Permeation
13	751-10353	Muffler Deflector Long
14	951-10517A	Oil Drain
15	751-11022	Muffler

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.

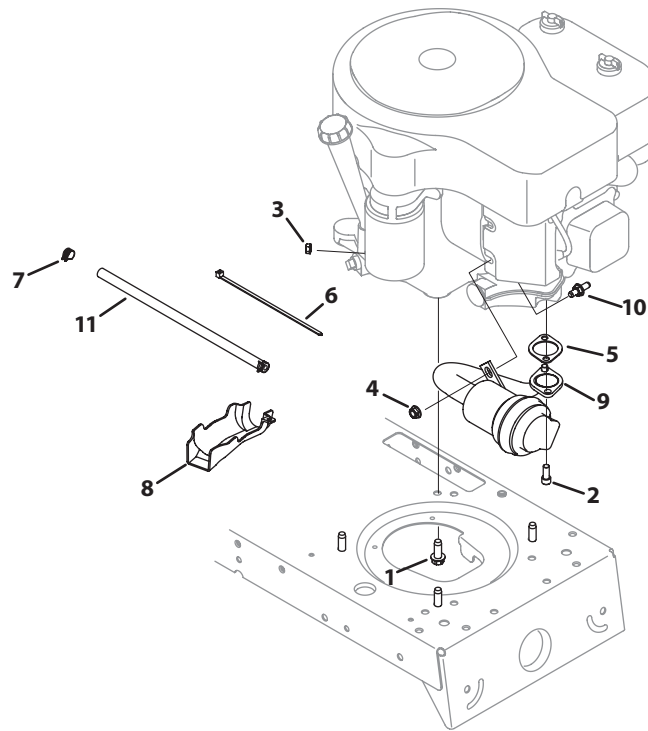

Ref. No.	Part No.	Description
1	710-04683	Screw, 3/8-16 x 1.0
2	710-1314A	Socket Screw, 5/16-18 x .750
3	712-0271	Sems Nut, 1/4-20
4	712-3004A	Flangelock Nut, 5/16-18
5	BS-692236	Exhaust Gasket, 10 HP Briggs
6	725-0157	Cable Tie
7	726-0205	Clamp Hose, .490 diameter
8	731-05628	Oil Drain Sleeve
9	751-10713	Muffler
10	751T72217	Stud, 5/16-18
11	751-10349-28	Fuel Hose, Low Permeation

NOTE: Tractor features vary by model. NOT all parts listed and pictured above are standard equipment.



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.  
or visit [www.mtdproducts.com](http://www.mtdproducts.com) to find the nearest authorized dealer in your area.

---

**MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019**

---