 

ILLUSTRATED PARTS MANUAL

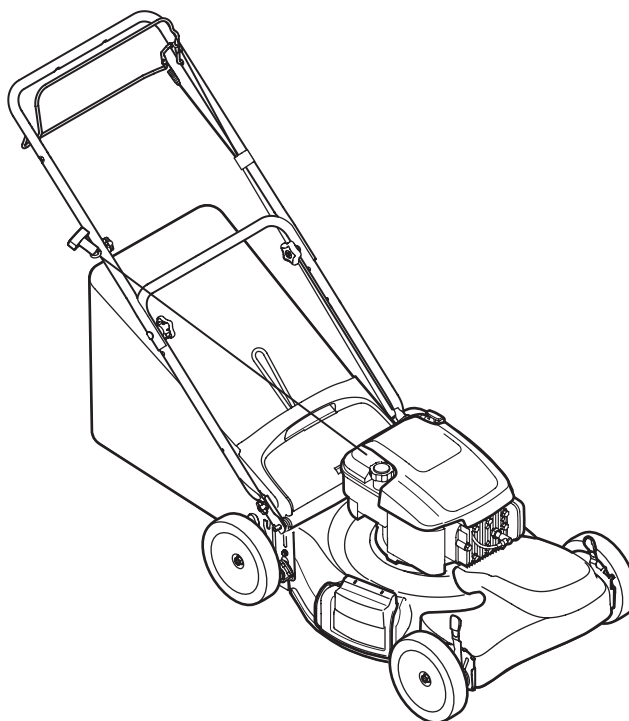

Self-Propelled Mowers

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank you for purchasing an MTD Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Model E18J	4	Model Series 860	32
Model 18M	6	Model Series 980	36
Model Series 260	8	Model TB210	40
Model 26J	10	Model TB270 ES	42
Model 26M	12	Model TB230	44
Model Series 460	14	Model TB250	46
Model Series G460	16	Engine Model 1P65BOB	48
Model E46J	18	Engine Model 1P70MC	52
Model Series 550	20	Engine Model 2P70MOB	54
Model Series 560	22	Engine Model 5P65MOB	56
Model Series V560	24	Engine Model 5P70MOB	60
Model Series 830	28		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

SERIAL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

This page left intentionally blank.

 
Model E18J

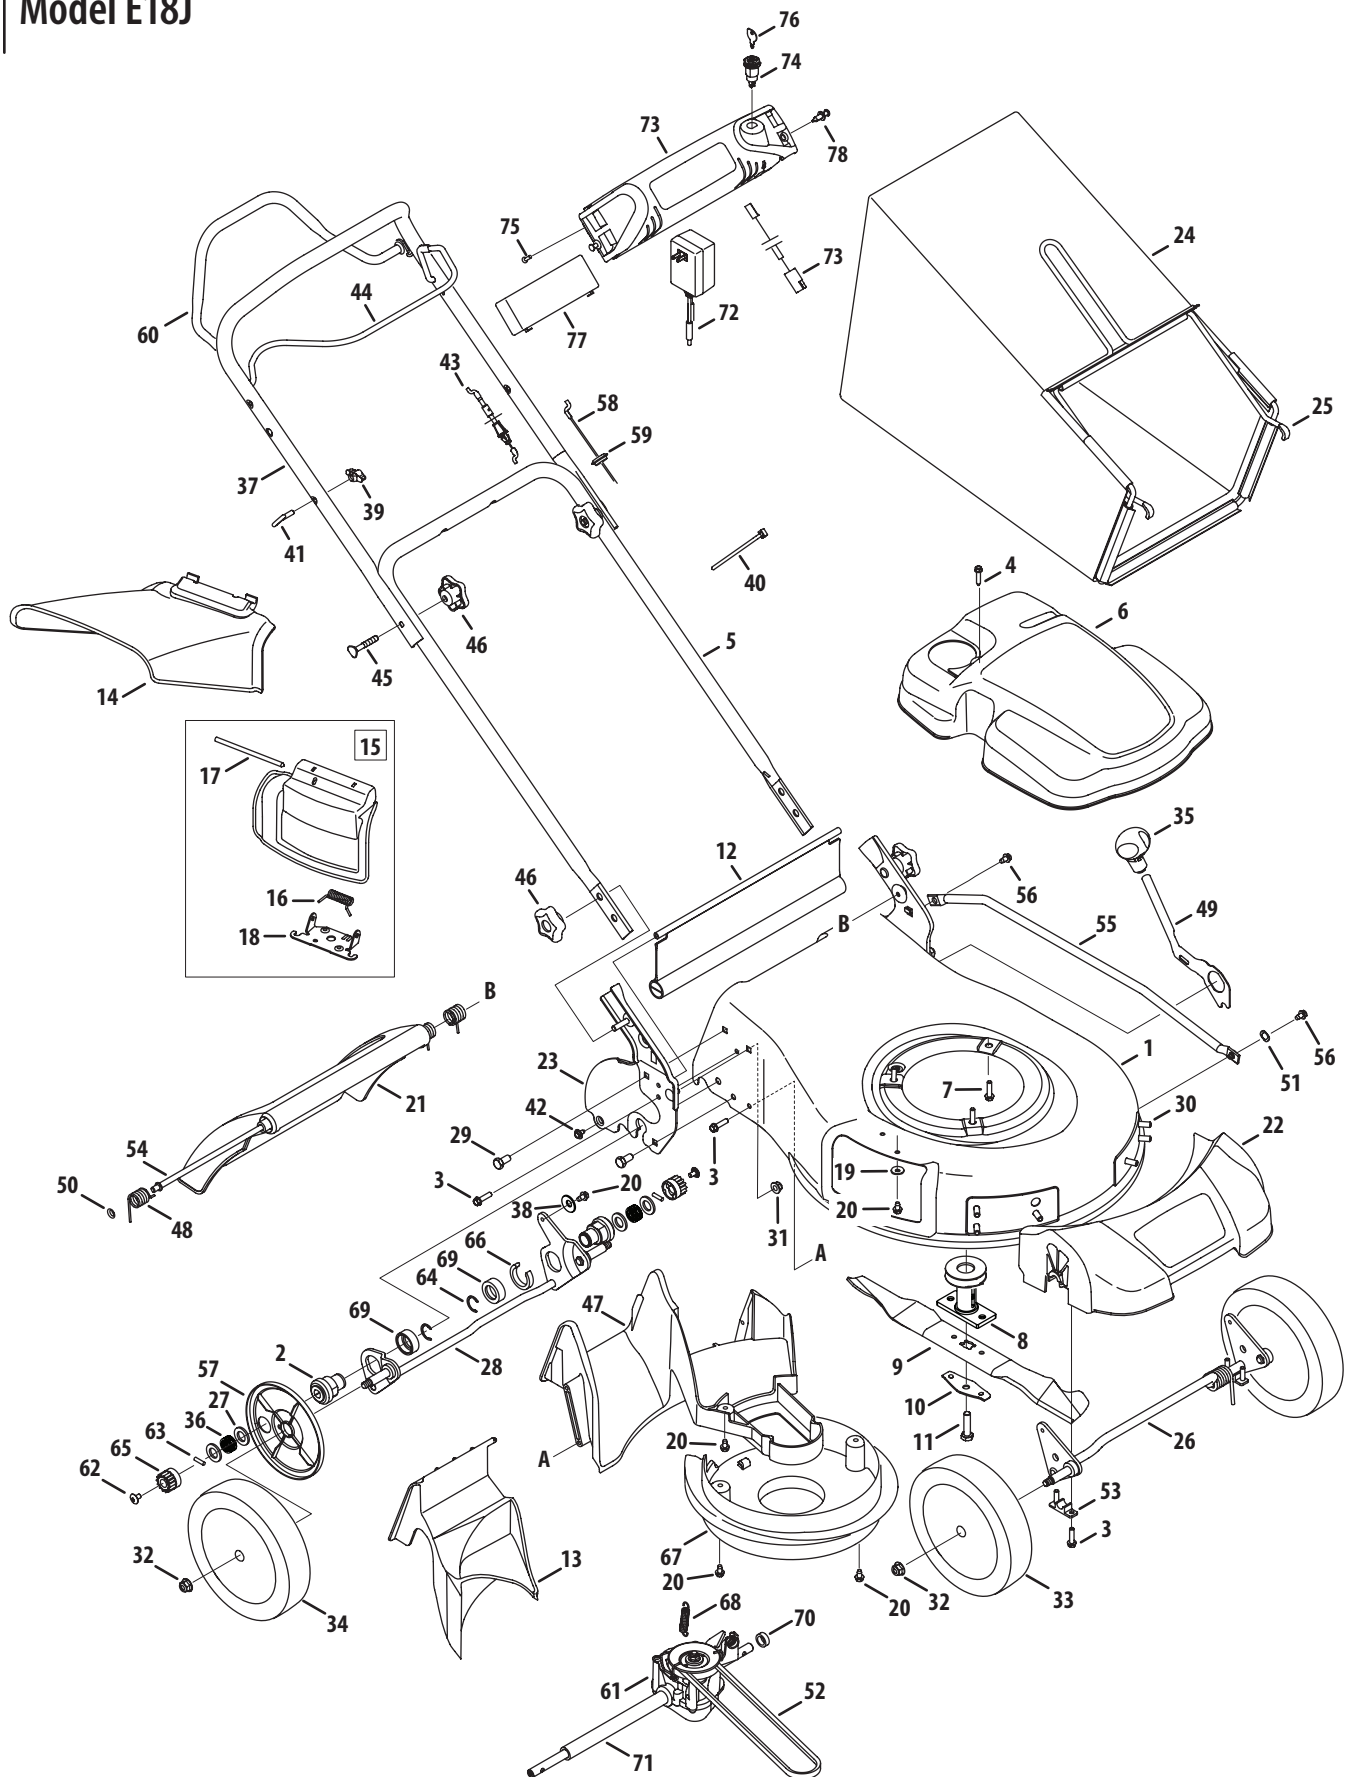

Ref No.	Part Number	Description
1	787-01629	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04462	Engine Shroud
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Belleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05634	Front Cover
23	687-02323-0637	Handle Bracket - RH
	687-02322-0637	Handle Bracket - LH
24	964-04134	Grass Bag
25	647-04082-0637	Grass Bag Frame
26	687-02225-0637	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304-0637	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	734-1988	Front Wheel
34	634-04363	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring
37	749-04550	Upper Handle
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie

Ref No.	Part Number	Description
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	746-04523	Control Cable
44	747-04995	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04338C	Spring Lever
50	726-0201	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307-0637	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-04994A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.
72	725-04329	Battery Charger
73	925-04072	Electric Start Harness Assembly
74	925-04347	Key Switch
75	710-1667A	Screw, #10-16 x .750
76	925-0201	Key
77	925-04323	Battery
78	728-0199	Rivet

 
Model 18M

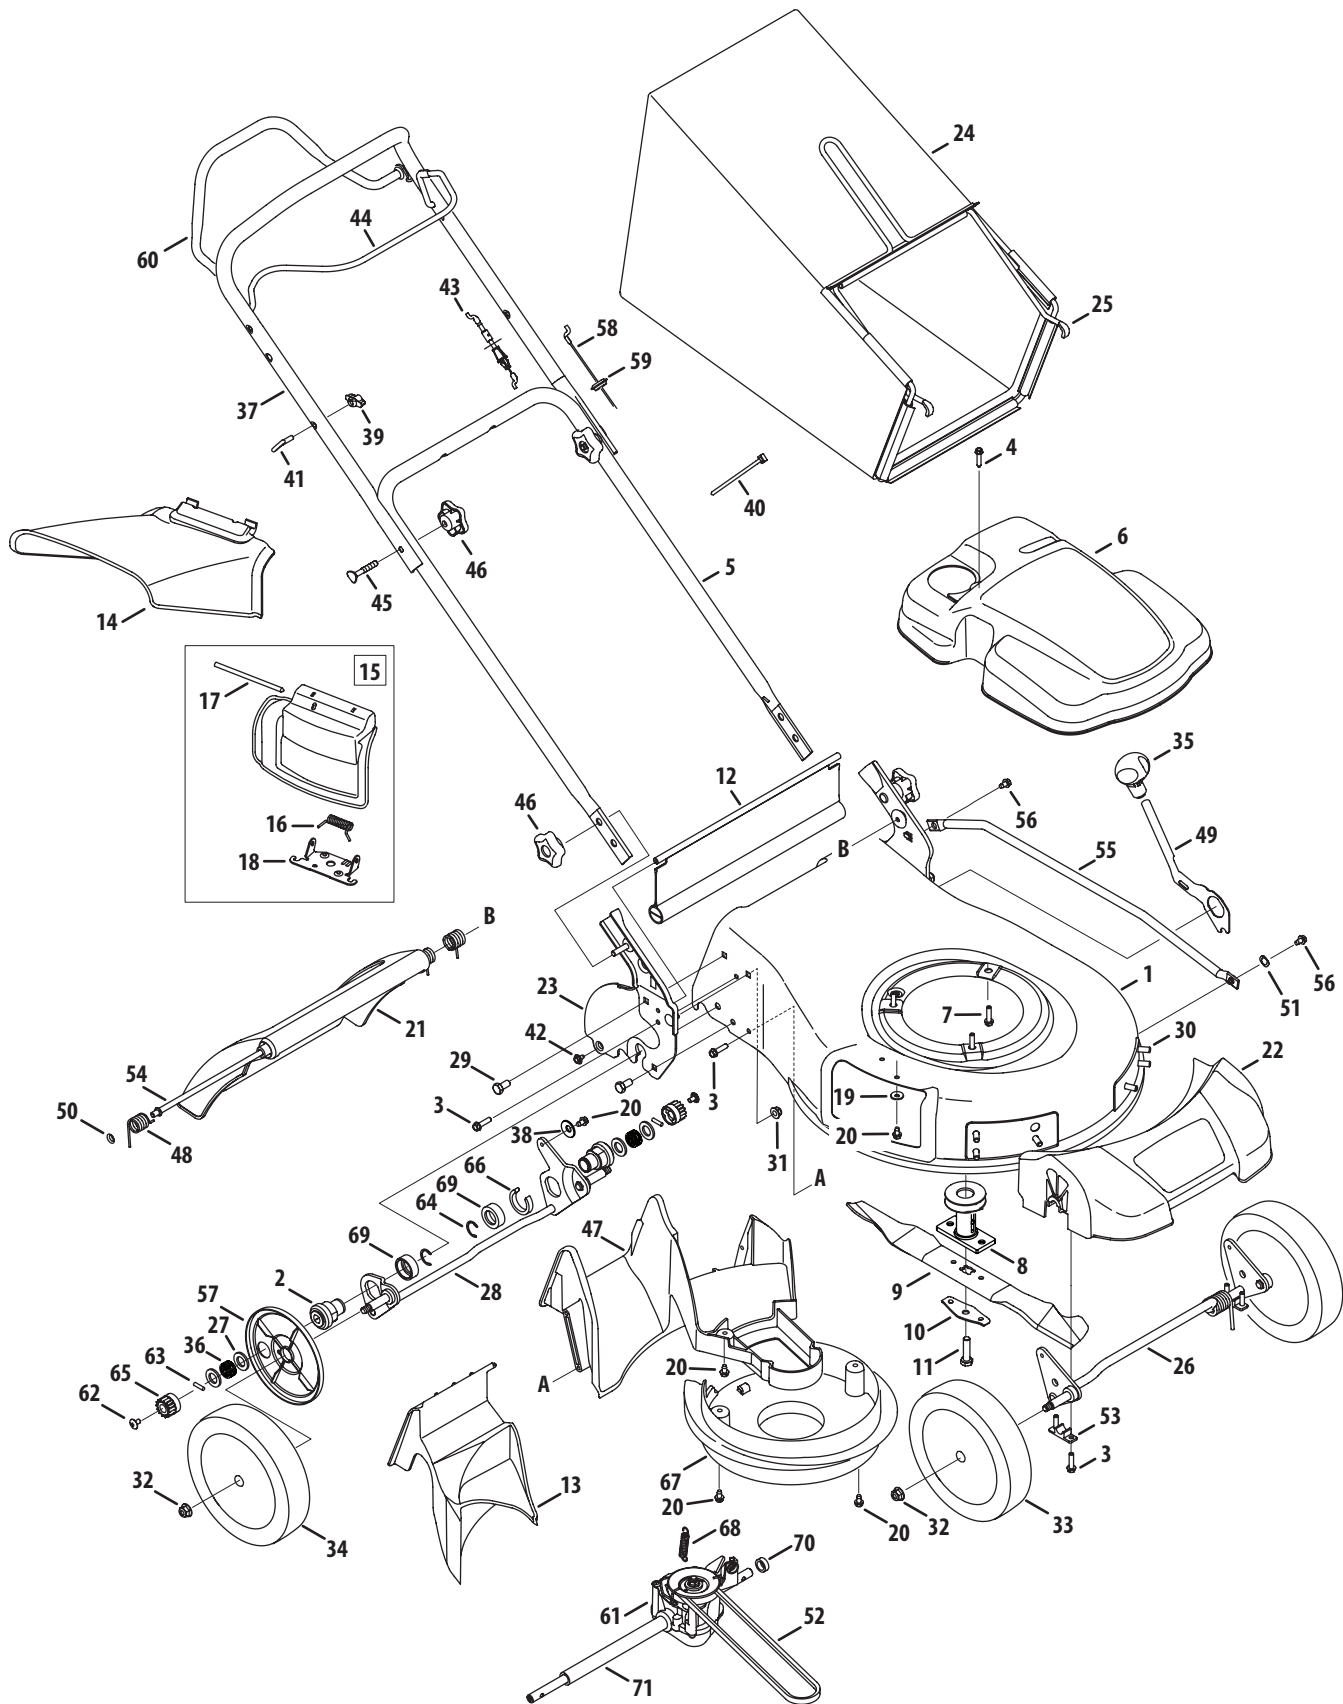

Ref No.	Part Number	Description
1	787-01629	19" Deck
2	687-02415	Transmission Support Bearing
3	710-1241	Screw, 1/4-15 x 1.000
4	710-04744	Screw, HL, #12-16 x 1.00
5	749-04556	Lower Handle
6	931-04462	Engine Shroud
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02555	Blade Adapter
9	942-0739	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-05639A	Trailing Shield
13	731-05746	Rear Mulch Plug
14	731-04177	Side Discharge Chute
15	987-02055	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710	Hinge Pin
18	17032A	Chute Deflector Adapter
19	736-0270	Belleville Washer
20	710-0599	Screw
21	931-05686	Rear Door
22	931-05634	Front Cover
23	687-02323-0637	Handle Bracket - RH
	687-02322-0637	Handle Bracket - LH
24	964-04134	Grass Bag
25	647-04082-0637	Grass Bag Frame
26	687-02225-0637	Front Bracket Assembly
27	936-0369	Washer, Flat, .508 x 1.00 x .020
28	687-02304-0637	Self Propelled Bracket Ass'y
29	710-3025	Hhcs, 5/16-18 x .625
30	710-1242	Screw, 5/16-14 x .750
31	712-04063	Nut, Flange Lock, 5/16-18
32	712-04065	Nut, Flange Lock, 3/8-16
33	734-1988	Front Wheel
34	634-04363	Rear Wheel
35	720-04096	Knob
36	732-04650	Wave Spring

Ref No.	Part Number	Description
37	749-04550	Upper Handle
38	736-0242	Washer, Bell, .340 x .872 x .060
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	710-0779A	Screw, #10-16 x .500
43	946-04637	Control Cable
44	747-04995	Blade Control
45	710-1174	Bolt Carriage, 5/16-18 x 2.0
46	720-04072A	Star Knob
47	731-06190	Rear Baffle
48	732-04534	Door Torsion Spring - RH
	732-04535	Door Torsion Spring - LH
49	732-04338C	Spring Lever
50	726-0101	Nut, Spd
51	736-04413	Wshr, Wave, .385 ID x .598 OD
52	954-04158	V-Belt
53	741-0492A	Bushing, Lock, .505 Dia. X .62
54	747-04589	Rear Door Pivot Rod
55	749-04307-0637	Cross Bracket
56	738-04278	Scr., Shldr., 1/4-20 x .50
57	731-06974	Wheel Dust Cover
58	946-04519B	Drive Cable
59	735-04059	Grommet
60	747-04994A	Drive Control
61	918-04463A	Transmission
62	710-04531	Screw, 1/4-20 x .390
63	915-0221	Dowel Pin
64	716-0198	Retainer Ring
65	917-04192C	Spur Gear - RH
	917-04184C	Spur Gear - LH
66	731-05872	Spacer, Clip
67	731-06164	Engine Baffle
68	932-04262	Exten. Spring, .429OD x 2.515
69	748-0390	Bearing Support Spacer
70	750-04870	Sleeve Spacer, .550ID x .340 Lg.
71	750-04853	Sleeve Spacer, .550ID x 7.97 Lg.

 Model Series 260

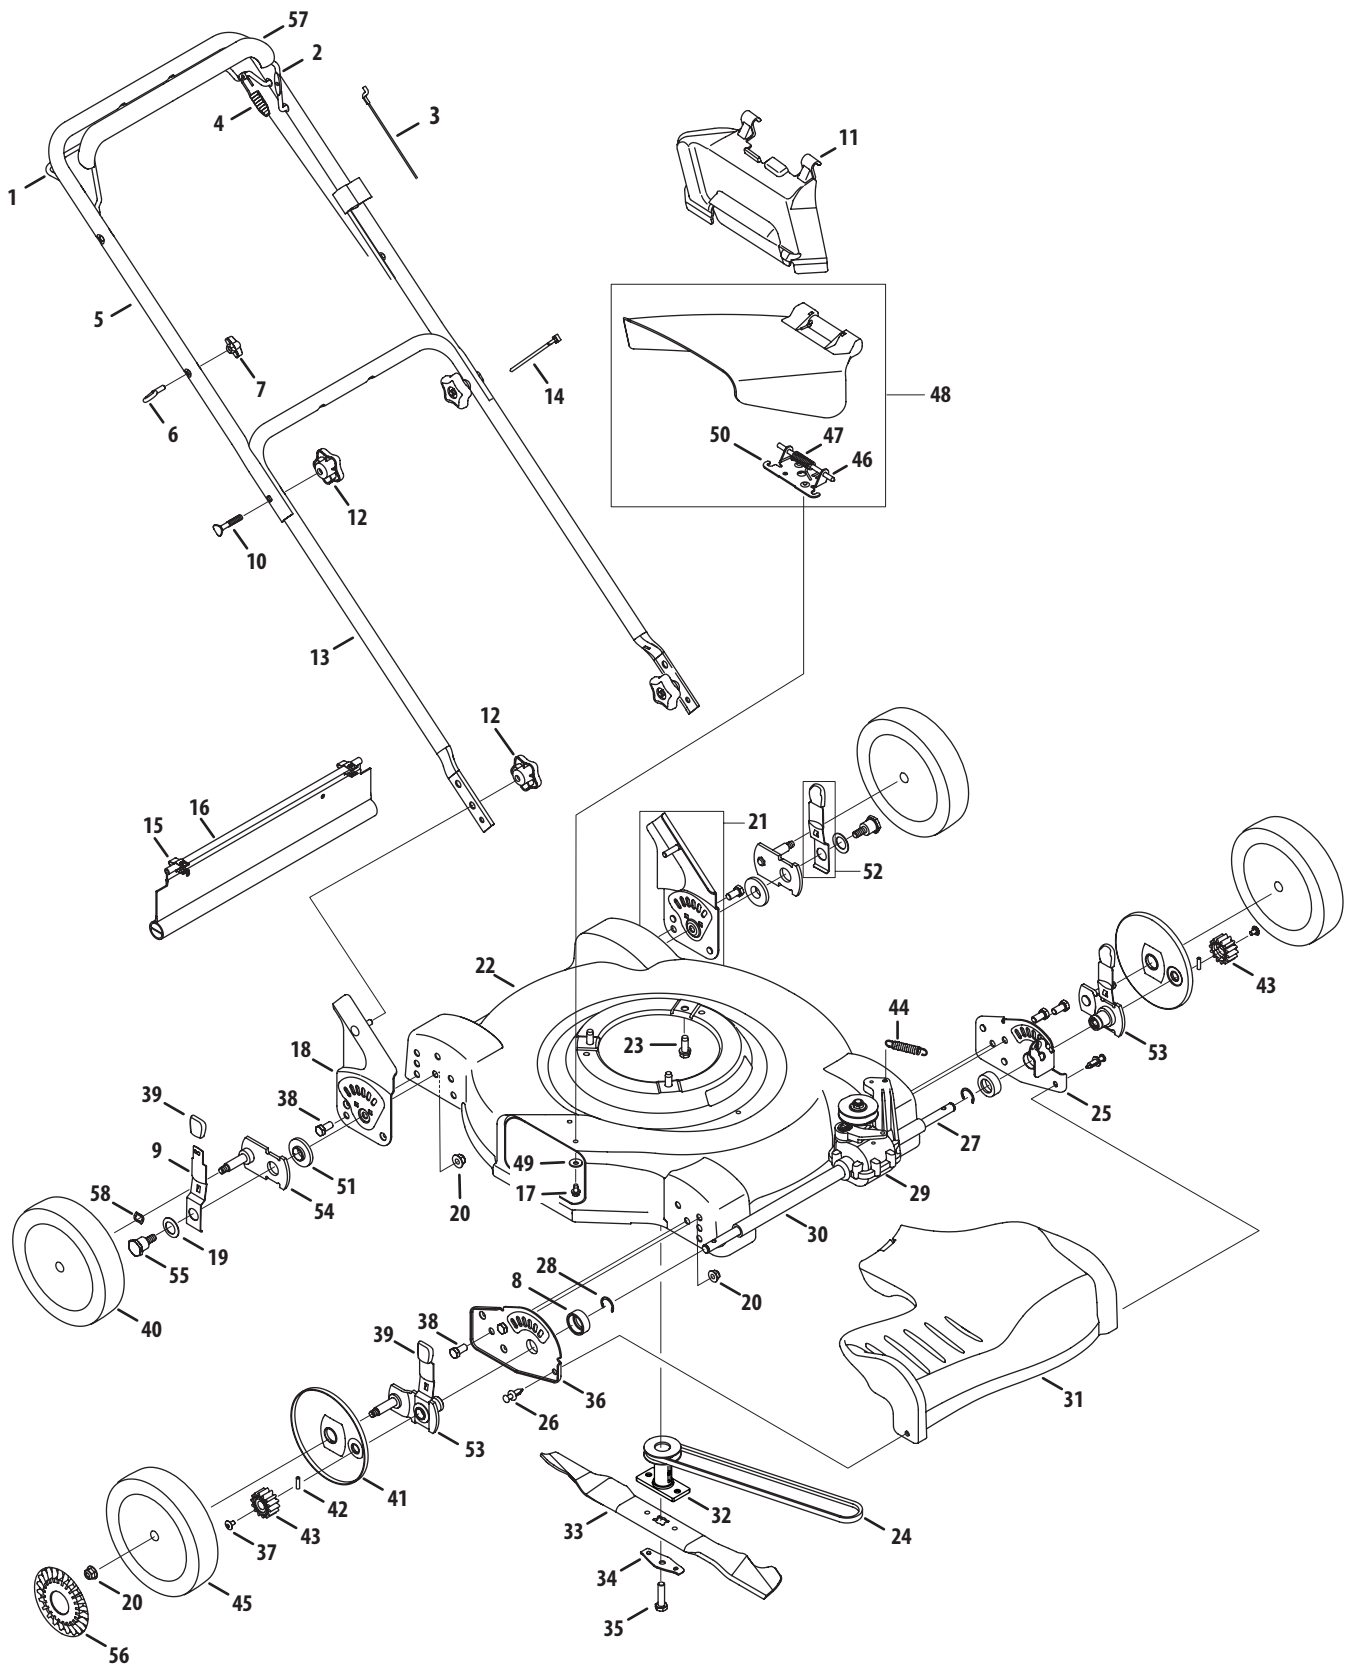


Ref No.	Part Number	Description
1.	747-1214	Drive Control
2.	747-1161A-0637	Blade Control
3.	746-1113	Control Cable - 37.75"
	746-1114	Control Cable - 50.56"
4.	946-04204	Drive Control Cable
5.	749-1092A-0637	Upper Handle
6.	710-1205	Eye Bolt
7.	720-0279	Wing Nut, 1/4-20
8.	748-0390	Bearing Support Spacer
9.	732-1026	Spring Lever
10.	710-1174	Carriage Bolt, 5/16-18 x 2.0
11.	631-04045	Mulching Baffle
12.	720-04072A	Star Knob
13.	749-04037	Lower Handle
14.	725-0157	Cable Tie
15.	732-04631	Hinge Clip
16.	731-06952	Trail Shield
17.	710-0599	Hex Screw, 1/4-20 x.500
18.	682-3064-0637	Handle Bracket Assy - RH
19.	736-0741	Bell Washer, .760 x 1.25 x.041
20.	712-04065	Lock Nut, 3/8-16
21.	682-3065-0637	Handle Bracket Assembly - LH
22.	687-02046	22" Deck Assembly
23.	710-0654A	Hex Washer Scr., 3/8-16 x 1.0
24.	954-04100	V-Belt, 3L x 32.90
25.	782-0585A-0637	Forward Height Adj. Plate - LH
26.	728-0199	Rivet
27.	750-04407	Sleeve Spacer, .550 ID x 2.22
28.	716-0198	Retainer Ring
29.	918-04375B	Transmission Assy. Comp.
30.	750-04406A	Sleeve Spacer, .550 ID x 8.51
31.	731-0073	Transmission Cover

Ref No.	Part Number	Description
	931-04636	Transmission Cover (Yellow)
32.	687-02555	Blade Adapter
33.	942-0742A	22" Mulching Blade
34.	736-0524B	Blade Bell Support
35.	710-1044	Hex Cap Screw, 3/8-24 x 1.5
36.	782-0584-0637	Forward Hght. Adj. Plate - RH
37.	710-04531	Screw, 1/4-20 x .390
38.	710-0216	Hex Cap Screw, 3/8-16 x.75
39.	720-0426	Adjustment Knob
40.	734-1987	Rear Wheel, 8 x 1.8, Bar
	734-04087	Rear Wheel, 8 x 1.8, Bar, Yellow
41.	731-04643	Wheel Dust Cover
42.	915-0221	Pin
43.	717-1762	Spur Gear 14T - RH
	717-1761	Spur Gear 14T - LH
44.	732-04049	Ext. Spring, .47 OD x 2.50
45.	634-0190	Front Wheel, 8 x 1.8, Bar
	634-04100	Front Wheel, 8 x 1.8, Bar, Yellow
46.	747-0710	Hinge Pin
47.	732-1014	Torsion Spring
48.	931-1034B	Side Discharge Assembly
49.	736-0270	Bell Washer, .265 ID x.75 OD
50.	17032A	Deflector Chute Adapter
51.	741-04242	Height Adjustment Bearing
52.	987-02051	Rear Hgt. Adj. Lever Assembly
53.	987-02140A	Front Lever Assembly - RH
	987-02141A	Front Lever Assembly - LH
54.	687-02342	Rear Pivot Arm Assembly
55.	738-1173	Shoulder Screw, 3/8-16
56.	731-0981C†	Hub Cap
57.	731-2626†	Deluxe Bail Cover
58.	936-0504†	Washer, Wave, .510 x .750 x .017

† If Equipped

 
Model 26J

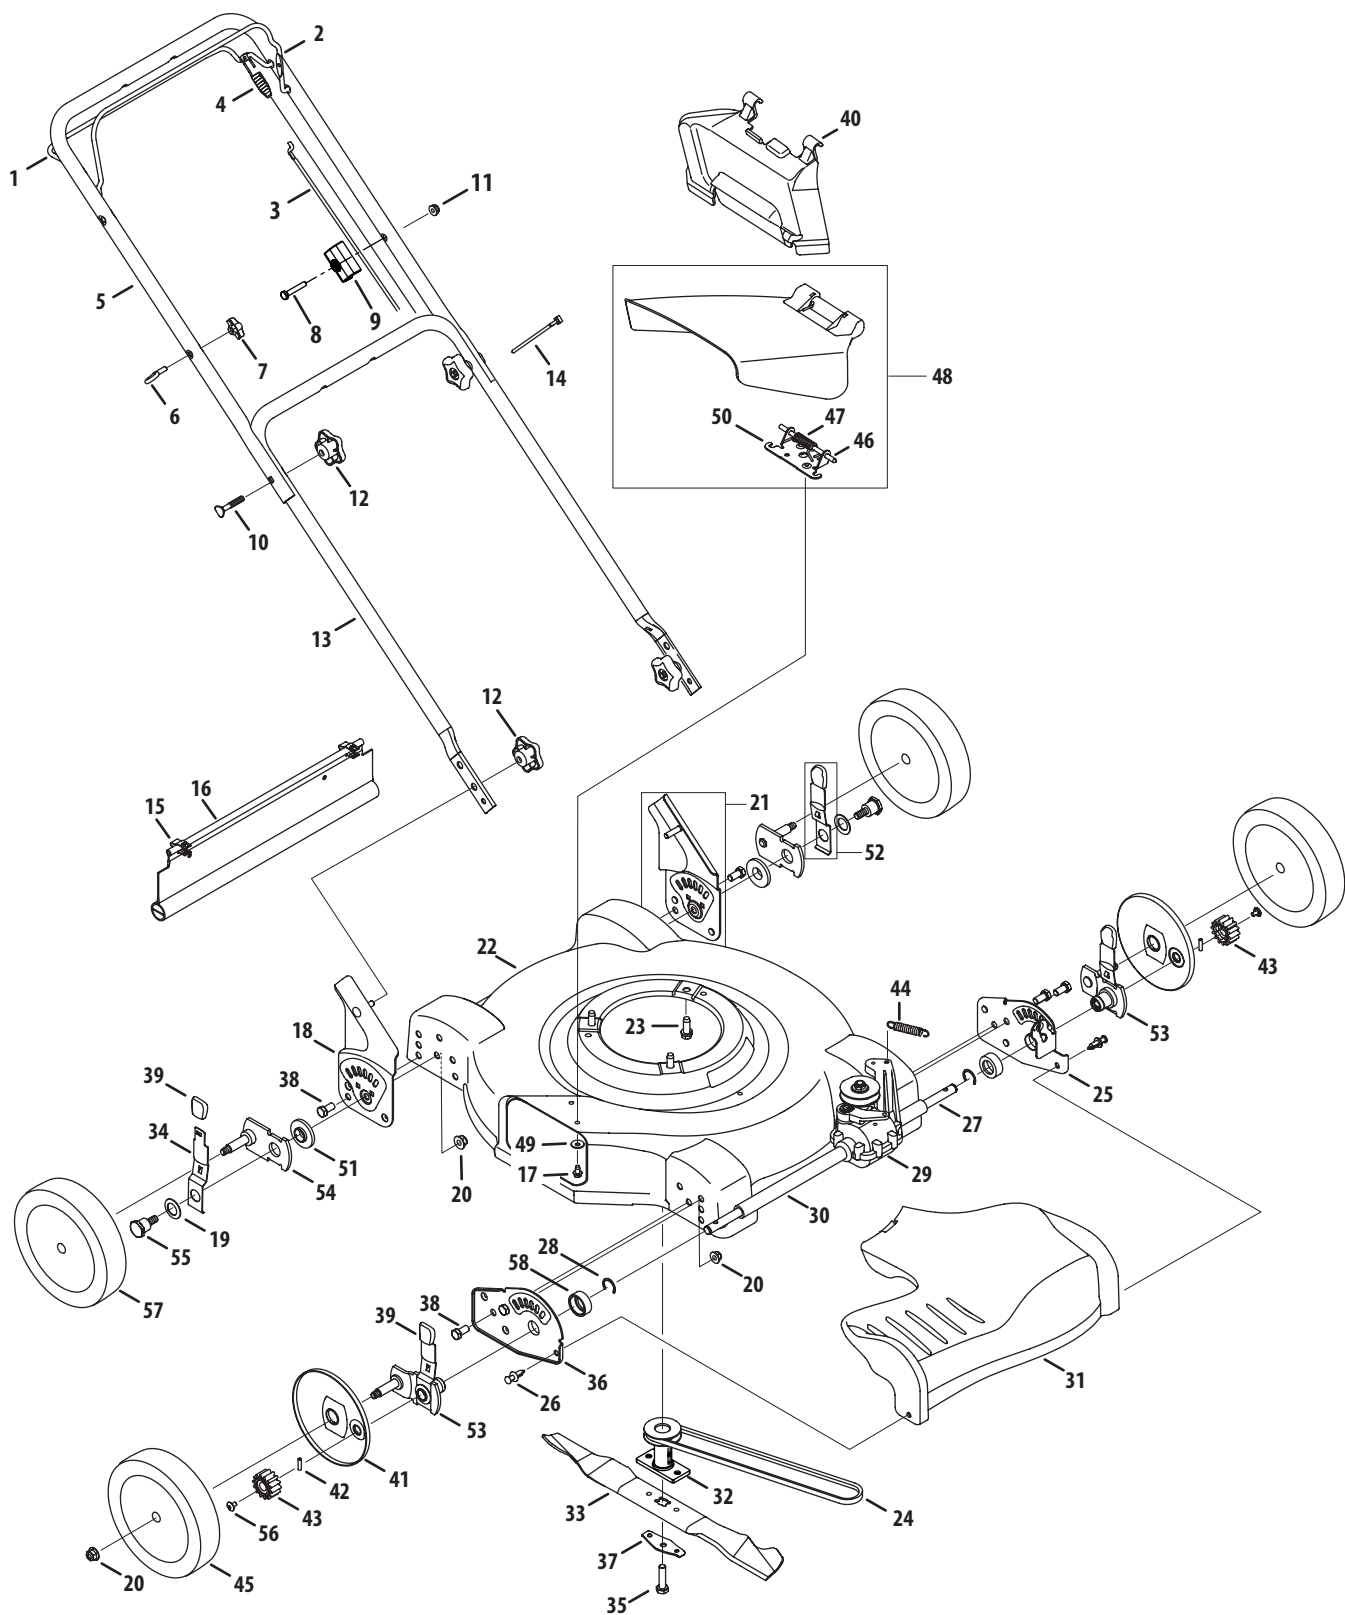

Ref No.	Part Number	Description
1.	747-1214	Drive Control
2.	747-1161A-0637	Blade Control
3.	746-04300	Blade Control Cable
4.	746-04304	Drive Control Cable
5.	749-1092A-0637	Upper Handle
6.	710-1205	Eye Bolt
7.	720-0279	Wing Nut, 1/4-20
8.	710-0606	Hex Screw, 1/4-20 x 1.50
9.	731-06749	Cable Mount
10.	710-1174	Carriage Bolt, 5/16-18 x 2.0
11.	712-04064	Flange Lock Nut, 1/4-20
12.	720-04072A	Star Knob
13.	749-04037	Lower Handle
14.	725-0157	Cable Tie
15.	732-04631	Hinge Clip
16.	731-06952	Trail Shield
17.	710-0599	Hex Screw, 1/4-20 x.500
18.	682-3064-0637	Handle Bracket Assy - RH
19.	736-0741	Bell Washer, .760 x 1.25 x.041
20.	712-04065	Lock Nut, 3/8-16
21.	682-3065-0637	Handle Bracket Assembly - LH
22.	687-02046	22" Deck Assembly
23.	710-0654A	Hex Washer Scr., 3/8-16 x 1.0
24.	954-04100	V-Belt, 3L x 32.90
25.	782-0585A-0637	Forward Height Adj. Plate - LH
26.	728-0199	Rivet
27.	750-04407	Sleeve Spacer, .550 ID x 2.22
28.	716-0198	Retainer Ring
29.	918-04375B	Transmission Assy. Comp.
30.	750-04406A	Sleeve Spacer, .550 ID x 8.51

Ref No.	Part Number	Description
31.	731-0073	Transmission Cover
32.	687-02555	Blade Adapter
33.	942-0742A	22" Mulching Blade
34.	732-1026	Spring Lever
35.	710-1044	Screw, 3/8-24 x 1.5
36.	782-0584-0637	Forward Hght. Adj. Plate - RH
37.	736-0524B	Blade Bell Support
38.	710-0216	Hex Cap Screw, 3/8-16 x.75
39.	720-0426	Adjustment Knob
40.	631-04045	Mulch Plug
41.	731-04643	Wheel Dust Cover
42.	915-0221	Pin
43.	717-1762	Spur Gear 14T - RH
	717-1761	Spur Gear 14T - LH
44.	732-04049	Ext. Spring, .47 OD x 2.50
45.	634-0190	Front Wheel
46.	747-0710	Hinge Pin
47.	732-1014	Torsion Spring
48.	931-1034B	Side Discharge Assembly
49.	736-0270	Bell Washer, .265 ID x.75 OD
50.	17032A	Deflector Chute Adapter
51.	741-04242	Height Adjustment Bearing
52.	987-02051	Rear Hgt. Adj. Lever Assembly
53.	987-02140A	Front Lever Assembly - RH
	987-02141A	Front Lever Assembly - LH
54.	687-02342	Rear Pivot Arm Assembly
55.	738-1173	Shoulder Screw, 3/8-16
56.	710-04531	Screw, 1/4-20 x .390
57.	734-1987	Rear Wheel
58.	748-0390	Bearing Support Spacer

 
Model 26M

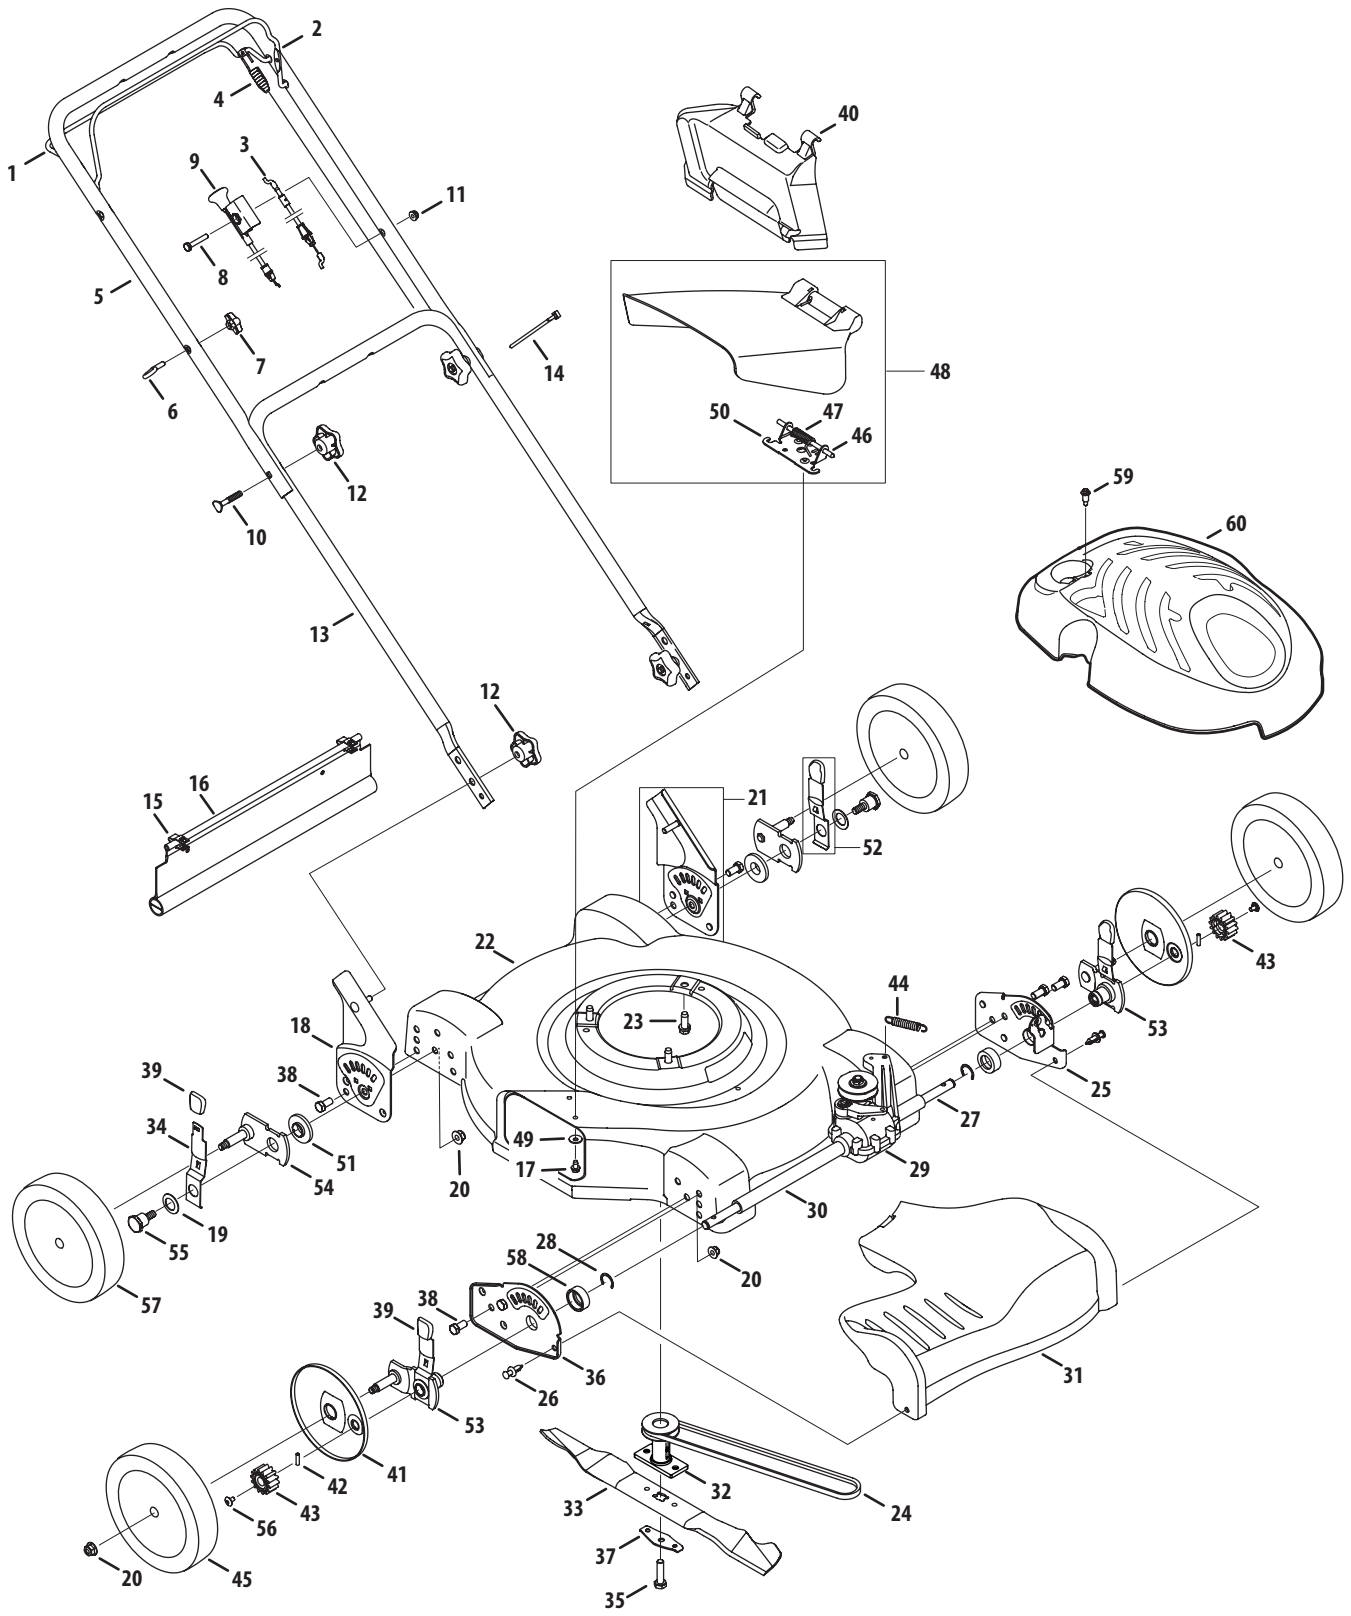

Ref No.	Part Number	Description
1.	747-1214	Drive Control
2.	747-1161A-0637	Blade Control
3.	746-04300	Blade Control Cable
4.	746-04304	Drive Control Cable
5.	749-1092A-0637	Upper Handle
6.	710-1205	Eye Bolt
7.	720-0279	Wing Nut, 1/4-20
8.	710-0606	Hex Screw, 1/4-20 x 1.50
9.	946-04295A	Choke Cable
10.	710-1174	Carriage Bolt, 5/16-18 x 2.0
11.	712-04064	Flange Lock Nut, 1/4-20
12.	720-04072A	Star Knob
13.	749-04037	Lower Handle
14.	725-0157	Cable Tie
15.	732-04631	Hinge Clip
16.	731-06952	Trail Shield
17.	710-0599	Hex Screw, 1/4-20 x.500
18.	682-3064-0637	Handle Bracket Assy - RH
19.	736-0741	Bell Washer, .760 x 1.25 x.041
20.	712-04065	Lock Nut, 3/8-16
21.	682-3065-0637	Handle Bracket Assembly - LH
22.	687-02046	22" Deck Assembly
23.	710-0654A	Hex Washer Scr., 3/8-16 x 1.0
24.	954-04100	V-Belt, 3L x 32.90
25.	782-0585A-0637	Forward Height Adj. Plate - LH
26.	728-0199	Rivet
27.	750-04407	Sleeve Spacer, .550 ID x 2.22
28.	716-0198	Retainer Ring
29.	918-04375B	Transmission Assy. Comp.
30.	750-04406A	Sleeve Spacer, .550 ID x 8.51
31.	731-0073	Transmission Cover

Ref No.	Part Number	Description
32.	687-02555	Blade Adapter
33.	942-0742A	22" Mulching Blade
34.	732-1026	Spring Lever
35.	710-1044	Screw, 3/8-24 x 1.5
36.	782-0584-0637	Forward Hght. Adj. Plate - RH
37.	736-0524B	Blade Bell Support
38.	710-0216	Hex Cap Screw, 3/8-16 x.75
39.	720-0426	Adjustment Knob
40.	631-04045	Mulch Plug
41.	731-04643	Wheel Dust Cover
42.	915-0221	Pin
43.	717-1762	Spur Gear 14T - RH
	717-1761	Spur Gear 14T - LH
44.	732-04049	Ext. Spring, .47 OD x 2.50
45.	634-0190	Front Wheel
46.	747-0710	Hinge Pin
47.	732-1014	Torsion Spring
48.	931-1034B	Side Discharge Assembly
49.	736-0270	Bell Washer, .265 ID x.75 OD
50.	17032A	Deflector Chute Adapter
51.	741-04242	Height Adjustment Bearing
52.	987-02051	Rear Hgt. Adj. Lever Assembly
53.	987-02140A	Front Lever Assembly - RH
	987-02141A	Front Lever Assembly - LH
54.	687-02342	Rear Pivot Arm Assembly
55.	738-1173	Shoulder Screw, 3/8-16
56.	710-04531	Screw, 1/4-20 x .390
57.	734-1987	Rear Wheel
58.	748-0390	Bearing Support Spacer
59.	710-04744	Screw, #12-16 x 1.00
60.	631-04437	Engine Shroud

 
Model Series 460

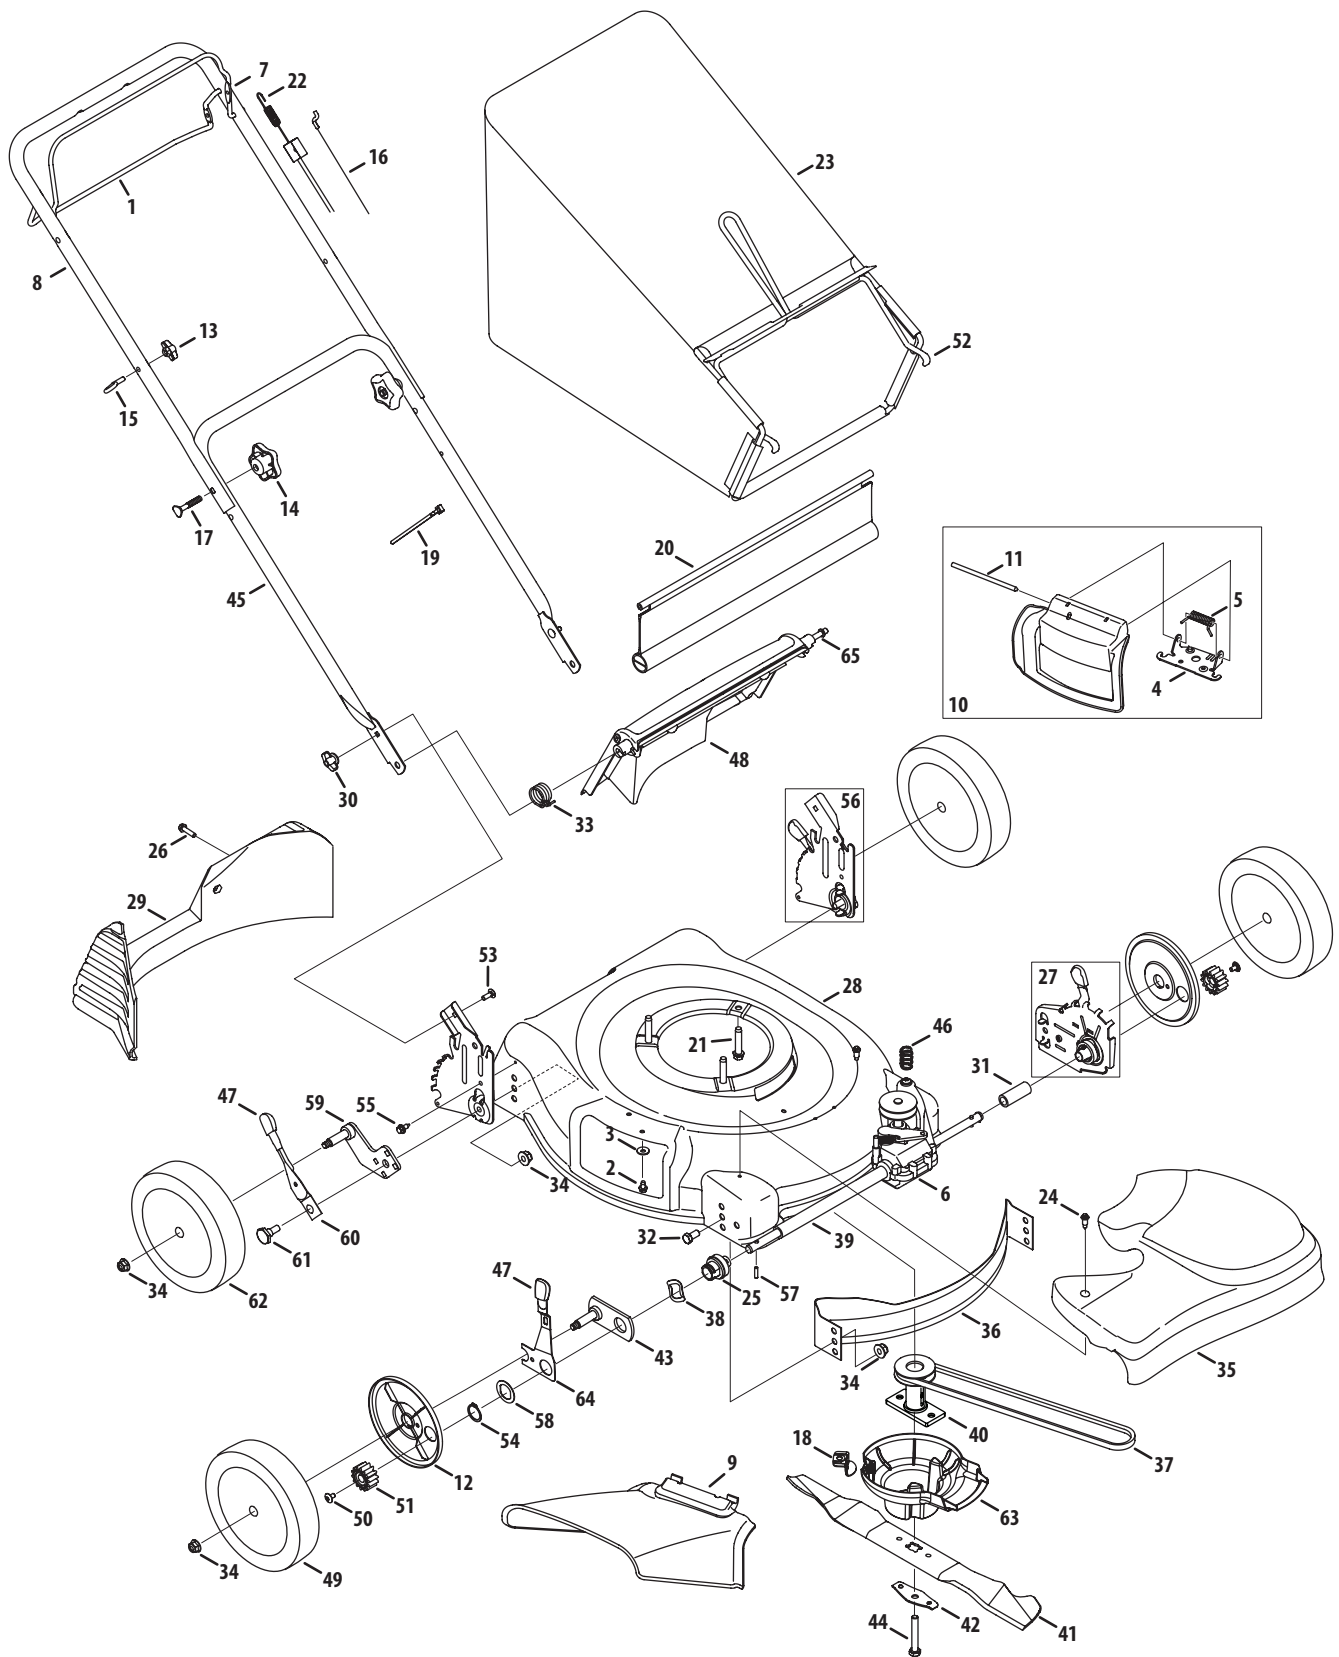

Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-0599	TT Screw 1/4-20 x 0.5
3	736-0270	Bell Washer.265 x 0.75
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	747-1161A-0637	Blade Control
8	749-1092A-0637	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	746-1132	Control Cable - 40.75"
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	787-01593	Engine Baffle Bracket
19	926-0240	Cable Tie
20	731-05642A	Rear Trailing Shield
21	710-0654A	Self-Tapping Sems Screw
22	946-04203	Drive Cable
23	964-04007A	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16

Ref No.	Part Number	Description
35	931-05013A	Transmission Cover
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	936-0447	Wave Washer
39	750-04594	Sleeve Spacer 8.985" Lg.
40	987-02221	Blade Adapter, 25mm
41	942-0741A	21" Mulching Blade
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A-0637	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	634-0190	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A-0637	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
57	915-0221	Dowel Pin
58	736-0474	Washer
59	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
60	732-04175	Rear Spring Lever
61	738-04266	Shoulder Scr.500 Dia. x.434
62	734-1987	Rear Wheel
63	753-06116	Engine Baffle
64	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
65	747-04587	Pivot Rod

 Model Series G460

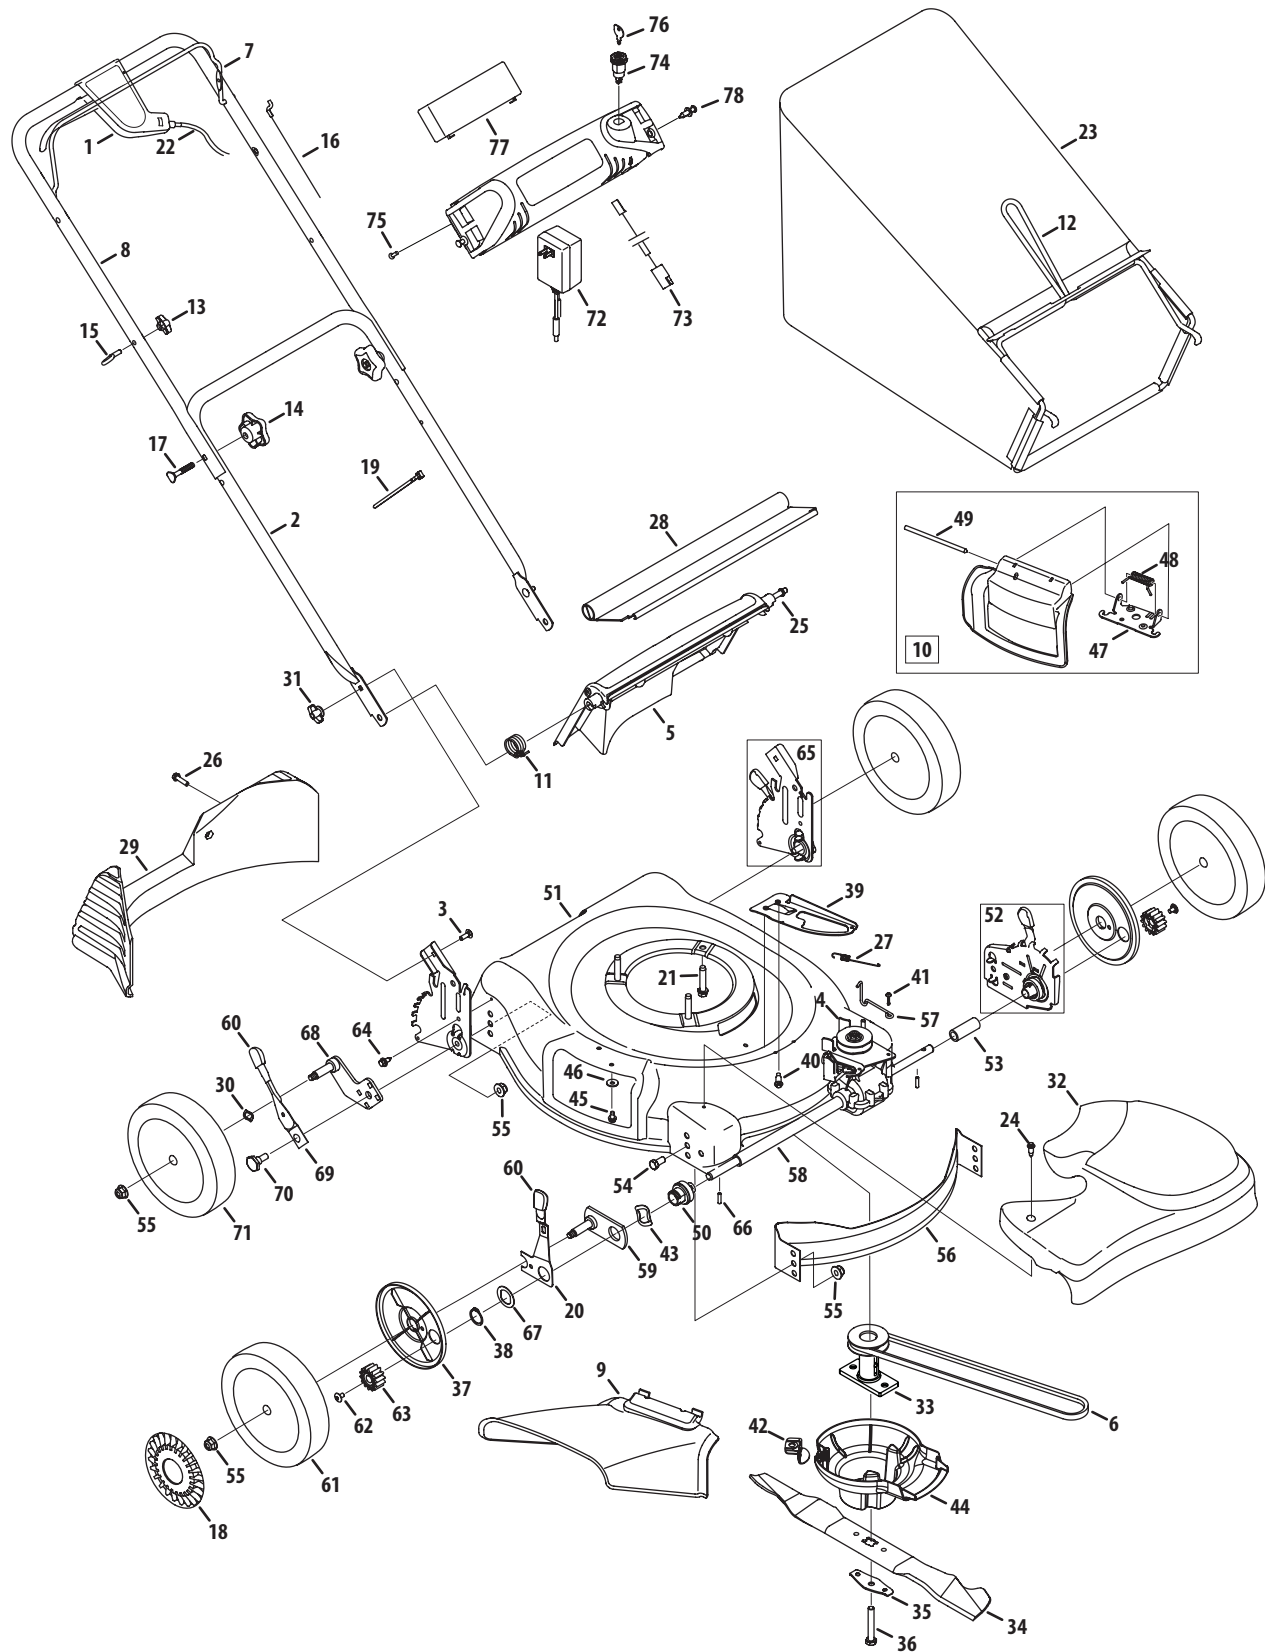


Model Series G460

Ref No.	Part Number	Description
1	753-06060	Drive Control Assembly
2	749-0928A-0637	Lower Handle
3	710-0703	Carriage Bolt 1/4-20
4	918-04377B	Transmission Assembly
5	731-06847	Rear Discharge Door
6	954-04082A	V-Belt
7	747-1161A-0637	Blade Control
8	749-1092A	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	732-04090A	Torsion Spring - RH
12	747-04080A	Grass Bag Frame
13	720-0279	Handle Knob
14	720-04072A	Handle Knob
15	710-1205	Eye Bolt
16	746-1130	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	731-07049	Hub Cap
19	926-0240	Cable Tie
20	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
21	710-0654A	Self-Tapping Sems Screw
22	746-04206A	Drive Cable
23	964-04007A	Grass bag
24	710-1650	Shoulder Screw # 12 -24
25	747-04587	Pivot Rod
26	710-1241	Screw, 1/4-15 x 1.00
27	732-04317	Extension Spring
28	731-05642A	Rear Trailing Shield
29	731-04150C	Rear Baffle
30	936-0504	Washer, Wave, .510 x .750 x .017
31	912-0397	Wing Nut
32	931-05013A	Transmission Cover
33	687-02221	Blade Adapter
34	942-0741A	21" Mulching Blade
35	736-0524B	Blade Bell Support
36	710-1257	Hex Screw 3/8-24 x 2.50
37	782-7551A	Wheel Dust Cap
38	916-0102	Snap Ring
39	787-01258A-0637	Cable Mount Bracket
40	710-0896	Screw, 1/4-14 x .625
41	710-04329	Screw, .159 OD x .610

Ref No.	Part Number	Description
42	787-01593	Engine Baffle Bracket
43	936-0447	Washer, Wave, 1.5 x 1.0 x .029
44	931-06029	Engine Baffle
45	710-0599	TT Screw 1/4-20 x 0.5
46	736-0270	Bell Washer.265 x 0.75
47	17032A	Deflector Chute Adapter
48	732-1014	Torsion Spring
49	747-0710	Hinge Pin
50	987-02347	Bearing Assembly
51	787-01278-0691	21" Deck
52	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
53	750-04405	Sleeve Spacer, 1.8" Lg.
54	710-0216	Hex Screw, 3/8-16 x.75
55	712-04065	Flange Lock Nut, 3/8-16
56	782-5002B	Front Baffle
57	732-04294	Belt Keeper Wire
58	750-04404	Sleeve Spacer, 9.10" Lg.
59	987-02334	Pivot Plate Assembly
60	720-0426	Adjustment Knob
61	734-2042A	Front Wheel
62	710-04531	Screw, 1/4-20 x .390
63	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
64	710-1652	TT Scr. w/Washer 1/4-20 x.625
65	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
66	915-0221	Dowel Pin
67	736-0474	Washer
68	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
69	732-04175	Rear Spring Lever
70	738-04266	Shoulder Scr., 500 Dia. x. 385
71	734-2004B	Rear Wheel
72	725-04329	Battery Charger
73	925-04072	Electric Start Harness Assembly
74	925-04347	Key Switch
75	710-1667A	Screw, #10-16 x .750
76	925-0201	Key
77	925-04323	Battery
78	728-0199	Rivet

 Model E46J

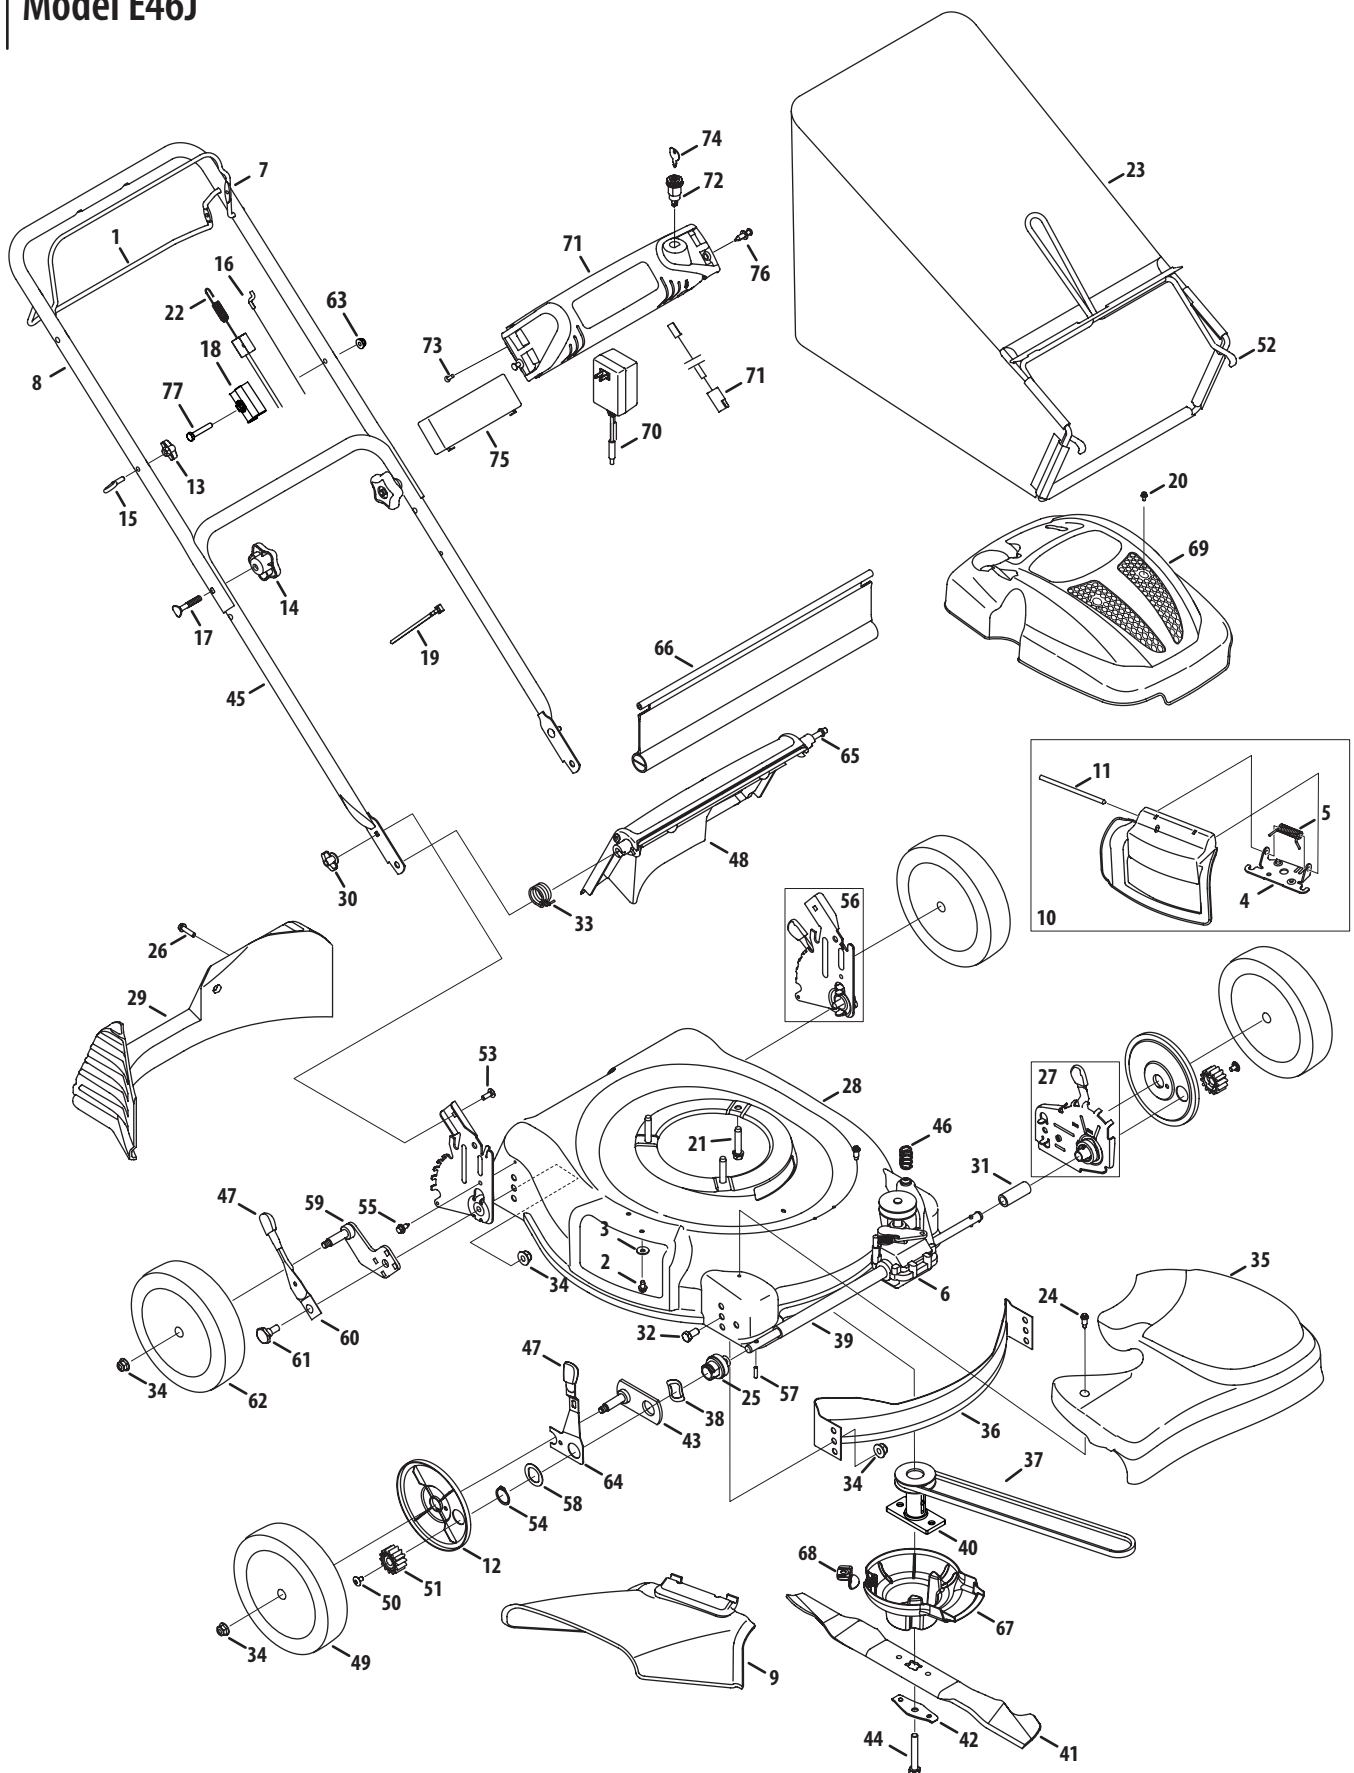


Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-0599	TT Screw 1/4-20 x 0.5
3	736-0270	Bell Washer.265 x 0.75
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	747-1161A-0637	Blade Control
8	749-1233D-0637	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	946-04589	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	731-06749	Control Cable Mount
19	926-0240	Cable Tie
20	710-04744	Screw, HL, #12-16 x 1.00
21	710-0654A	Self-Tapping Sems Screw
22	946-04303	Drive Cable
23	964-04128	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16
35	931-05013A	Transmission Cover
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	936-0447	Wave Washer
39	750-04594	Sleeve Spacer 8.985" Lg.
40	687-02195A	One Piece Blade Adapter
41	942-0741A	21" Mulching Blade

Ref No.	Part Number	Description
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A-0637	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	634-0190	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A-0637	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02271A	Handle Bracket Assembly - RH
	987-02270A	Handle Bracket Assembly - LH
57	915-0221	Dowel Pin
58	736-0474	Washer
59	987-02333	Pivot Arm Assembly - RH
	987-02332	Pivot Arm Assembly - LH
60	732-04175	Rear Spring Lever
61	738-04266	Shoulder Scr.500 Dia. x.434
62	734-1987	Rear Wheel
63	712-04064	Nut, FlgIk, 1/4-20
64	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
65	747-04587	Pivot Rod
66	731-05642A	Rear Trailing Shield
67	753-06116	Engine Baffle
68	787-01593	Engine Baffle Bracket
69	631-04440	Engine Shroud
70	725-04329	Battery Charger
	791-182534†	Battery Charger (w/LED Light)
71	925-04072	Electric Start Harness Ass'y.
72	925-04347	Key Switch
73	710-1667A	Screw, #10-16 x .750
74	925-0201	Key
75	925-04323	Battery
76	728-0199	Rivet
77	710-0606	Screw, 1/4-20 x 1.50

† If Equipped

 
Model Series 550

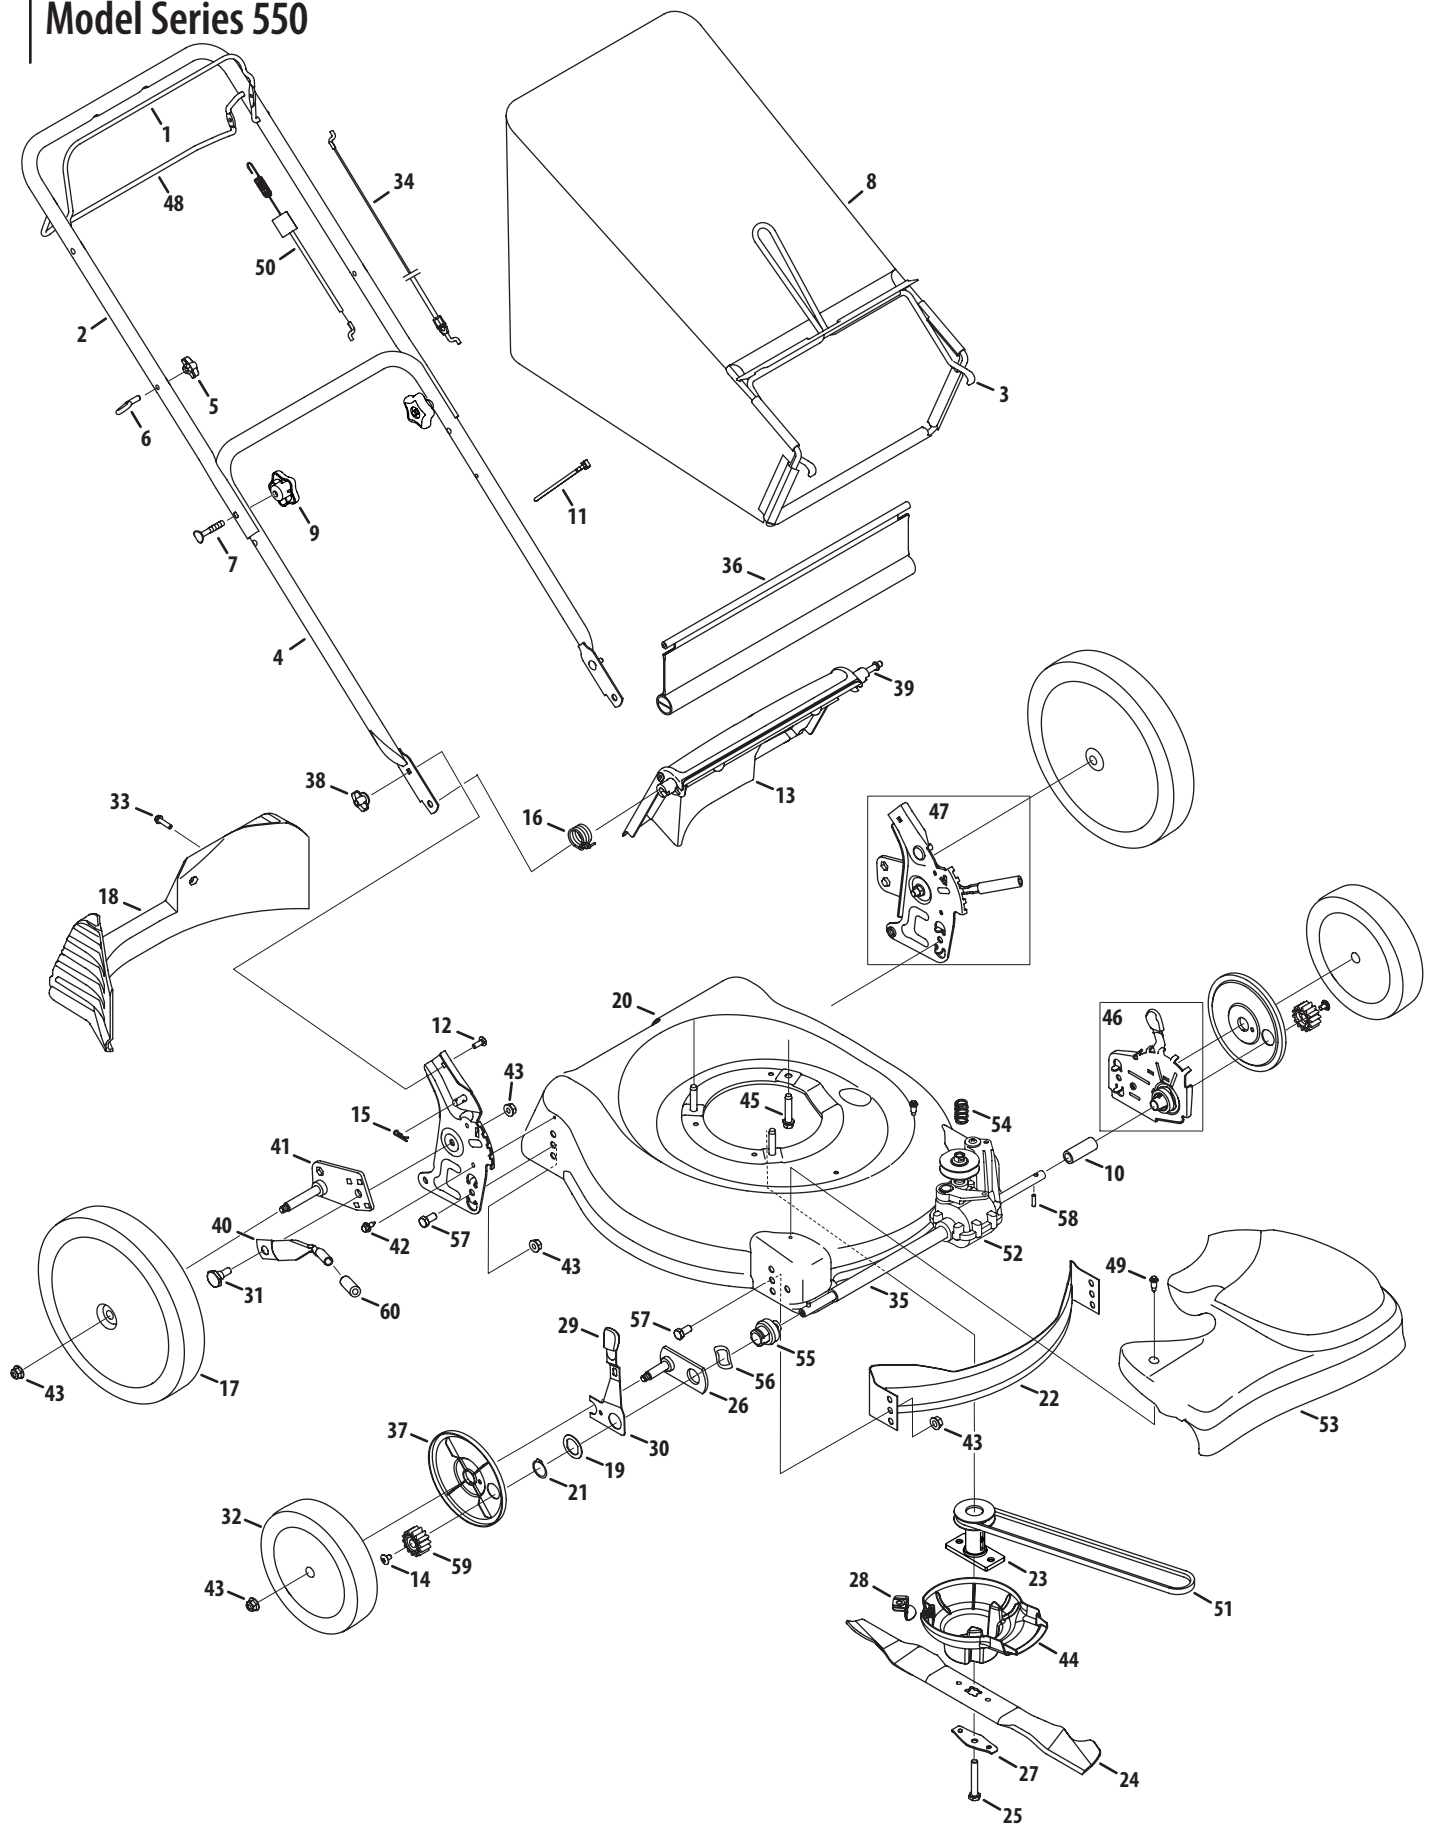

Ref No.	Part Number	Description
1	747-1161A-0637	Blade Control
2	749-1092A-0637	Upper Handle
3	747-04080A	Grass Catcher Frame
4	749-0928A-0637	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-1174	Carriage Bolt ,5/16-18 x 2
8	964-04007A	Grass Bag Assembly
9	720-04072A	Hand Knob
10	750-04595	Sleeve Spacer - LH
11	926-0240	Cable Tie
12	710-0703	Carriage Bolt ,1/4-20
13	731-06847	Rear Discharge Door
14	710-04531	Screw 1/4-20
15	714-0104	Cotter Pin
16	732-04090A	Torsion Spring - RH
17	734-04082	Rear Wheel, 12" x 1.8"
18	731-04150C	Rear Baffle
19	736-0474	Washer, 1.5" OD
20	787-01277-0638	Deck - 21"
21	916-0102	Snap Ring
22	782-5002B	Front Baffle
23	687-02221	Blade Adapter
24	942-0741A	21" Mulch Blade
25	710-1257	Hex Bolt , 3/8-24 x 2.5
26	987-02334	Pivot Plate Assembly
27	736-0524B	Blade Bell Support
28	787-01593	Engine Baffle Bracket
29	720-0426	Adjustment Lever Knob
30	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
31	738-04266	Shoulder Screw
32	634-0190	Front Wheel, 8" x 1.8"

Ref No.	Part Number	Description
33	710-1241	Screw, 1/4-15 x 1.000
34	746-1132	Control Cable - 40.75"
35	750-04594	Sleeve Spacer - RH
36	731-05642A	Trailshield
37	782-7551A	Wheel Dust Cap
38	912-0397	Wing Nut, 1/4-20
39	747-04588	Rear Door Pivot Rod
40	732-0866	Spring Lever
41	987-02335	Pivot Arm Assembly - RH
	987-02336	Pivot Arm Assembly - LH
42	710-1652	AB Screw
43	712-04065	Flange Lock Nut, 3/8-16
44	931-06029	Engine Baffle
45	710-0654A	TT Sems Screw, 3/8-16 x 1.00
46	987-02193A	Ht. Adj. Assy. Front - LH
	987-02194A	Ht. Adj. Assy. Front - RH
47	987-02280A	Rear Handle Bracket Assy. - LH
	987-02279A	Rear Handle Bracket Assy. - RH
48	747-1214	Drive Control
49	710-1650	Shoulder Screw
50	746-04203	Drive Cable
51	954-0637A	V-Belt
52	918-04376B	Transmission Assembly
53	931-05013A	Front Drive Cover
54	732-1043	Belt Tension Spring
55	987-02347	Bearing Assembly
56	936-0447	Wave Washer
57	710-0216	Hex Screw
58	915-0221	Dowel Pin
59	717-1762	Gear, 14T - RH
	717-1761	Gear, 14T - LH
60	720-0312	Grip

 
Model Series 560

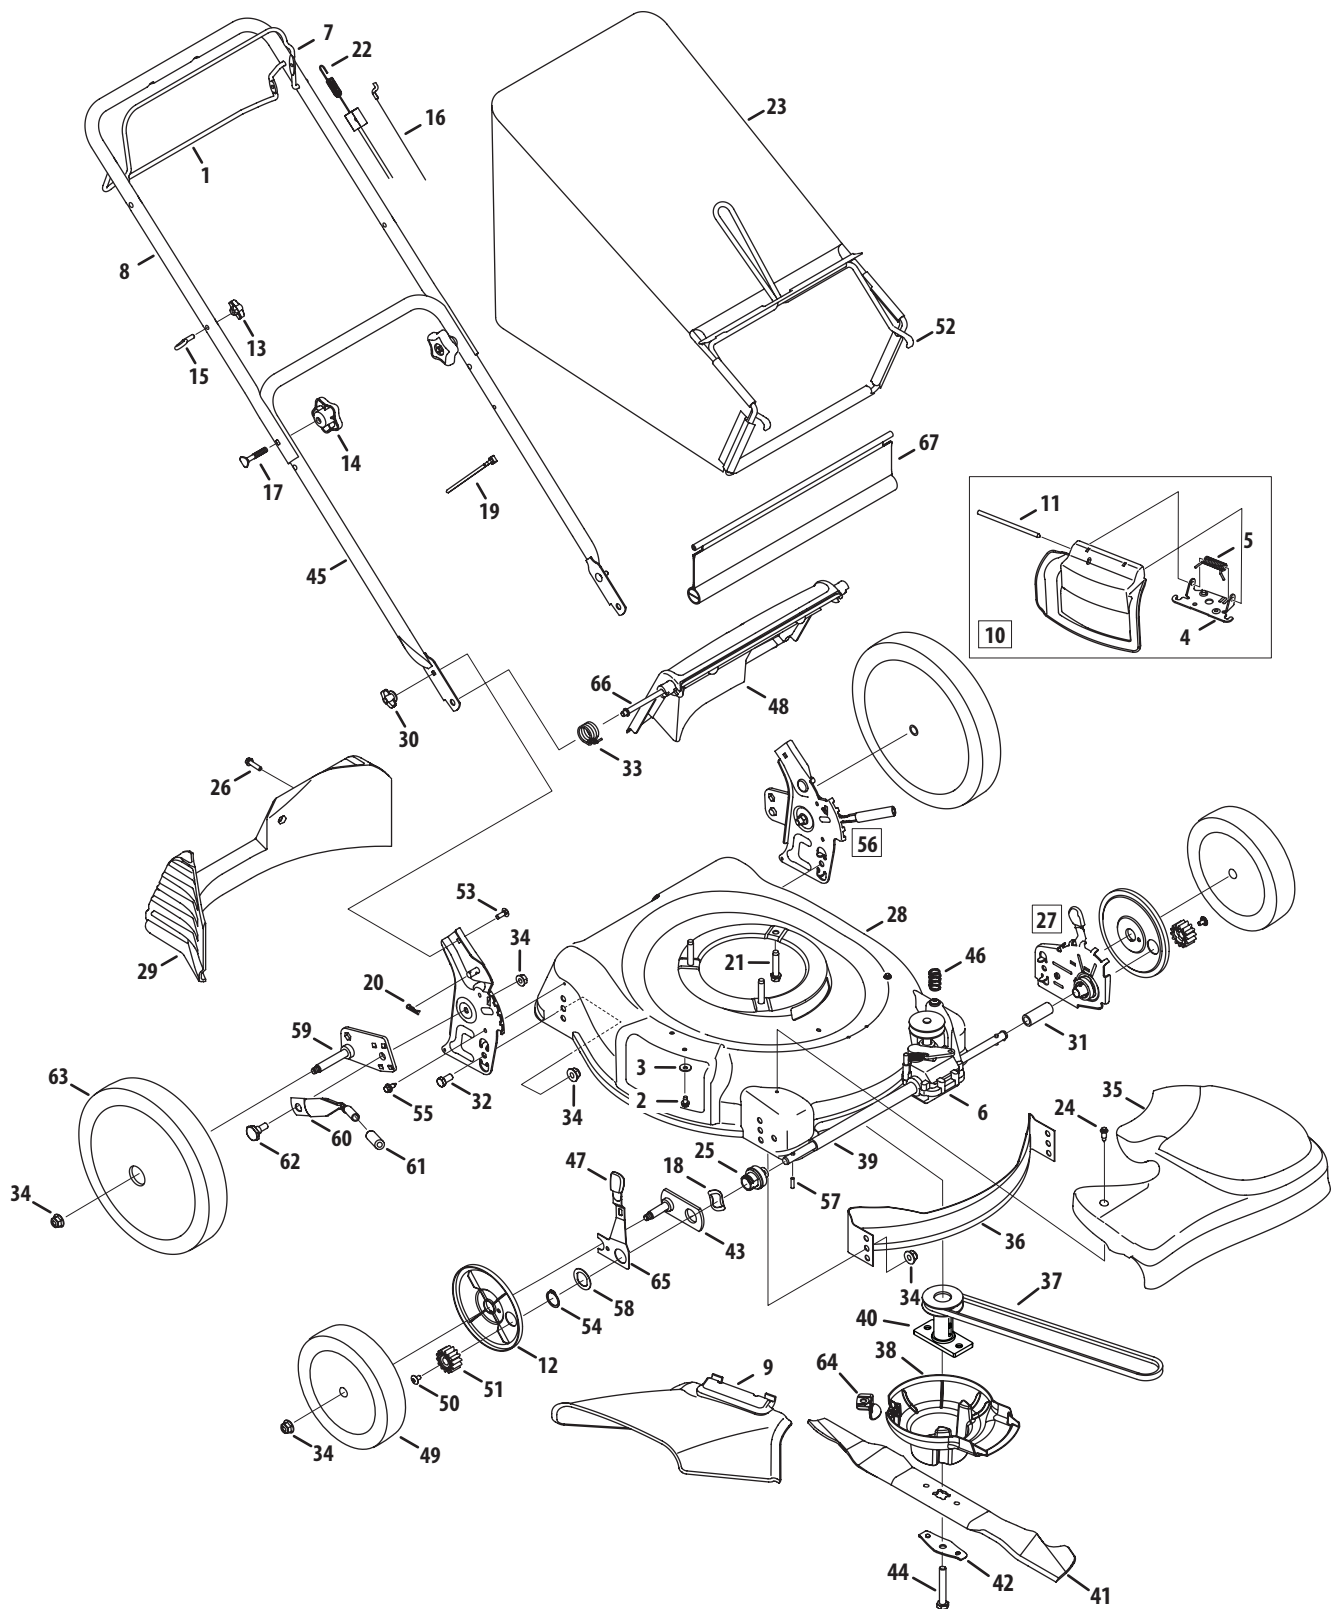

Ref No.	Part Number	Description
1	747-1214	Drive Control
2	710-0599	TT Screw 1/4-20 x 0.5
3	736-0270	Bell Washer.265 x 0.75
4	17032A	Deflector Chute Adapter
5	732-1014	Torsion Spring
6	918-04376B	Transmission Assembly
7	747-1161A-0637	Blade Control
8	749-1092A-0637	Upper Handle
9	731-04177	Chute Deflector
10	987-02055	Mulch Plug Complete
11	747-0710	Hinge Pin
12	782-7551A	Wheel Dust Cap
13	720-0279	Handle Knob
14	720-04072A	Star Knob
15	710-1205	Eye Bolt
16	746-1132	Control Cable - 40.75"
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	936-0447	Wave Washer, 1.5 x 1.0 x .029
19	926-0240	Cable Tie
20	914-0104	Cotter Pin
21	710-0654A	Self-Tapping Sems Screw
22	946-04203	Drive Cable
23	964-04007A	Grass Bag
24	710-1650	Shoulder Screw # 12 -24
25	987-02347	Front Bearing Assembly
26	710-1241	Screw, 1/4-15 x 1.000
27	987-02194A	Height Adjustment Ass'y - RH
	987-02193A	Height Adjustment Ass'y - LH
28	787-01278	21" Deck
29	731-04150C	Rear Baffle
30	912-0397	Wing Nut
31	750-04595	Slev. Spacer 1.4" Lg.
32	710-0216	Hex Screw, 3/8-16 x.75
33	732-04090A	Torsion Spring - RH
34	712-04065	Flange Lock Nut, 3/8-16
35	931-05013A	Transmission Cover

Ref No.	Part Number	Description
36	782-5002B	Front Baffle
37	954-0637A	V-Belt
38	753-06116	Engine Baffle
39	750-04594	Sleeve Spacer 8.985" Lg.
40	987-02221	Blade Adapter Assembly
41	942-0741A	21" Mulching Blade
42	736-0524B	Blade Bell Support
43	987-02334	Pivot Plate Assembly
44	710-1257	Hex Screw 3/8-24 x 2.50
45	749-0928A-0637	Lower Handle
46	732-1043	Belt Tension Spring
47	720-0426	Adjustment Knob
48	731-06847	Rear Discharge Door
49	634-0190	Front Wheel
50	710-04531	Screw, 1/4-20 x .390
51	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
52	747-04080A-0637	Grass Bag Frame
53	710-0703	Carriage Bolt 1/4-20
54	916-0102	Snap Ring
55	710-1652	TT Scr. w/Washer 1/4-20 x.625
56	987-02280A	Handle Bracket Assembly - LH
	987-02279A	Handle Bracket Assembly - RH
57	915-0221	Dowel Pin
58	736-0474	Washer, Flat, 1.01 x 1.50 x .035
59	987-02335	Pivot Arm Assembly - RH
	987-02336	Pivot Arm Assembly - LH
60	732-0866	Rear Spring Lever
61	720-0312	Foam Grip
62	738-04266	Shoulder Scr.500 Dia. x.434
63	734-04082	Rear Wheel
64	787-01593	Engine Baffle Bracket
65	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
66	747-04588	Pivot Rod
67	731-05642A	Rear Trailing Shield

 Model Series V560

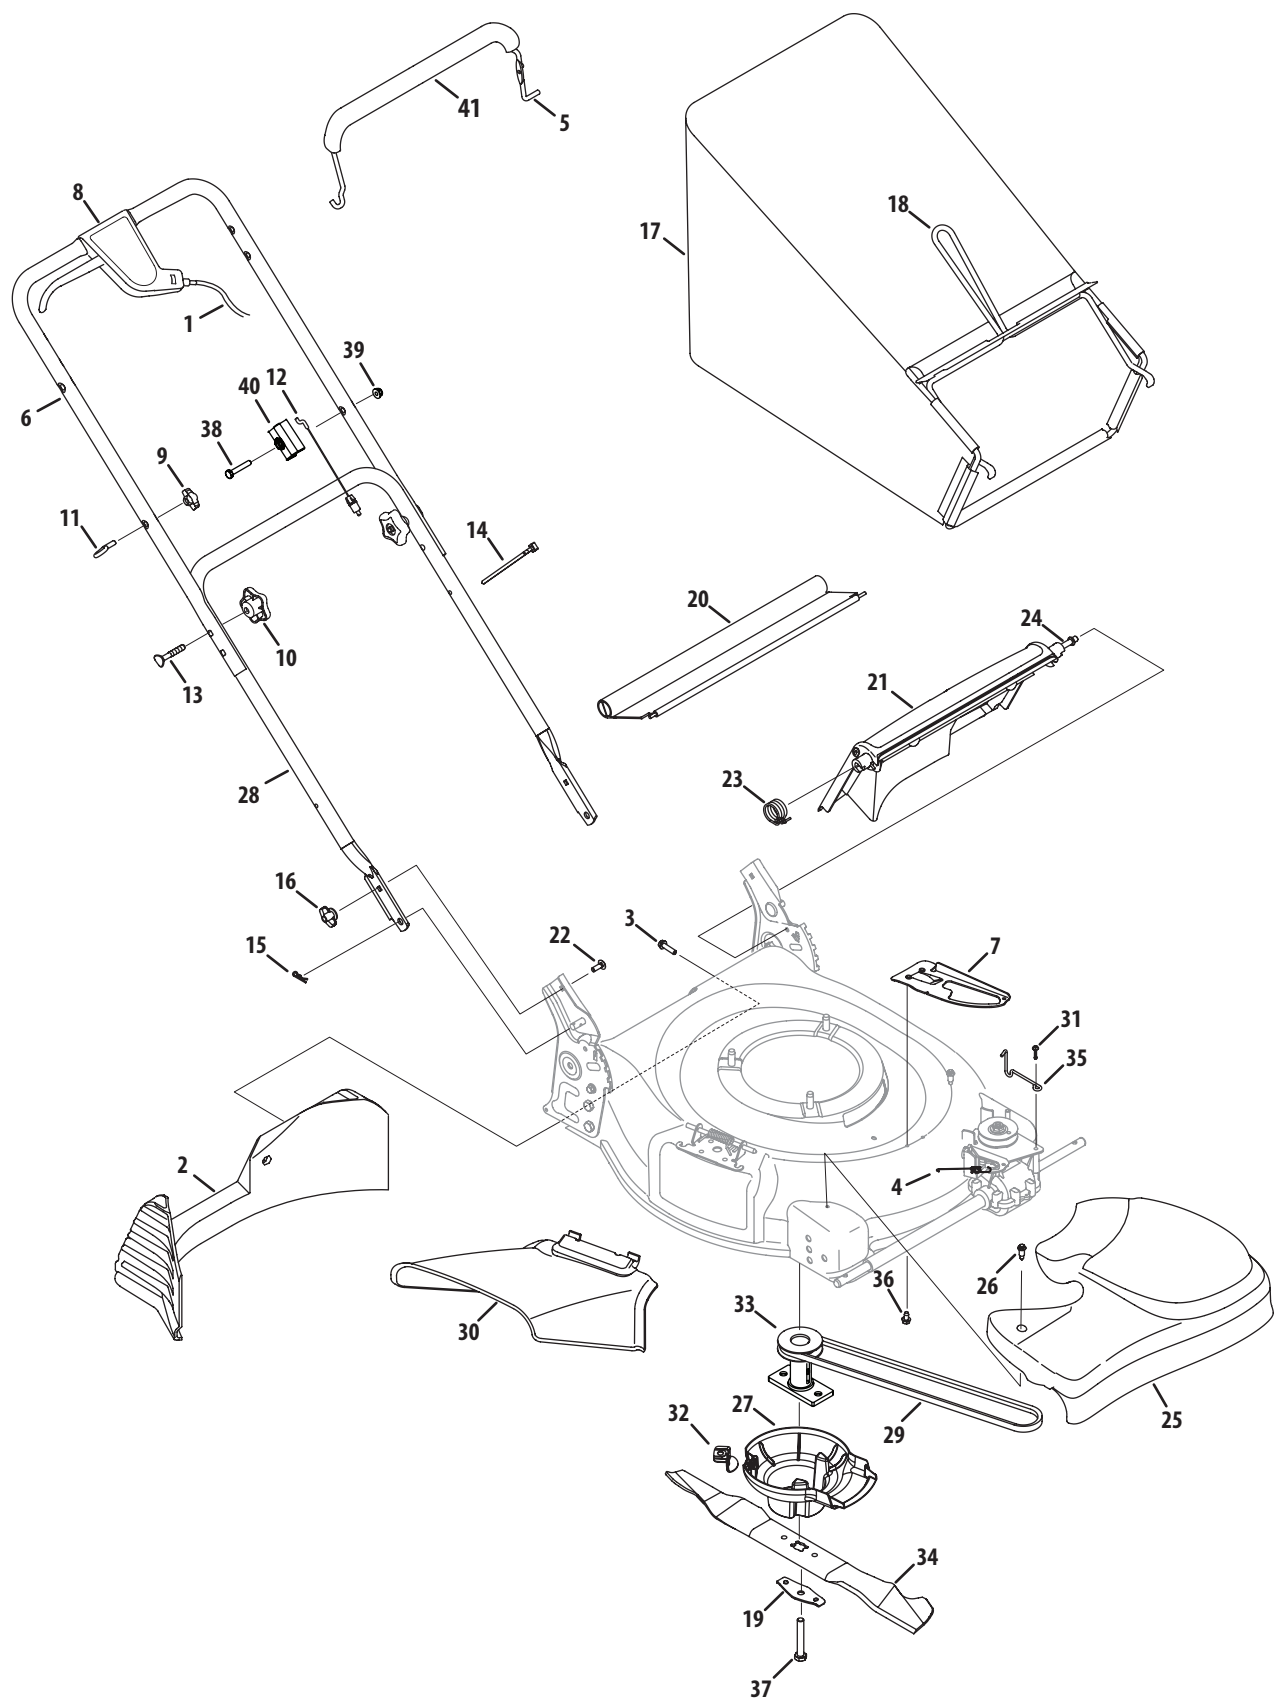


Ref No.	Part Number	Description
1	946-04206A	Variable Speed Cable
2	731-04150C	Rear Baffle 21" Rd.
3	710-1241	Screw, 1/4-15 x 1.000
4	732-04317	Extension Spring
5	747-1161A-0637	Blade Control
6	749-04206B-0637	Upper Handle
7	787-01258A-0637	Cable Mount Bracket
8	753-06060	Control Lever Assembly
9	720-0279	Handle Knob
10	720-04072A	Star Knob
11	710-1205	Eye Bolt
12	946-1130	Control Cable - 40"
	946-04589	Control Cable - 37.25" (Kohler)
13	710-1174	Carriage Bolt, 5/16-18 x 2.0
14	926-0240	Cable Tie
15	914-0104	Cotter Pin
16	912-0397	Wing Nut
17	964-04007A	Grass Bag
18	747-04080A-0637	Grass Bag Frame
19	736-0524B	Blade Bell Support
20	731-05642A	Rear Trailing Shield

Ref No.	Part Number	Description
21	731-06847	Rear Discharge Door
22	710-0703	Carriage Bolt, 1/4-20
23	732-04090A	Torsion Spring - RH
24	747-04588	Pivot Rod
25	931-05013A	Transmission Cover
26	710-1650	Shoulder Screw, # 12 -24
27	753-06116	Engine Baffle
28	749-0928A-0637	Lower Handle
29	954-04082A	V-Belt
30	731-04177	Side Discharge Chute
31	710-04329	Torx Screw
32	787-01593	Baffle Bracket
33	687-02195A	Blade Adapter Assembly
34	942-0741A	21" Mulching Blade
35	732-04294	Belt Keeper Wire
36	710-0896	Scr., 1/4-14 x.625
37	710-1257	Hex Screw, 3/8-24 x 2.50
38	710-0106†	Hhcs, 1/4-20 x 1.50
39	712-04064†	Nut, Flglk, 1/4-20
40	731-06749†	Mount, Cable
41	731-04859†	Bail Cover

† If Equipped

 Model Series V560

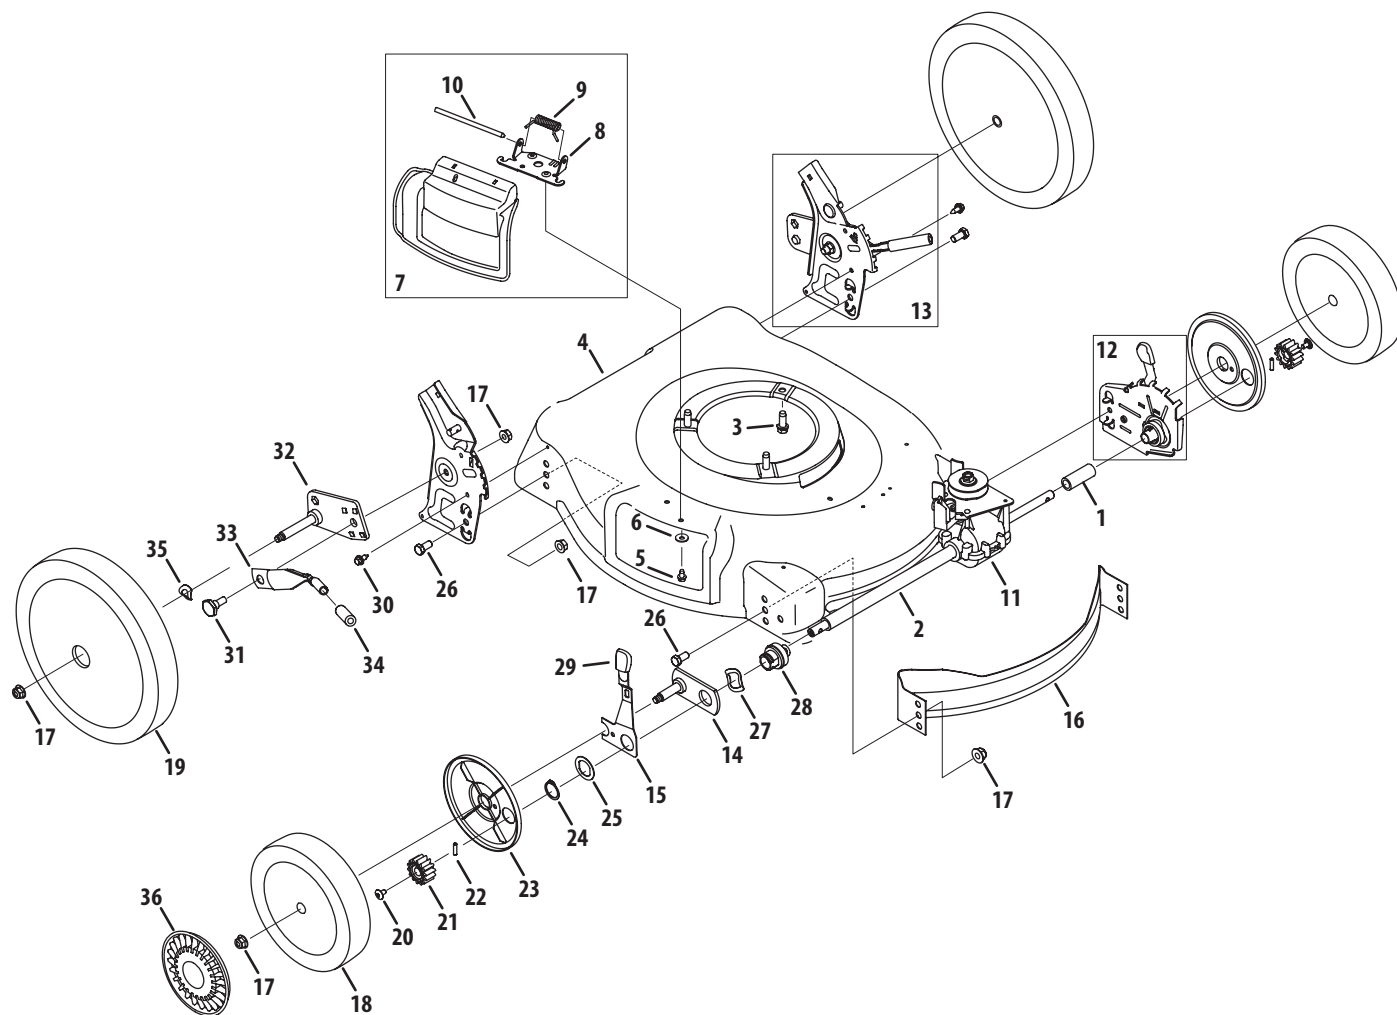


Ref No.	Part Number	Description
1	750-04405	Slev. Spacer, 1.8" Lg.
2	750-04404	Slev. Spacer, 9.10" Lg.
3	710-0654A	TT Screw
4	787-01278	21" Deck
5	710-0599	TT Screw, 1/4-20 x 0.5
6	736-0270	Bell Washer
7	987-02055	Hinged Mulch Plug Assembly
8	17032A	Chute Deflector Adapter
9	732-1014	Torsion Spring
10	747-0710	Hinge Pin
11	918-04377B	Transmission Assembly
12	987-02193A	Height Adj. Assembly - LH
	987-02194A	Height Adj. Assembly - RH
13	987-02280A	Handle Bracket Assembly - LH
	987-02279A	Handle Bracket Assembly - RH
14	987-02334	Pivot Plate Assembly
15	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
16	782-5002B	Front Baffle
17	712-04065	Flange Lock Nut, 3/8-16
18	734-2042A	Front Wheel, 8 x 2.125

Ref No.	Part Number	Description
19	734-04093	Rear Wheel, 12 x 2.125, Gray
	734-04046	Rear Wheel, 12 x 2.125, Yellow
20	710-04531	Screw, 1/4-20 x .390
21	717-1762	Gear 14T FWD - RH
	717-1761	Gear 14T FWD - LH
22	915-0221	Dowel Pin
23	782-7551A	Wheel Dust Cap
24	916-0102	Snap Ring
25	736-0474	Flat Washer
26	710-0216	Hex Screw, 3/8-16 x .75
27	936-0447	Wave Washer
28	987-02347	Bearing Assembly
29	720-0426	Adjustment Knob
30	710-1652	TT Screw w/washer, 1/4-20 x .625
31	738-04266	Shoulder Screw, .500 Dia. x .385
32	987-02335	Pivot Arm Assembly - RH
	987-02336	Pivot Arm Assembly - LH
33	732-0866	Rear Spring Lever
34	720-0312	Foam Grip
35	736-0182	Washer, Spring, .500 x 1.00 x .022
36	731-07001†	Hubcap

† If Equipped


 
Model Series 830

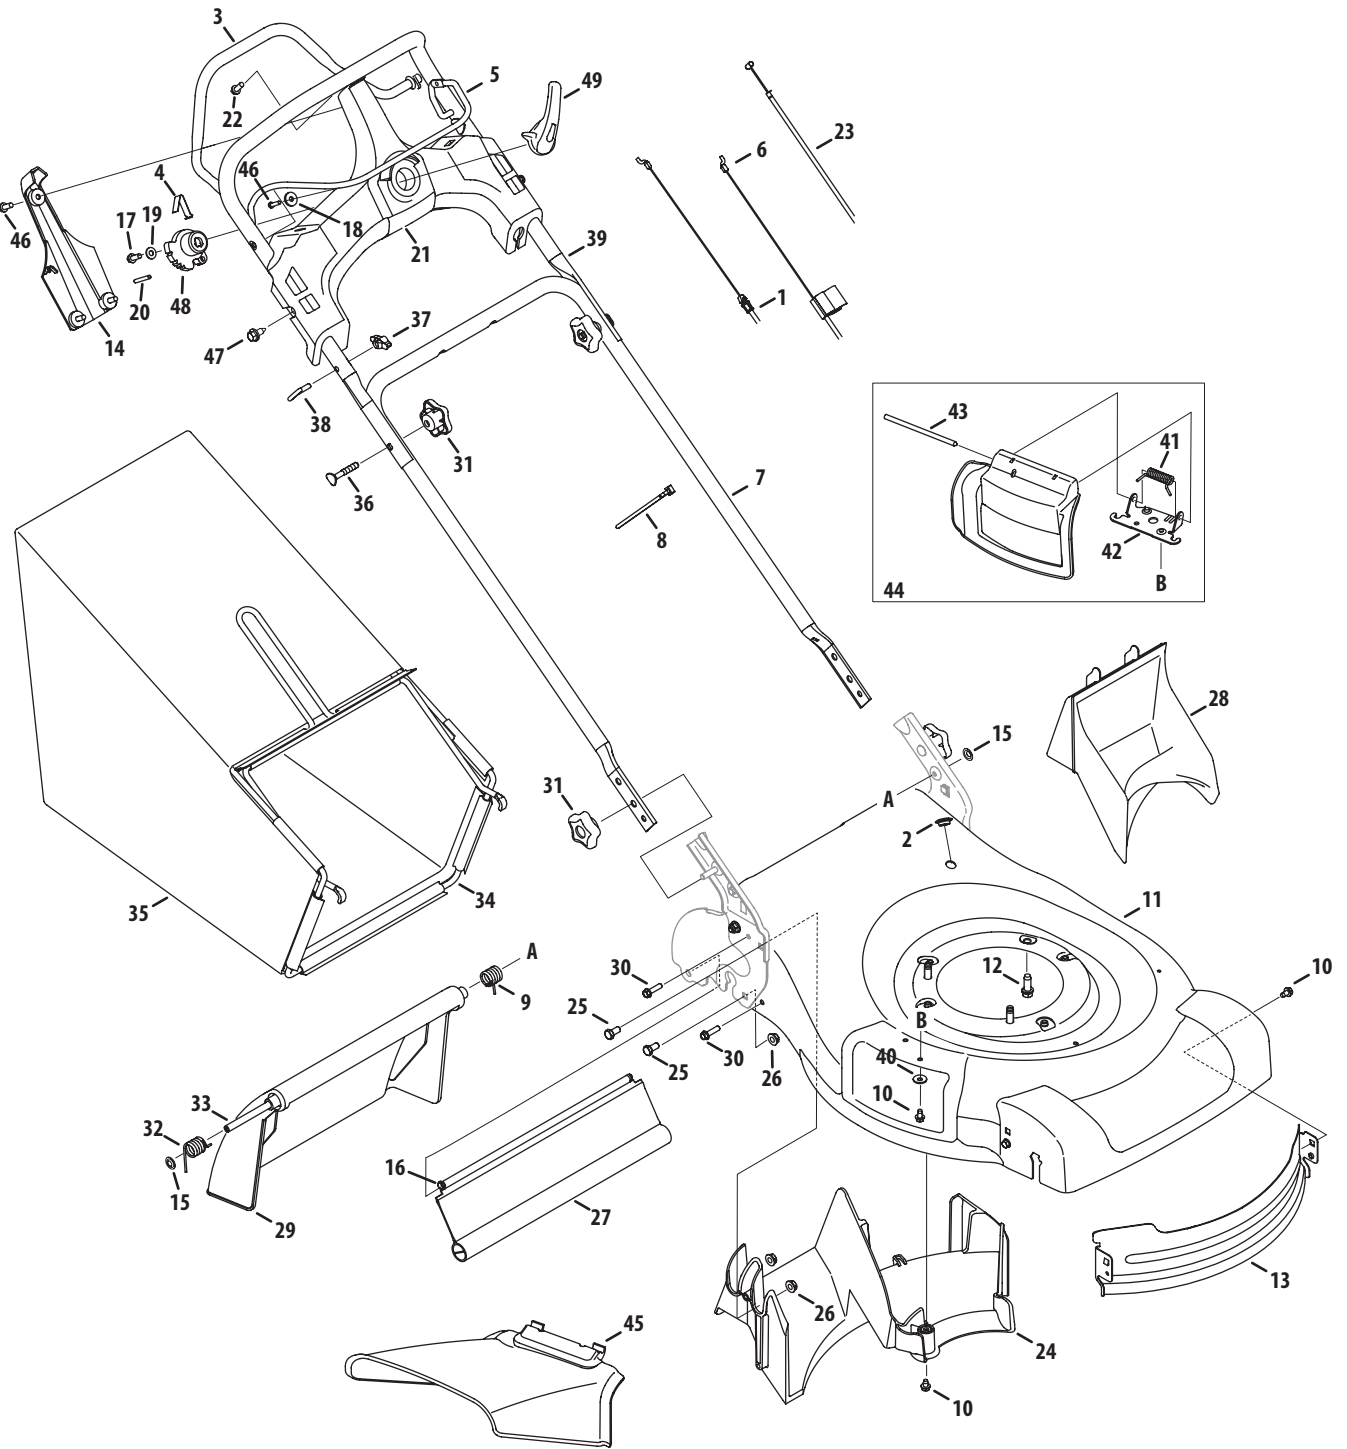

Ref No.	Part Number	Description
1	946-04440	Drive Cable
2	735-04059	Rubber Grommet
3	747-04994A	Drive Control
4	732-04516	Shift Spring
5	747-04995	Blade Control
6	746-04438	Control Cable
7	749-04555	Lower Handle
8	725-0157	Cable Tie
9	732-04535	Torsion Spring, LH
10	710-0599	TT Screw, 1/4-20 x .500
11	787-01618	21-inch Deck
12	710-0654A	TT Screw, 3/8-16 x 1.00
13	787-01790	Front Deck Baffle
14	731-06304	Variable Spd. Cont. Panel Cover
15	726-0201	Speed Nut
16	710-0779A	Screw, #10-16 x .500
17	710-0895	Screw, 1/4-15 x .750
18	736-3000	Washer, Flat, .250 x .750 x .119
19	936-0275	Washer, Flat, .344 x .688 x .065
20	715-04073	Dowel Pin
21	631-04323	Variable Speed Control Panel
22	710-0642	Screw, TT, 1/4-20 x .750
23	946-04439A	Variable Speed Cable
24	731-06173	Rear Baffle
25	710-3025	Screw, 5/16-18 x .625

Ref No.	Part Number	Description
26	712-04063	Flange Lock Nut, 5/16-18
27	731-05462A	Trail Shield
28	731-05157	Rear Mulching Baffle
29	731-05702A	Rear Door
30	710-1241	Screw, 1/4-15 x 1.00
31	720-04072A	Star Knob
32	732-04534	Torsion Spring, RH
33	747-05034	Door Pivot Rod
34	647-04051B-0637	Grass Catcher Frame
35	964-04101	Grass Catcher
36	710-1174	Carriage Bolt, 5/16-18 x 2.00
37	720-0279	Wing Nut
38	710-1205	Eye Bolt
39	749-04607-0637	Upper Handle
40	736-0270	Bell Washer, .265 x .75 x .062
41	732-1014	Torsion Spring
42	17032A	Chute Deflector Adapter
43	747-0710	Hinge Pin
44	987-02055	Mulch Plug Assembly
45	731-04177	Side Discharge Chute
46	710-04373A	Screw, #12-16 x .75
47	710-0896	Screw, AB, 1/4-14 x .625
48	731-06189	4 Speed Actuator
49	731-06193A	Speed Selector Lever

  
Model Series 830

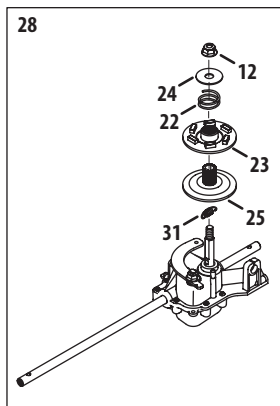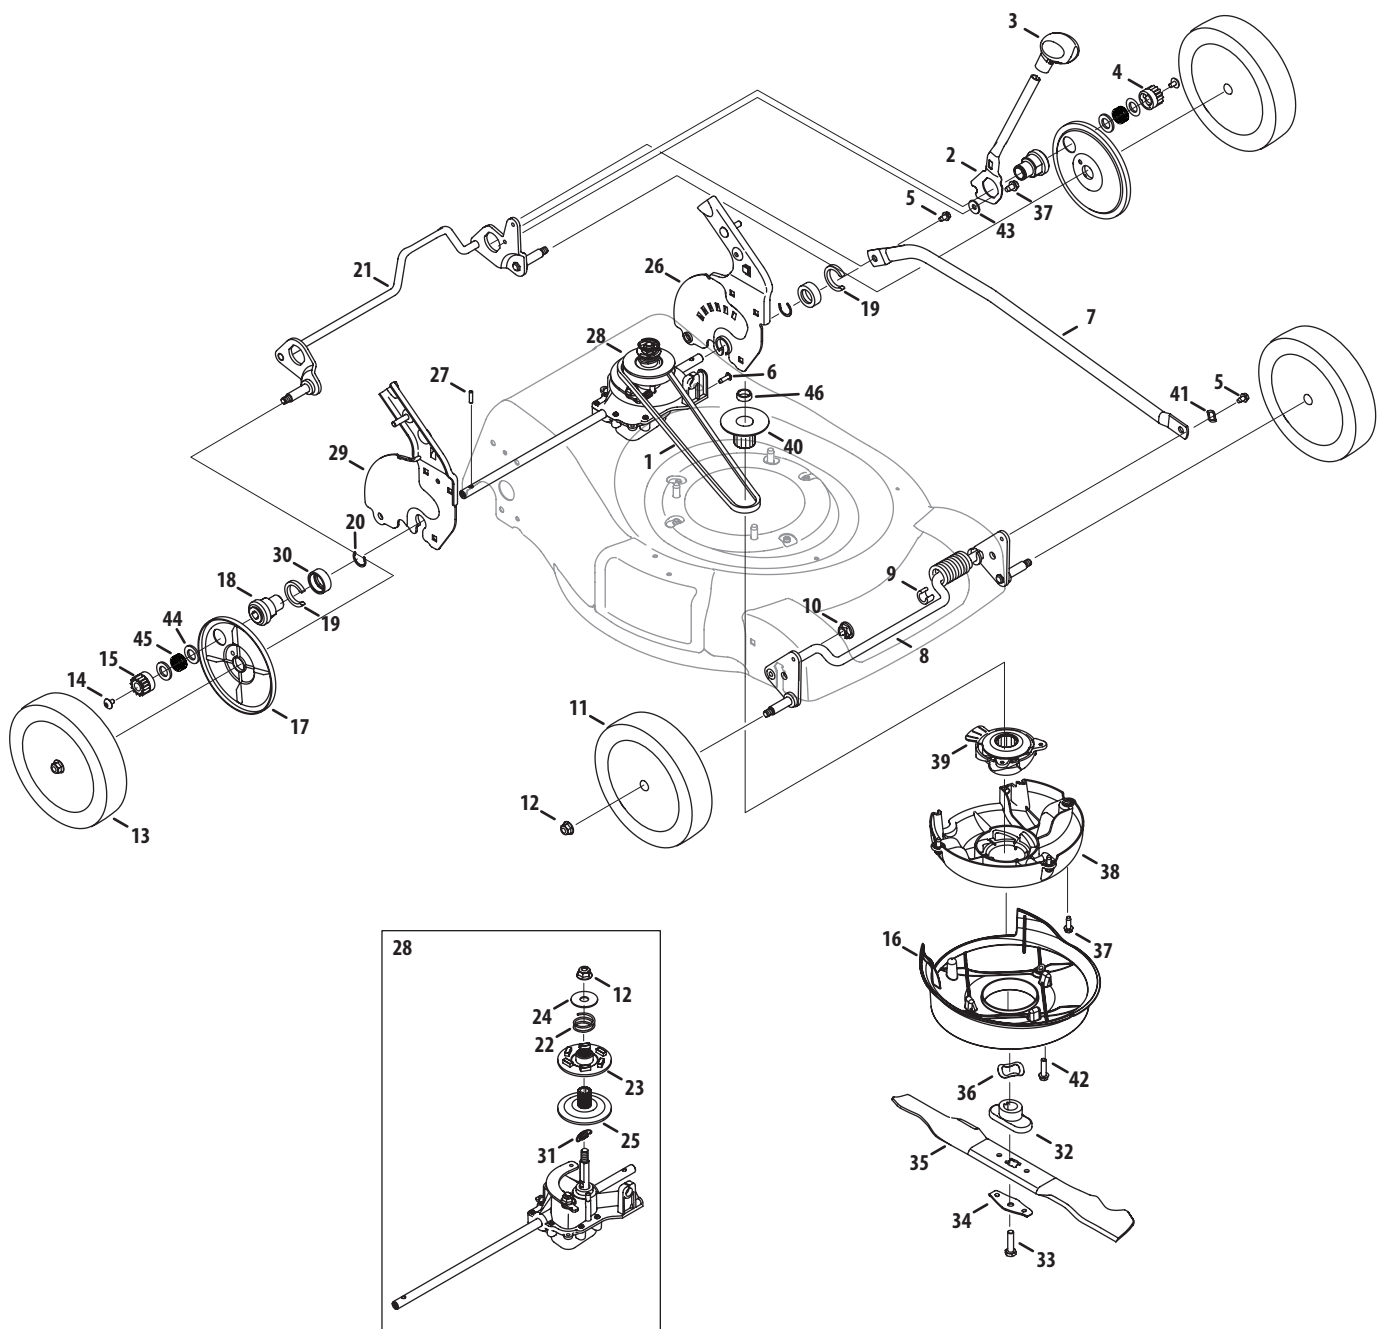

Ref No.	Part Number	Description
1	954-04176A	V-Belt
2	732-04338C	Spring Lever
3	720-04113	Height Adjuster Knob - Red
	720-04092	Height Adjuster Knob - Blue
4	917-04540B	Spur Gear, 14T - LH
5	738-04278	Shldr. Screw, 1/4-20 x 0.50
6	710-0895	Screw, HL, 1/4-15 x .750
7	749-04267A-0637	Cross Bracket
8	687-02204B-0637	Front Bracket Assembly
9	731-05470	Clip Spacer
10	741-04136B	Split Hex Flange Bearing
11	734-04014B	Front Wheel
12	712-04065	Flange Lock Nut, 3/8-16
13	934-04430	Rear Wheel
14	710-04531	Screw, 1/4-20 x .39
15	917-04539B	Spur Gear, 14T - RH
16	731-06284	Baffle
17	731-06974	Wheel Dust Cover
18	687-02415	Transmission Bearing Support
19	731-05872	Clip Spacer
20	716-0198	Retaining Ring .875
21	687-02314A-0637	Rear Bracket Assembly
22	732-04630	Compression Spring
23	756-04316A	Upper Pulley

Ref No.	Part Number	Description
24	936-0406	Flat Washer, .442 x 1.38 x .060
25	756-04317A	Lower Pulley
26	687-02322-0637	Handle Bracket Assembly LH
27	915-0221	Dowel Pin
28	918-04826A	Transmission Assembly
29	687-02323-0637	Handle Bracket Assembly RH
30	748-0390	Bearing Support Spacer
31	732-04313	Extension Spring
32	748-04096	Blade Adapter
33	710-1044	Screw, 3/8-24 x 1.50
34	736-0524B	Blade Bell Support
35	942-0741A	21" Mulching Blade
36	936-0447	Washer, Wave, 1.5 x 1.0 x .029
37	710-0599	TT Screw, 1/4-20 x .500
38	731-06112A	Engine Baffle
39	956-04046	Lower Pulley Assembly
40	756-04311A	Pulley, Half
41	736-04413	Wash., Wave, .385 ID x .598 OD
42	710-04774	Screw, 1/4-15 x 1.250
43	736-0242	Washer, Bell, .340 x .872 x .080
44	936-0369	Washer, Flat, .508 x 1.00 x .020
45	732-04650	Spr, Wave
46	750-05007	Spcr., 25mm x 1.375

 
Model Series 860

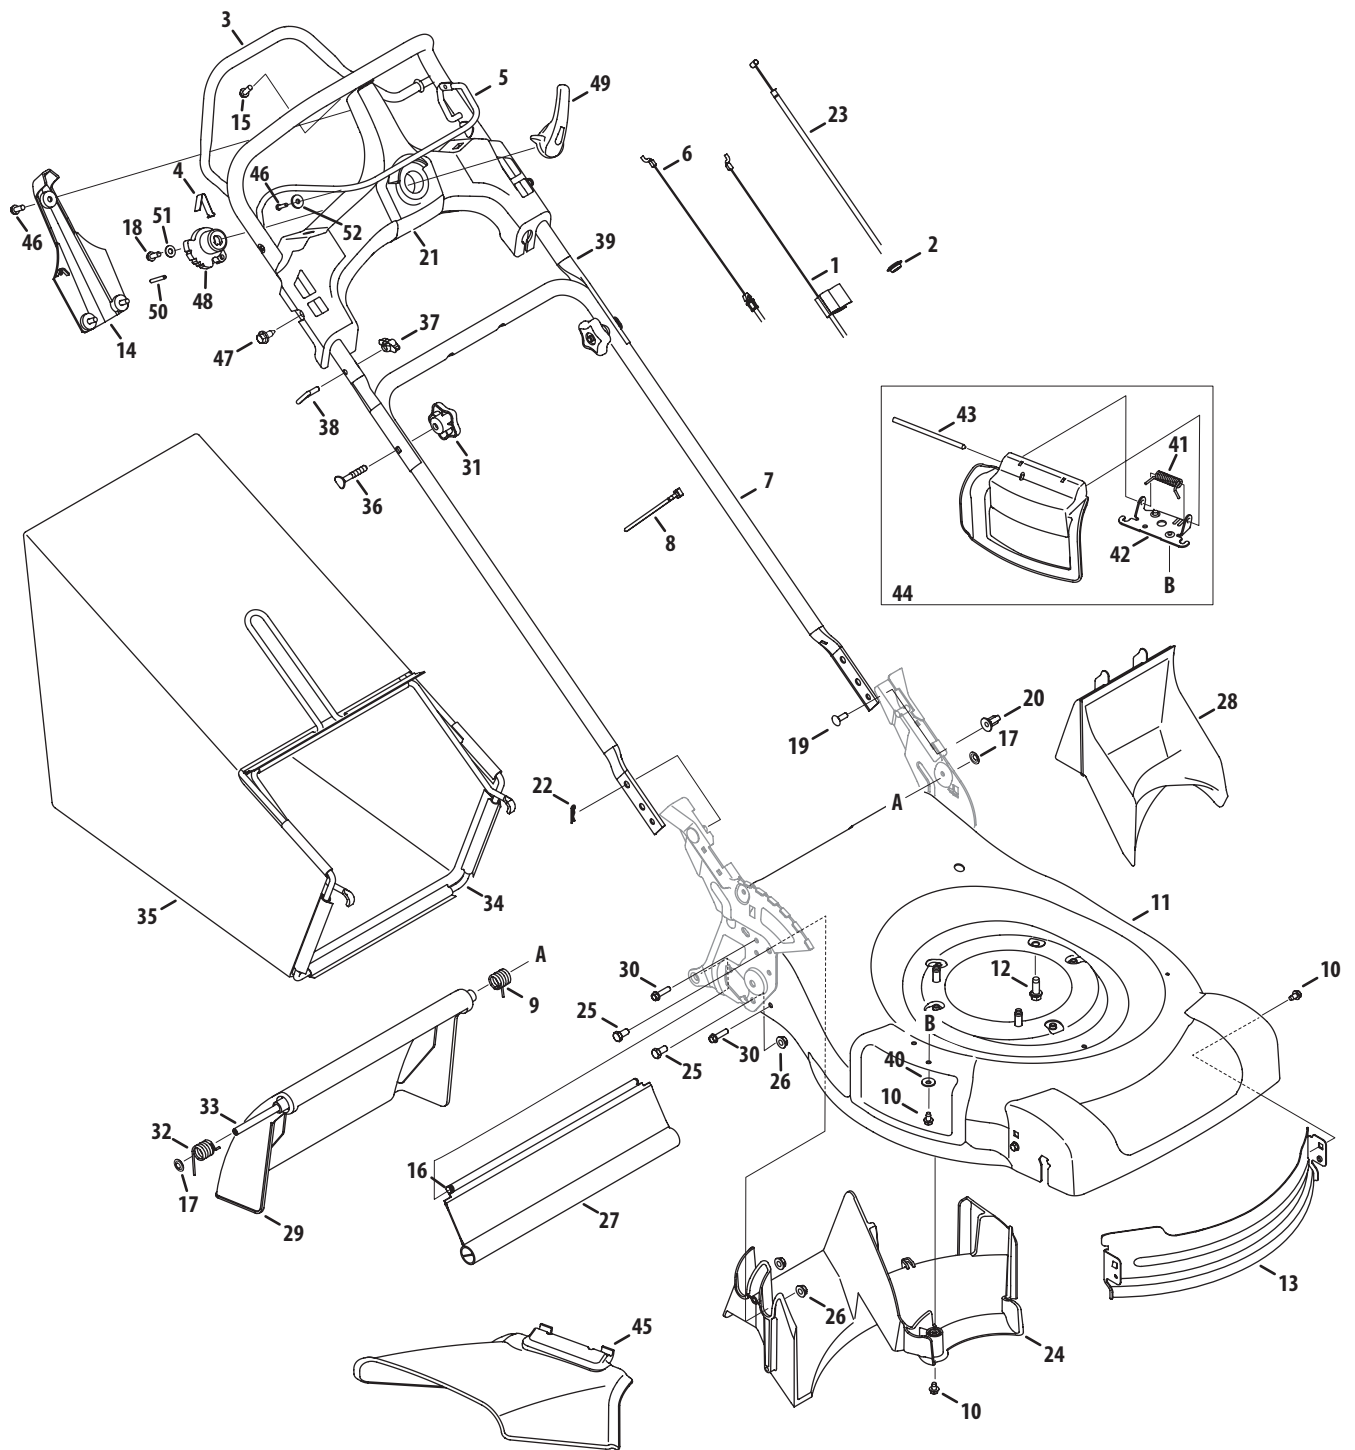

Ref No.	Part Number	Description
1	946-04440	Drive Cable
2	735-04059	Rubber Grommet
3	747-04994A	Drive Control
4	732-04516	Shift Spring
5	747-04995	Blade Control
6	746-04438	Control Cable
7	749-04557-0637	Lower Handle
8	725-0157	Cable Tie
9	732-04535	Torsion Spring, LH
10	710-0599	TT Screw, 1/4-20 x .500
11	787-01618	21-inch Deck
12	710-0654A	TT Screw, 3/8-16 x 1.00
13	787-01790	Front Deck Baffle
14	731-06304	Variable Spd. Cont. Panel Cover
15	710-0642	Screw, TT, 1/4-20 x .750
16	710-0779A	Screw, #10-16 x .500
17	726-0201	Nut, Speed
18	710-0895	Screw, 1/4-15 x .750
19	710-0703	Carriage Bolt, 1/4-20
20	912-0397	Wing Nut
21	631-04323	Variable Speed Control Panel
22	914-0104	Cotter Pin
23	946-04439A	Variable Speed Cable
24	731-06173	Rear Baffle
25	710-3025	Screw, 5/16-18 x .625
26	712-04063	Flange Lock Nut, 5/16-18

Ref No.	Part Number	Description
27	731-05462A	Trail shield
28	731-05157	Mulch Plug
29	731-05702A	Rear Door
30	710-1241	Screw, 1/4-15 x 1.00
31	720-04072A	Star Knob
32	732-04534	Torsion Spring, RH
33	747-05034	Door Rod
34	647-04051B-0637	Grass Catcher Frame
35	964-04101	Grass Catcher
36	710-1174	Carriage Bolt, 5/16-18 x 2.00
37	720-0279	Wing Nut
38	710-1205	Eye Bolt
39	749-04607-0637	Upper Handle
40	736-0270	Bell Washer, .265 x .75 x .062
41	732-1014	Torsion Spring
42	17032A	Chute Deflector Adapter
43	747-0710	Hinge Pin
44	987-02055	Mulch Plug Assembly
45	731-04177	Side Discharge Chute
46	710-04373A	Screw, #12-16 x .75
47	710-0896	Screw, AB, 1/4-14 x .625
48	731-06189	4 Speed Actuator
49	731-06193A	Speed Selector Level
50	715-04073	Dowel Pin
51	936-0275	Washer, Flat, .344 x .688 x .065
52	736-3000	Washer, Flat, .250 x .750 x .119

 
Model Series 860

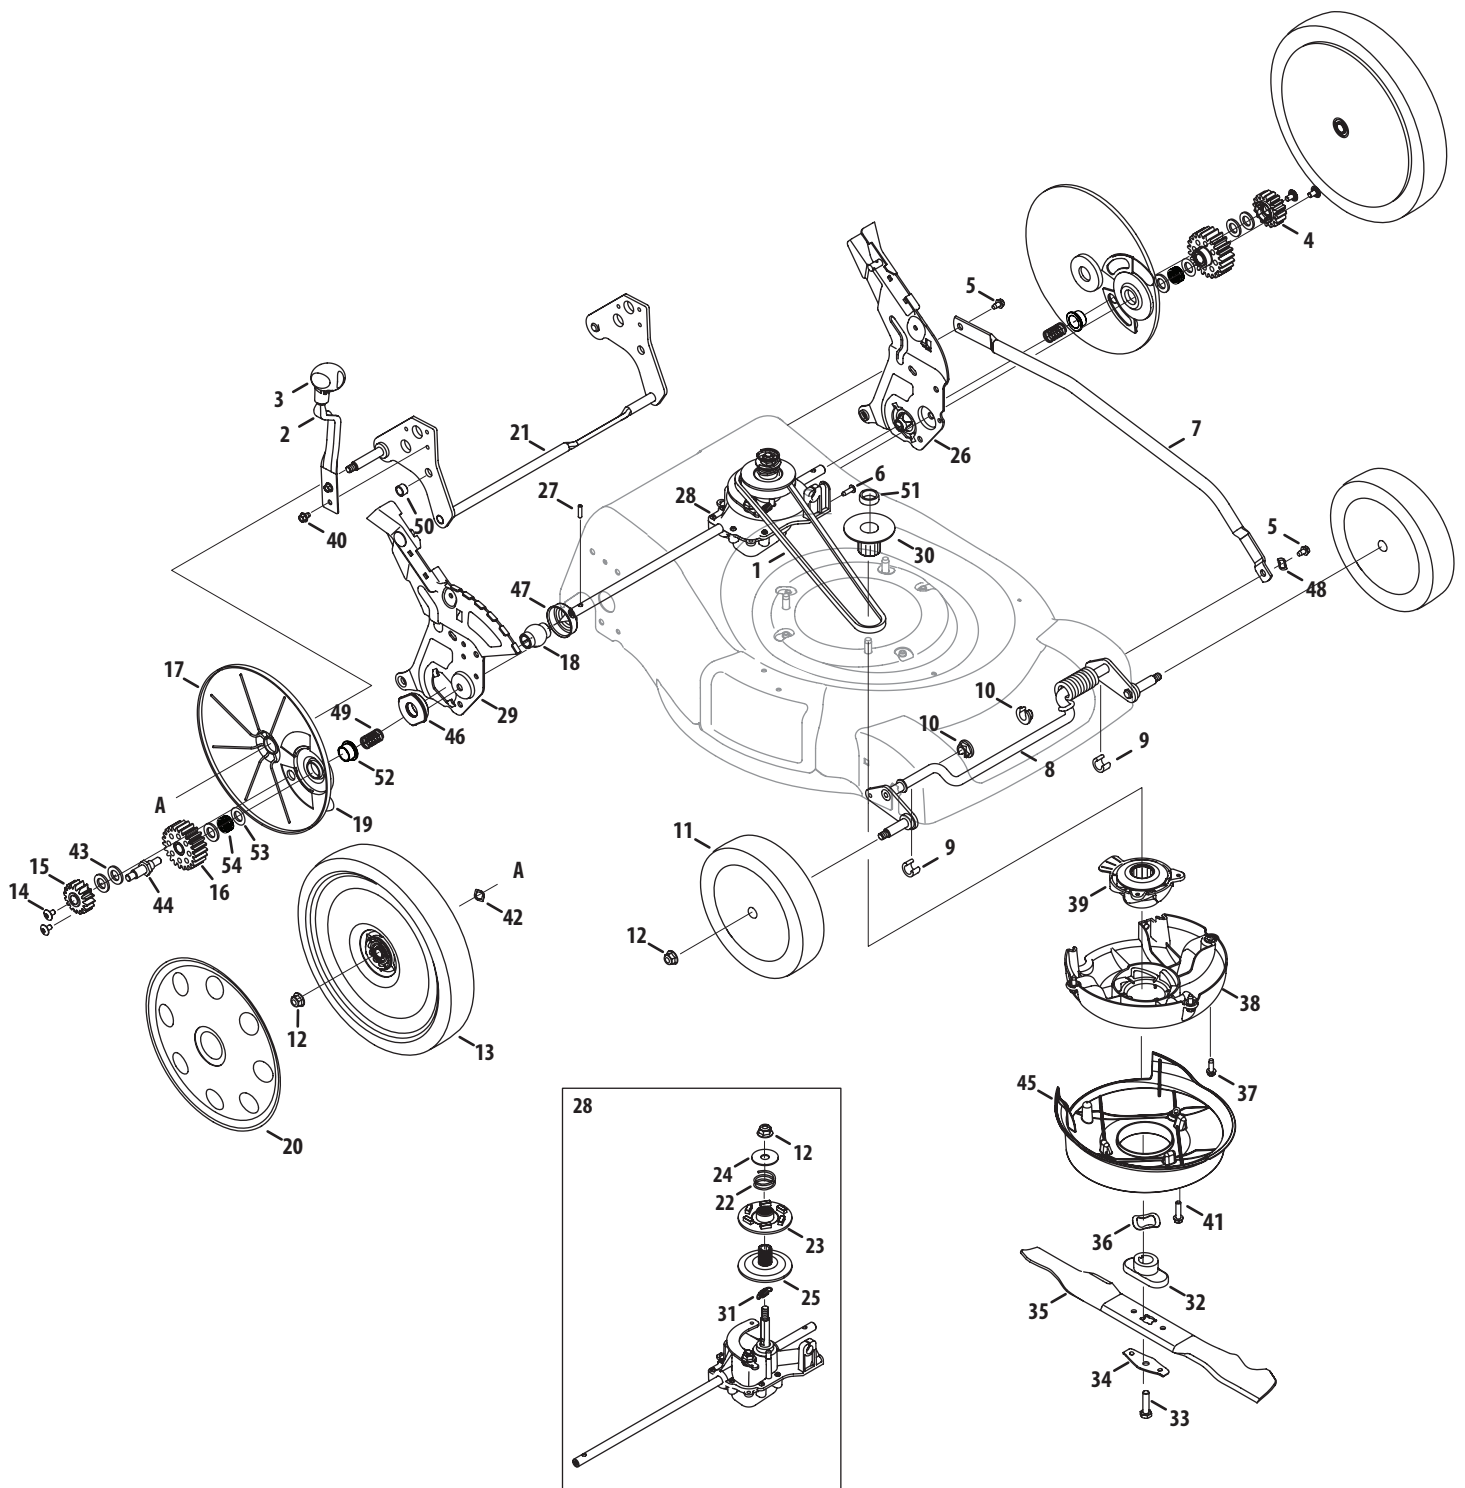

Ref No.	Part Number	Description
1	954-04176A	V-Belt
2	732-04480A	Spring Lever
3	720-04097	Height Adjuster Knob - Red
	720-04092	Height Adjuster Knob - Blue
4	917-04577A	Spur Gear, 16T - LH
5	738-04278	Shldr. Screw, 1/4-20 x 0.50
6	710-0895	Screw, 1/4-15 x .750
7	749-04414A-0637	Cross Bracket
8	687-02367B-0637	Front Bracket Assembly
9	731-05470	Clip Spacer
10	741-04136B	Split Hex Flange Bearing
11	734-04014B	Front Wheel
12	712-04065	Flange Lock Nut, 3/8-16
13	934-04404	Rear Wheel
14	710-04531	Screw, 1/4-20 x .39
15	917-04578A	Spur Gear, 16T - RH
16	917-04678	Gear, Spur, 23T
17	731-06145C	Wheel Dust Cover
18	741-0604A	Bearing Sleeve
19	787-01645A	Dust Cover Seal Plate
20	731-06146	Hub Cap
21	687-02390-0637	Rear Bracket Assembly
22	732-04630	Compression Spring
23	756-04316A	Upper Pulley
24	936-0406	Flat Washer, .442 x 1.38 x .060
25	756-04317A	Lower Pulley
26	987-02503	Handle Bracket Assembly LH (Includes Ref. #'s 18, 46, & 47)
27	915-0221	Dowel Pin


Ref No.	Part Number	Description
28	918-04826A	Transmission Assembly
29	987-02537	Handle Bracket Assembly RH (Includes Ref. #'s 18, 46, & 47)
30	756-04311A	Pulley, Half
31	732-04313	Extension Spring
32	748-04096	Blade Adapter
33	710-1044	Screw, 3/8-24 x 1.50
34	736-0524B	Blade Bell Support
35	942-0741A	21" Mulching Blade
36	936-0447	Washer, Wave, 1.5 x 1.0 x .029
37	710-0599	TT Screw, 1/4-20 x .500
38	731-06112A	Engine Baffle
39	956-04046	Lower Pulley Assembly
40	710-0653	Screw, TT, 1/4-20 x .375
41	710-04774	Screw, 1/4-15 x 1.25
42	736-0182	Washer, Sprg, .500 x 1.00 x .022
43	936-0272	Washer, Flat, .510 x 1.00 x .060
44	711-05040	Shf., .500 Dia.
45	731-06284	Baffle
46	748-04177	Bearing Support
47	732-0708	Bearing Retainer
48	736-04413	Wshr, Wave, .385 ID x .598 OD
49	732-04557	Sprg, Comp., .63 OD x 1.00 Lg.
50	750-05061	Spacer, .690 x .870 x .150
51	750-05008	Spcr., 25mm x 1.375
52	750-05250	Spcr., Flg., .51 ID x .58 OD
53	936-0369	Washer, Flat, .508 x 1.00 x .020
54	732-04650	Spr, Wave

 Model Series 980

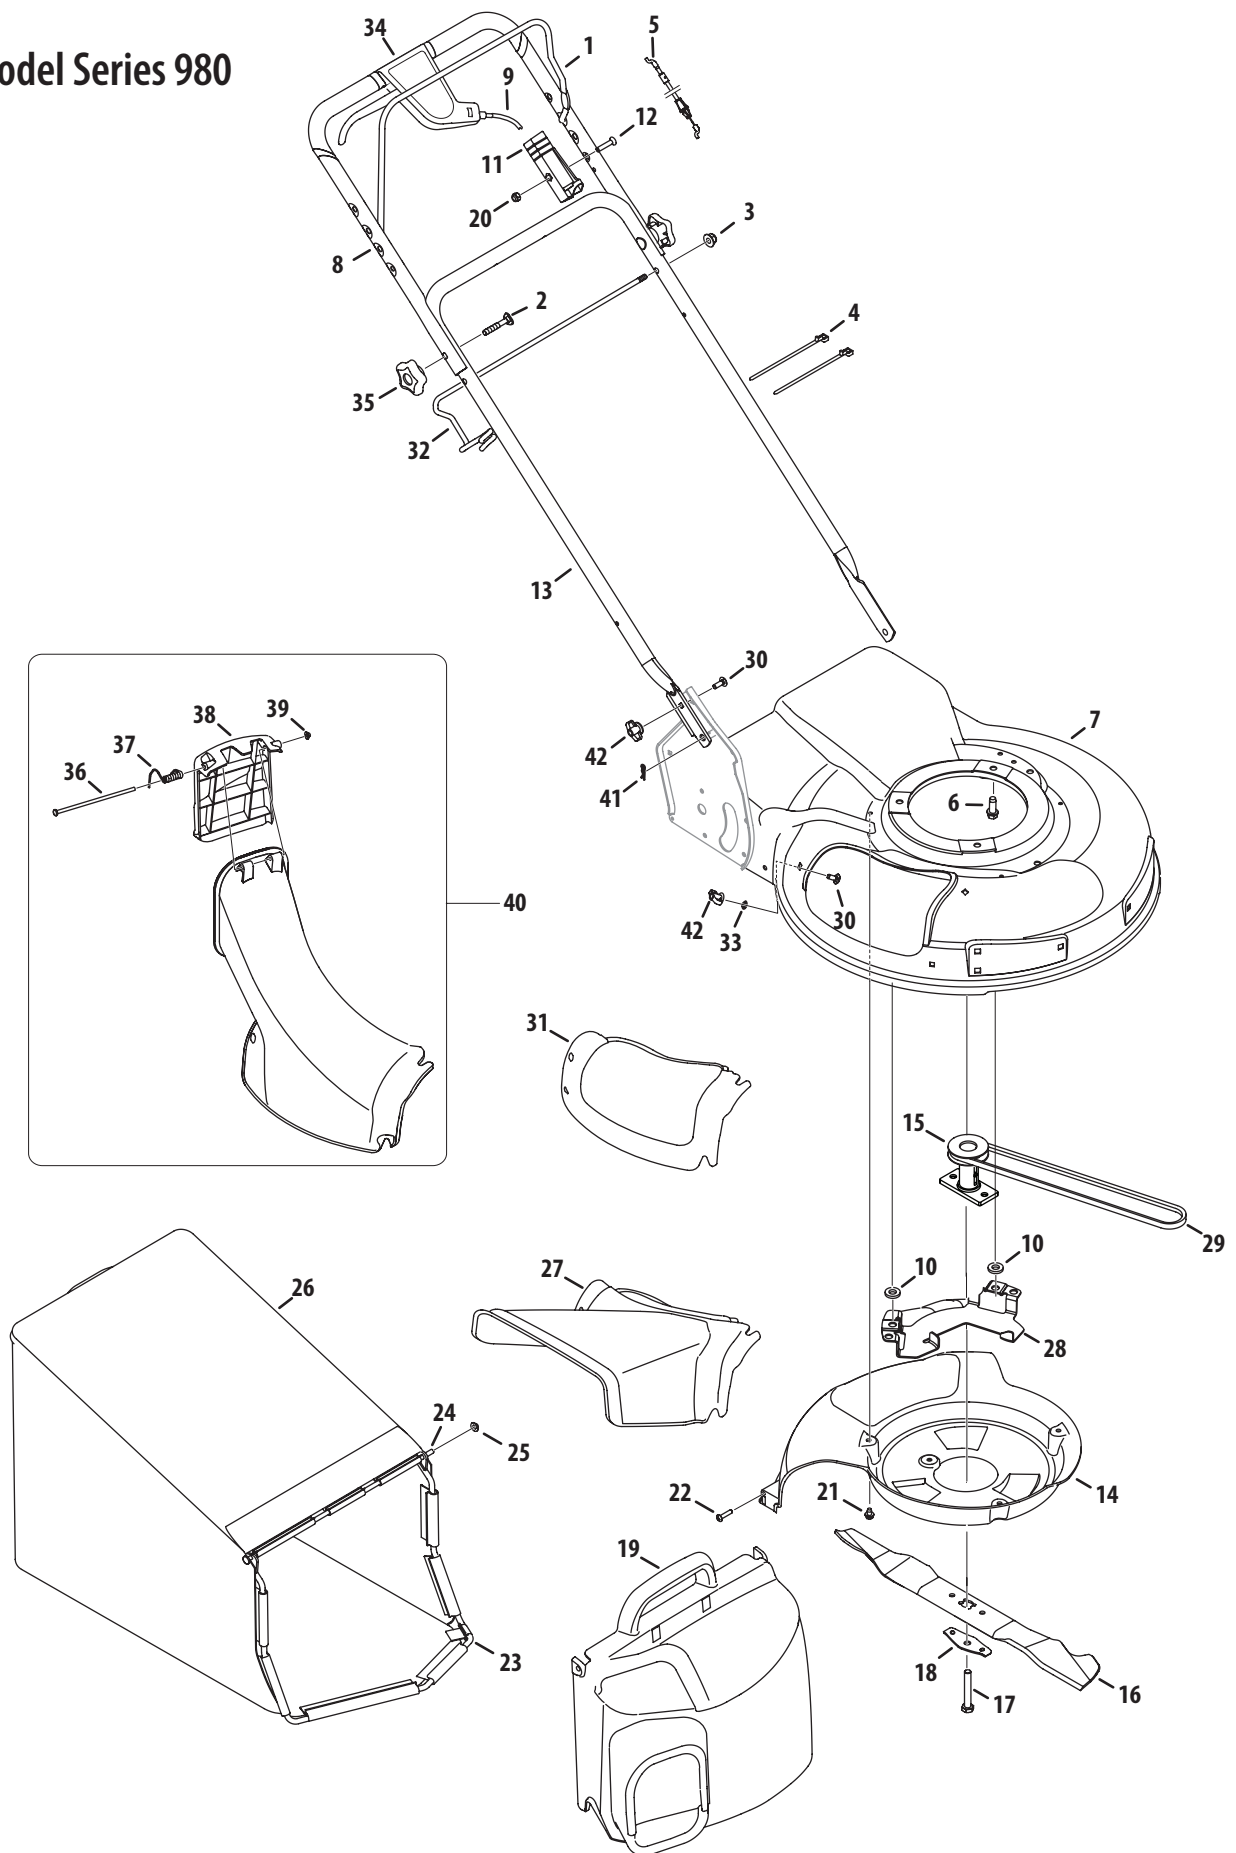

Ref No.	Part Number	Description
1	747-0824	Blade Control
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	746-0557	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	782-0078B-0638	21-inch Deck
8	749-0439E	Upper Handle
9	746-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	746-0883	Control Cable Mount
12	710-1270	Screw, 1/4-20 x 1.310
13	749-0907B	Lower Handle
14	731-1828	Rear Baffle
15	687-02221	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-0324	Hex Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375


Ref No.	Part Number	Description
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937-0637	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	664-0076A	Grass Bag Assembly
27	731-1832	Side Discharge Chute
28	782-9063A-0637	Belt Keeper
29	954-0460	V-Belt
30	710-0703	Carriage Screw 1/4-20 x .75
31	931-1833A	Mulch Cover
32	747-0940A-0637	Grass Bag Support Rod
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut

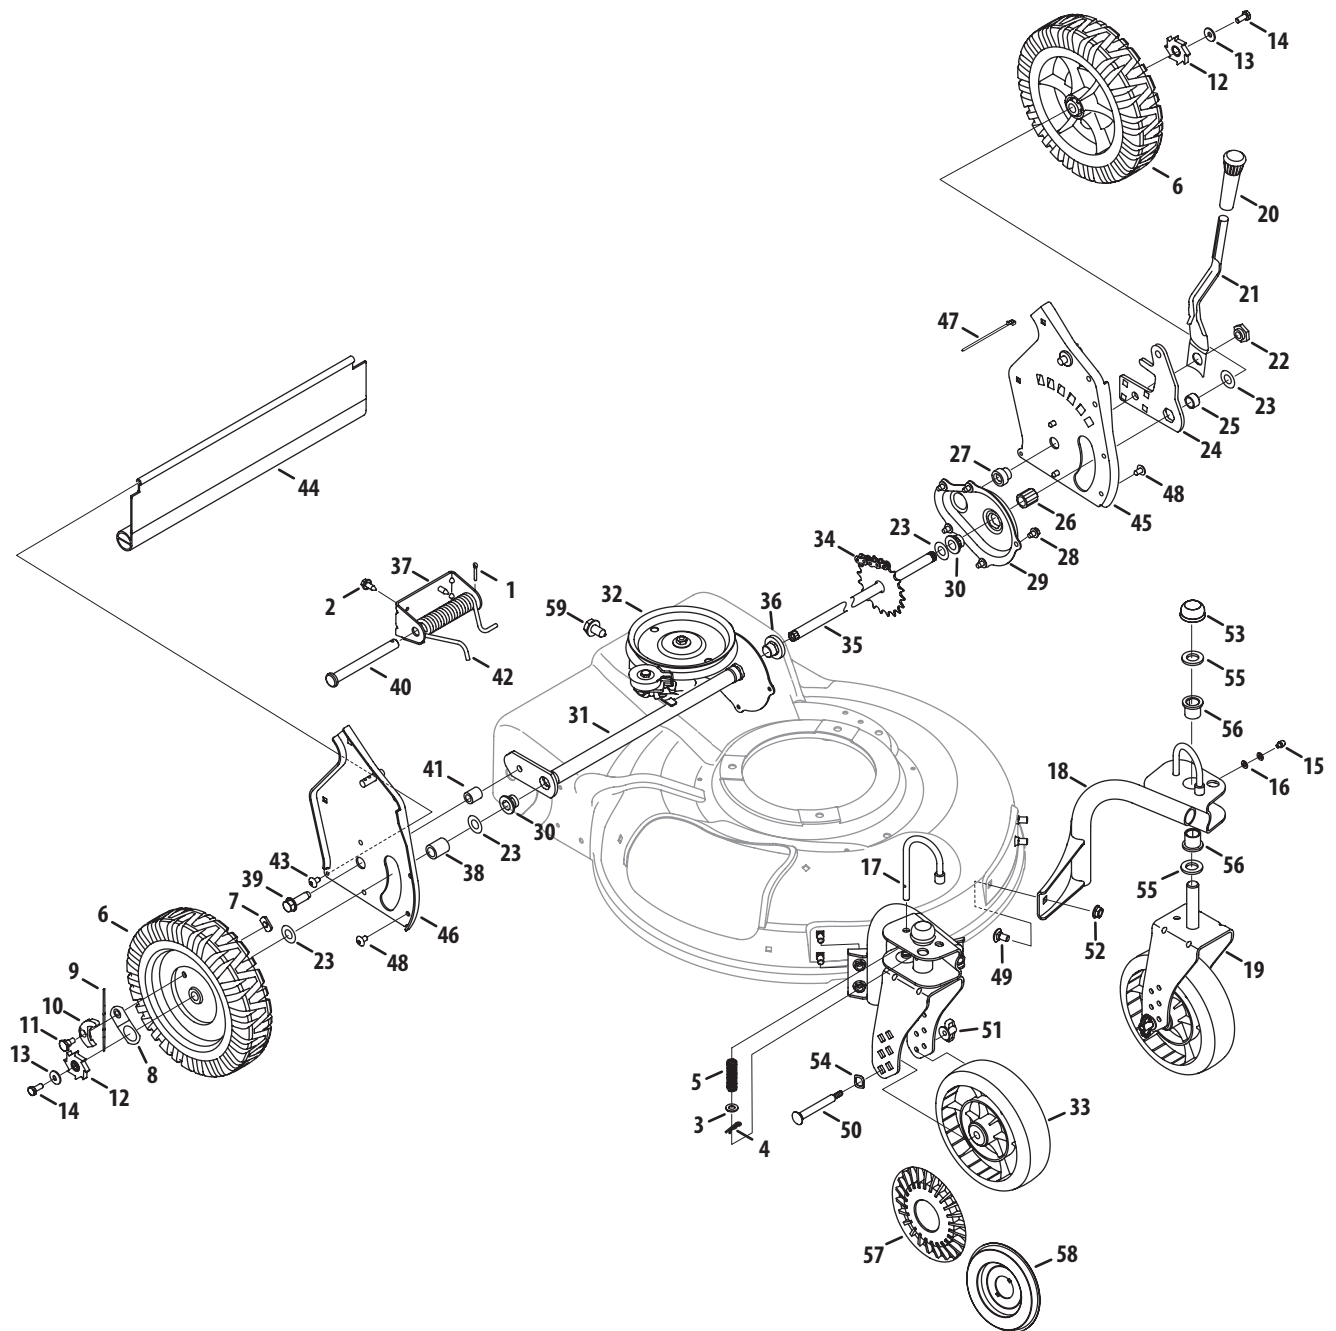 

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2044A	Wheel, 9 x 2.125
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	937-3000	Grease Fitting
16	736-0931	Flat Washer.203 ID x.403 OD
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B-0637	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528-0637	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526-0637	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	638-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568-0637	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495	Handle Bracket Assembly - LH
46	687-02494	Handle Bracket Assembly - RH
47	725-0157	Cable Tie
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0232	Wave Washer.531 ID x.781 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1887	Hubcap - Spoke w/ Hole
58	731-07001	Hubcap - Radial Spoke
59	710-0604A	Screw, 5/16-18 x .625

 
Model TB210

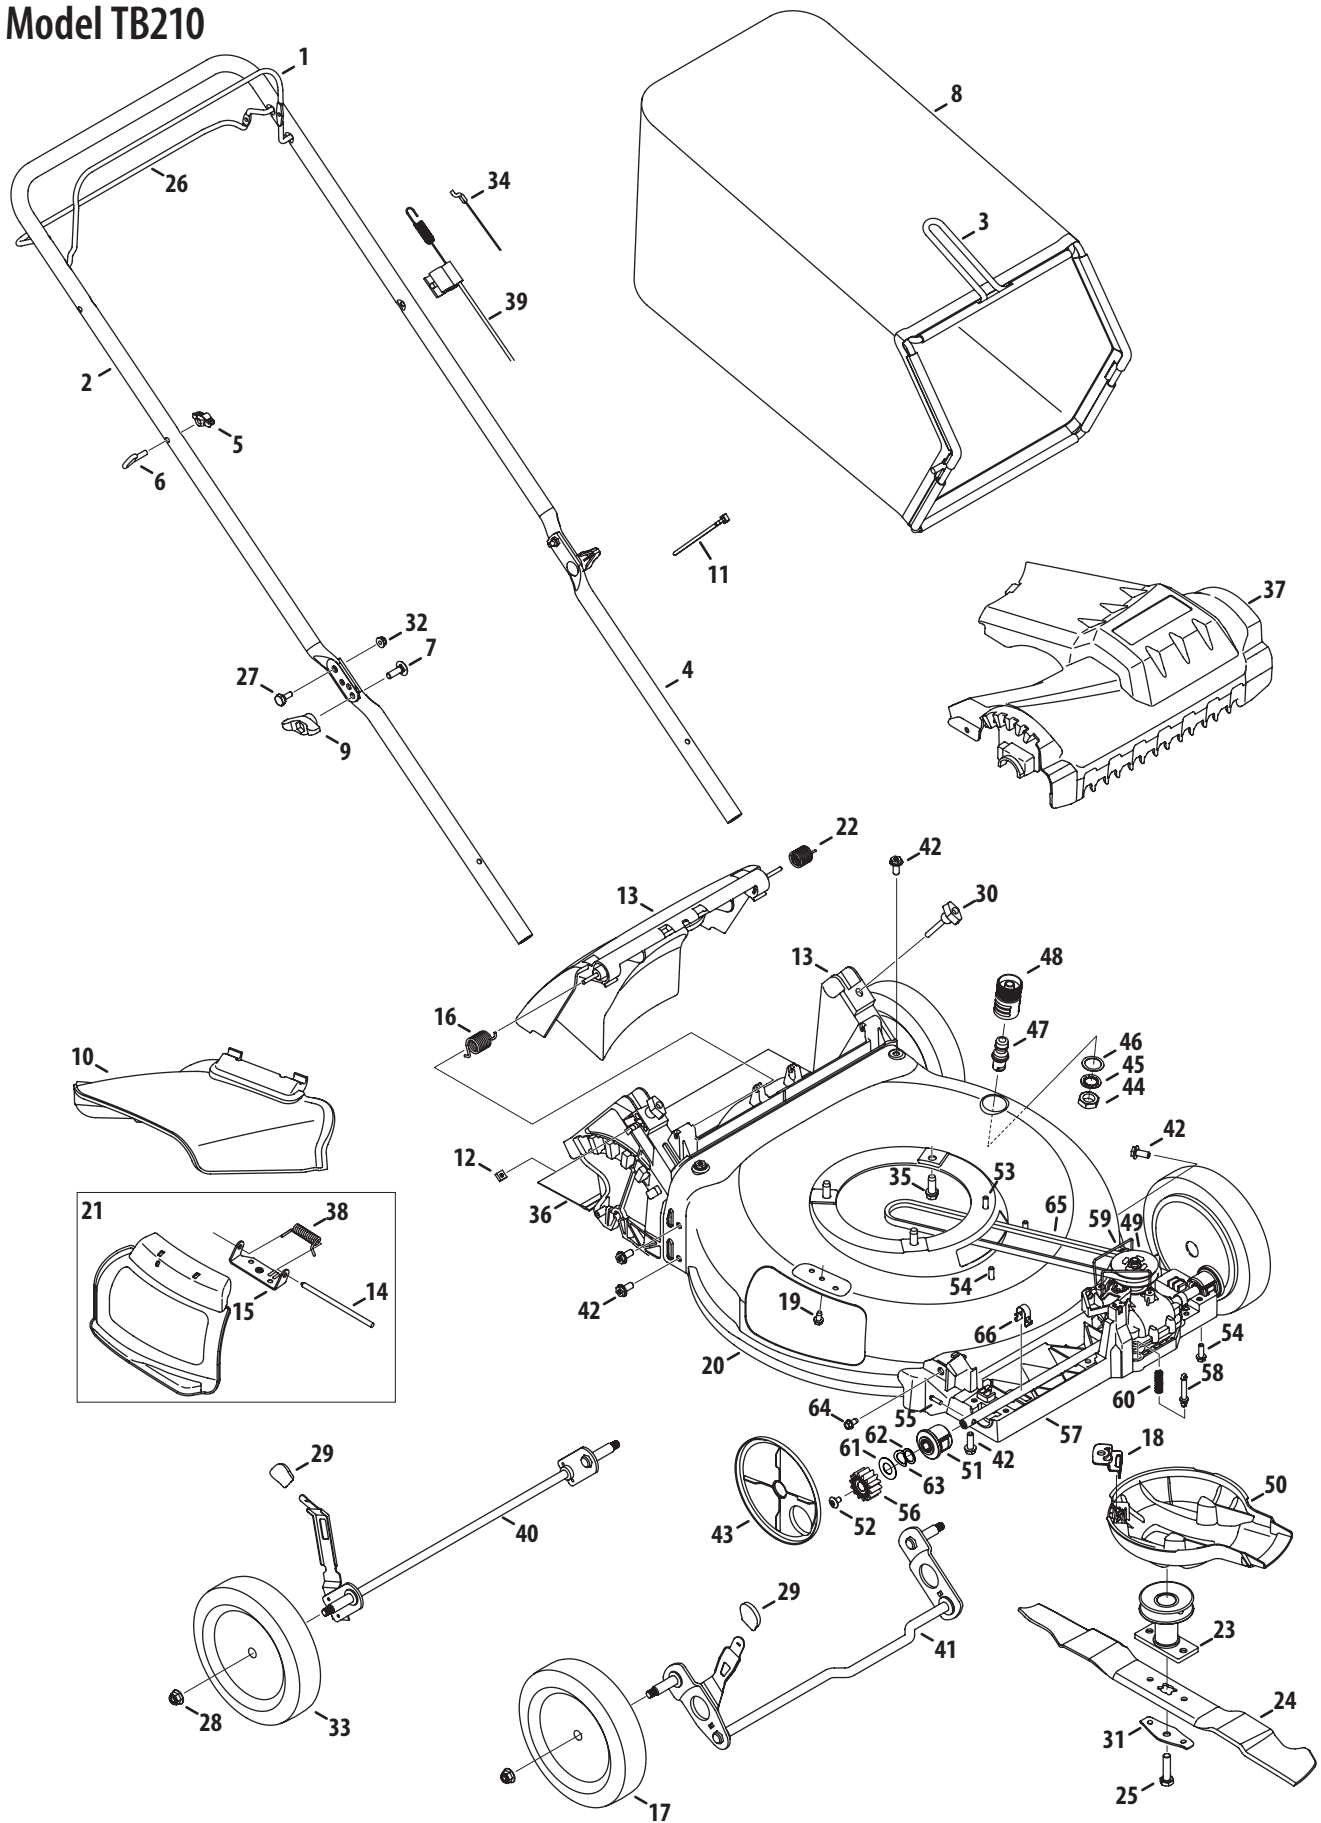

Ref No.	Part Number	Description
1	747-05214	Blade Control
2	749-04681-0637	Upper Handle
3	747-05226-0637	Grass Catcher Frame
4	749-04608A-0637	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04018A	Front Wheel
18	787-01800	Engine Baffle Bracket
19	710-05073	Screw, 1/4-20 x .500
20	787-01802	Deck , 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02538	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	747-05210A	Drive Control
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131	Adjustment Lever Knob
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	734-04014B	Rear Wheel

Ref No.	Part Number	Description
34	946-04674	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07208	Front Cover
38	732-1014	Torsion Spring
39	946-04675	Drive Cable
40	911-04149	Rear Axle Assembly
41	911-04160	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	912-0641	Nut, Hex
45	736-0225	Washer, Lock, 5/8"
46	936-0570	Wash., Flat, .865 x 1.145 x .030
47	737-04003D	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	631-04444	Engine Baffle
51	641-00014	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	710-0599	Screw, 1/4-20 x .500
54	710-0895	Screw, 1/4-15 x .750
55	915-0221	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07184A	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	936-0369	Wash., Flat, .508 x 1.00 x .020
62	736-04202	Wash., Flat, .504 x .700 x .010
63	736-04495	Wash., Saddle, .505 x .740 x .125
64	738-04436A	Scr., Sldr., 1/4-20 x .70
65	954-04259A	V-Belt
66	787-01793	Front Axle Clip

 
Model TB270 ES

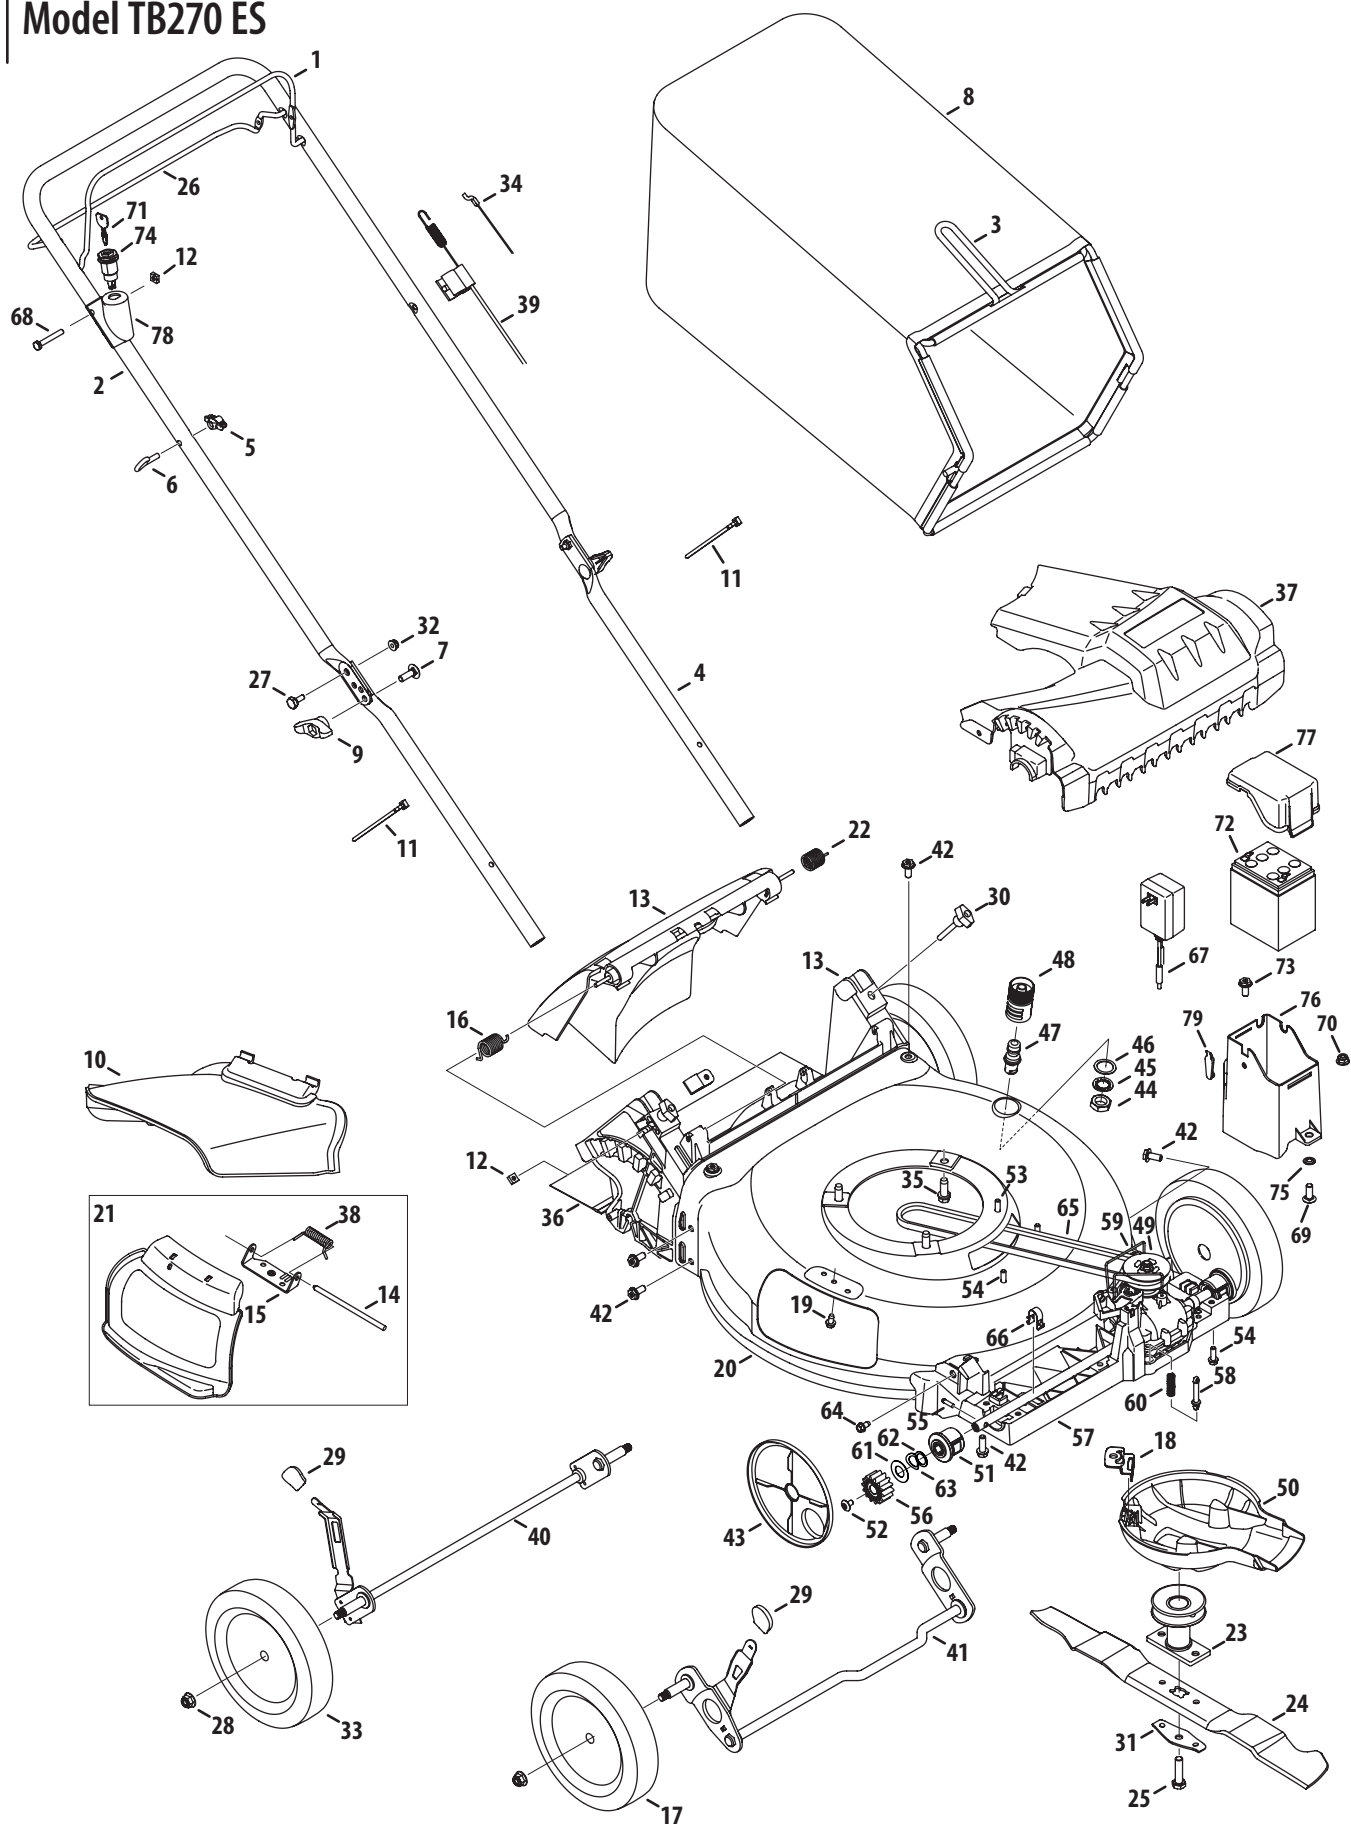

Ref No.	Part Number	Description
1	747-05214	Blade Control
2	749-04681-0637	Upper Handle
3	747-05226-0637	Grass Catcher Frame
4	749-04608A-0637	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04018A	Front Wheel
18	787-01800	Engine Baffle Bracket
19	710-05073	Screw, 1/4-20 x .500
20	787-01806	Deck , 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02538	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	747-05210A	Drive Control
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131	Adjustment Lever Knob
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	734-04014B	Rear Wheel
34	946-04674	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07208	Front Cover
38	732-1014	Torsion Spring
39	946-04675	Drive Cable
40	911-04149	Rear Axle Assembly

Ref No.	Part Number	Description
41	911-04160	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	912-0641	Nut, Hex
45	736-0225	Washer, Lock, 5/8"
46	936-0570	Wash., Flat, .865 x 1.145 x .030
47	737-04003D	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	631-04444	Engine Baffle
51	641-00014	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	710-0599	Screw, 1/4-20 x .500
54	710-0895	Screw, 1/4-15 x .750
55	915-0221	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07184A	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	936-0369	Wash., Flat, .508 x 1.00 x .020
62	736-04202	Wash., Flat, .504 x .700 x .010
63	736-04495	Wash., Saddle, .505 x .740 x .125
64	738-04436A	Scr., Sldr., 1/4-20 x .70
65	954-04259A	V-Belt
66	787-01793	Front Axle Clip
67	725-04329	Battery Charger
68	710-0136	Screw, 1/4-20 x 1.75
69	710-3105	Bolt, Carr., 5/16-18 x .875
70	712-04063	Nut, Flgk., 5/16-18 x
71	925-0201	Key
72	725-04903	Battery
73	738-04431	Scr., Sldr., 5/16-14 x .972
74	725-05112	Key Switch
75	726-0201	Speed Nut
76	731-07135	Battery Housing
77	731-07154	Battery Housing Top
78	731-07155	Electric Start Housing
79	735-04213A	Lid Seal
—	725-05015	Wire Harness (Not Shown)

 
Model TB230

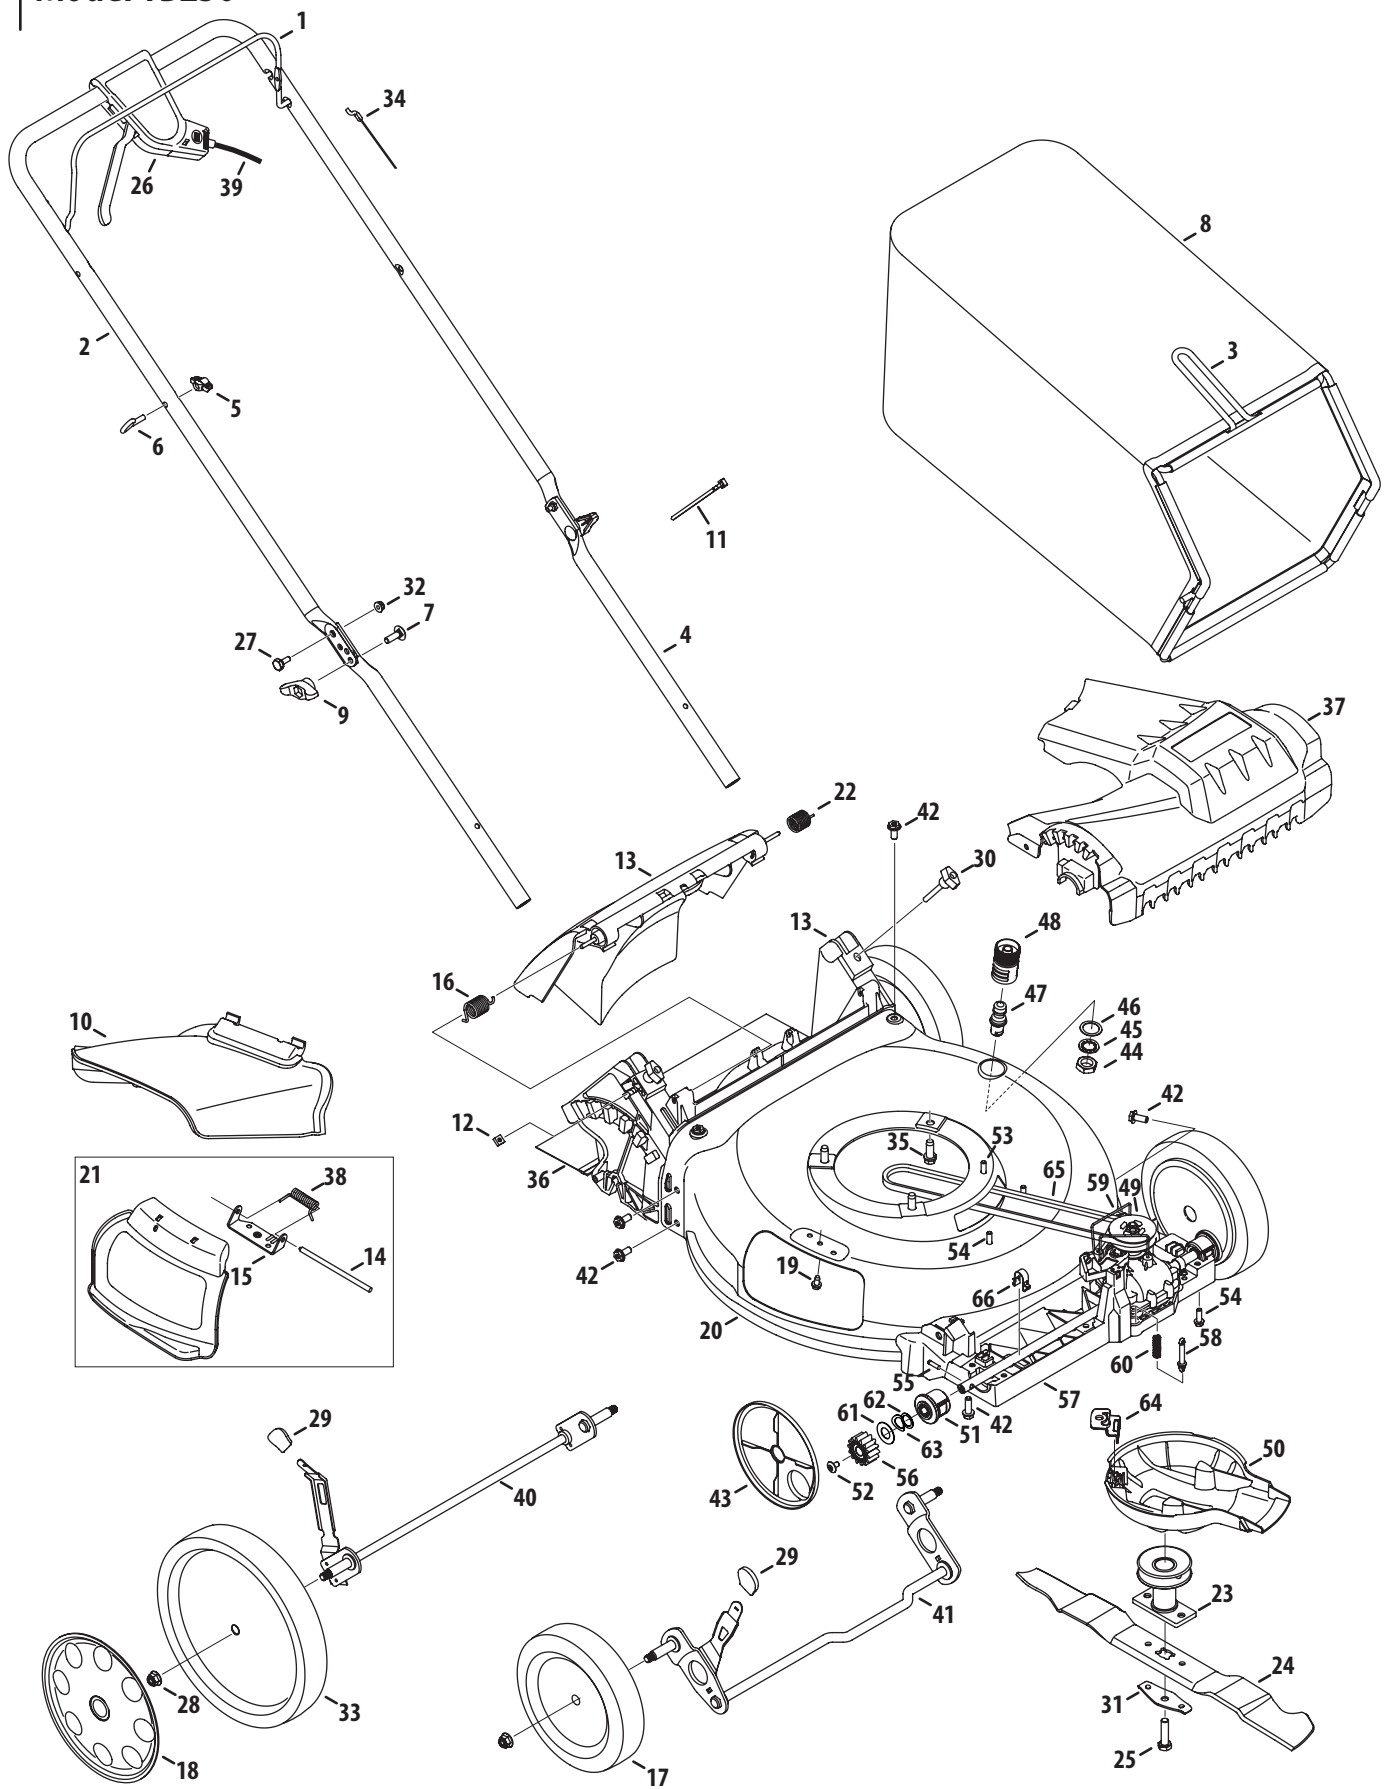

Ref No.	Part Number	Description
1	747-05267	Blade Control
2	749-04679-0637	Upper Handle
3	747-05226-0637	Grass Catcher Frame
4	749-04608A-0637	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04018A	Front Wheel
18	731-07199	Hubcap
19	710-05073	Screw, 1/4-20 x .500
20	787-01802	Deck , 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02528	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	753-06060	Control Lever Assembly
27	738-04419A	Slidr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131	Adjustment Lever Knob
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	634-04626	Rear Wheel

Ref No.	Part Number	Description
34	946-04661	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07208	Front Cover
38	732-1014	Torsion Spring
39	946-04655	Variable Speed Cable
40	911-04144	Rear Axle Assembly
41	911-04160	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	912-0641	Nut, Hex
45	736-0225	Washer, Lock, 5/8"
46	936-0570	Wash., Flat, .865 x 1.145 x .030
47	737-04003D	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	631-04444	Engine Baffle
51	641-00014	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	710-0599	Screw, 1/4-20 x .500
54	710-0895	Screw, 1/4-15 x .750
55	915-0221	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07184A	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	936-0369	Wash., Flat, .508 x 1.00 x .020
62	736-04202	Wash., Flat, .504 x .700 x .010
63	736-04495	Wash., Saddle, .505 x .740 x .125
64	787-01800	Engine Baffle Bracket
65	954-04260	V-Belt
66	787-01793	Front Axle Clip

 
Model TB250

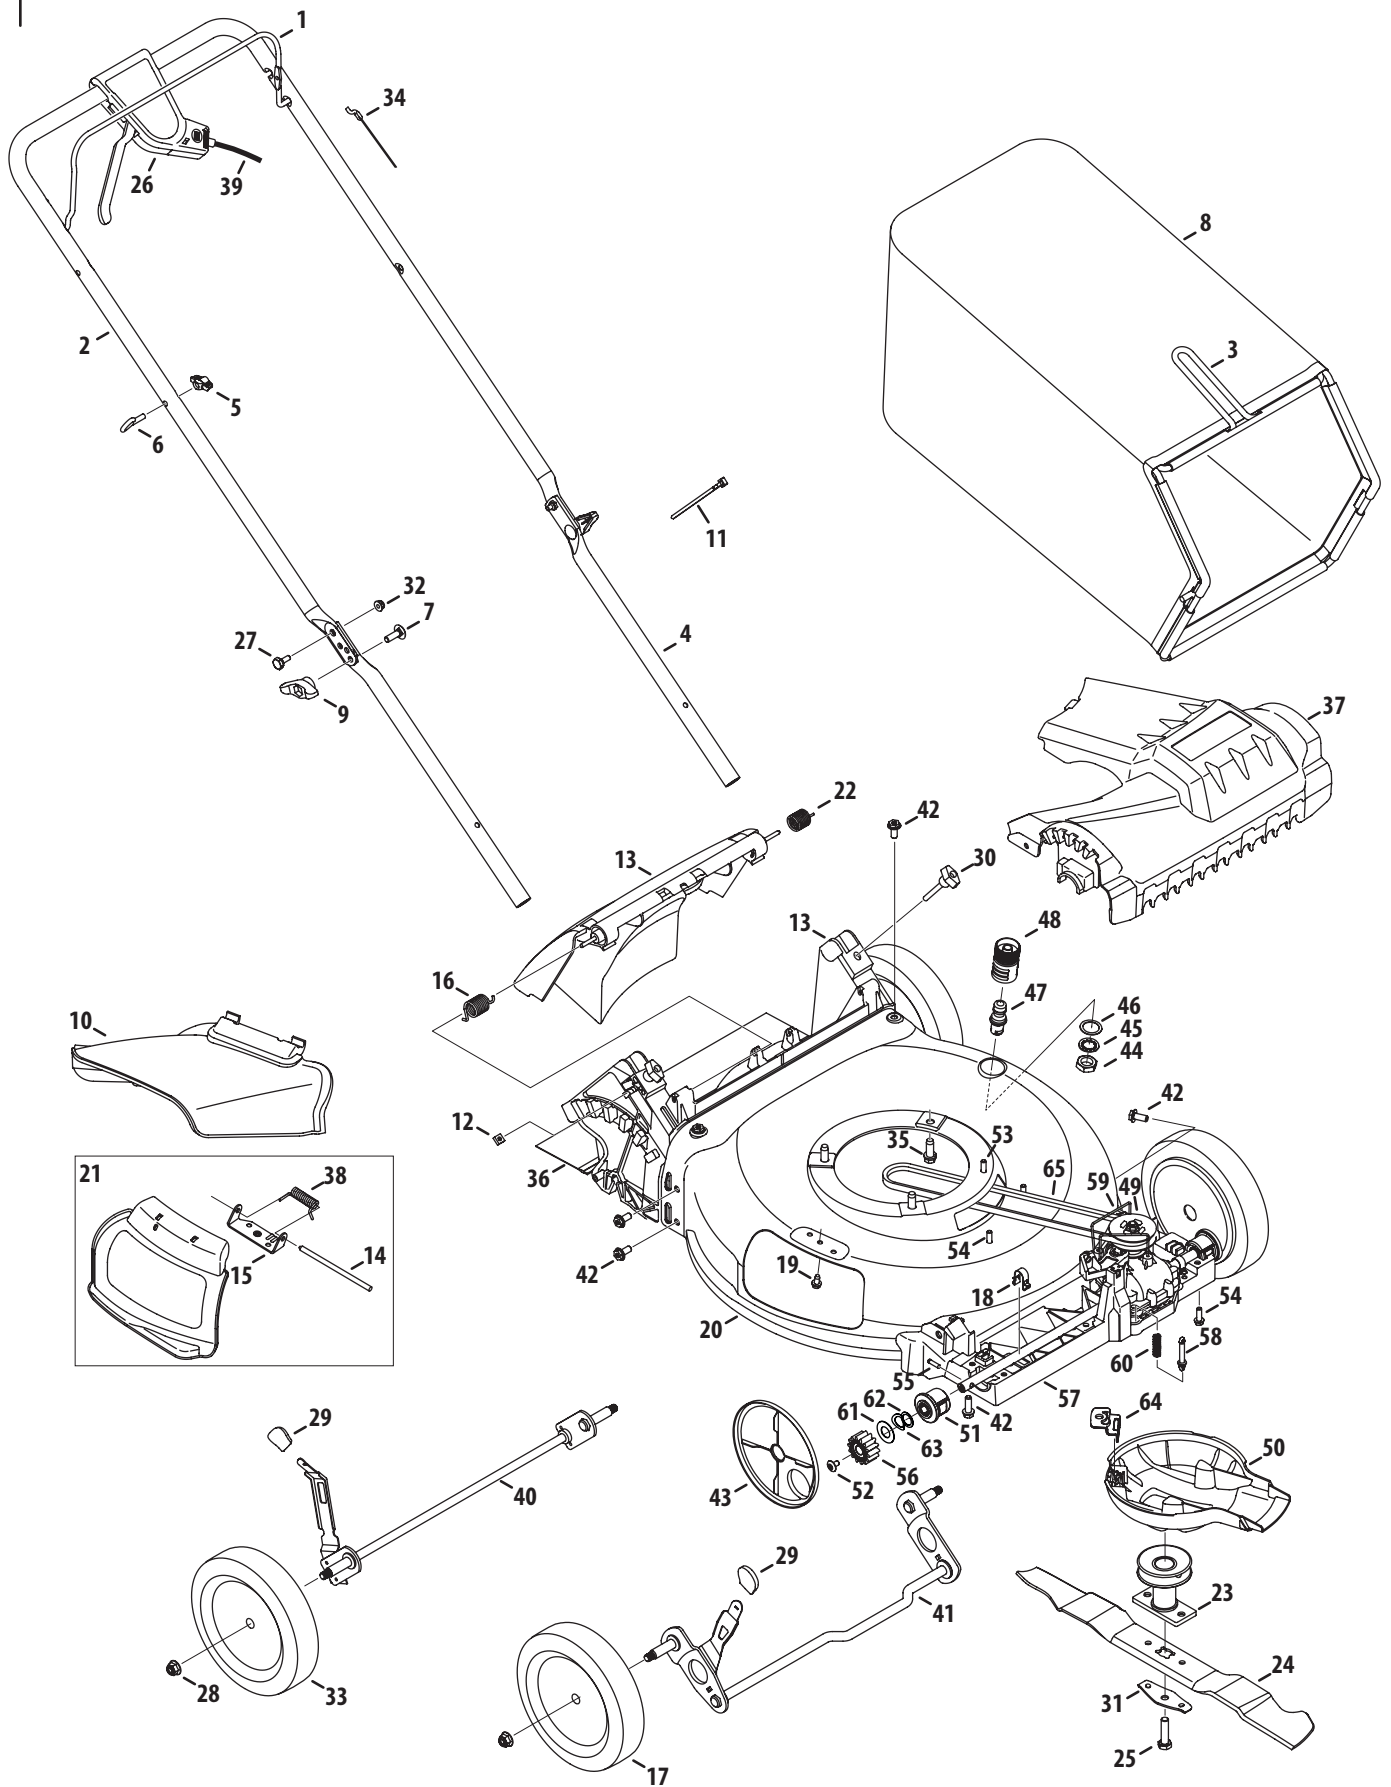

Ref No.	Part Number	Description
1	747-05267	Blade Control
2	749-04679-0637	Upper Handle
3	747-05226-0637	Grass Catcher Frame
4	749-04608A-0637	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04018A	Front Wheel
18	787-01793	Front Axle Clip
19	710-05073	Screw, 1/4-20 x .500
20	787-01802	Deck , 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02528	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	753-06060	Control Lever Assembly
27	738-04419A	Slidr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131	Adjustment Lever Knob
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20

Ref No.	Part Number	Description
33	734-04014B	Rear Wheel
34	946-04670	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07208	Front Cover
38	732-1014	Torsion Spring
39	946-04655	Variable Speed Cable
40	911-04149	Rear Axle Assembly
41	911-04160	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	912-0641	Nut, Hex
45	736-0225	Washer, Lock, 5/8"
46	936-0570	Wash., Flat, .865 x 1.145 x .030
47	737-04003D	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	631-04444	Engine Baffle
51	641-00014	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	710-0599	Screw, 1/4-20 x .500
54	710-0895	Screw, 1/4-15 x .750
55	915-0221	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07184A	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	936-0369	Wash., Flat, .508 x 1.00 x .020
62	736-04202	Wash., Flat, .504 x .700 x .010
63	736-04495	Wash., Saddle, .505 x .740 x .125
64	787-01800	Engine Baffle Bracket
65	954-04260	V-Belt

 Engine Model 1P65B0B

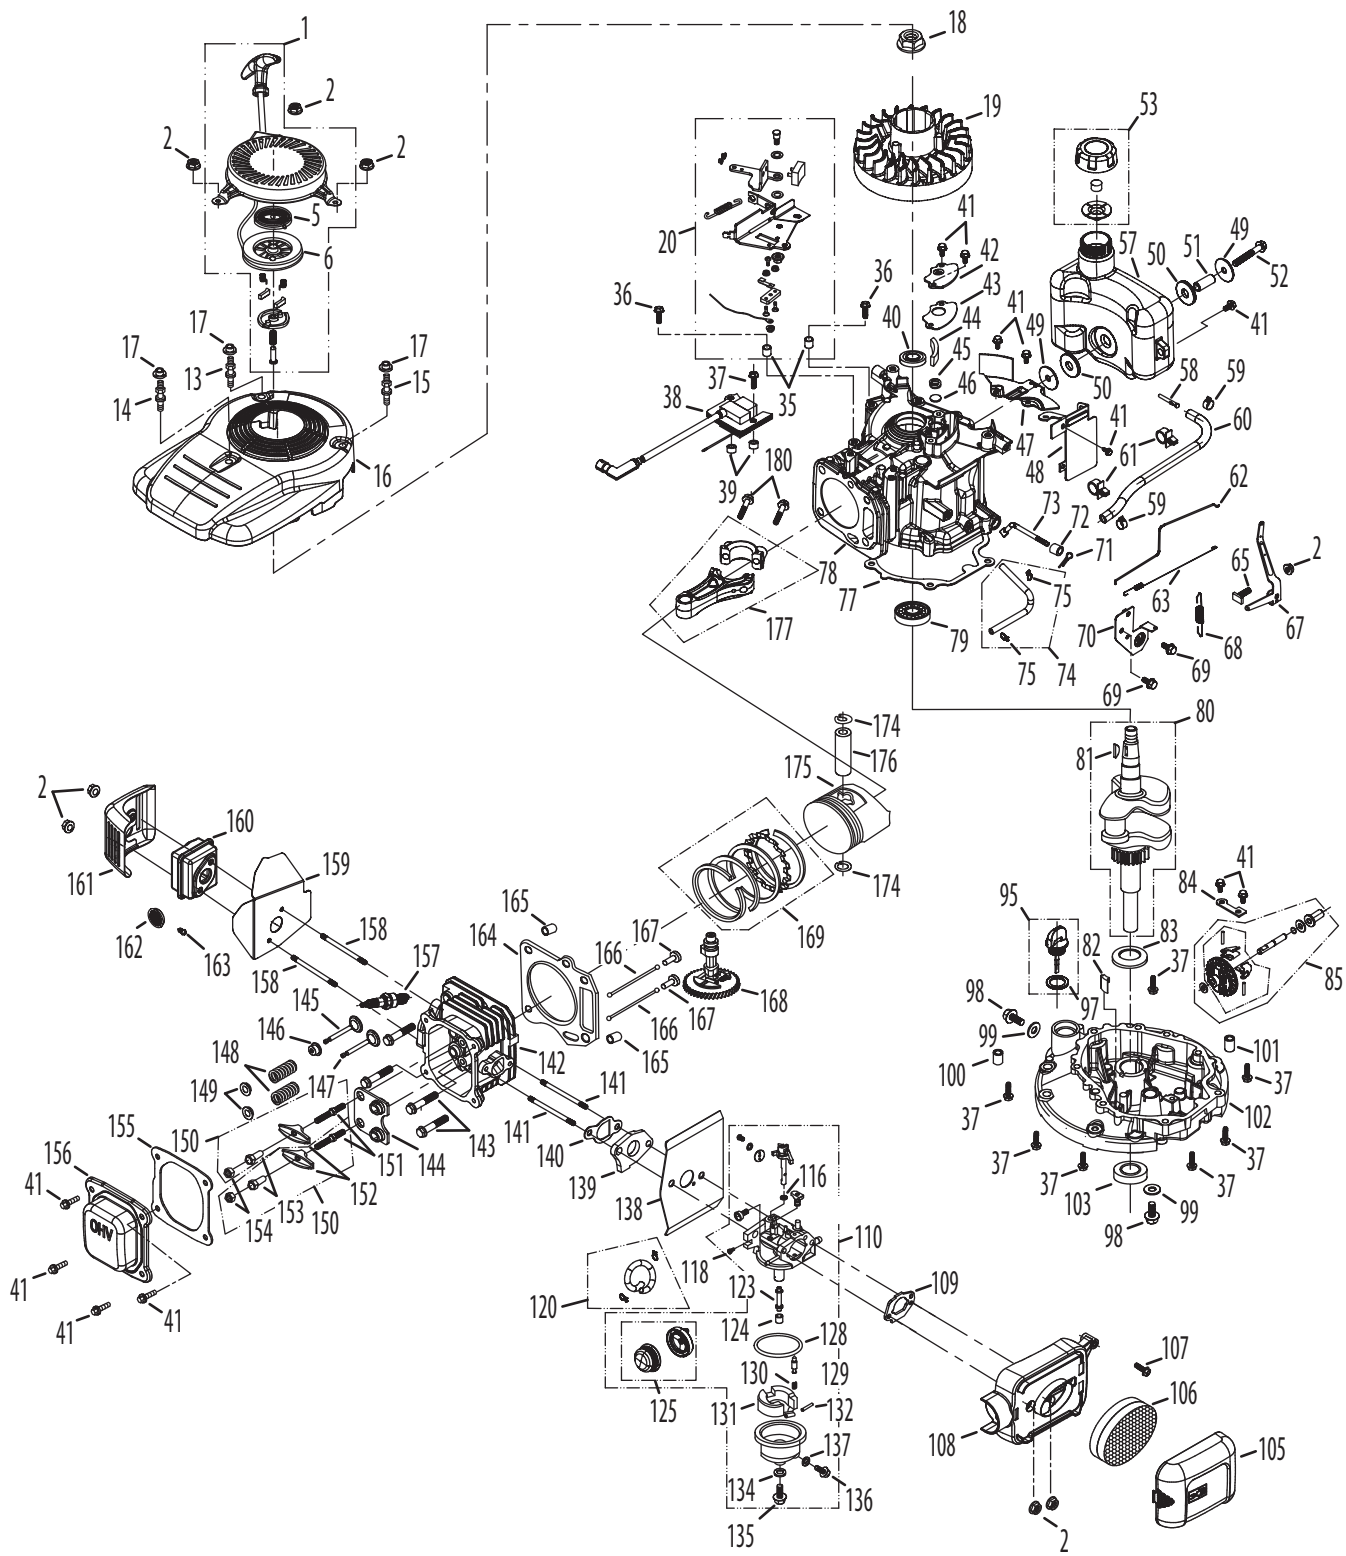

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Engine Model 1P65B0B

Ref No.	Part Number	Description
1	951-11720	Recoil Starter Assembly
2	712-04212	Nut M6 X 10 Mm
13	751-11722	Starter/Shroud Stud Black
14	951-11723	Starter/Shroud Stud Front
15	951-11724	Starter/Shroud Stud White
16	731-05692	Engine Shroud (M0)
17	750-05320	Engine Shroud Spacer
18	712-04221	Flywheel Nut M14
19	951-11043	Flywheel
20	951-10320A	Brake Assembly
35	750-05384	Brake Spacer
36	710-04980	Brake Assy Bolt M6x35
37	710-04920	Bolt M6x28
38	951-10367	Ignition Coil Assembly
39	951-11675	Ignition Coil Spacer
40	951-11596	Upper Crankshaft Seal
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	951-11730	Breather Screen
45	732-04718	Breather Spring
46	951-11735	Breather Valve
47	951-11542	Fuel Tank Bottom Bracket
48	951-11748	Tank/Label Bracket
49	736-04456	Fuel Tank Washer
50	951-10335	Rubber Bushing
51	750-05322	Fuel Tank Bushing
52	710-04922	Tank Bolt M8x50
53	951-10300	Fuel Cap Assembly
57	951-10337	Fuel Tank Assembly
58	951-10358	Fuel Filter
59	951-11731	Fuel Hose Clamp
61	723-04071	Plastic Support Clamp
62	951-11677	Throttle Linkage
63	951-11522	Throttle Linkage Spring
65	710-04908	Governor Arm Bolt
67	951-11523	Governor Arm
68	951-10293	Governor Spring
69	710-04915	Bolt M6x12
70	951-11544	Throttle/Governor Bracket
71	714-04074	Governor Cotter Pin

Ref No.	Part Number	Description
72	951-11574	Governor Seal
73	951-11608	Governor Arm Shaft
74	951-11725	Breather Hose Assembly
75	726-04101	Breather Hose Clamp
77	951-11732	Crankcase Cover Gasket
79	951-11369	Main Bearing
80	951-11591	Crankshaft Assembly
81	951-10307	Woodruff Key
82	951-11733	Oil Return Seal
83	736-04491	Crankshaft Thrust Washer
84	951-11609	Governor Gear Mounting Plate
85	951-11549	Governor Gear/Shaft Assembly
95	951-10617	Dipstick Assembly
97	951-11734	Dipstick O-Ring
98	710-04906	Oil Drain Plug
99	736-04454	Oil Drain Plug Washer
100	715-04089	Crankcase Cover Dowel 9x14
101	715-04092	Crankcase Cover Dowel 7x14
103	951-11545	Lower Crankshaft Seal
106	951-10732	Air Filter Element, Oval
107	710-04969	A/F Base Bolt M6x30
109	951-11527	Carburetor Gasket Plate
110	951-11707	Carburetor Assembly
120	951-11736	Primer Hose Assembly
125	951-10639A	Primer Assembly
128	951-11589	Fuel Bowl O-Ring
134	951-11348	Fuel Bowl Gasket
135	710-04945	Fuel Bowl Mounting Bolt
136	710-04903	Fuel Drain Plug
137	951-11349	Fuel Drain Plug Gasket
138	951-11737	Carburetor Gasket
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
141	710-05093	Carb Stud M6x92
143	710-04982	Head Bolt M8x54
144	951-11687	Push Rod Guide
150	951-11606	Rocker Arm Assembly
151	710-04902	Rocker Arm Stud
153	751-11123	Fulcrum Nut
154	751-11124	Jam Nut
155	951-11551	Valve Cover Gasket

Engine Model 1P65B0B


Ref No.	Part Number	Description
156	951-11548	Valve Cover
157	951-10292	Spark Plug/F6rtc
158	951-11740	Muffler Stud M6x95
159	951-11739	Muffler Gasket
160	951-11742	Muffler Assembly
161	951-11743	Muffler Shield
162	951-10351	Spark Arrestor
163	710-04983	Spark Arrestor Screw
164	951-11555	Cylinder Head Gasket
165	715-04108	Cylinder Head Dowel 10x16
166	951-10314	Push Rod (2 per order)
167	951-11607	Tappet
168	951-11741	Camshaft Assembly
169	951-11688	Piston Ring Set
174	951-11603	Piston Pin Snap Ring
175	951-11605	Piston
176	951-11604	Piston Pin
177	951-11744	Connecting Rod Assembly
180	710-05162	Connecting Rod Bolt
—	951-11708	Carburetor Kit - Major
116	—	Fiber O-Ring
118	—	Idle Speed Adjusting Screw
123	—	Main Nozzle (Emulsion Tube)
124	—	Main Jet
128	951-11589	Fuel Bowl O-Ring
129	—	Needle Valve
130	—	Needle Valve Spring
131	—	Float
132	—	Float Pin
134	951-11348	Fuel Bowl Gasket
137	951-11349	Fuel Drain Plug Gasket
—	951-11710	Gasket Kit, External
43	951-11729	Breather Gasket
97	951-11734	Dipstick O-Ring
99	736-04440	Oil Drain Plug Washer
138	951-11737	Carburetor Gasket
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
155	951-11551	Valve Cover Gasket
159	951-11739	Muffler Gasket

Ref No.	Part Number	Description
—	951-11709	Gasket Kit, Complete
40	951-11596	Upper Crankshaft Seal
43	951-11729	Breather Gasket
72	951-11574	Governor Seal
77	951-11732	Crankcase Cover Gasket
97	—	Dipstick O-Ring
99	736-04440	Oil Drain Plug Washer
103	951-11545	Lower Crankshaft Seal
138	—	Carburetor Gasket
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
155	951-11551	Valve Cover Gasket
159	951-11739	Muffler Gasket
164	951-11555	Cylinder Head Gasket
—	951-10846	Cylinder Head Service Kit
143	710-04982	Head Bolt M8x54
146	—	Intake Valve Seal
155	951-11551	Valve Cover Gasket
164	951-11555	Cylinder Head Gasket
—	951-11746	Cylinder Head
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
142	—	Cylinder Head
144	951-11687	Push Rod Guide
145	—	Intake Valve
146	—	Intake Valve Seal
147	—	Exhaust Valve
148	—	Valve Spring
149	—	Valve Spring Retainer
151	710-04902	Rocker Arm Stud
152	—	Rocker Arm
153	751-11123	Fulcrum Nut
154	751-11124	Jam Nut
155	951-11551	Valve Cover Gasket
159	951-11739	Muffler Gasket
164	951-11555	Cylinder Head Gasket
—	951-10363	Fuel Line Kit
58	951-10358	Fuel Filter
59	951-11731	Fuel Hose Clamp
60	—	Fuel Hose

Ref No.	Part Number	Description
—	951-11747	Short Block Assembly
37	710-04920	Bolt M6×28
40	951-11596	Upper Crankshaft Seal
41	710-04916	Bolt M6×14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	951-11730	Breather Screen
45	732-04718	Breather Spring
46	951-11735	Breather Valve
71	714-04074	Governor Cotter Pin
72	951-11574	Governor Seal
73	951-11608	Governor Arm Shaft
77	951-11732	Crankcase Cover Gasket
78	—	Crankcase
79	951-11369	Main Bearing
80	951-11591	Crankshaft Assembly
81	951-10307	Woodruff Key
83	736-04491	Crankshaft Thrust Washer
84	951-11609	Governor Gear Mounting Plate
85	951-11549	Governor Gear/Shaft Assembly
98	710-04906	Oil Drain Plug
99	736-04440	Oil Drain Plug Washer
100	715-04089	Crankcase Cover Dowel 9x14
101	715-04092	Crankcase Cover Dowel 7x14
102	—	Crankcase Cover
103	951-11545	Lower Crankshaft Seal
109	951-11527	Carburetor Gasket Plate
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
155	951-11551	Valve Cover Gasket
159	951-11739	Muffler Gasket
164	951-11555	Cylinder Head Gasket
165	715-04108	Cylinder Head Dowel 10x16
167	951-11607	Tappet
168	951-11741	Camshaft Assembly
169	951-11688	Piston Ring Set
174	951-11603	Piston Pin Snap Ring
175	951-11605	Piston
176	951-11604	Piston Pin
177	951-11744	Connecting Rod Assembly

Ref No.	Part Number	Description
—	951-10370	Oil Drain Plug & Washer Ass'y
98	710-04906	Oil Drain Plug
99	736-04440	Oil Drain Plug Washer
—	951-10739	Air Cleaner Housing Ass'y
105	—	Outer Air Filter Cover
108	—	Inner Air Filter Housing
—	951-10313	Valve Kit
145	—	Intake Valve
147	—	Exhaust Valve
—	951-11721	Recoil Pulley & Spring Ass'y
5	—	Spring
6	—	Pulley
—	951-11745	Muffler Stud Ass'y
158	951-11740	Muffler Stud

 
Engine Model 1P70MC

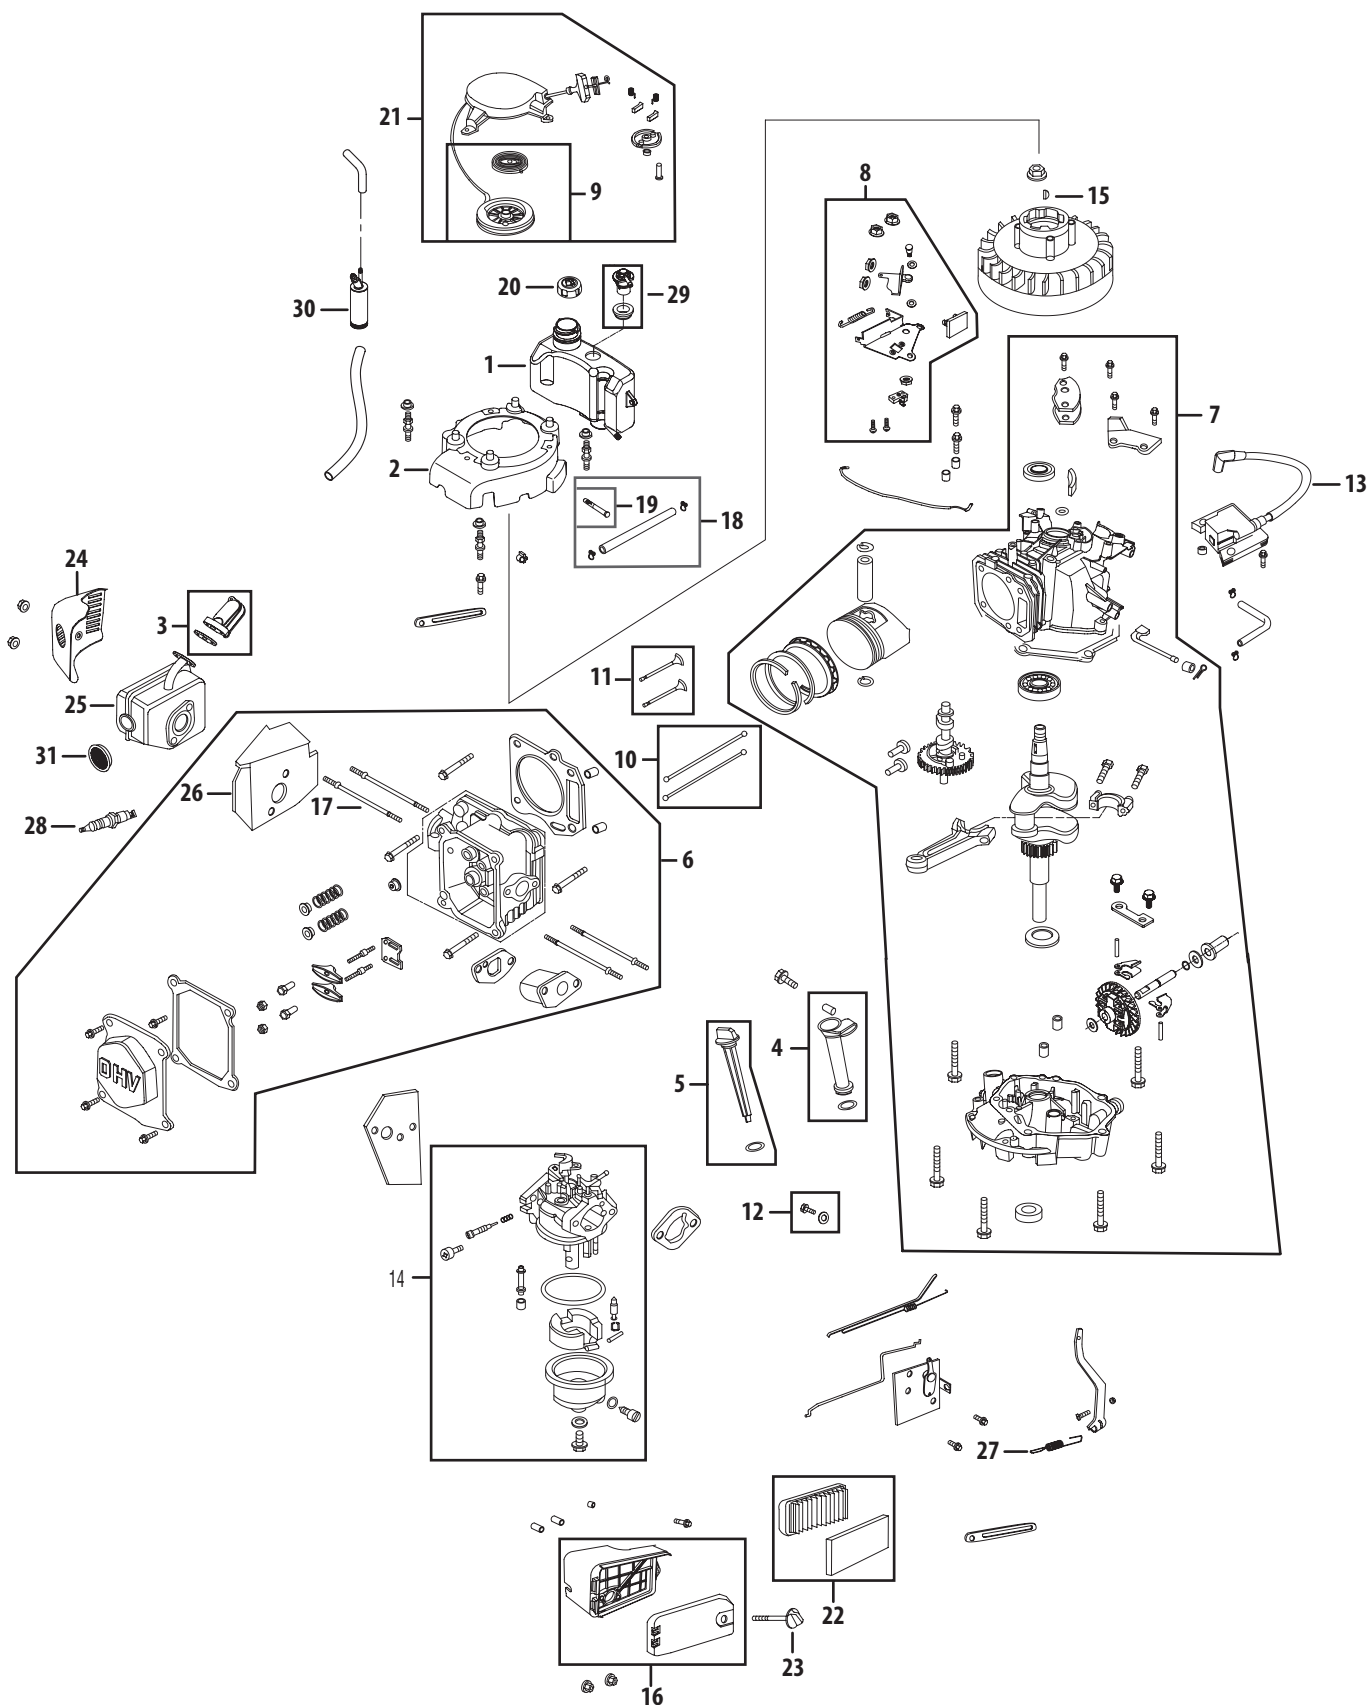

Ref No.	Part Number	Description
1.	951-10438	Fuel Tank
2.	951-10369	Flywheel Shroud
3.	951-10840	Reed Valve Assembly
4.	951-10334	Oil Filler Tube Assembly
5.	951-10863	Dipstick Assembly
6.	951-10413	Cylinder Head Complete
7.	951-10867	Short Block Assembly
8.	951-10321	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Assembly
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Assembly
13.	951-10366	Ignition Coil
14.	951-10862	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10865	Air Cleaner Housing Assembly Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10440	Fuel Cap
21.	951-10299	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10775	Muffler
26.	951-10402	Muffler Gasket /Heat Shield
27.	951-10387	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10869	Roll Over Valve Assembly
30.	951-10443	Carbon Canister
31.	951-10773	Spark Arrestor
–	952Z1P70MC	Engine – Complete
–	951-10868	Carburetor Kit – Major
–	951-10870	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

 Engine Model - 2P70MOB

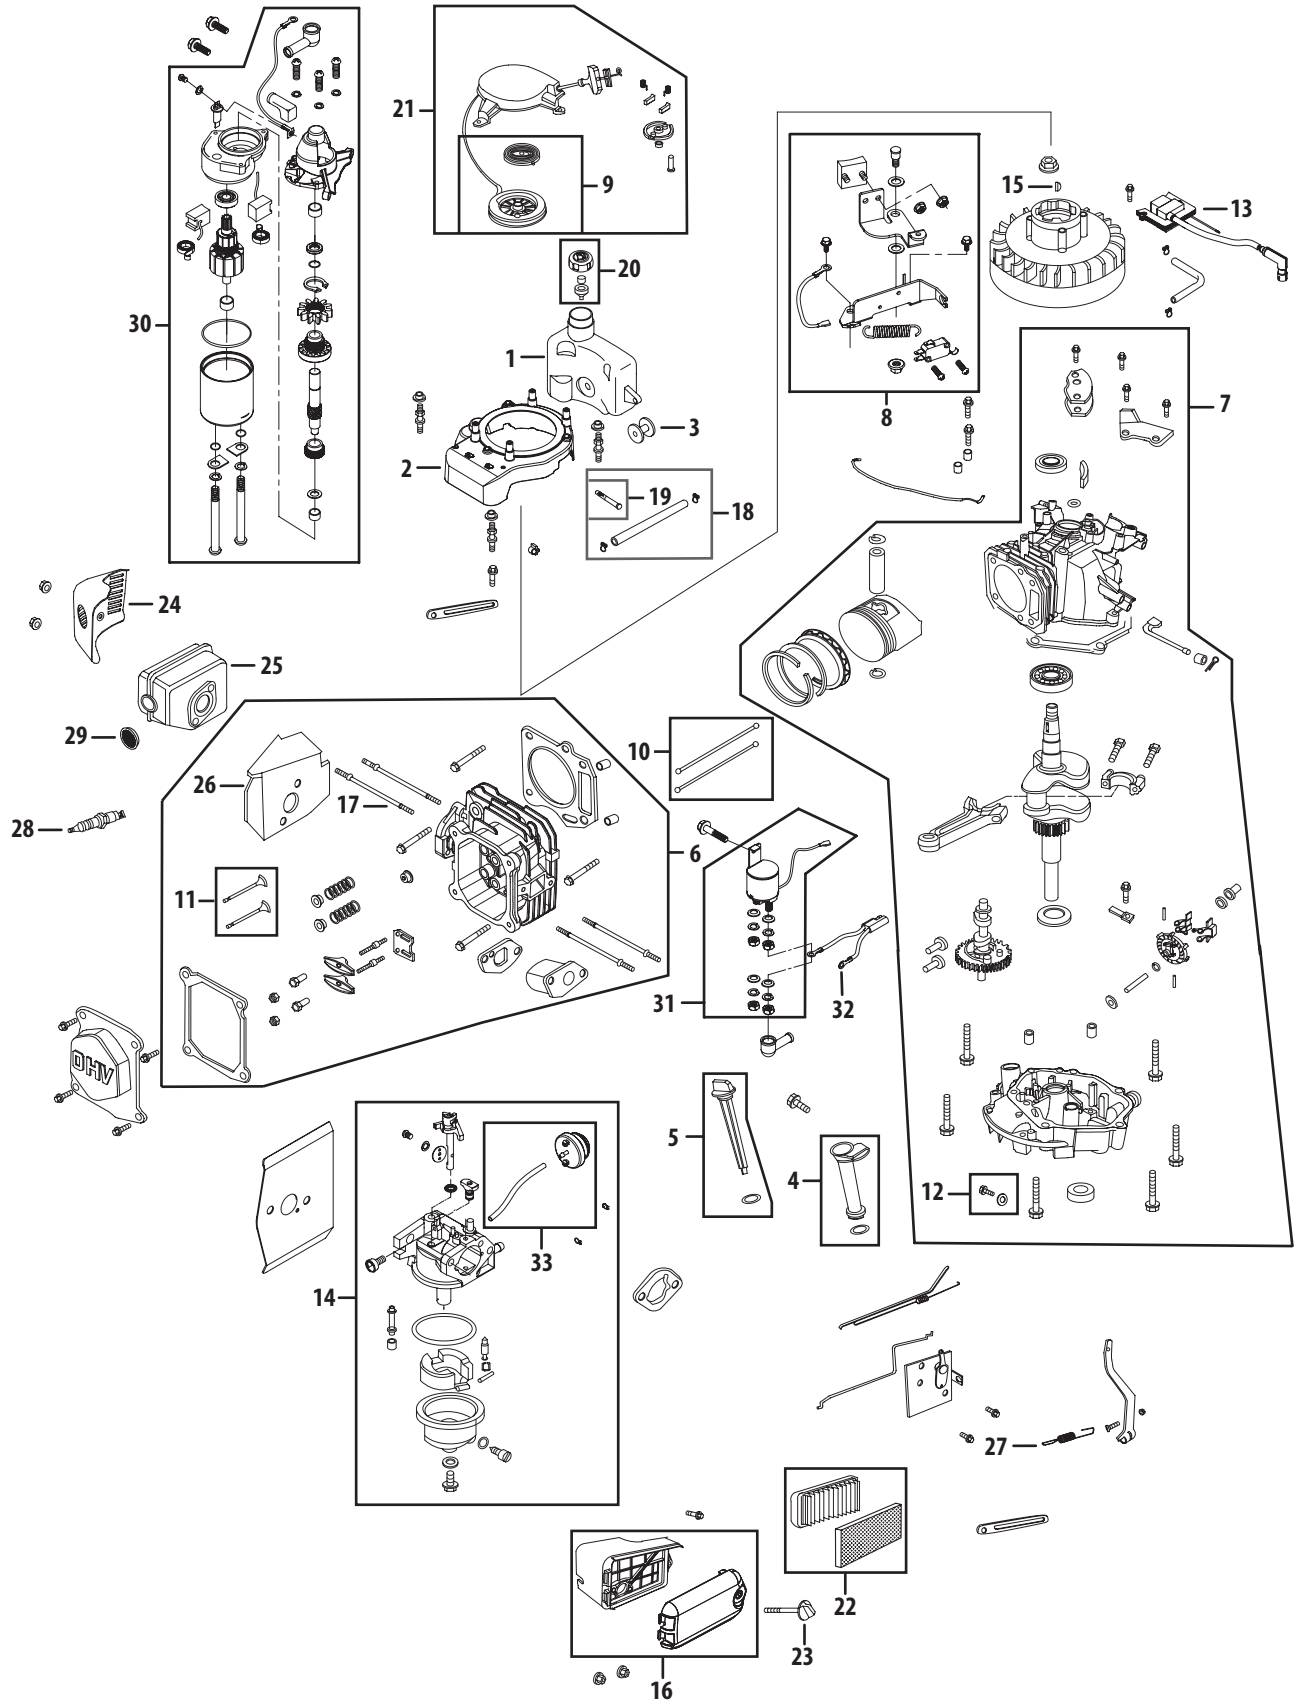


Ref No.	Part Number	Description
1.	951-10368	Fuel Tank
2.	951-10855	Flywheel Shroud
3.	951-10335	Rubber Fuel Tank Mntg. Washer
4.	951-10334	Oil Filler Tube Assembly
5.	951-10852	Dipstick Assembly
6.	951-10413A	Cylinder Head Complete
7.	951-10857A	Short Block Assembly
8.	951-10858	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Ass'y.
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Ass'y.
13.	951-10854	Ignition Coil
14.	951-10881	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10412A	Air Cleaner Housing Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10300	Fuel Cap Assembly

Ref No.	Part Number	Description
21.	951-10299A	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10403	Muffler
26.	951-11179	Muffler Gasket /Heat Shield
27.	951-11178	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10351	Spark Arrestor
30.	951-10880A	Electric Starter
31.	951-10823	Relay Assembly
32.	951-10824	Relay Harness Connector
33.	951-10888	Primer Assembly
–	952Z2P70MOB	Engine – Complete
–	712-04221	Flywheel Nut
–	951-11045	Flywheel
–	951-11238	Governor Arm Bracket
–	951-10890	Carburetor Kit – Major
–	951-10859	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

 Engine Model 5P65MOB

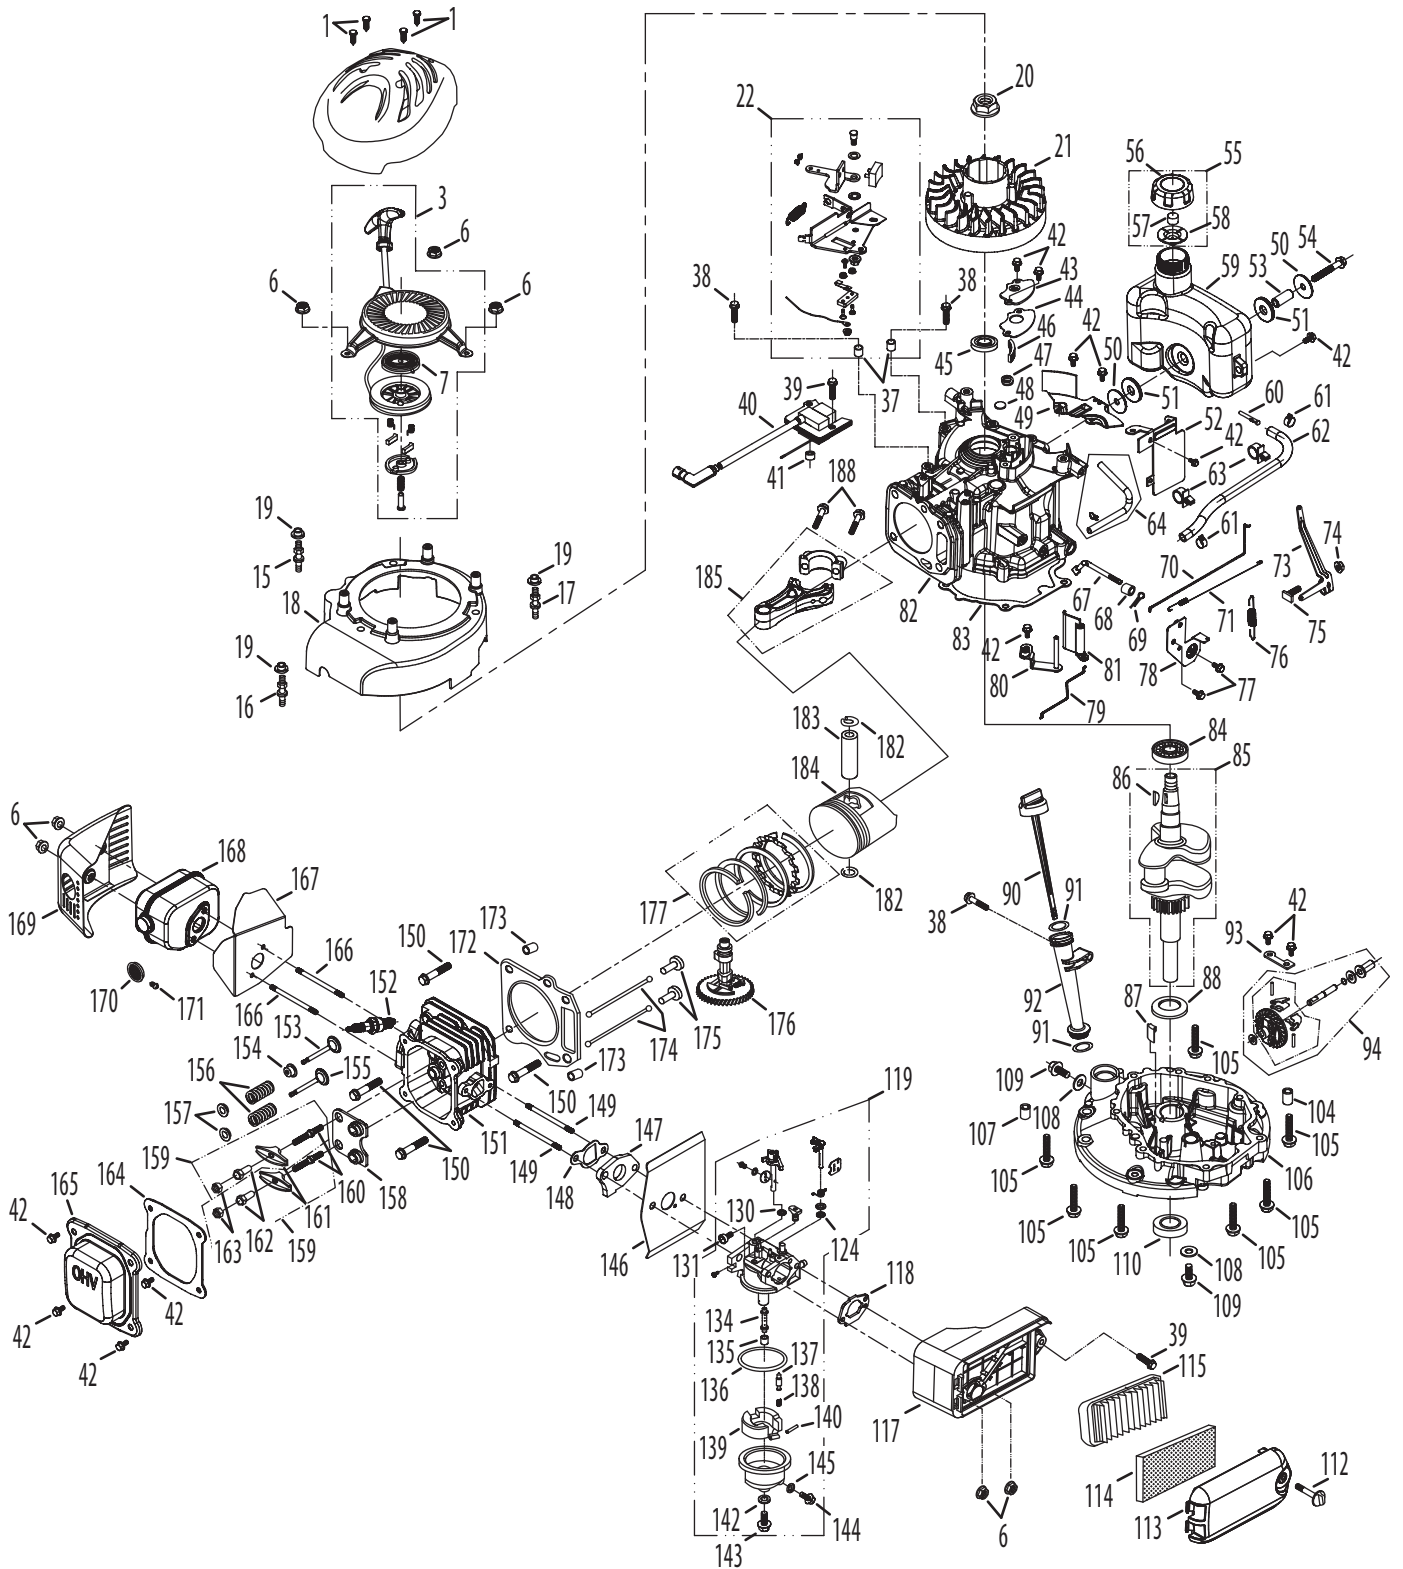

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Ref No.	Part Number	Description
1	710-04744	Self-Tap Bolt, Hilo #12-16 x 1.00"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
7	951-11721	Recoil Spring and Pulley Assembly
15	751-11722	Starter/Shroud Stud Black/Ye Zinc
16	951-11723	Starter/Shroud Stud Front/Ye Zinc
17	951-11724	Starter/Shroud Stud White/Ye Zinc
18	951-10875	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	712-04221	Flywheel Nut M14
21	951-11043	Flywheel
22	951-10320A	Brake Assembly
37	750-05384	Brake Spacer
38	710-04980	Bolt M6x35
39	710-04969	Bolt M6x30
40	951-10367	Ignition Coil Assembly
41	750-05383	Ignition Coil Spacer
42	710-04916	Bolt M6x14
43	951-11612	Breather Cover Plate
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
46	951-11730	Mesh Screen
47	732-04718	Breather Valve Spring
48	951-11614	Breather Valve
49	951-11542	Fuel Tank Bottom Bracket
50	736-04456	Fuel Tank Washer
51	951-10335	Rubber Bushing
52	951-11748	Tank/Label Bracket
53	750-05322	Fuel Tank Bushing
54	710-04922	Tank Bolt M8x50
55	951-10300	Fuel Cap Assembly
59	951-10337	Fuel Tank Assembly
60	951-10358	Fuel Filter
61	951-11731	Fuel Hose Clamp
63	723-04071	Plastic Support Clamp
64	951-11520	Breather Hose Assembly
67	951-11608	Governor Arm Shaft
68	951-11574	Governor Seal
69	714-04074	Governor Cotter Pin
70	951-11521	Throttle Linkage Rod

Ref No.	Part Number	Description
71	951-11522	Throttle Linkage Spring
73	951-11523	Governor Arm
74	712-04212	Governor Arm Nut M6
75	710-04908	Governor Arm Bolt
76	951-10293	Governor Spring
77	710-04915	Bolt M6x12
78	951-11544	Throttle / Governor Bracket
79	951-11524	Choke Linkage Rod
80	951-11792	Air Vane Bracket
81	951-11529	Air Vane
83	951-11732	Crankcase Cover Gasket
84	951-11369	Main Bearing
85	951-11591	Crankshaft Assembly
86	951-10307	Woodruff Key
87	951-11733	Oil Return Seal
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick and Oil Fill Tube O-Ring
93	951-11609	Governor Gear Mounting Plate
94	951-11549	Governor Gear/Shaft Assembly
104	715-04092	Crankcase Cover Dowel 7x14
105	710-04920	Coil/Sump Bolt M6x28
106	951-11793	Crankcase Cover
107	715-04096	Dowel Pin 9x14
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
110	951-11545	Lower Crankshaft Seal
112	951-10297	Air Filter Cover Thumb Screw
118	951-11257	Carburetor Gasket Plate
119	951-10873	Carburetor Assembly
136	951-11589	Fuel Bowl O-Ring
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
149	710-05093	Carb Stud M6x92
150	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc

Engine Model 5P65MOB


Ref No.	Part Number	Description
154	951-11818	Intake Valve Seal
158	951-11687	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
162	751-11123	Valve Adjustment Nut
163	751-11124	Pivot Locking Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
167	951-11739	Muffler Gasket
168	951-10295	Muffler Assembly
169	951-11791	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11555	Cylinder Head Gasket
173	715-04090	Cylinder Head Dowel 10x16
175	951-11607	Tappet
176	951-11741	Camshaft Assembly
177	951-11688	Piston Ring Set
182	951-11603	Piston Pin Snap Ring
183	951-11604	Piston Pin
184	951-11605	Piston
185	951-11744	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-11765	Oil Filler Tube Assembly
91	951-11547	Dipstick and Oil Fill Tube O-Ring
92	—	Tube
—	951-11795	Dipstick Assembly
90	—	Dipstick
91	951-11547	Dipstick and Oil Fill Tube O-Ring
—	951-10298	Air Cleaner Kit
114	—	Foam Filter Element
115	—	Paper Filter Element
—	951-10300	Fuel Cap Assembly
56	—	Fuel Cap
57	—	Foam Insert
58	—	Vent Gasket
—	951-10876	Air Cleaner Housing Ass'y Comp
113	—	Outer Air Cleaner Cover
117	—	Inner Air Cleaner Housing

Ref No.	Part Number	Description
—	951-10874	Carburetor Kit - Major
124	—	Fiber O-Ring
130	—	Fiber O-Ring
131	—	Idle Speed Adjusting Screw
134	—	Main Nozzle / Emulsion Tube
135	—	Main Jet
136	—	Fuel Bowl O-Ring
137	—	Needle Valve
138	—	Needle Valve Spring
139	—	Float
140	—	Float Pin
142	951-11348	Fuel Bowl Gasket
145	951-11349	Fuel Drain Plug Gasket
—	951-10342	Muffler Stud Assembly
166	710-05094	Muffler Stud
—	951-11721	Recoil Spring and Pulley Assembly
7	951-11721	Recoil Spring and Pulley Assembly
8	—	Starter Pulley
—	951-10363	Fuel Line Kit
60	951-10358	Fuel Filter
61	951-11731	Fuel Hose Clamp
62	—	Fuel Hose
—	951-10370	Oil Drain Plug and Washer Ass'y
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
—	951-11787	Gasket Kit - Complete
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
68	951-11574	Governor Seal
83	951-11732	Crankcase Cover Gasket
91	951-11547	Dipstick and Oil Fill Tube O-Ring
108	736-04440	Oil Drain Plug Washer
110	951-11545	Lower Crankshaft Seal
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket

Ref No.	Part Number	Description
—	951-11789	Short Block
42	710-04916	Bolt M6×14
43	951-11612	Breather Cover Plate
44	951-11613	Breather Gasket
45	951-11596	Upper Crankshaft Seal
46	951-11730	Mesh Screen
47	732-04718	Breather Valve Spring
48	951-11614	Breather Valve
67	951-11608	Governor Arm Shaft
68	951-11574	Governor Seal
69	714-04074	Governor Cotter Pin
82	—	Crankcase
83	951-11732	Crankcase Cover Gasket
84	951-11369	Main Bearing
85	951-11591	Crankshaft Assembly
86	951-10307	Woodruff Key
87	951-11733	Oil Return Seal
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick and Oil Fill Tube O-Ring
93	951-11609	Governor Gear Mounting Plate
94	951-11549	Governor Gear/Shaft Assembly
104	715-04092	Dowel Pin 7×14
105	710-04920	Coil/Sump Bolt M6x28
106	951-11793	Crankcase Cover
107	715-04096	Dowel Pin 9×14
108	736-04440	Oil Drain Plug Washer
109	710-04906	Oil Drain Plug
110	951-11545	Lower Crankshaft Seal
118	951-11257	Carburetor Gasket Plate
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket
173	715-04090	Cylinder Head Dowel 10×16
175	951-11607	Tappet
176	951-11741	Camshaft Assembly
177	951-11688	Piston Ring Set
182	951-11603	Piston Pin Snap Ring
183	951-11604	Piston Pin

Ref No.	Part Number	Description
184	951-11605	Piston
185	951-11744	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-11746	Cylinder Head Assembly
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
151	—	Cylinder Head
153	—	Intake Valve
154	—	Intake Valve Seal
155	—	Exhaust Valve
156	—	Valve Spring
157	—	Valve Spring Retainer
158	951-11687	Push Rod Guide
160	710-04902	Rocker Arm Stud
161	—	Rocker Arm
162	751-11123	Valve Adjustment Nut
163	751-11124	Pivot Locking Nut
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11555	Cylinder Head Gasket
—	951-11788	Gasket Kit - External
44	951-11613	Breather Gasket
91	951-11547	Dipstick and Oil Fill Tube O-Ring
108	736-04440	Oil Drain Plug Washer
146	951-11737	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Heat Shield Gasket
—	951-10314	Push Rod Kit
174	—	Push Rod
—	951-10313	Valve Kit
153	—	Intake Valve
155	—	Exhaust Valve
—	951-10846A	Cylinder Head Kit
150	710-04982	Head Bolt M8×54
154	—	Intake Valve Seal
164	951-11551	Valve Cover Gasket
172	951-11555	Cylinder Head Gasket

 Engine Model 5P70MOB

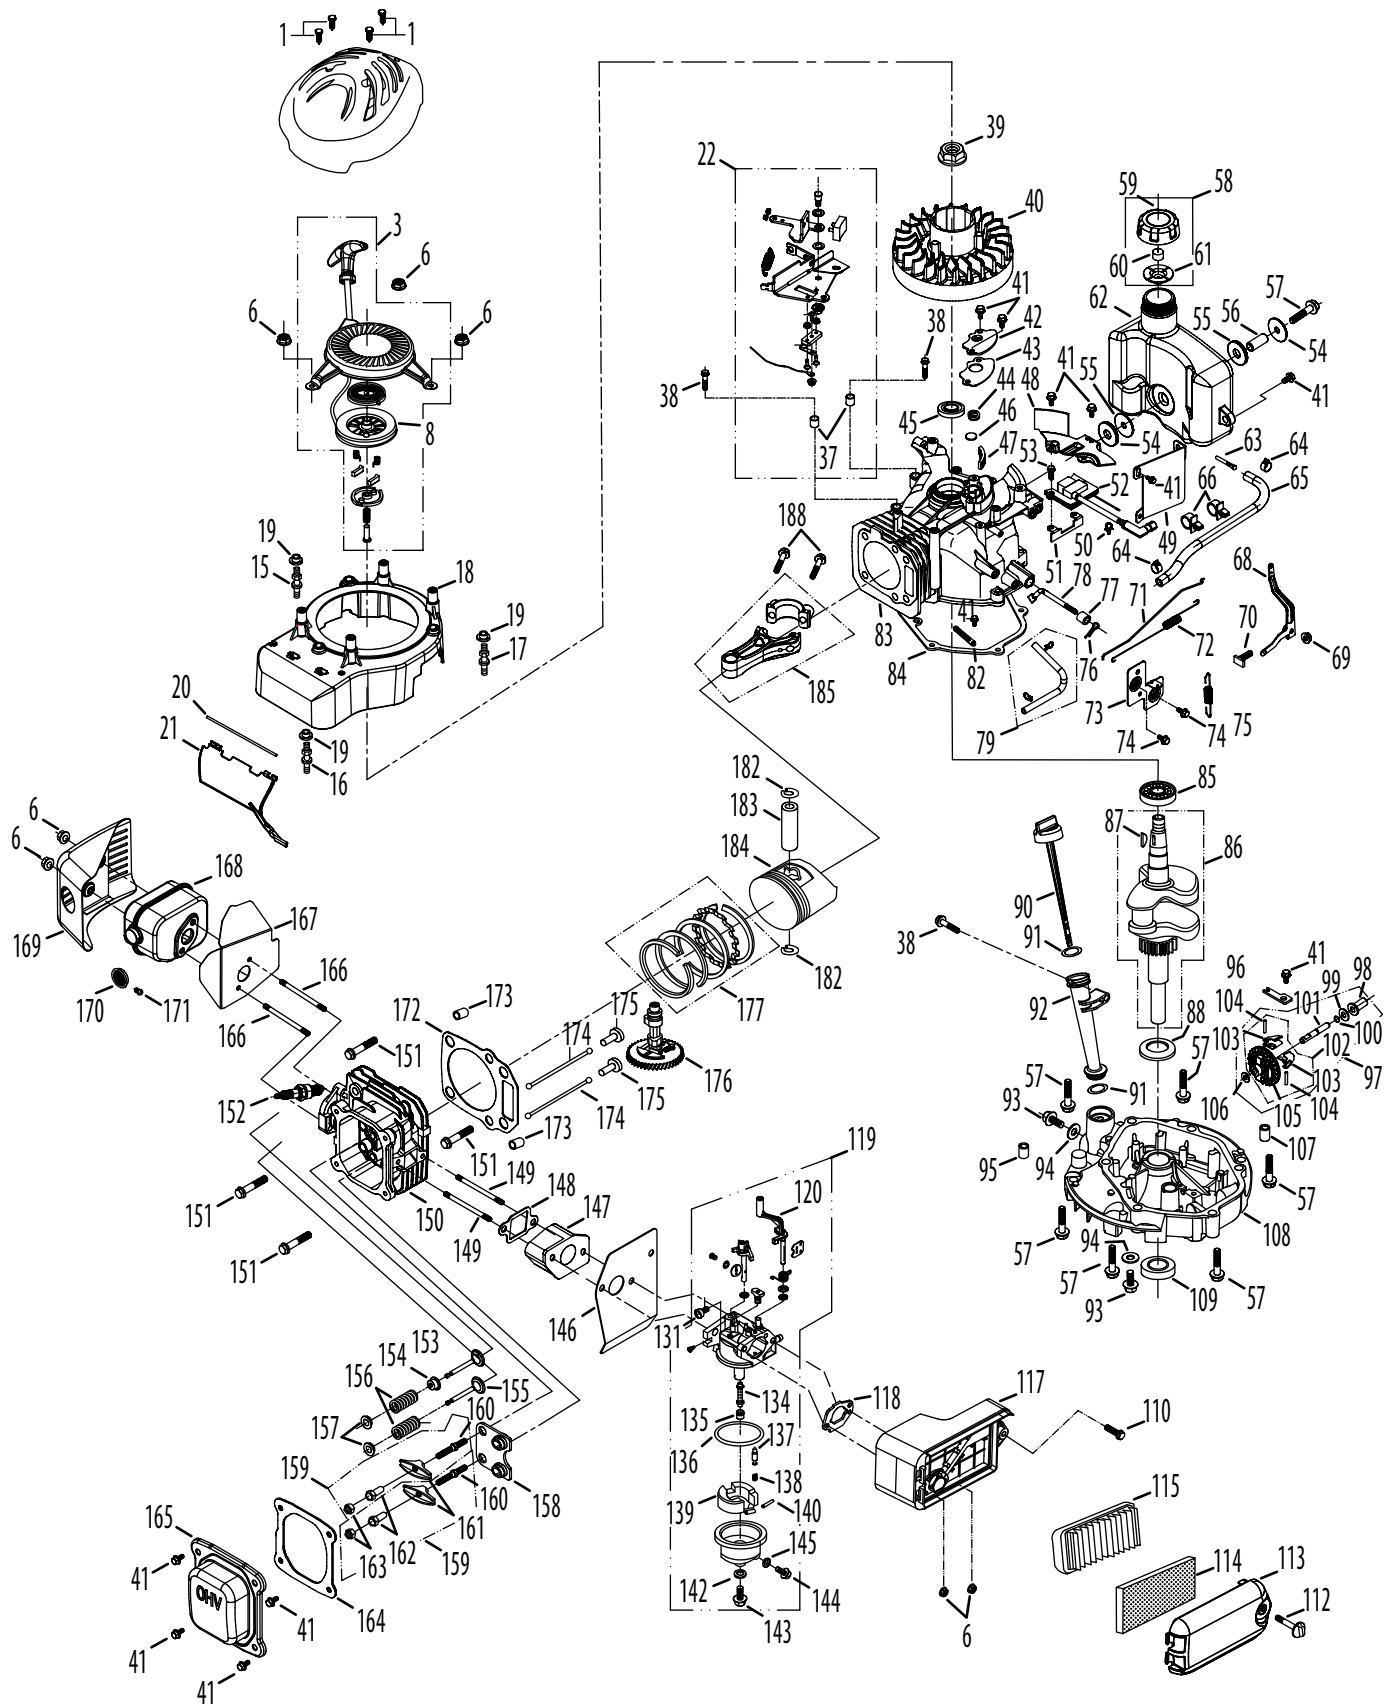

NOTE: Illustrated parts without a numeric call-out are not servicable components.

Ref No.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1.0"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
8	951-11721	Starter Pulley
15	710-04976	Starter/Shroud Stud M6x85-48
16	710-04977	Starter/Shroud Stud M6x87-51.5
17	710-04978	Starter/Shroud Stud M6x79
18	951-10764	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	951-11610	Air Vane Shaft
21	951-11611	Air Vane
22	951-10321A	Brake Assembly
37	750-05384	Brake Spacer
38	710-04980	Bolt M6x35
39	712-04221	Flywheel Nut M14
40	951-11046	Flywheel
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
48	951-11616	Fuel Tank Bottom Bracket
49	951-11617	Tank/Label Bracket
50	951-11618	Plastic Clamp 6.3x8
51	951-11619	Ignition Coil Bracket
52	951-10366	Ignition Coil Assembly
53	710-04979	Bolt M6x18
54	736-04456	Fuel Tank Washer
55	951-10335	Rubber Bushing
56	750-05322	Fuel Tank Bushing
57	710-04922	Tank/Sump Bolt M8x50
58	951-10300	Fuel Cap Assembly
62	951-10368	Fuel Tank Assembly
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
66	723-04071	Plastic Support Clamp
68	951-11238	Governor Arm Bracket
69	712-04212	Governor Arm Nut M6
70	710-04908	Governor Arm Bolt
71	951-11259	Throttle Linkage

Ref No.	Part Number	Description
72	951-11258	Throttle Linkage Spring
73	951-11620	Component Bracket
74	710-04915	Bolt M6x12
75	951-10293	Governor Spring
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
79	951-11260	Breather Hose Assembly
82	951-11622	Flexible Clamp
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
87	951-10307	Woodruff Key
88	736-04491	Crankshaft Thrust Washer
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
109	951-11627	Lower Crankshaft Seal
110	710-04969	A/F Base Bolt M6x30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10412A	Air Filter Cover
114	951-10298	Air Filter, Sponge Pre-Filter
118	951-11257	Carburetor Gasket Plate
119	951-10765	Carburetor Assembly
136	951-11589	Fuel Bowl O-Ring
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
146	951-11766	Carburetor Gasket
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
149	710-04981	Carb Stud M6x113
151	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc
153	951-10345	Intake Valve

Engine Model 5P70MOB

Ref No.	Part Number	Description
158	951-11629	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
167	951-11739	Muffler Gasket
168	951-10403	Muffler Assembly
169	951-10411	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
174	751-10344	Push Rod
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
—	951-10413A	Cylinder Head Assembly
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
150	—	Cylinder Head
153	951-10345	Intake Valve
154	—	Valve Seal
155	—	Exhaust Valve
156	—	Valve Spring
157	—	Valve Spring Retainers
158	951-11629	Push Rod Guide
160	710-04902	Rocker Arm Stud
161	—	Rocker Arm
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket

Ref No.	Part Number	Description
—	951-10414B	Short Block Assembly
41	710-04916	Bolt M6x14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Upper Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
57	710-04922	Tank/Sump Bolt M8x50
76	714-04074	Governor Cotter Pin
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
83	—	Crankcase Complete
84	951-11763	Crankcase Cover Gasket
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
88	736-04491	Crankshaft Thrust Washer
91	951-11547	Dipstick / Oil Fill Tube O-Ring
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9x14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7x14
108	—	Crankcase Cover - dual drain
109	951-11627	Lower Crankshaft Seal
118	951-11257	Carburetor Gasket Plate
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt

Ref No.	Part Number	Description
—	951-11765	Oil Filler Tube Assemblby
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Fill Tube
—	951-11764	Dipstick Assembly
90	951-11764	Dipstick
91	951-11547	Dipstick / Oil Fill Tube O-Ring
—	951-10300	Fuel Cap Assembly
59	—	Fuel Cap
60	—	Foam Insert
61	—	Vent Gasket
—	951-10412A	Air Cleaner Housing Ass'y Comp
113	951-10412A	Air Filter Cover
117	—	Inner Air Cleaner Housing
—	951-10342	Muffler Stud Assemblby
166	710-05094	Muffler Stud M6x95
—	951-11721	Recoil Spring and Pulley Ass'y
7	—	Rope Return Spring
8	951-11721	Starter Pulley
—	951-10364	Fuel Line Kit
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
65	—	Fuel Hose
—	951-10370	Oil Drain Plug and Washer Ass'y
93	710-04906	Oil Plug
94	736-04454	Oil Plug Washer
—	951-11770	Gasket Kit - Complete
43	951-11729	Breather Gasket
45	951-11545	Upper Crankshaft Seal
77	951-11574	Governor Seal
84	951-11763	Crankcase Cover Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04454	Oil Drain Plug Washer
109	951-11627	Lower Crankshaft Seal
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
172	951-11630	Cylinder Head Gasket
—	951-10345	Valve Kit
153	951-10345	Intake Valve
155	—	Exhaust Valve

Ref No.	Part Number	Description
—	951-11772	Gasket Kit - External
43	951-11729	Breather Gasket
91	951-11547	Dipstick / Oil Fill Tube O-Ring
94	736-04440	Oil Drain Plug Washer
146	951-11766	Carburetor Gasket
148	951-11254	Carburetor Insulator Gasket
164	951-11551	Valve Cover Gasket
167	951-11739	Muffler Gasket
—	951-10344	Push Rod Kit
174	951-10344	Push Rod
—	951-11773	Carburetor Kit - Major
120	—	Choke & Throttle Shaft Dust Seals
131	—	Idle Speed Adjusting Screw
134	—	Main Nozzle / Emulsion Tube
135	—	Main Jet
136	951-11589	Fuel Bowl O-Ring
137	—	Needle Valve (Float)
138	—	Needle Valve Spring
139	—	Float
140	—	Float Pin
142	951-11348	Fuel Bowl Gasket
145	951-11349	Fuel Drain Plug Gasket
—	951-10298	Air Cleaner Kit
114	—	Foam Filter Element
115	—	Paper Filter Element



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
