 

ILLUSTRATED PARTS MANUAL

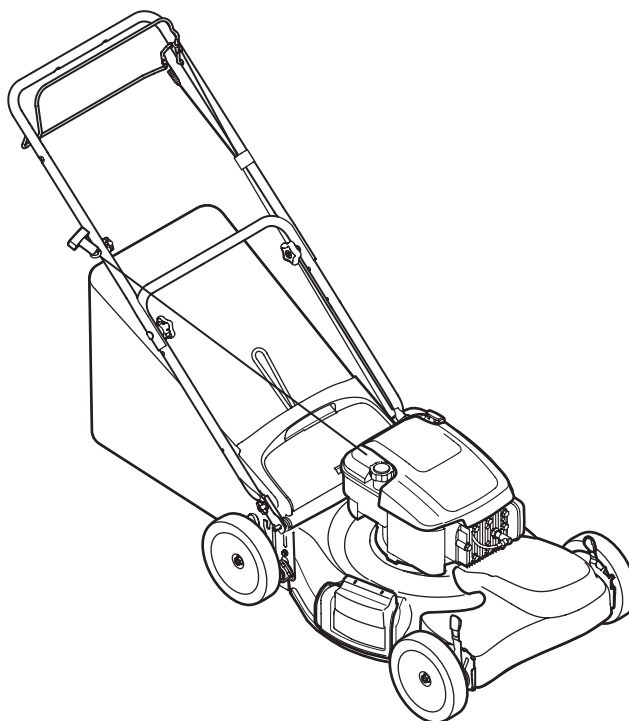

Self-Propelled Mowers

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank you for purchasing an MTD Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Model AO4	4	Model TB230/260	26
Model Series A1X	6	Model TB330 XP	28
Model Series A2X	8	Model TB350 XP	30
Model Series B2X	10	Engine Model 1P65BOB	32
Model Series V/GB2X	12	Engine Model 2P70MOB	42
Model Series D3X	16	Engine Model 5P70MOB	44
Model Series 980	18	Engine Model 1P65BOB-1	54
Model TB210	22	Engine Model 2P70MOC	64
Model TB280 ES	24		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

SERIAL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:


0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

Page Left Blank Intentionally

Ref No.	Part Number	Description
1	787-01871	Deck , 21"
2	941-00019	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02539	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	732-04675A	Transmission Wire
14	731-07486	Side Discharge Chute
15	987-02516	Mulch Plug (Incl. 16-18)
16	732-1014	Torsion Spring
17	747-0710A	Hinge Pin
18	787-01779	Chute Deflector Bracket
19	720-04131A	Adjustment Lever Knob
20	710-05073	Screw, 1/4-20 x .500
21	732-04704	Compression Spring
22	731-07797	Front Cover
23	787-01793	Front Axle Clip
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04122	Wing Knob
26	911-04150	Front Axle Assembly
27	931-04535	Engine Baffle

Ref No.	Part Number	Description
28	911-04142	Rear Axle Assembly
29	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
30	710-04531	Screw, 1/4-20 x .390
31	918-04881A	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04581	Front Wheel
34	734-04563	Rear Wheel
35	715-04099	Dowel Pin
36	747-05210A	Drive Control
37	749-04680	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-1113	Control Cable
43	946-04728	Drive Cable
44	747-05184A	Blade Control
45	720-04123A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	931-04486	Rear Baffle
48	731-07240	Wheel Dust Cover
49	731-07355	Spring Body
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	731-07789	Lower Tray
52	954-04259A	V-Belt

 Model Series A1X

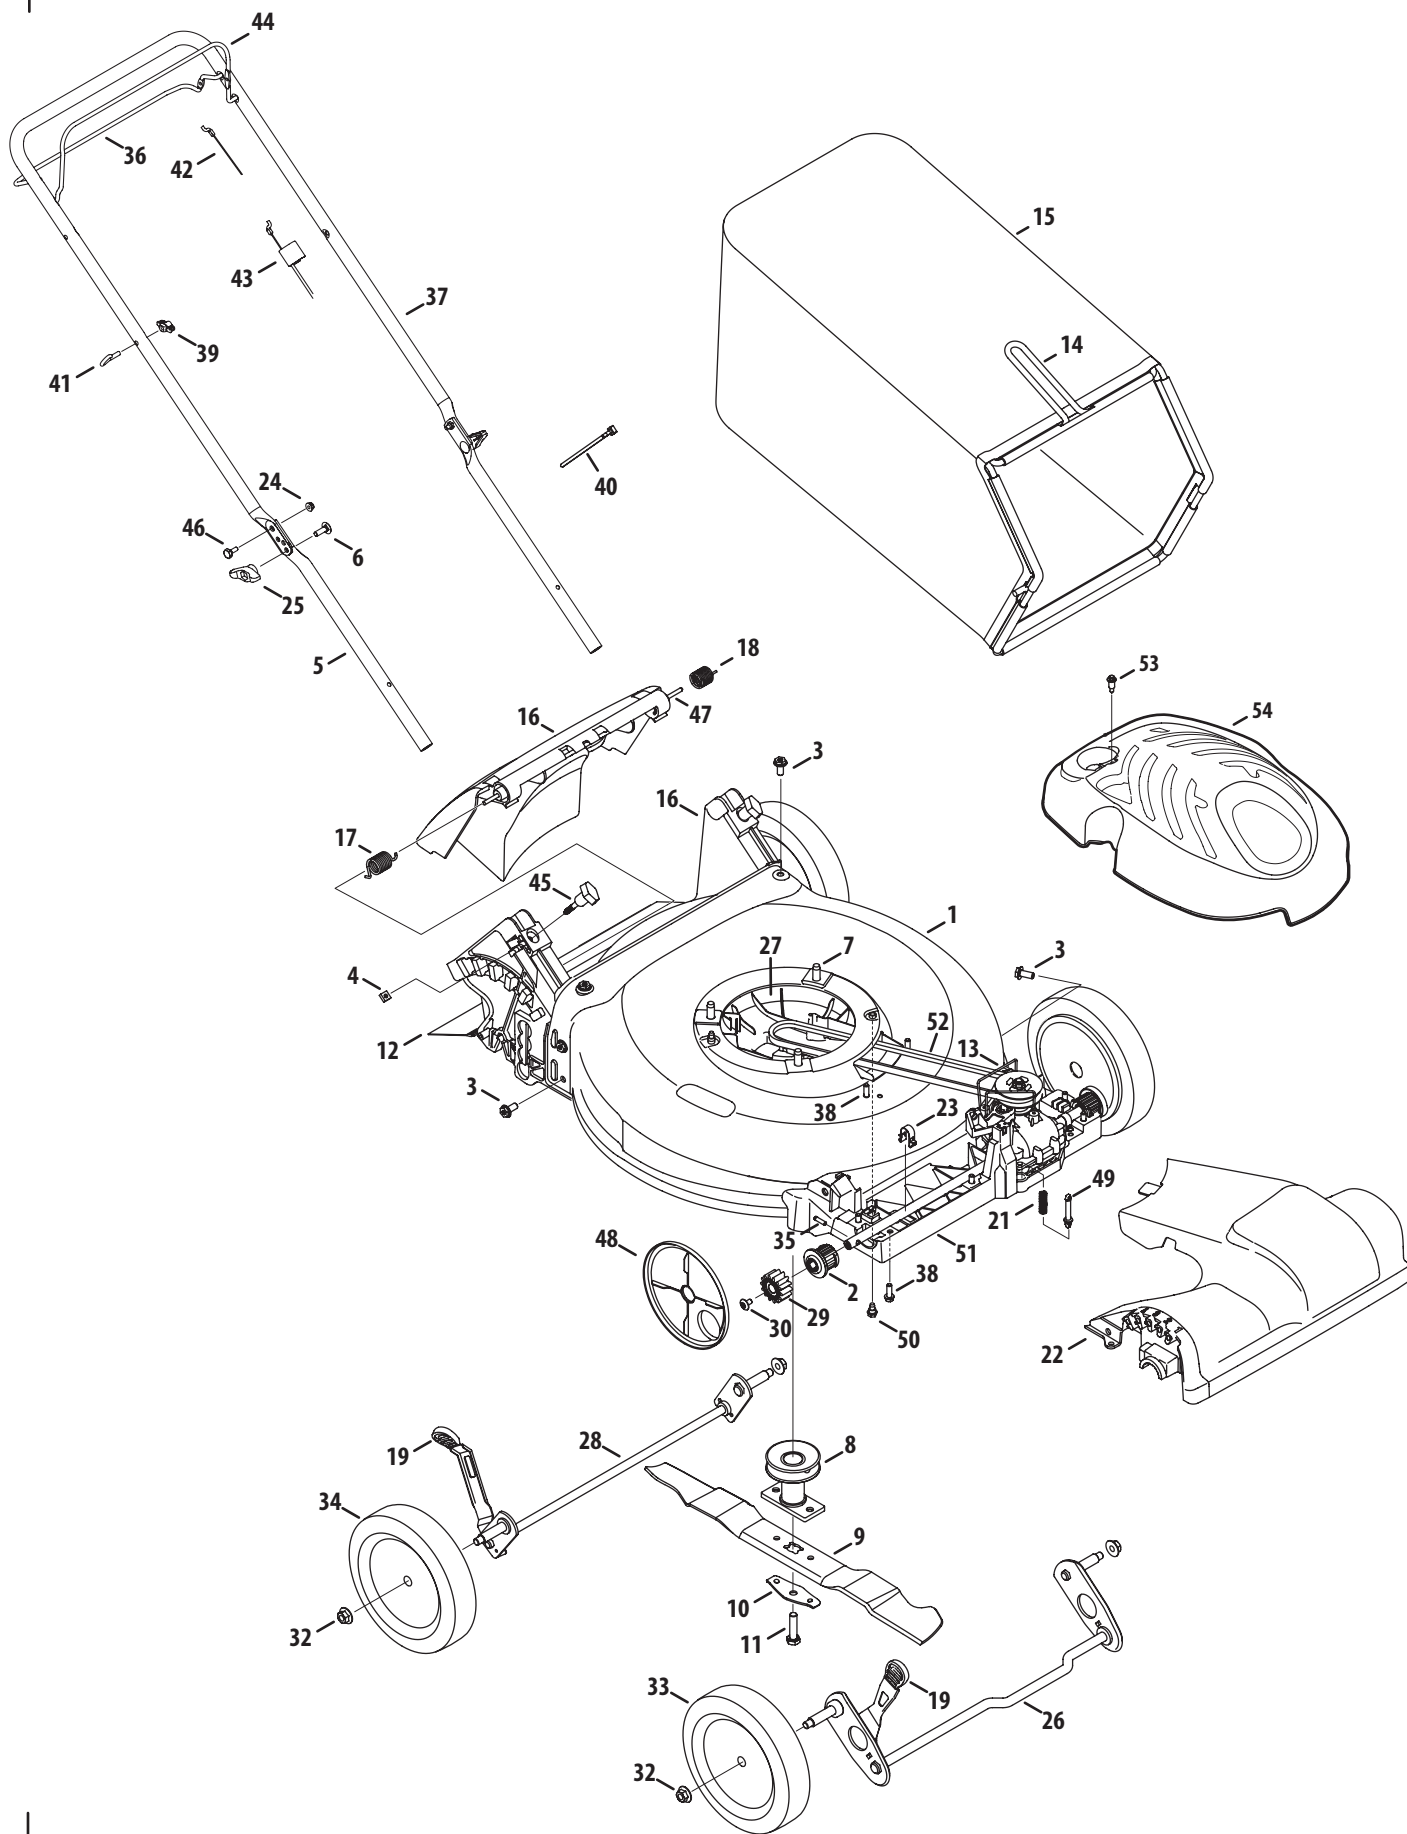


Ref No.	Part Number	Description
1	787-01876	Deck , 21"
2	941-00019	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02539	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	732-04675A	Transmission Wire
14	747-05226	Grass Catcher Frame
15	764-04077A	Grass Bag
16	631-04369	Rear Discharge Door Assembly
	631-04511	Rear Door Assembly (Briggs)
	631-04567	Door Assembly International
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04131A	Adjustment Lever Knob
20	710-05073	Screw, 1/4-20 x .500
21	732-04704	Compression Spring
22	731-07797	Front Cover
23	787-01793	Front Axle Clip
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04122	Wing Knob
26	911-04150	Front Axle Assembly
27	931-04535	Engine Baffle
28	911-04142	Rear Axle Assembly

Ref No.	Part Number	Description
29	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
30	710-04531	Screw, 1/4-20 x .390
31	918-04881A	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04581	Front Wheel
34	734-04563	Rear Wheel
35	715-04099	Dowel Pin
36	747-05210A	Drive Control
37	749-04680	Upper Handle
	749-04681	Upper Handle International
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-1114	Control Cable
	946-1113	Control Cable (Briggs)
43	946-04728	Drive Cable
44	747-05184A	Blade Control
45	720-04123A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	747-05183	Pivot Rod
48	731-07240	Wheel Dust Cover
49	731-07355	Spring Body
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	731-07789	Lower Tray
52	954-04259A	V-Belt
53	710-04744†	Screw, #12-16 x 1.00
54	931-04474†	Engine Shroud

† If Equipped

 Model Series A2X

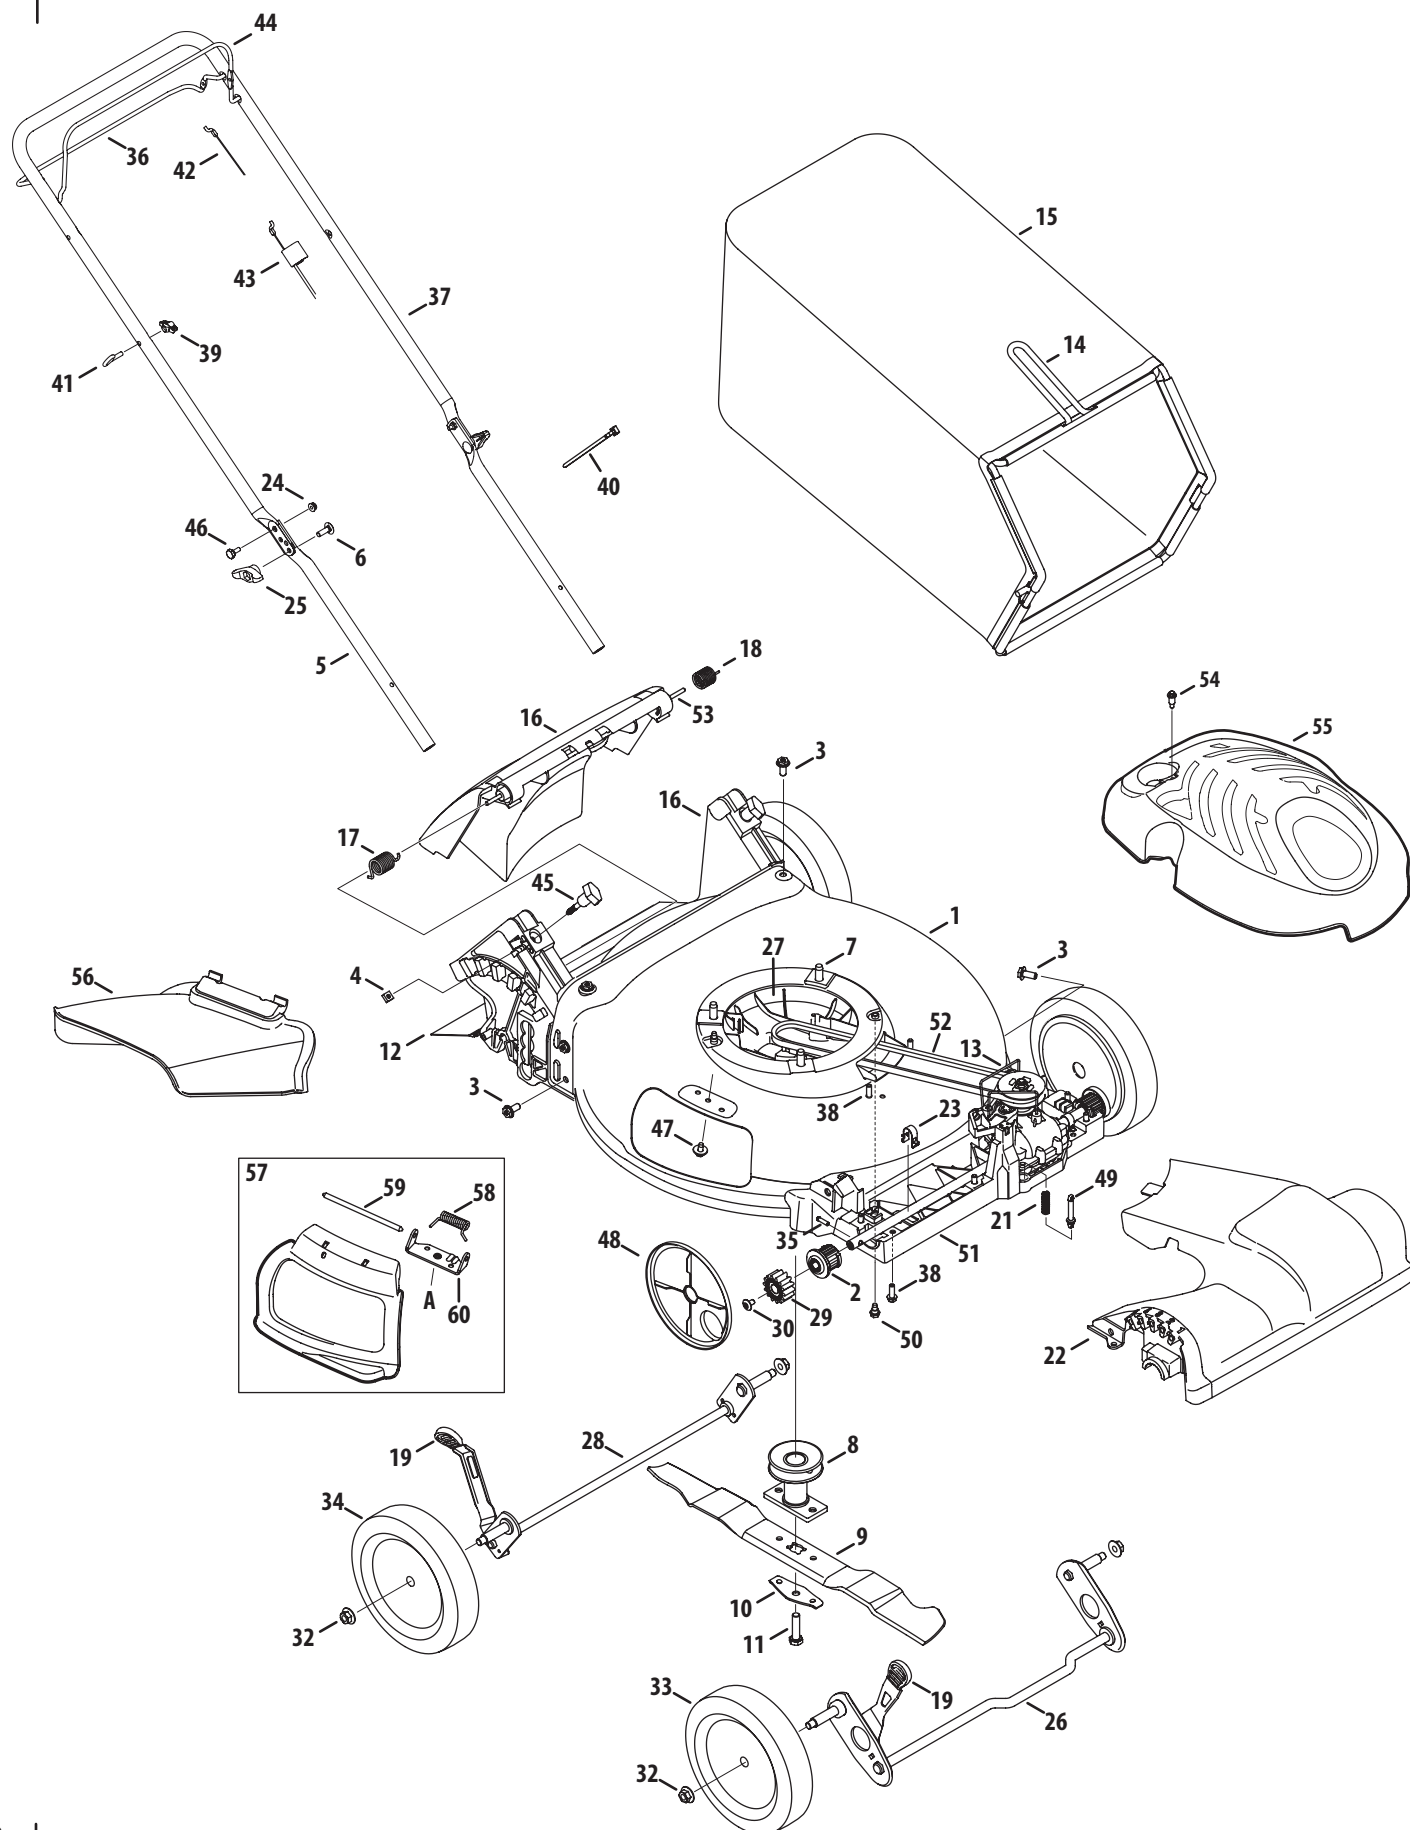


Ref No.	Part Number	Description
1	787-01871	Deck , 21"
2	641-00019	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02539	Blade Adapter
	687-02538	Blade Adapter (Kohler)
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	732-04675A	Transmission Wire
14	747-05226	Grass Catcher Frame
15	764-04077A	Grass Bag
16	631-04369	Rear Discharge Door Assembly
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04131A	Adjustment Lever Knob
20	710-05073	Screw, 1/4-20 x .500
21	732-04704	Compression Spring
22	731-07797	Front Cover
23	787-01793	Front Axle Clip
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04122	Wing Knob
26	911-04150	Front Axle Assembly
27	931-04535	Engine Baffle
28	911-04142	Rear Axle Assembly
29	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
30	710-04531	Screw, 1/4-20 x .390

Ref No.	Part Number	Description
31	918-04881A	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04581	Front Wheel
34	734-04563	Rear Wheel
35	715-04099	Dowel Pin
36	747-05210A	Drive Control
37	749-04680	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-1114	Control Cable
	946-1113	Control Cable (Kohler)
43	946-04728	Drive Cable
44	747-05184A	Blade Control
45	720-04123A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	710-05073	Screw, 1/4-20 x .500
48	731-07240	Wheel Dust Cover
49	731-07355	Spring Body
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	731-07789	Lower Tray
52	954-04259A	V-Belt
53	747-05183	Pivot Rod
54	710-04744†	Screw, #12-16 x 1.00
55	931-04437†	Engine Shroud
56	731-07486	Side Discharge Chute
57	987-02516	Mulch Plug (Incl. 58-60)
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket

† If Equipped

 Model Series B2X

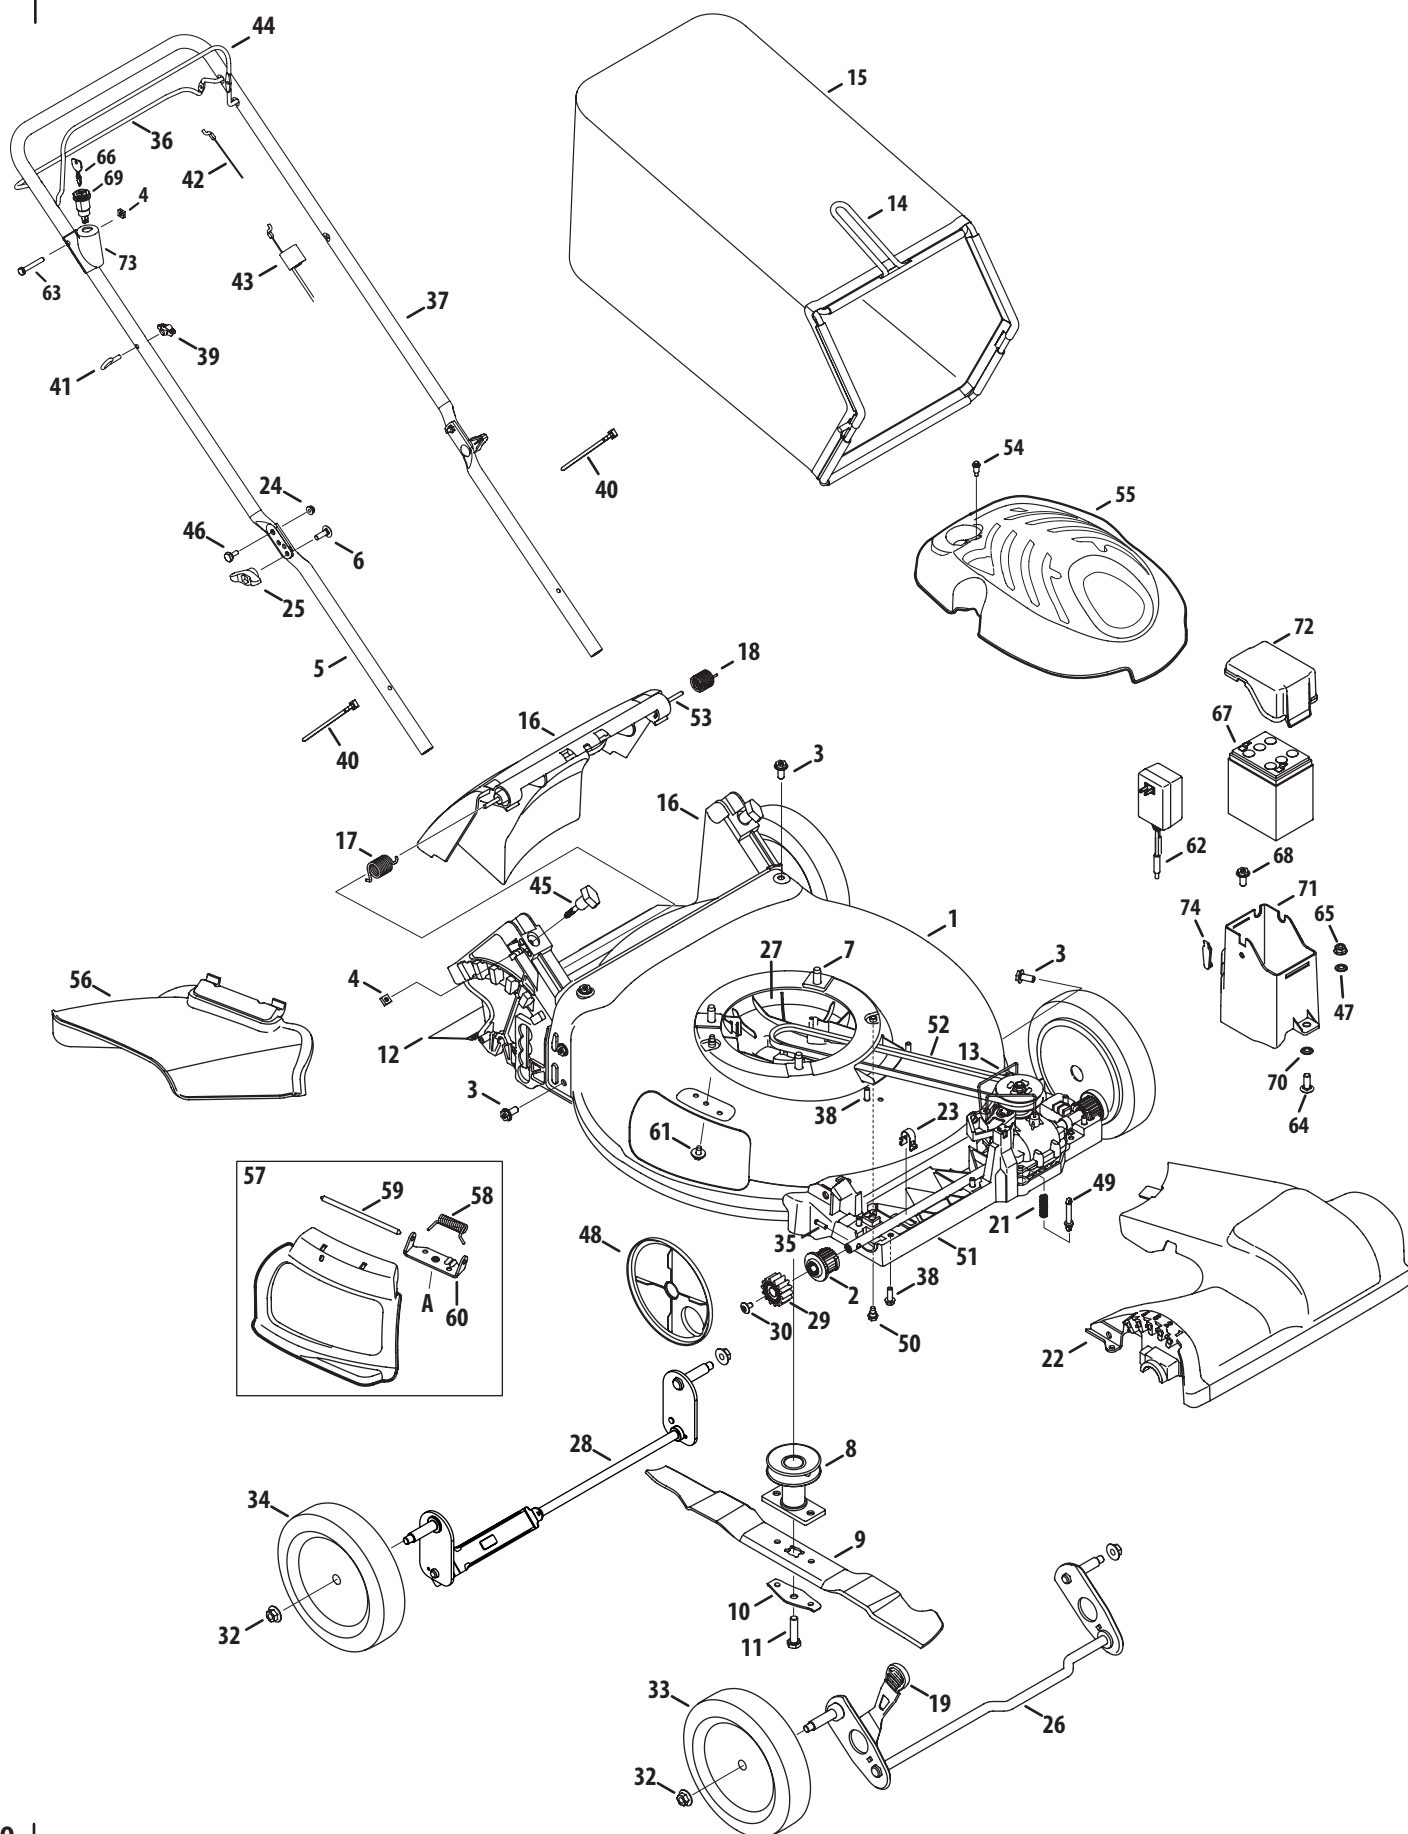


Ref No.	Part Number	Description
1	787-01873	Deck, 21"
	787-01871	Deck, 21" (Honda & Briggs)
2	941-00019	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw, 5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02539	Blade Adapter
	687-02538	Blade Adapter (Honda & Briggs)
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	732-04675A	Transmission Wire
14	747-05226	Grass Catcher Frame
15	764-04077A	Grass Bag
16	631-04369	Rear Discharge Door Assembly
	631-04567	Door Assembly International
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04131A	Adjustment Lever Knob
20	710-05073	Screw, 1/4-20 x .500
21	732-04704	Compression Spring
22	731-07797	Front Cover
23	787-01793	Front Axle Clip
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04122	Wing Knob
26	911-04150	Front Axle Assembly
27	931-04535	Engine Baffle
28	911-04142	Rear Axle Assembly
29	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
30	710-04531	Screw, 1/4-20 x .390
31	918-04881A	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04581	Front Wheel
34	634-04625	Rear Wheel
35	715-04099	Dowel Pin
36	747-05210A	Drive Control
37	749-04680	Upper Handle
	749-04681	Upper Handle International

Ref No.	Part Number	Description
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-1114	Control Cable
	946-1113	Control Cable (Honda & Briggs)
43	946-04728	Drive Cable
44	747-05184A	Blade Control
45	720-04123A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	736-0242†	Washer, Bell, .340 x .872 x .080
48	731-07240	Wheel Dust Cover
49	731-07355	Spring Body
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	731-07789	Lower Tray
52	954-04259A	V-Belt
53	747-05183	Pivot Rod
54	710-04744†	Screw, #12-16 x 1.00
55	931-04440†	Engine Shroud
56	731-07486	Side Discharge Chute
57	987-02516	Mulch Plug (Incl. 58-60)
	987-02584	Mulch Plug Ass'y International
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	725-04329†	Battery Charger
63	710-0136†	Screw, 1/4-20 x 1.75
64	710-0276†	Bolt, Carr., 5/16-18 x 1.00
65	912-0429†	Nut, Hexlk, 5/16-18
66	925-0201†	Key
67	725-04903†	Battery
68	738-04431†	Scr., Sldr., 5/16-14 x .972
69	725-05112†	Key Switch
70	726-0201†	Speed Nut
71	731-07135†	Battery Housing
72	731-07154†	Battery Housing Top
73	731-07155†	Electric Start Housing
74	735-04213A†	Lid Seal
—	725-05015†	Wire Harness (Not Shown)

† If Equipped

 Model Series V/GB2X

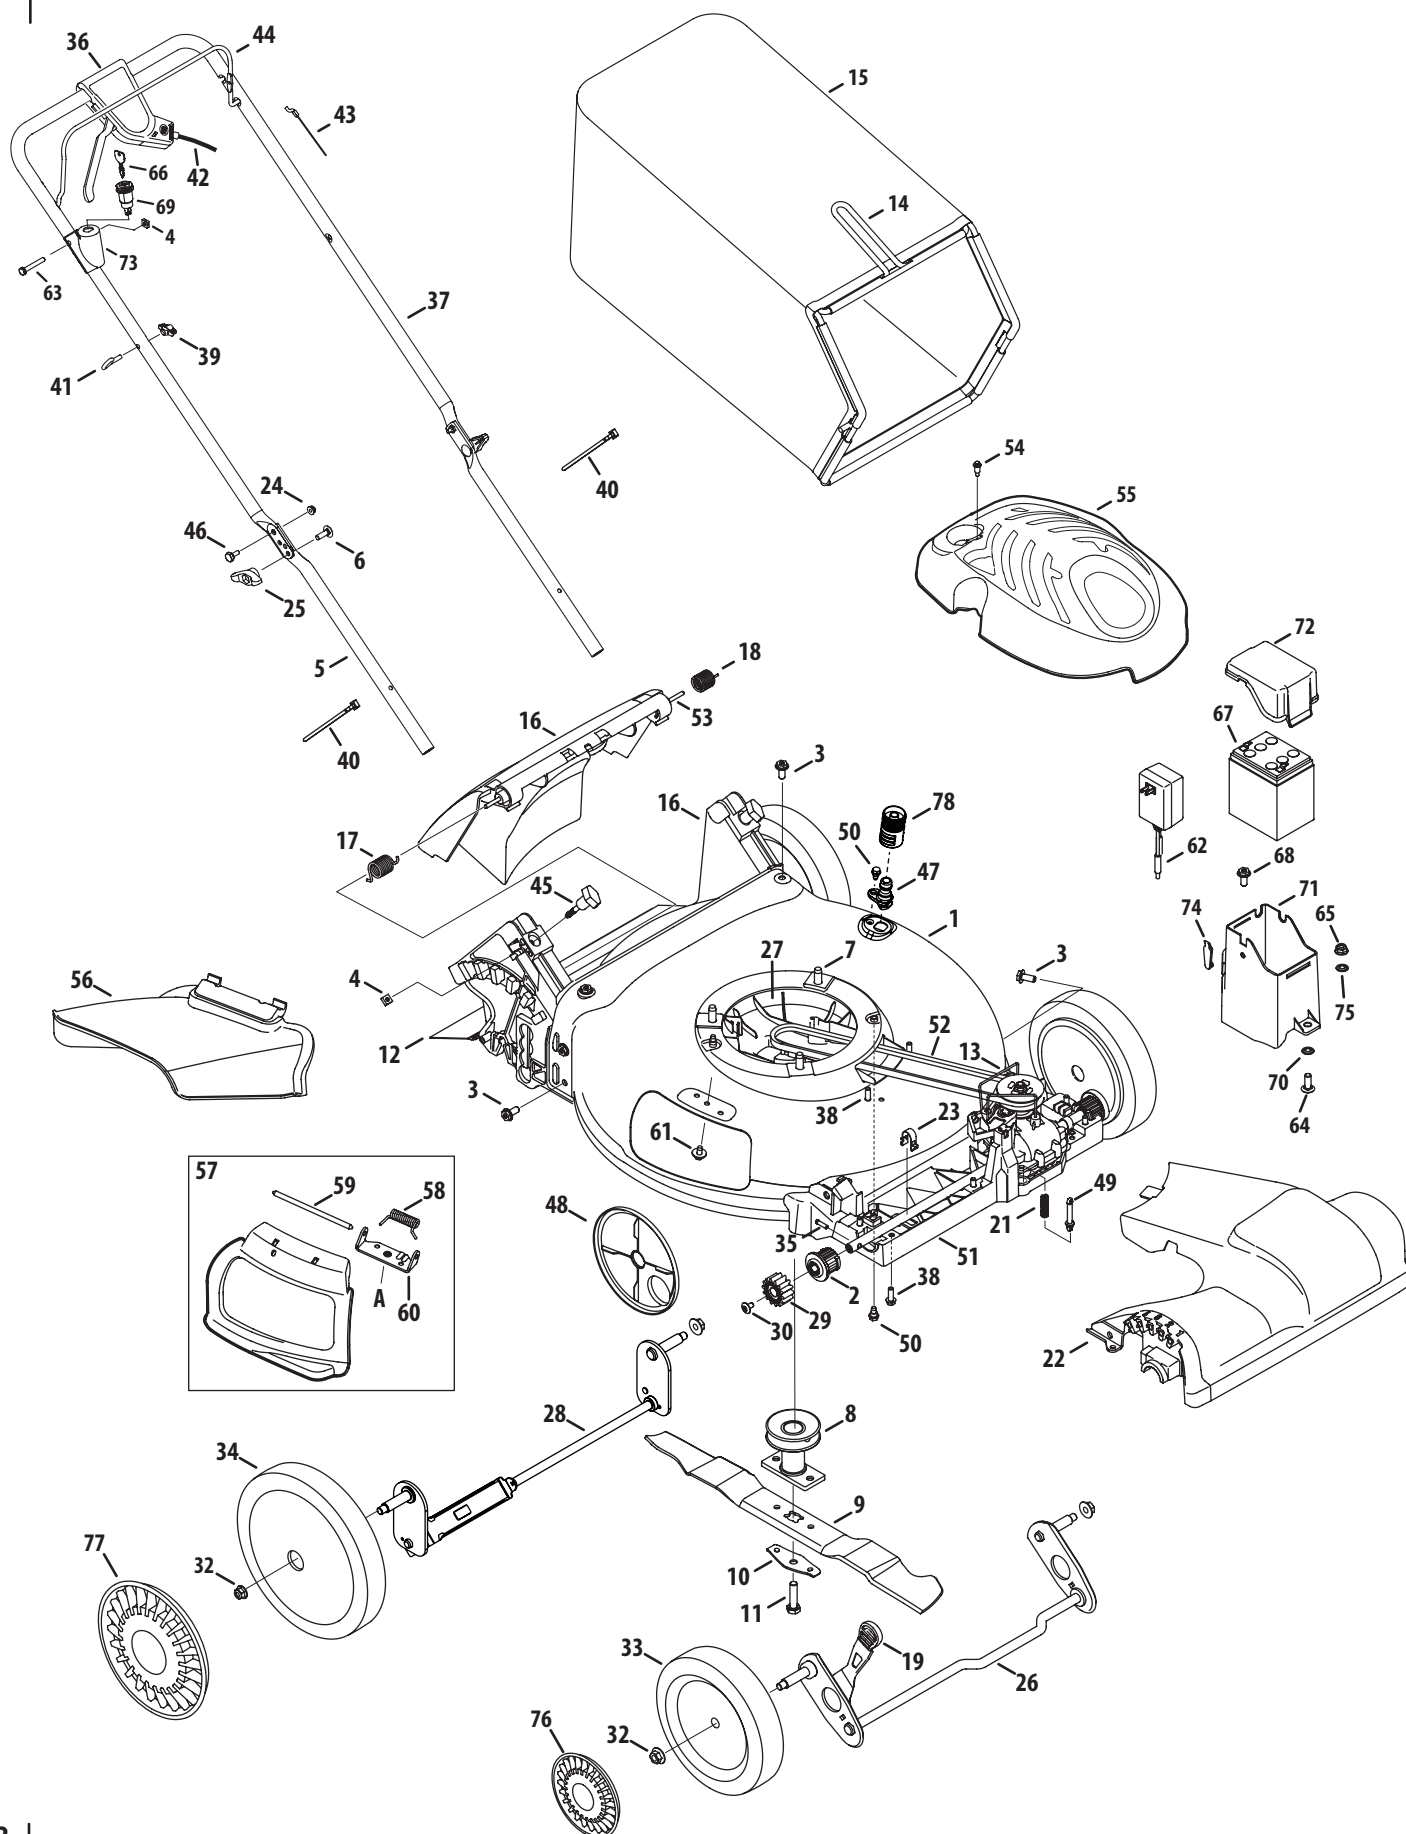

Ref No.	Part Number	Description
1	787-01871	Deck, 21"
	787-01872	Deck, 21" (Kolher)
2	941-00019	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw, 5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	987-02527	Blade Adapter
	687-02528	Blade Adapter (Kohler)
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	732-04675A	Transmission Wire
14	747-05226	Grass Catcher Frame
15	764-04082A	Grass Bag
	764-04077A	Grass Bag (Kohler)
16	631-04369	Rear Discharge Door Assembly
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04131A	Adjustment Lever Knob
20	710-05073	Screw, 1/4-20 x .500
21	732-04704	Compression Spring
22	731-07797	Front Cover
23	787-01793	Front Axle Clip
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04124	Wing Knob
	720-04122	Wing Knob (Kohler)
26	911-04150	Front Axle Assembly
27	931-04535	Engine Baffle
28	911-04142	Rear Axle Assembly
29	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
30	710-04531	Screw, 1/4-20 x .390
31	918-04881A	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-2042A	Front Wheel
34	634-04630	Rear Wheel

Ref No.	Part Number	Description
35	715-04099	Dowel Pin
36	753-06060	Control Lever Assembly
37	749-04679	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-04655A	Drive Cable
43	746-04479	Control Cable
	946-1130	Control Cable (Kohler)
44	747-05209A	Blade Control
45	720-04127A	Wing Nut
	720-04123A	Wing Nut (Kohler)
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	731-07487	Water Nozzle
48	731-07240	Wheel Dust Cover
49	731-07355	Spring Body
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	731-07789	Lower Tray
52	954-04260	V-Belt
53	747-05183	Pivot Rod
54	710-04744†	Screw, #12-16 x 1.00
55	931-04471†	Engine Shroud, Oyster Gray
	631-04562†	Engine Shroud, Black
56	731-07486	Side Discharge Chute
	731-07131	Side Discharge Chute (Kohler)
57	987-02516	Mulch Plug (Incl. 58-60)
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	725-04329†	Battery Charger
63	710-0136†	Screw, 1/4-20 x 1.75
64	710-0276†	Bolt, Carr., 5/16-18 x 1.00
65	912-0429†	Nut, Hexlk, 5/16-18
66	925-0201†	Key
67	725-04903†	Battery
68	738-04431†	Scr., Sldr., 5/16-14 x .972
69	725-05112†	Key Switch

† If Equipped


Continued on next page

Model V/GB2X

Ref No.	Part Number	Description
70	726-0201†	Speed Nut
71	731-07135†	Battery Housing
72	731-07154†	Battery Housing Top
73	731-07155†	Electric Start Housing
74	735-04213A†	Lid Seal
75	736-0242†	Washer, Bell, .340 x .872 x .080
76	731-07001	Hubcap, Grey
	731-07049	Hubcap, Yellow
77	731-07875	Hubcap, 11", Grey
	731-07876	Hubcap, 11", Yellow
78	921-04041	Water Nozzle Adapter
—	725-05015†	Wire Harness (Not Shown)

Page Left Blank Intentionally

 
Model Series D3X

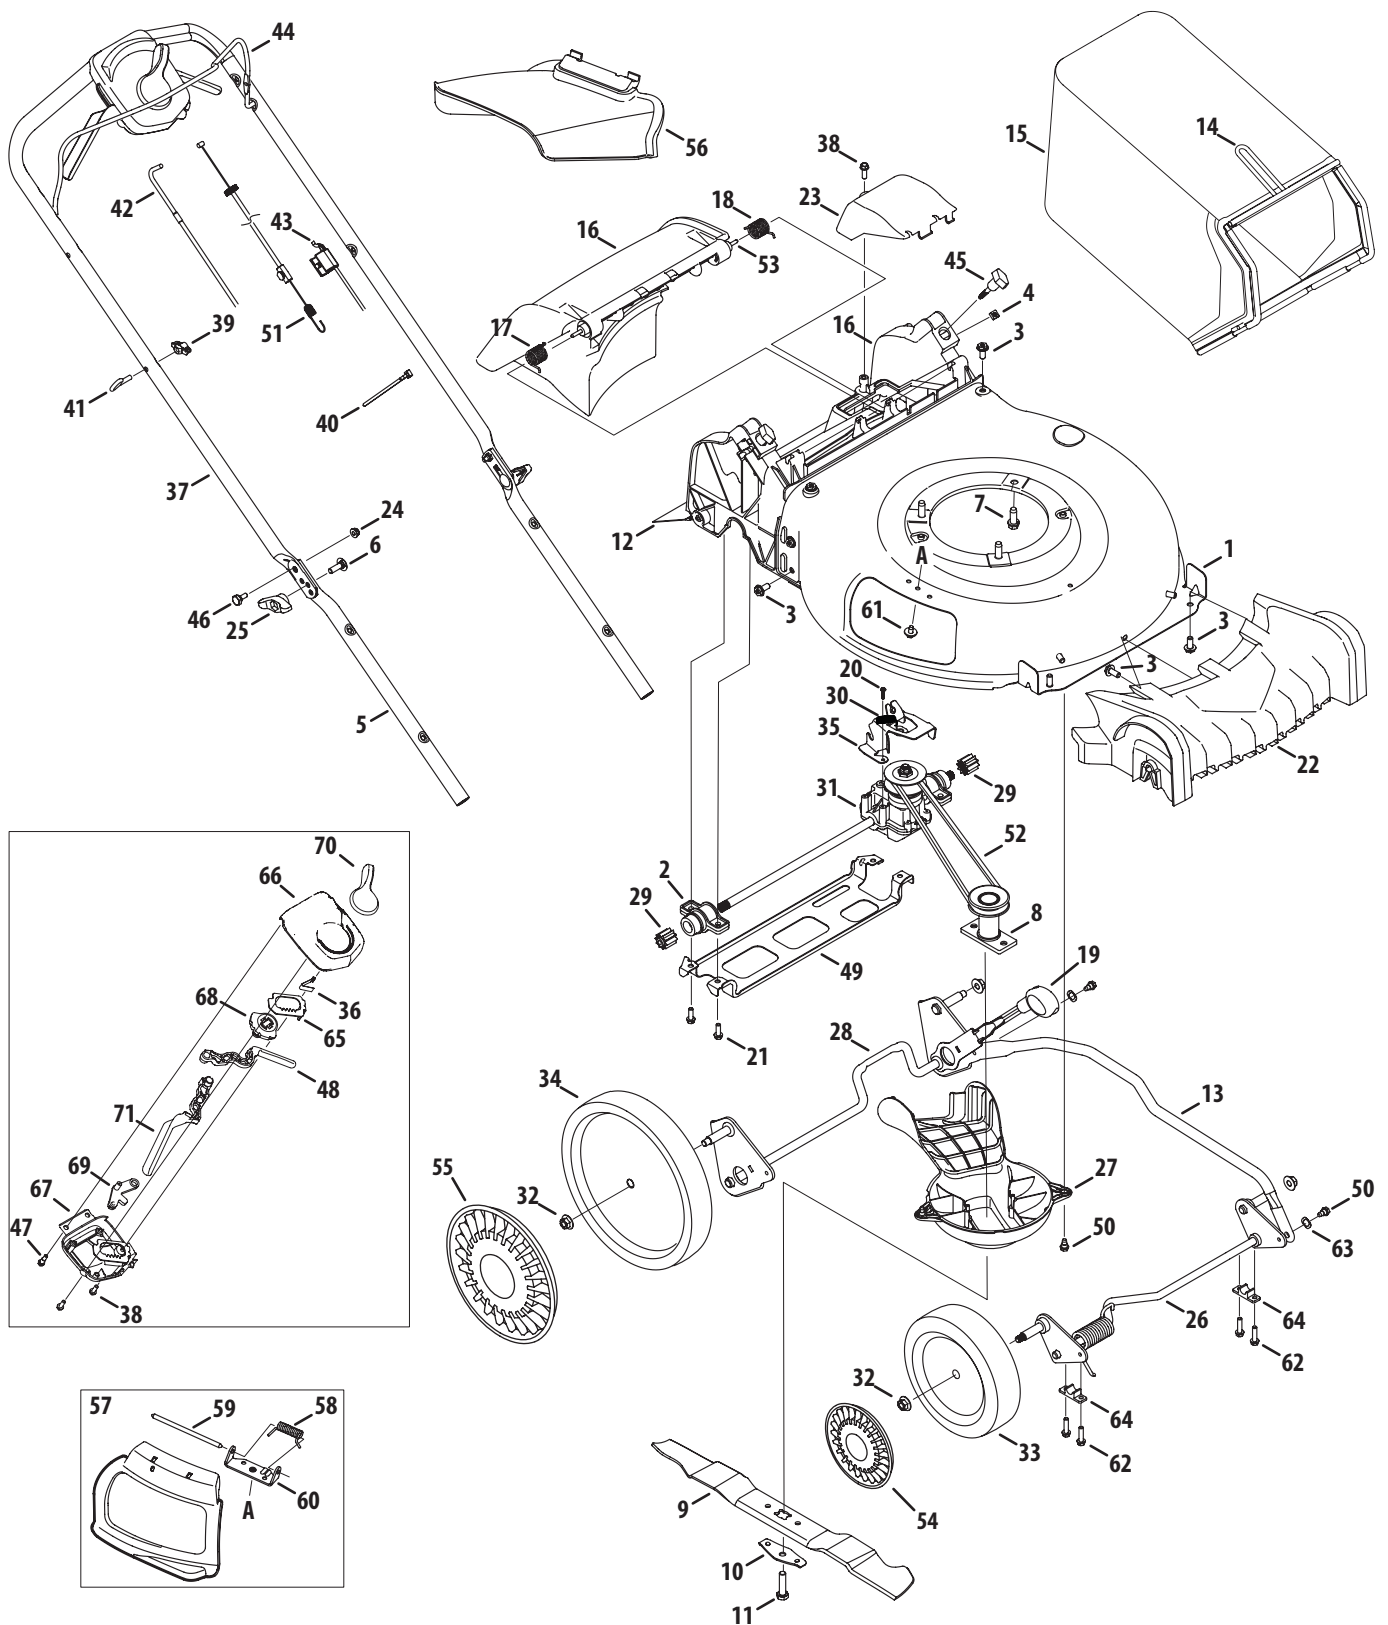

Ref No.	Part Number	Description
1	787-01869	Deck , 21"
2	631-04501	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02220	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	749-04705	Cross Bracket
14	747-05362	Grass Catcher Frame
15	764-04097	Grass Bag
	964-04151	Grass Bag (Yardman)
16	631-04553	Rear Discharge Door Assembly
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04096	Adjustment Lever Knob
20	710-04329	Torx Screw
21	710-04774	Screw, 1/4-15 x 1.25
22	731-08057	Front Cover
23	731-07799	Transmission Cover
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04124	Wing Knob, Red
	720-04122	Wing Knob, Black
26	911-04191	Front Axle Assembly
27	631-04512	Engine Baffle
28	911-04192	Rear Axle Assembly
29	917-04849	Spur Gear, 9T
30	732-04826	Exten. Spring, 2.405
31	918-04971	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04568	Front Wheel
34	634-04699	Rear Wheel
35	787-01868	Transmission Bracket

Ref No.	Part Number	Description
36	732-0627A	Spring
37	749-04701	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-04726	Drive Cable
43	946-04670	Control Cable
44	747-05330	Blade Control
45	720-04127A	Wing Nut, Red
	720-04123A	Wing Nut, Black
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	710-05204	Scr., Shldr, 1/4-15 x .970
48	731-08155	Control Lever LH
49	787-01915	Rear Support Bracket
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	946-04729	Speed Adjustment Cable
52	954-04282	V-Belt
53	747-05183	Pivot Rod
54	731-07001	Hubcap, Grey
55	731-07875	Hubcap, 11", Grey
56	731-07486	Side Discharge Chute
57	987-02516	Mulch Plug (Incl. 58-60)
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	710-1241	Screw, 1/4-15 x 1.000
63	736-04413	Wash., Wave, .385 ID x .598 OD
64	741-0492A	Bushing, Lock, .505 Dia. X .62
65	787-01851	Cable Adjust Plate
66	731-07763	Upper Housing
67	731-07764	Lower Housing
68	731-07804	Speed Adjust Actuator
69	731-07852	Drive Cable Actuator
70	731-08153	Speed Select Lever
71	731-08154	Control Lever RH

 Model Series 860

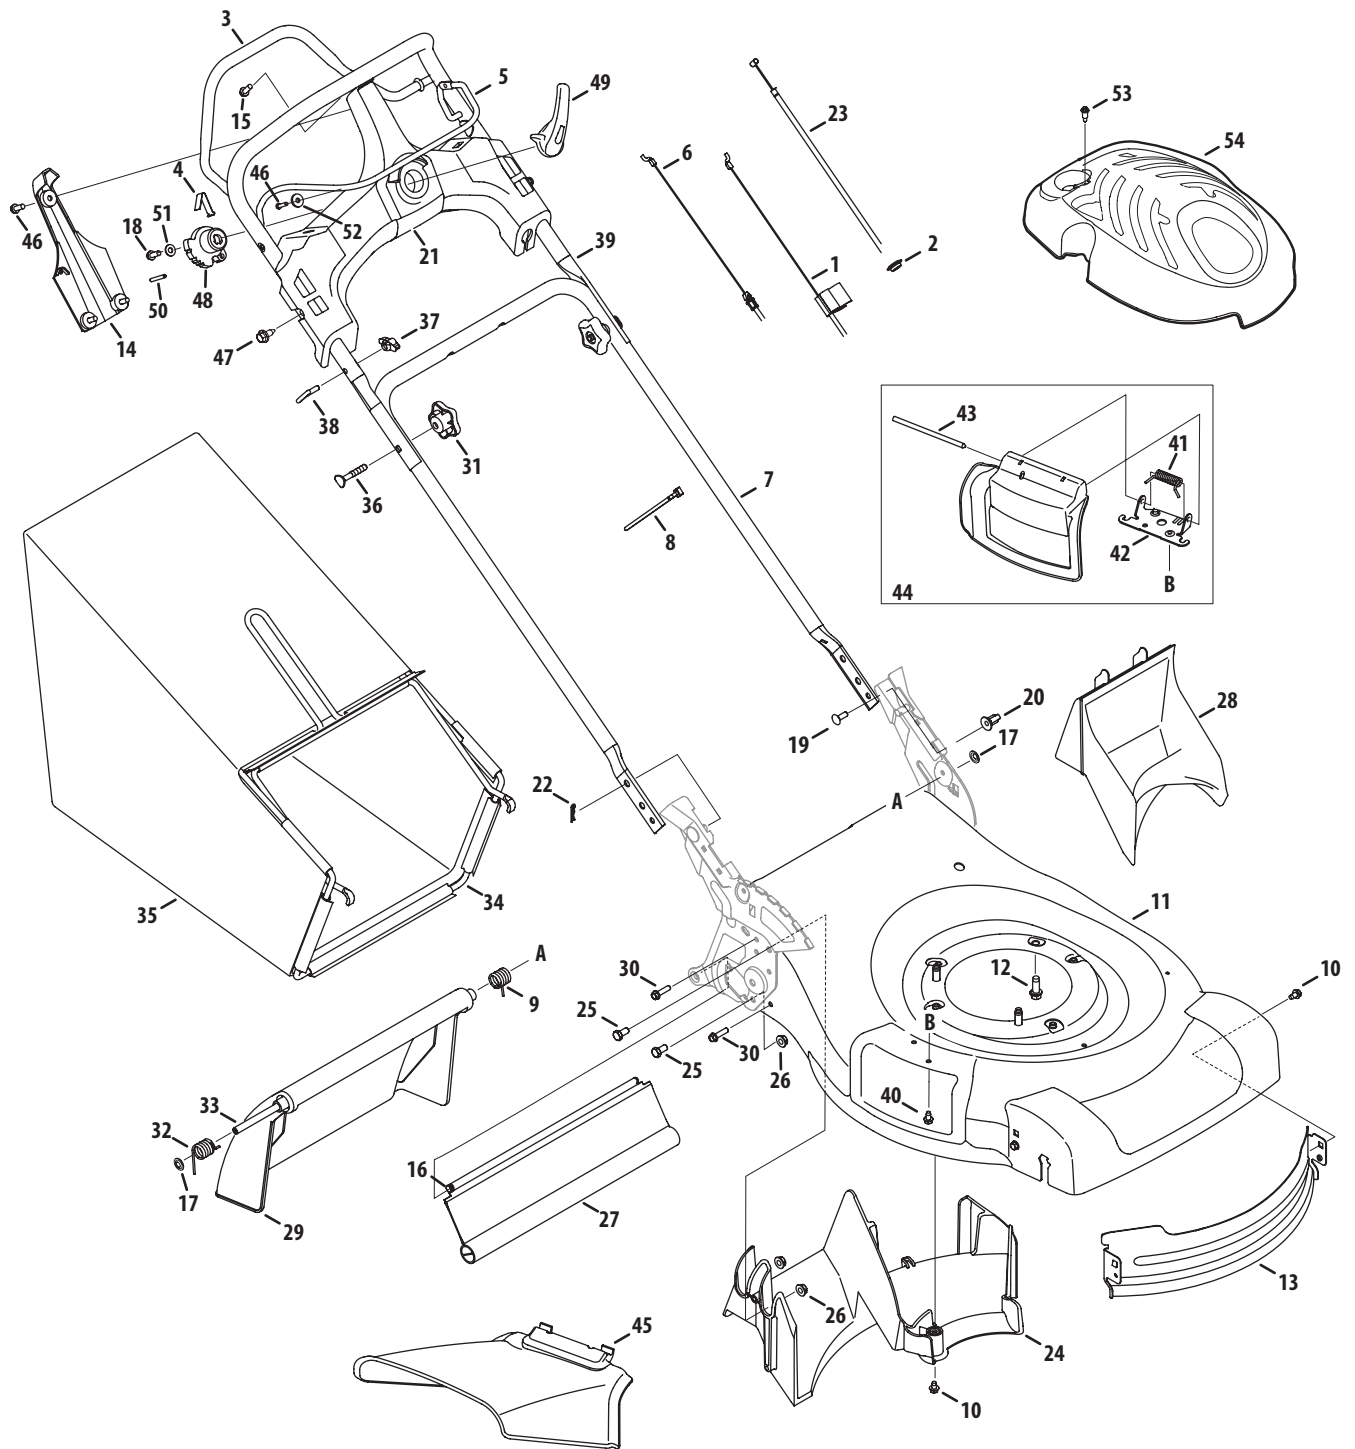


Ref No.	Part Number	Description
1	946-04440	Drive Cable
2	735-04059	Rubber Grommet
3	747-04994A	Drive Control
4	732-04516	Shift Spring
5	747-04995	Blade Control
6	746-04694	Control Cable
	746-04678	Control Cable (Kaw.)
7	749-04557	Lower Handle
8	725-0157	Cable Tie
9	732-04535	Torsion Spring, LH
10	710-0599	TT Screw, 1/4-20 x .500
11	787-01618	21-inch Deck
12	710-0654A	TT Screw, 3/8-16 x 1.00
13	987-01790	Front Deck Baffle
14	731-06304	Variable Spd. Cont. Panel Cover
15	710-0642	Screw, TT, 1/4-20 x .750
16	710-0779A	Screw, #10-16 x .500
17	726-0201	Nut, Speed
18	710-0895	Screw, 1/4-15 x .750
19	710-0703	Carriage Bolt, 1/4-20
20	912-0397	Wing Nut
21	631-04323	Variable Speed Control Panel
22	914-0104	Cotter Pin
23	946-04439A	Variable Speed Cable
24	731-06173	Rear Baffle
25	710-3025	Screw, 5/16-18 x .625
26	712-04063	Flange Lock Nut, 5/16-18
27	731-05462A	Trail shield

Ref No.	Part Number	Description
28	731-05157	Mulch Plug
29	731-05702A	Rear Door
30	710-1241	Screw, 1/4-15 x 1.00
31	720-04072A	Star Knob
32	732-04534	Torsion Spring, RH
33	747-05034	Door Rod
34	647-04051B	Grass Catcher Frame
35	664-04161	Grass Catcher
36	710-1174	Carriage Bolt, 5/16-18 x 2.00
37	720-0279	Wing Nut
38	710-1205	Eye Bolt
39	749-04607	Upper Handle
40	710-05073	Screw, 1/4-20 x .500
41	732-1014C	Torsion Spring
42	17032A	Chute Deflector Adapter
43	747-0710A	Hinge Pin
44	987-02055	Mulch Plug Assembly
45	731-04177	Side Discharge Chute
46	710-04373A	Screw, #12-16 x .75
47	710-0896	Screw, AB, 1/4-14 x .625
48	731-06189	4 Speed Actuator
49	731-06193A	Speed Selector Level
50	715-04073	Dowel Pin
51	936-0275	Washer, Flat, .344 x .688 x .065
52	736-3000	Washer, Flat, .250 x .750 x .119
53	710-04744†	Screw, #12-16 x 1.00
54	931-04440†	Engine Shroud

† If Equipped

 
Model Series 860

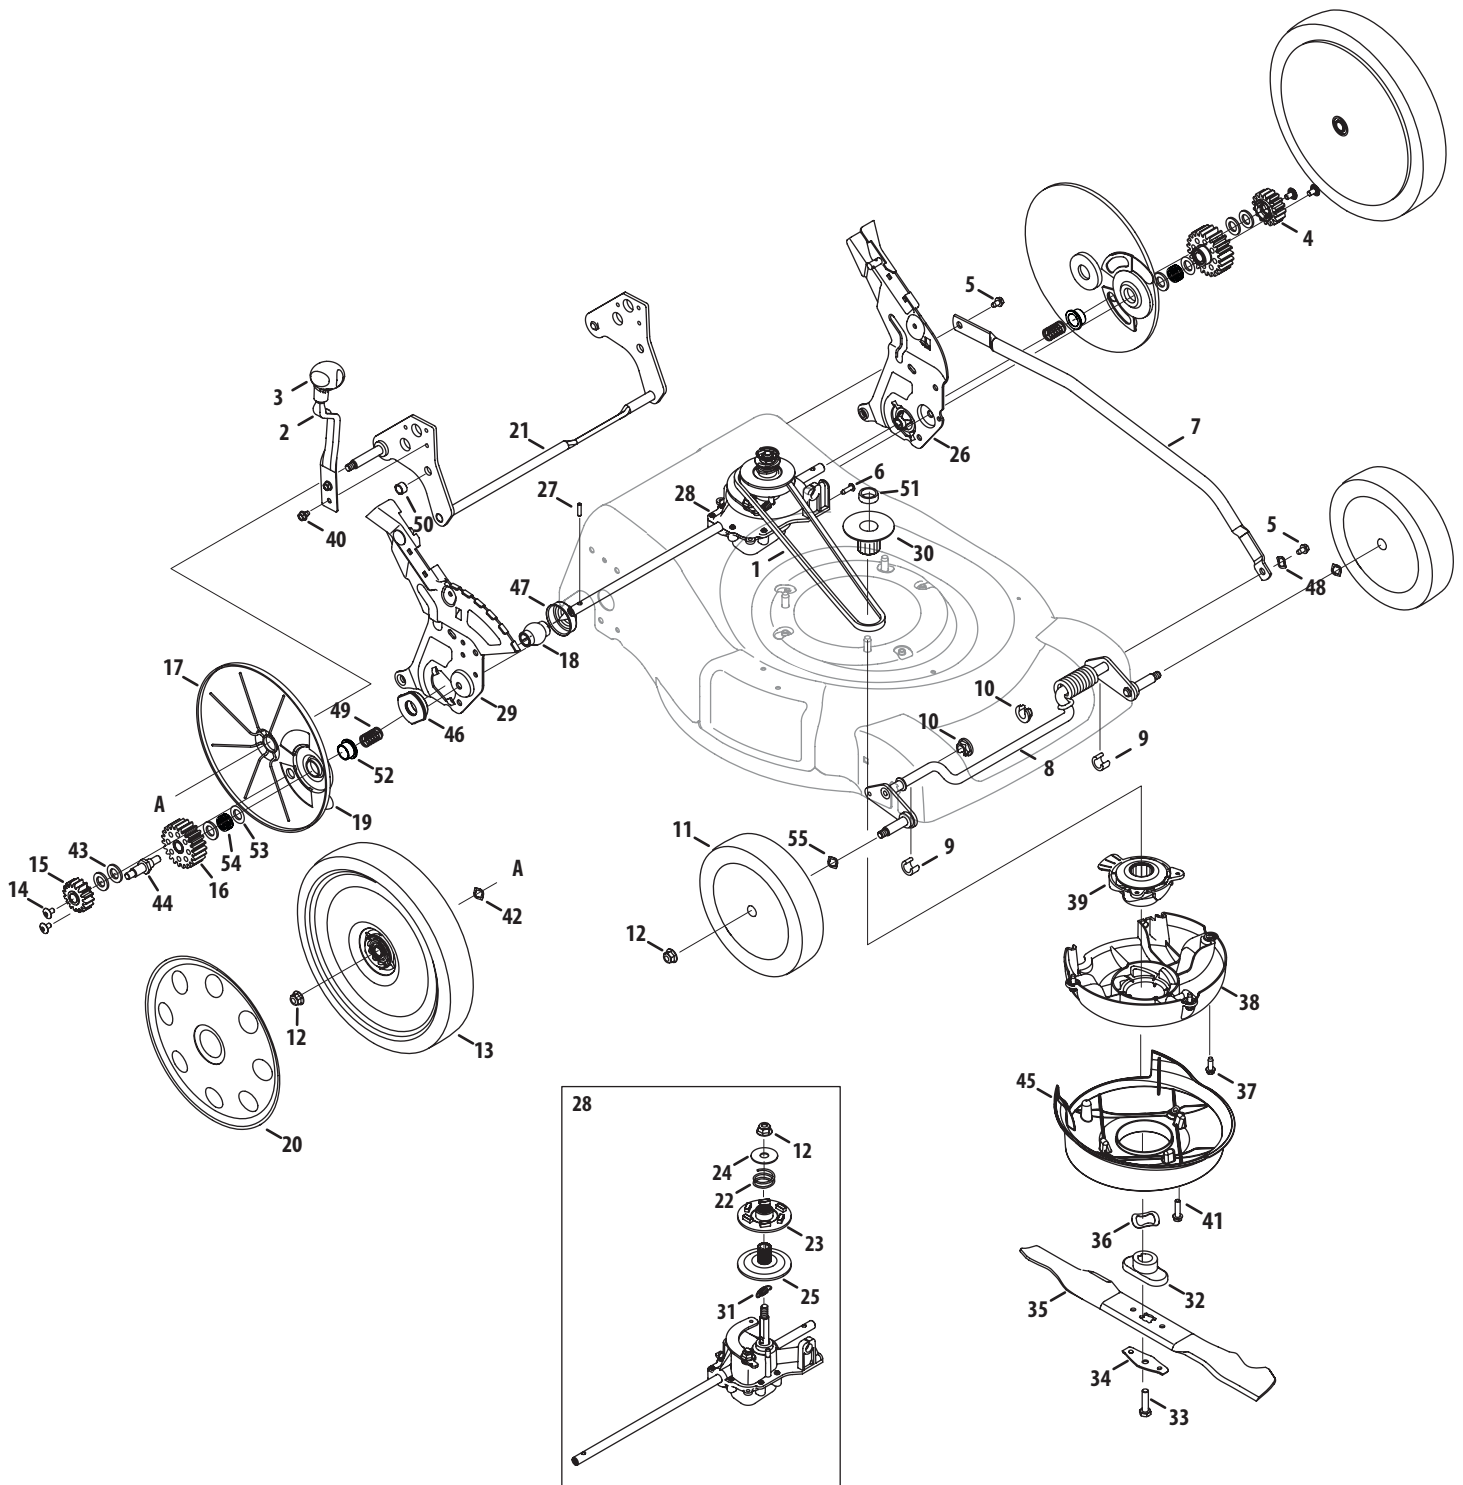

Ref No.	Part Number	Description
1	954-04176A	V-Belt
2	732-04480A	Spring Lever
3	720-04096	Height Adjuster Knob
4	917-04577A	Spur Gear, 16T - LH
5	738-04278	Shldr. Screw, 1/4-20 x 0.50
6	710-0895	Screw, 1/4-15 x .750
7	749-04414B	Cross Bracket
8	687-02367B	Front Bracket Assembly
9	731-05470	Clip Spacer
10	741-04136B	Split Hex Flange Bearing
11	734-04033	Front Wheel
12	712-04065	Flange Lock Nut, 3/8-16
13	934-04404	Rear Wheel
14	710-04531	Screw, 1/4-20 x .39
15	917-04578A	Spur Gear, 16T - RH
16	917-04678	Gear, Spur, 23T
17	731-06145C	Wheel Dust Cover
18	741-0604A	Bearing Sleeve
19	787-01645A	Dust Cover Seal Plate
20	731-06146	Hub Cap
21	687-02390	Rear Bracket Assembly
22	732-04630	Compression Spring
23	756-04316A	Upper Pulley
24	936-0406	Flat Washer, .442 x 1.38 x .060
25	756-04317A	Lower Pulley
26	987-02503	Handle Bracket Assembly LH (Includes Ref. #'s 18, 46, & 47)
27	915-0221	Dowel Pin
28	918-04826A	Transmission Assembly

Ref No.	Part Number	Description
29	987-02537	Handle Bracket Assembly RH (Includes Ref. #'s 18, 46, & 47)
30	756-04315A	Pulley, Half
31	732-04313	Extension Spring
32	748-0376E	Blade Adapter
33	710-1044	Screw, 3/8-24 x 1.50
34	736-0524B	Blade Bell Support
35	942-0741A	21" Mulching Blade
36	936-0526	Washer, Wave, 1.38 x .88 x .029
37	710-0599	TT Screw, 1/4-20 x .500
38	731-06112A	Engine Baffle
39	956-04046	Lower Pulley Assembly
40	710-0653	Screw, TT, 1/4-20 x .375
41	710-04774	Screw, 1/4-15 x 1.25
42	736-0182	Washer, Sprg, .500 x 1.00 x .022
43	936-0272	Washer, Flat, .510 x 1.00 x .060
44	711-05040	Shf., .500 Dia.
45	731-06284	Baffle
46	748-04177	Bearing Support
47	732-0708	Bearing Retainer
48	936-0286	Wshr, Wave, .390 ID x .750 OD
49	732-04557	Sprg, Comp., .63 OD x 1.00 Lg.
50	750-05061	Spacer, .690 x .870 x .150
51	750-05022	Spcr., 7/8 x 1.265 x .27 Lg.
	750-05009	Spcr., 7/8 x 1.125 x .305 Lg. (Kaw.)
52	750-05250	Spcr., Flg., .51 ID x .58 OD
53	936-0369	Washer, Flat, .508 x 1.00 x .020
54	732-04650	Spr, Wave
55	936-0504	Wshr, Wave, .510 x .750 x .017

 
Model Series 980

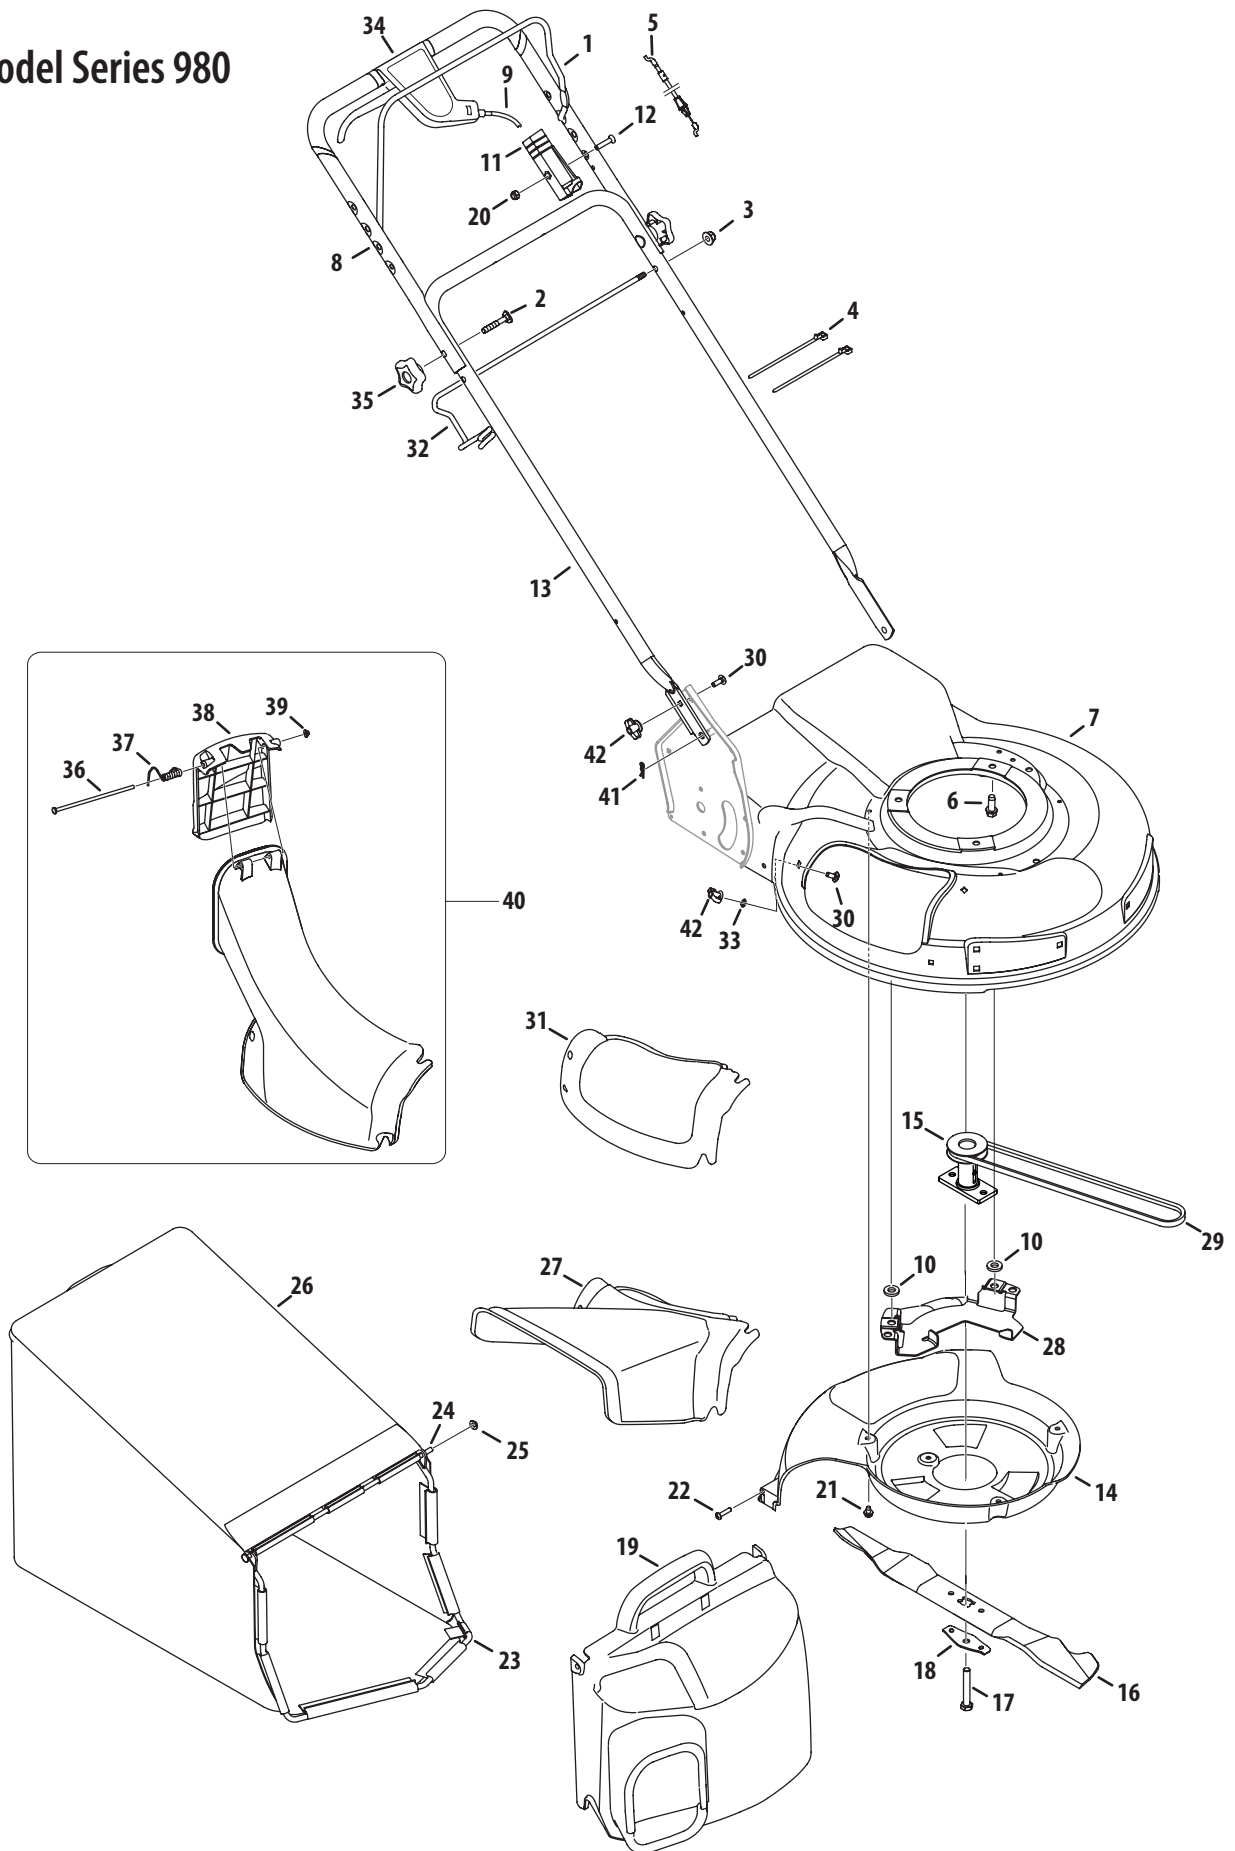

Ref No.	Part Number	Description
1	747-0824	Blade Control
2	710-1174	Carriage Bolt 5/16-18 x 2
3	712-04063	Flange Lock Nut, 5/16-18
4	926-0240	Cable Tie
5	946-0557	Control Cable
6	710-0654A	TT Screw, 3/8-16 x 1.00
7	787-01948	21-inch Deck
8	749-0439E	Upper Handle
9	946-0711B	Drive Cable
10	736-3010	Washer, Flat, .407 x .812 x .135
11	746-0883	Control Cable Mount
12	710-1270	Screw, 1/4-20 x 1.310
13	749-0907B	Lower Handle
14	631-04564	Rear Baffle
15	987-02221	Blade Adapter
16	942-0741A	21-inch Mulching Blade
17	710-1257	HH Cap Screw, 3/8-24 x 2.50
18	736-0524B	Bell Blade Spacer
19	631-0071	Grass Bag Cover Assembly
20	712-0324	Hex Lock Nut 1/4-20
21	710-0653	TT Screw 1/4-20 x .375

Ref No.	Part Number	Description
22	710-0895	HL Screw 1/4-15 x .75
23	747-0937	Grass Bag Frame
24	747-0939	Grass Bag Pivot Rod
25	926-0106	Cap Speed Nut
26	964-0076A	Grass Bag Assembly
27	731-1832	Side Discharge Chute
28	782-9063A	Belt Keeper
29	954-0460	V-Belt
30	710-0703	Carriage Screw 1/4-20 x .75
31	931-1833A	Mulch Cover
32	747-0940A	Grass Bag Support Rod
33	726-0233	Push Nut
34	753-06060	Drive Control Assembly
35	720-04072A	Star Knob
36	747-0965	Chute Door Pivot Rod
37	732-0819	Torsion Spring
38	731-1874A	Top Discharge Door Chute
39	726-0111	Push Cap
40	931-0066	Top Discharge Chute Assembly
41	914-0104	Cotter Pin
42	912-0397	Wing Nut

 
Model Series 980

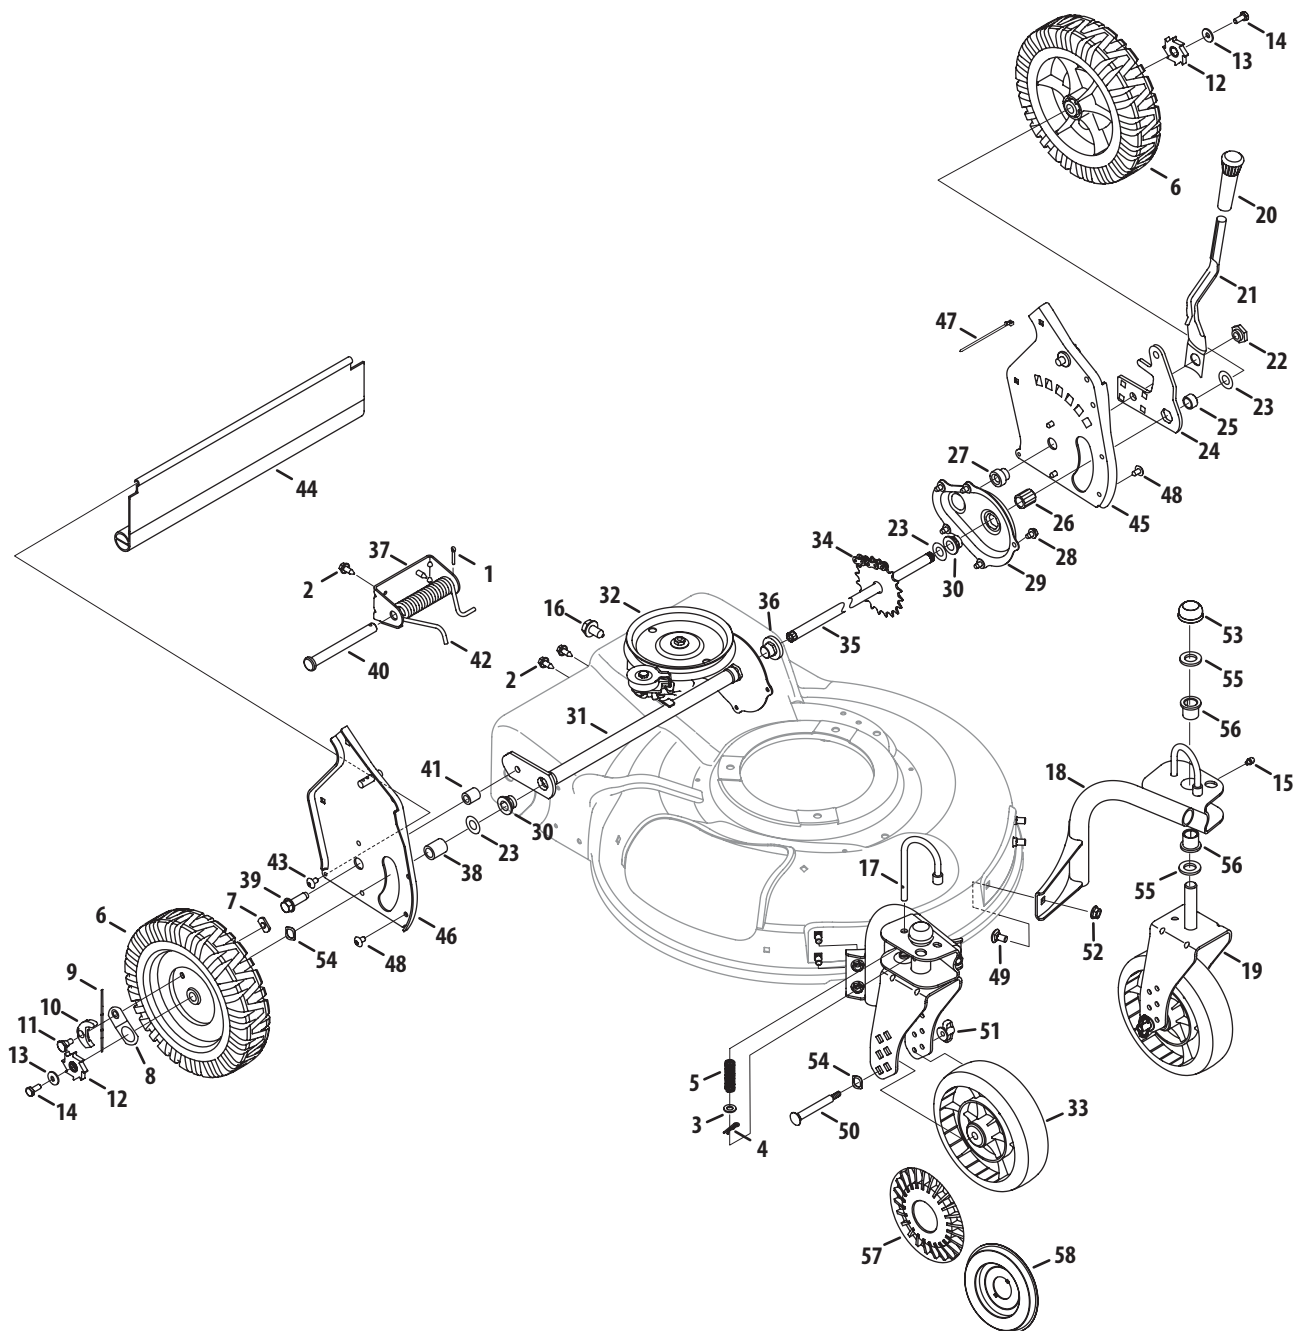

Ref No.	Part Number	Description
1	914-0474	Cotter Pin
2	710-1652	Screw 1/4-14 x .825
3	936-0264	Flat Washer.330 ID x.630 OD
4	914-0104	Cotter Pin
5	932-0306A	Compression Spring
6	734-2044A	Wheel, 9 x 2.125
7	912-0414	Top Lock Tab Weld Nut 1/4-20
8	16855	Ratchet Pawl Plate
9	10622BP	Plastic Spring Ratchet
10	748-0381	Pawl RH
	948-0188B	Pawl LH
11	938-0137A	Shlder Screw.340 ID x.285 OD
12	948-0318	Wheel Ratchet
13	736-0270	Bell Washer.265 ID x.75 OD
14	710-0751	Hex Cap Screw 1/4-20 x.620
15	737-04331	Grease Fitting
16	710-0604A	Screw, 5/16-18 x .625
17	747-0924	Wheel Pin Lock
18	682-9020A	Caster Assembly RH
	682-9021A	Caster Assembly LH
19	682-9024	Caster Bracket Assembly RH
	682-9026	Caster Bracket Assembly LH
20	720-0223	Grip
21	732-0803A	Spring Lever
22	938-0529	Shoulder Nut.825 x .165 Lg.
23	936-0369	Flat Washer .508 ID x 1.0 OD
24	782-0566B	Pivot Arm Assembly
25	750-0515	Spacer .510 ID x .70 OD
26	741-0978	Slv Bearing .504 ID x .830 OD
27	950-1056	Shlder Spacer, .385ID x .715Lg
28	710-0653	Tap Screw 1/4-20 x .375

Ref No.	Part Number	Description
29	682-7528	Chain Cover Assembly
30	741-0324A	Flge Bearing .506 ID x .590 Lg
31	682-7526	Transmission Axle Assembly
32	918-0263A	Transmission Ass'y Complete
33	734-1857	Wheel 7 x 2
34	913-0453	Chain
35	938-0012	Rear Axle Assembly
36	941-0522	Flge Bearing .506 ID x .715 Lg
37	782-0568	Height Adjustment Spring Brkt.
38	950-0151	Spacer .550 ID x .750 OD
39	710-1315	Screw 3/8-16 x .25
40	911-0835	Clevis Pin .50 Dia x 4.82 Lg.
41	750-0807	Spacer .385 ID x .624 OD
42	732-0832	Torsion Spring
43	710-0779A	AB Screw, #10-16 x .500
44	731-06874	Trail Shield
45	687-02495	Handle Bracket Assembly - LH
46	687-02494	Handle Bracket Assembly - RH
47	725-0157	Cable Tie
48	710-1348	Screw 1/4-14 x.500
49	710-0260A	Carriage Bolt 5/16-18 x.62
50	911-1146	Caster Axle
51	912-0397	Wing Nut
52	712-04063	Flange Lock Nut 5/16-18
53	726-0214	Push Cap
54	936-0504	Wave Washer.510 ID x.750 OD
55	736-0366	Flat Washer.640 ID x 1.12 OD
56	741-0685	Flange Bearing
57	731-1887	Hubcap - Spoke w/ Hole
58	731-0981C	Hubcap - Radial Spoke

 
Model TB210

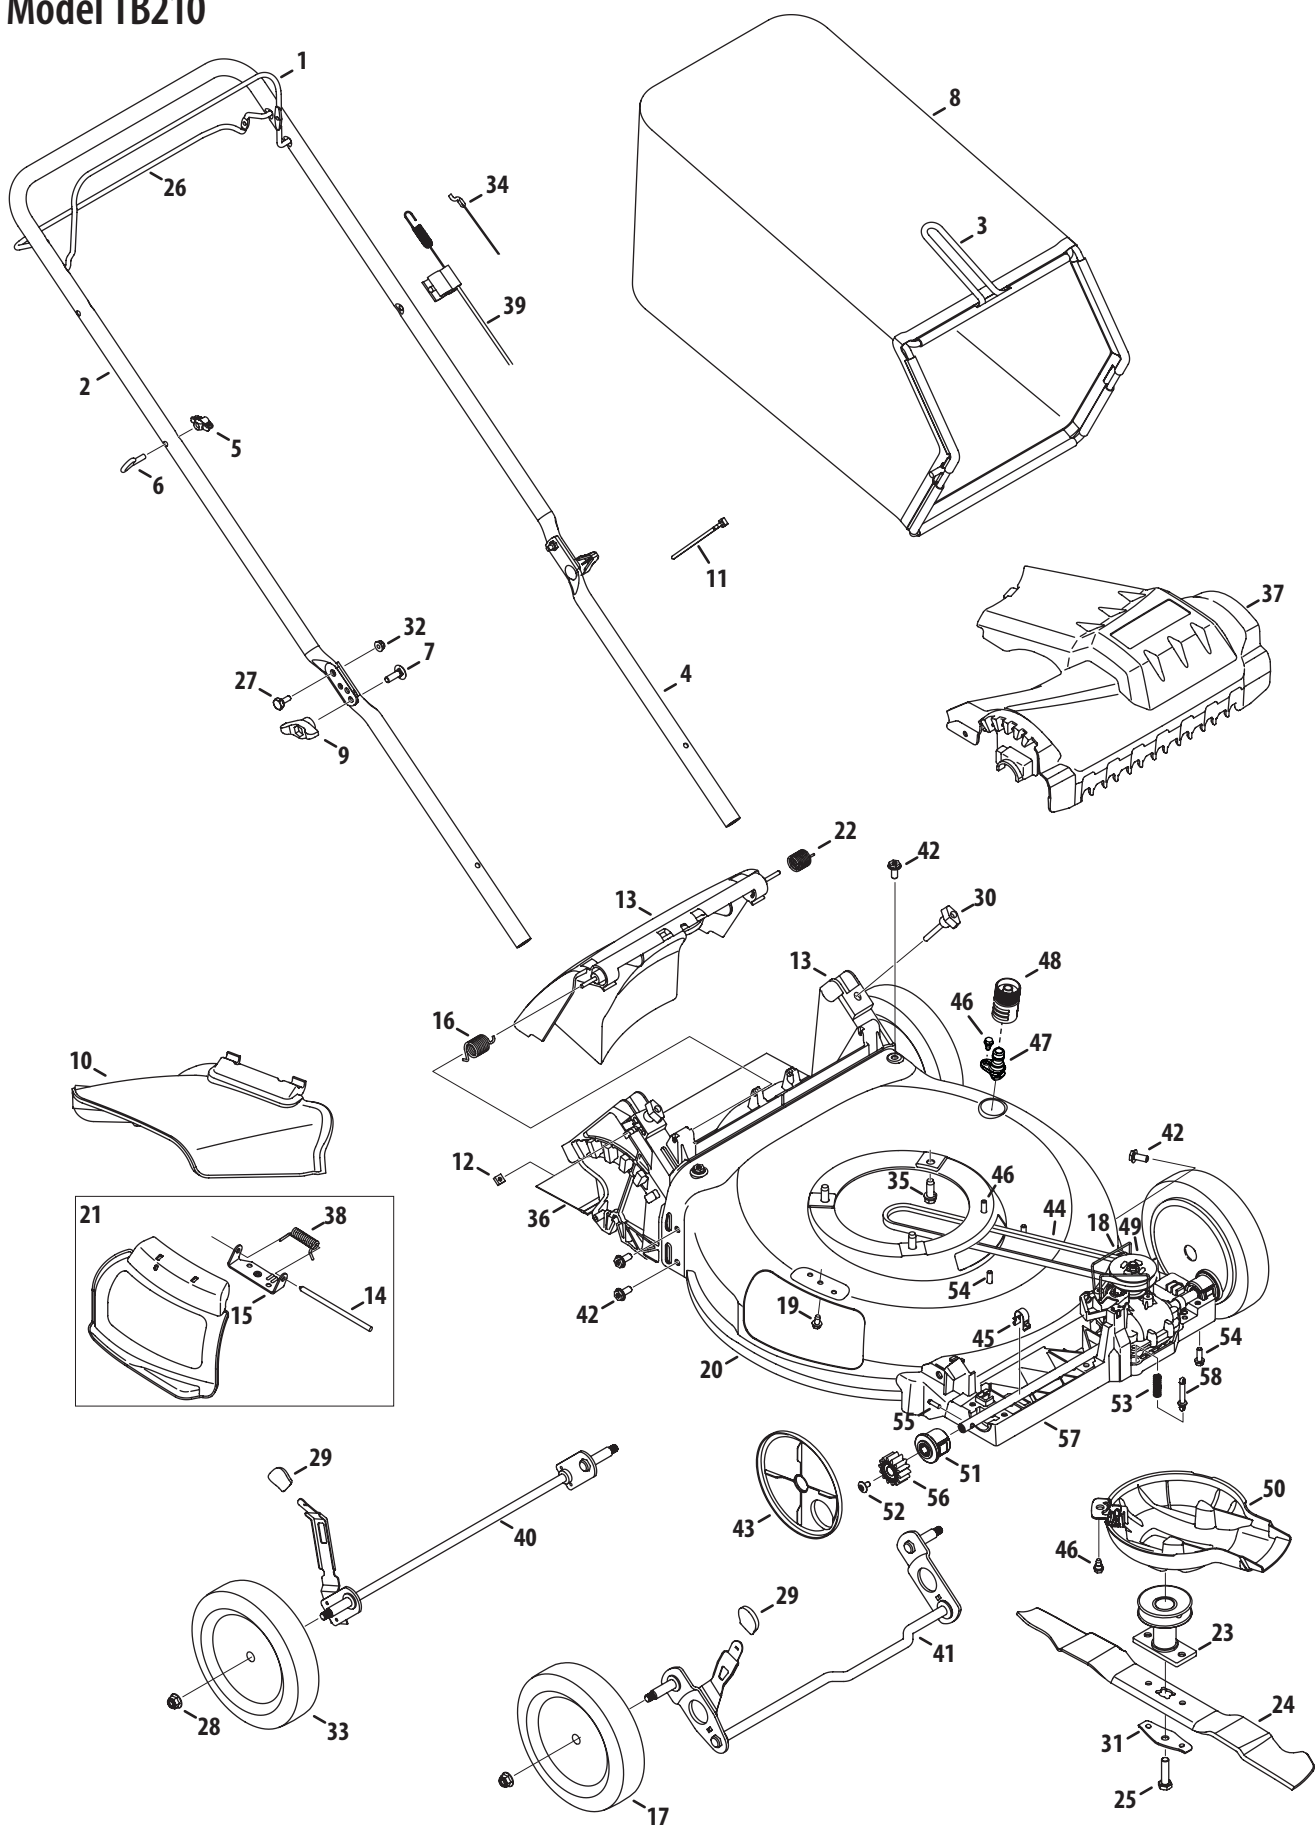

Ref No.	Part Number	Description
1	747-05214	Blade Control
2	749-04681	Upper Handle
3	747-05226	Grass Catcher Frame
4	749-04608A	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710A	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04579	Front Wheel
18	732-04675A	Transmission Wire
19	710-05073	Screw, 1/4-20 x .500
20	787-01872	Deck , 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02538	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	747-05210A	Drive Control
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131A	Adjustment Lever Knob

Ref No.	Part Number	Description
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	734-04564	Rear Wheel
34	946-1113	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07790	Front Cover
38	732-1014	Torsion Spring
39	946-04728	Drive Cable
40	911-04142	Rear Axle Assembly
41	911-04150	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	954-04259A	V-Belt
45	787-01793	Front Axle Clip
46	738-04278	Scr., Shldr., 1/4-20 x .50
47	731-07487	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	931-04535	Engine Baffle
51	941-00019	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	732-04704	Compression Spring
54	710-0895	Screw, 1/4-15 x .750
55	715-04099	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07789	Lower Tray
58	731-07355	Spring Body

 
Model TB280 ES

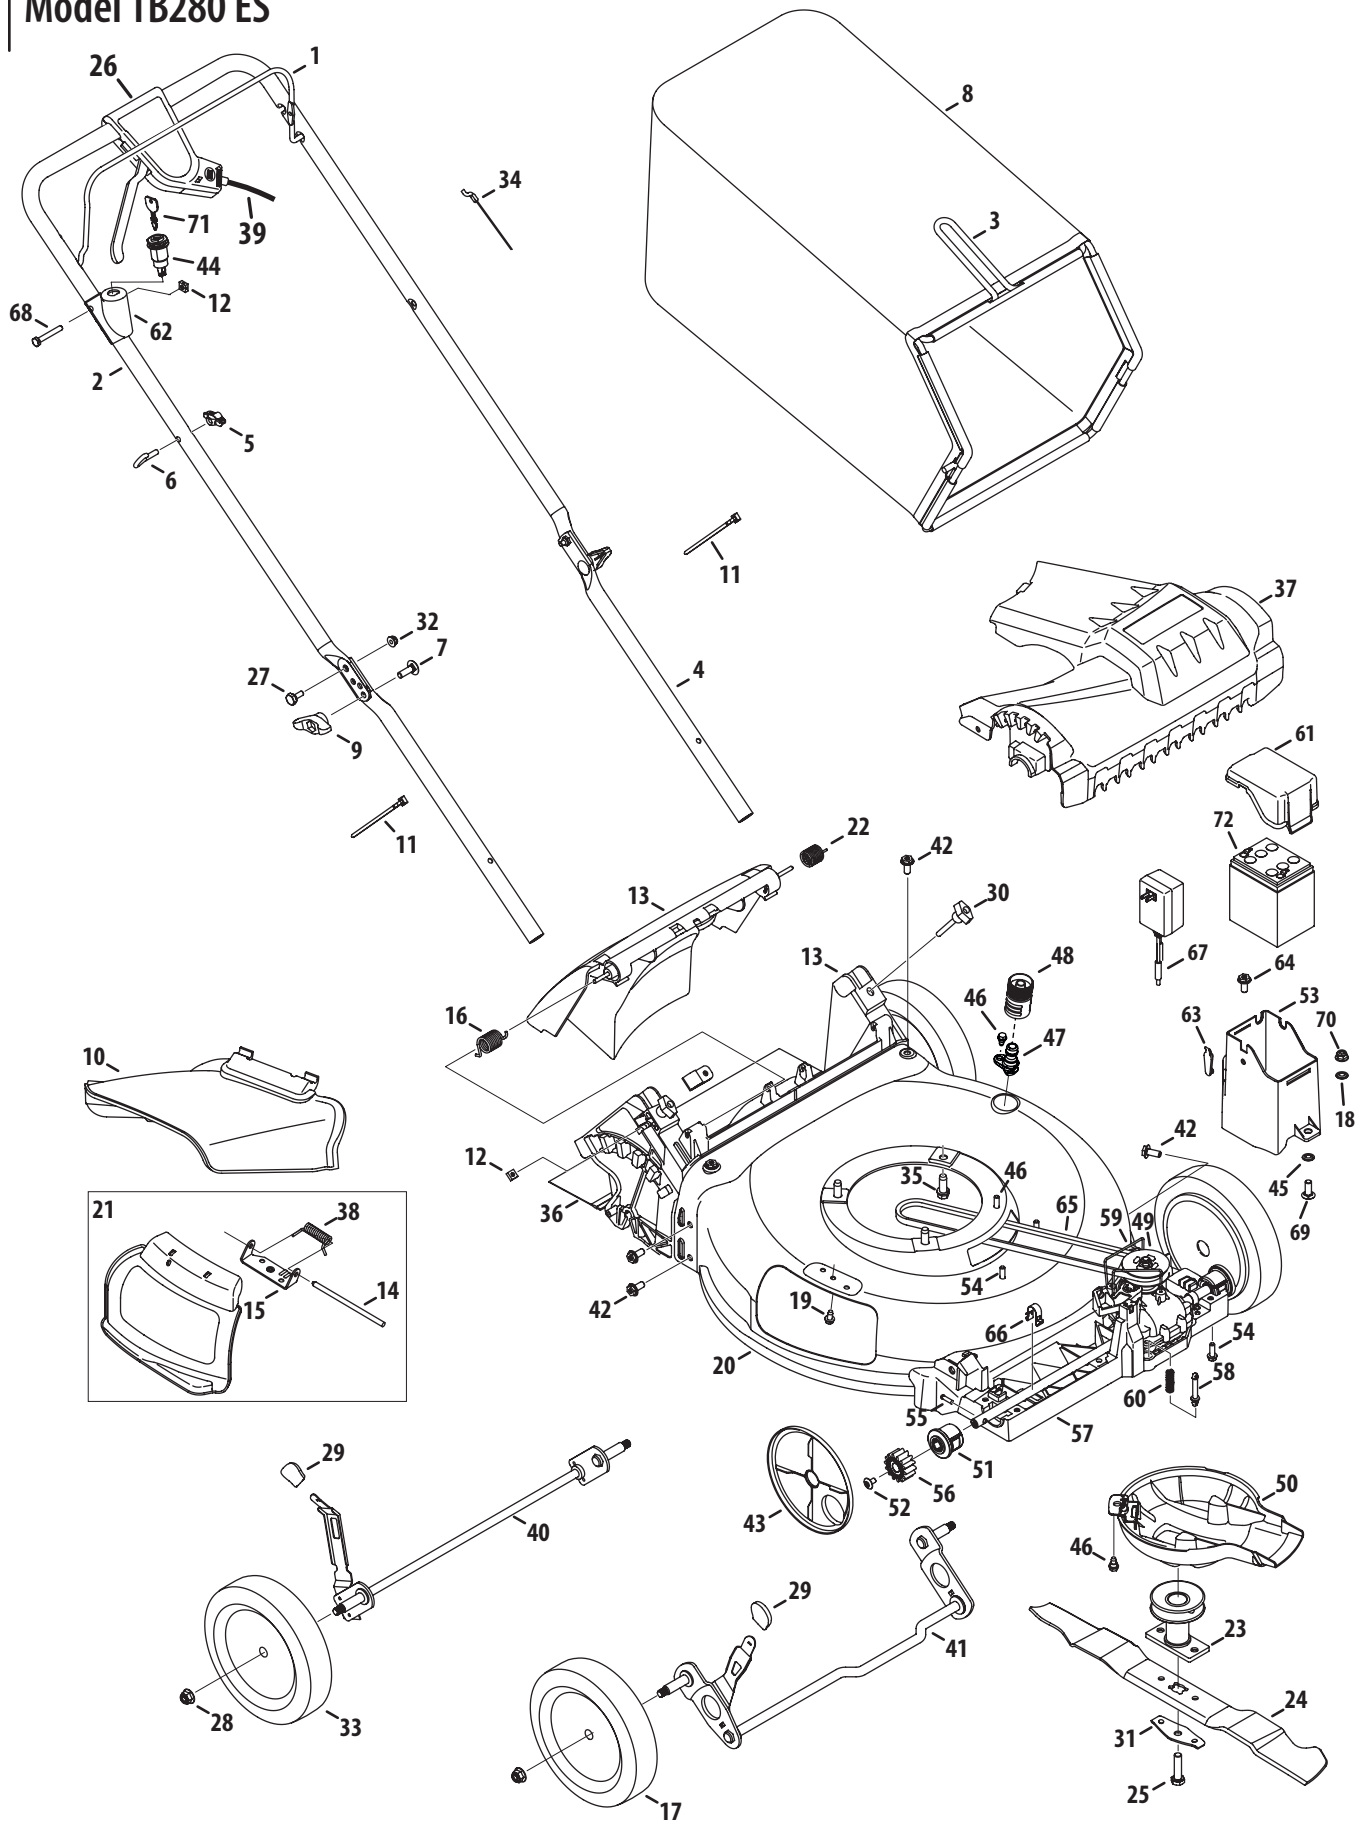

Ref No.	Part Number	Description
1	747-05267A	Blade Control
2	749-04679	Upper Handle
3	747-05226	Grass Catcher Frame
4	749-04608A	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369	Rear Discharge Door Assembly
	631-04371	Rear Discharge Door Assembly - (Lowes)
14	747-0710A	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-04673	Torsion Spring - RH
17	734-04579	Front Wheel
18	736-0242	Washer, Bell, .340 x .872 x .080
19	710-05073	Screw, 1/4-20 x .500
20	787-01875	Deck, 21"
21	987-02516	Hinged Mulch Plug Assembly
22	732-04674	Torsion Spring - LH
23	687-02528	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw, 3/8-24 x 1.50
26	753-06060	Control Lever Assembly
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131A	Adjustment Lever Knob
30	720-04127	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	734-04564	Rear Wheel
34	946-04661	Control Cable
35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield


Ref No.	Part Number	Description
37	731-07790	Front Cover
38	732-1014	Torsion Spring
39	946-04655A	Drive Cable
40	911-04142	Rear Axle Assembly
41	911-04150	Front Axle Assembly
42	710-04995	Screw, 5/16-14 x .750
43	731-07240	Wheel Dust Cover
44	725-05112	Key Switch
45	726-0201	Speed Nut
46	738-04278	Scr., Shldr., 1/4-20 x .50
47	731-07487	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881	Transmission Assembly
50	931-04535	Engine Baffle
51	941-00019	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	731-07135	Battery Housing
54	710-0895	Screw, 1/4-15 x .750
55	715-04099	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07789	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	731-07154	Battery Housing Top
62	731-07155	Electric Start Housing
63	735-04213A	Lid Seal
64	738-04431	Scr., Sldr., 5/16-14 x .972
65	954-04260	V-Belt
66	787-01793	Front Axle Clip
67	725-04329	Battery Charger
68	710-0136	Screw, 1/4-20 x 1.75
69	710-0276	Bolt, Carr., 5/16-18 x 1.00
70	912-0429	Nut, Flgk., 5/16-18
71	925-0201	Key
72	725-04903	Battery
—	725-05015	Wire Harness (Not Shown)

 Model TB230/260

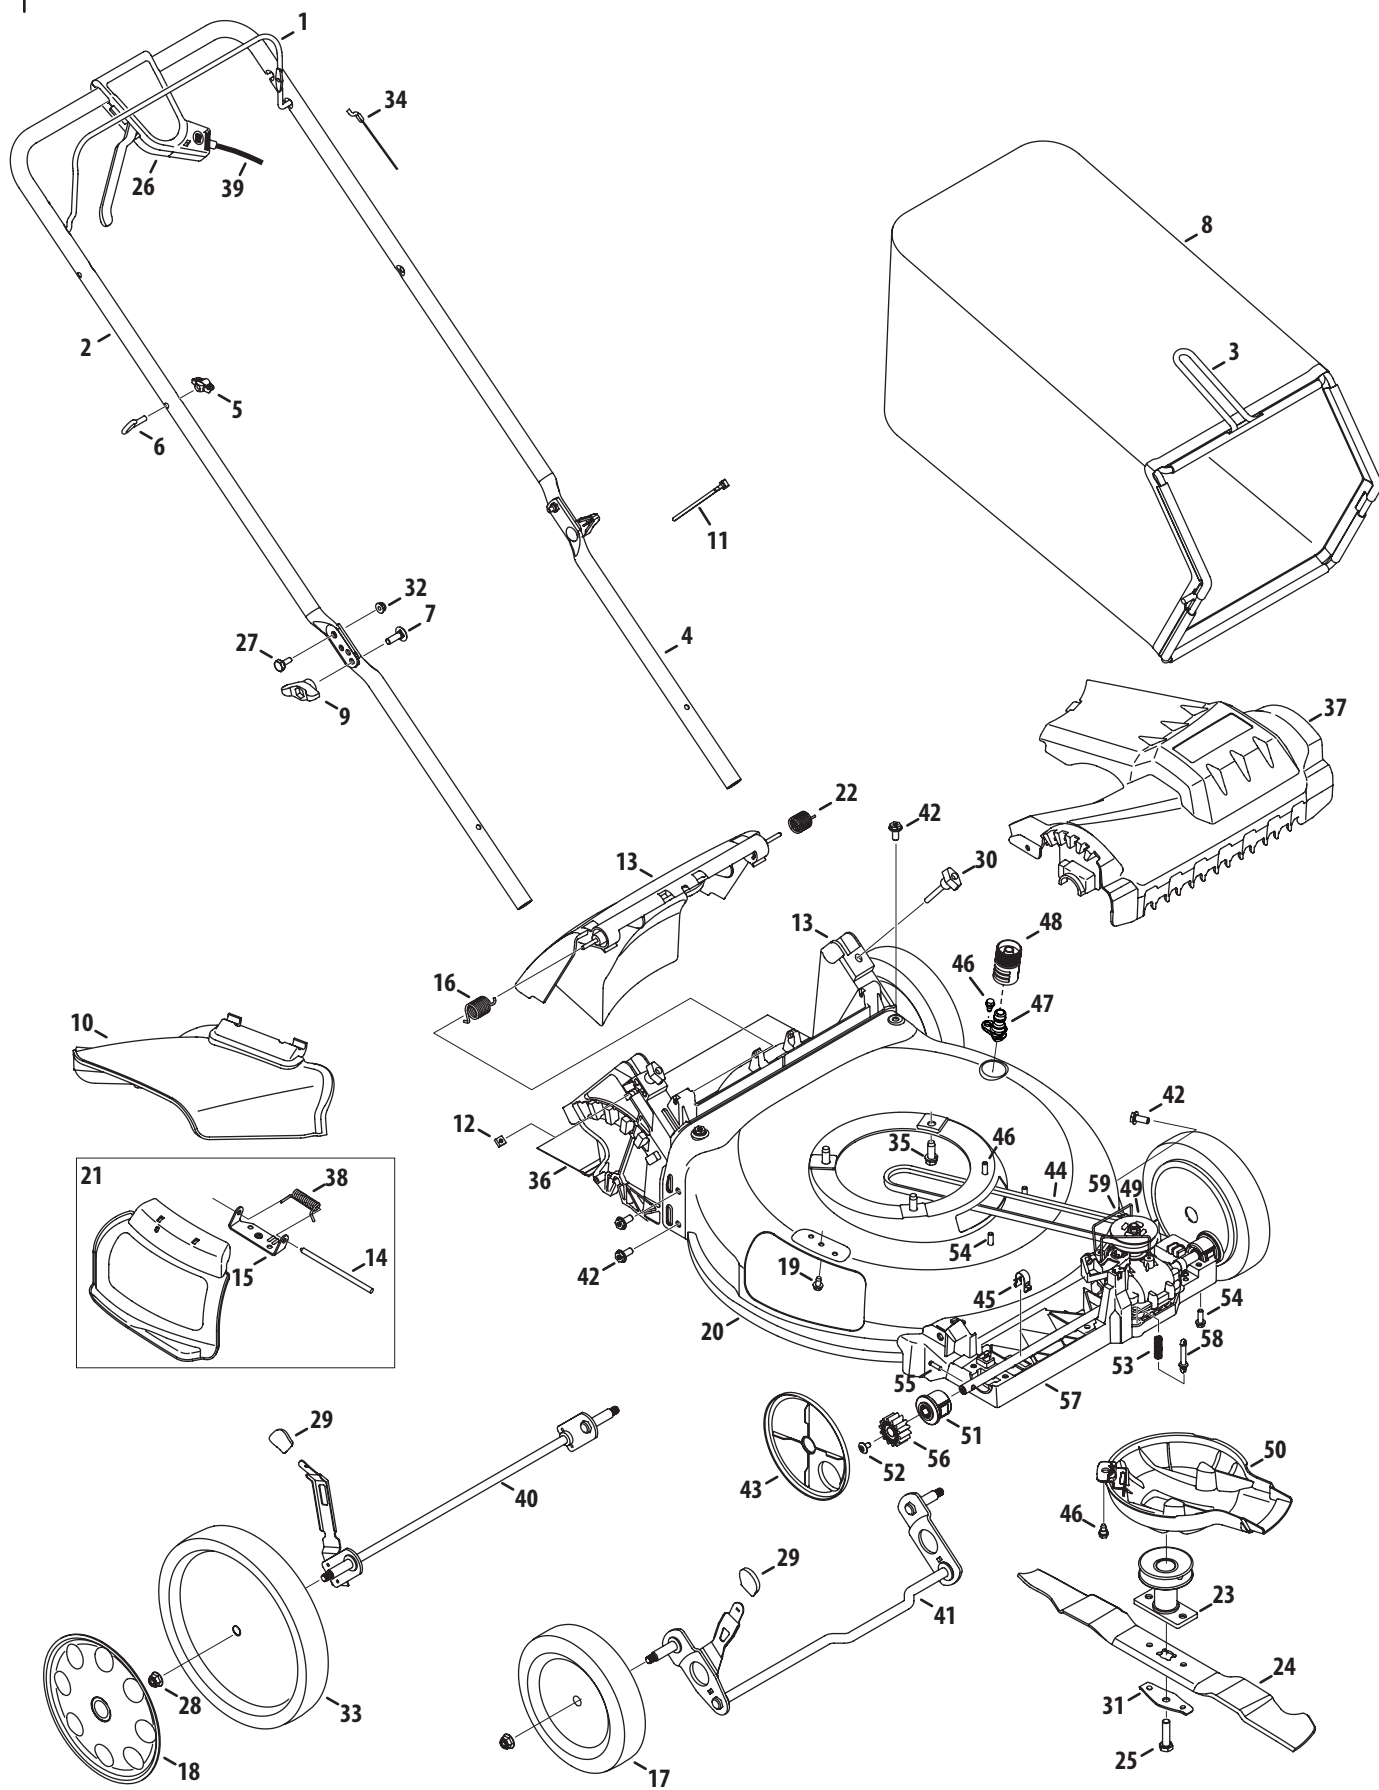

Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	747-05267A	Blade Control	31	736-0524B	Blade Bell Support
2	749-04679	Upper Handle	32	712-04064	Nut, Flange Lock, 1/4-20
3	747-05226	Grass Catcher Frame	33	634-04626	Rear Wheel
4	749-04608A	Lower Handle	34	946-04661	Control Cable
5	720-0279	Wing Nut		946-04670	Control Cable (Honda)
6	710-1205	Rope Guide	35	710-0654A	TT Sems Screw, 3/8-16 x 1.0
7	710-04998	Carriage Screw ,5/16-18	36	731-07203	Trail Shield
8	964-04117	Grass Bag	37	731-07790	Front Cover
9	720-04124	Wing Knob	38	732-1014	Torsion Spring
10	731-07131	Side Chute	39	946-04655	Variable Speed Cable
11	725-0157	Cable Tie	40	911-04144	Rear Axle Assembly
12	712-04222	Nut, Sq., 1/4-20	41	911-04150	Front Axle Assembly
13	631-04369	Rear Discharge Door Assembly	42	710-04995	Screw, 5/16-14 x .750
	631-04371	Rear Discharge Door Assembly - (Lowes)	43	731-07240	Wheel Dust Cover
14	747-0710A	Hinge Pin	44	954-04260	V-Belt
15	787-01779	Chute Deflector Bracket	45	787-01793	Front Axle Clip
16	732-04673	Torsion Spring - RH	46	738-04278	Scr., Shldr., 1/4-20 x .50
17	734-04579	Front Wheel	47	731-07487	Water Nozzle
18	731-07199	Hubcap	48	921-04041	Water Nozzle Adapter
19	710-05073	Screw, 1/4-20 x .500	49	918-04881	Transmission Assembly
20	787-01872A	Deck , 21"	50	931-04535	Engine Baffle
21	987-02516	Hinged Mulch Plug Assembly	51	941-00019	Bearing Assembly
22	732-04674	Torsion Spring - LH	52	710-04531	Screw, 1/4-20 x .390
23	687-02528	Blade Adapter Assembly	53	732-04704	Compression Spring
24	942-0741A	Mulching Blade	54	710-0895	Screw, 1/4-15 x .750
25	710-1044	Screw , 3/8-24 x 1.50	55	715-04099	Dowel Pin
26	753-06060	Control Lever Assembly	56	917-04801	Spur Gear, 14T - RH
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20		917-04802	Spur Gear, 14T - LH
28	712-04217	Flange Lock Nut, 3/8-16	57	731-07789	Lower Tray
29	720-04131A	Adjustment Lever Knob	58	731-07355	Spring Body
30	720-04127	Wing Nut	59	732-04675A	Transmission Wire

 
Model TB330 XP

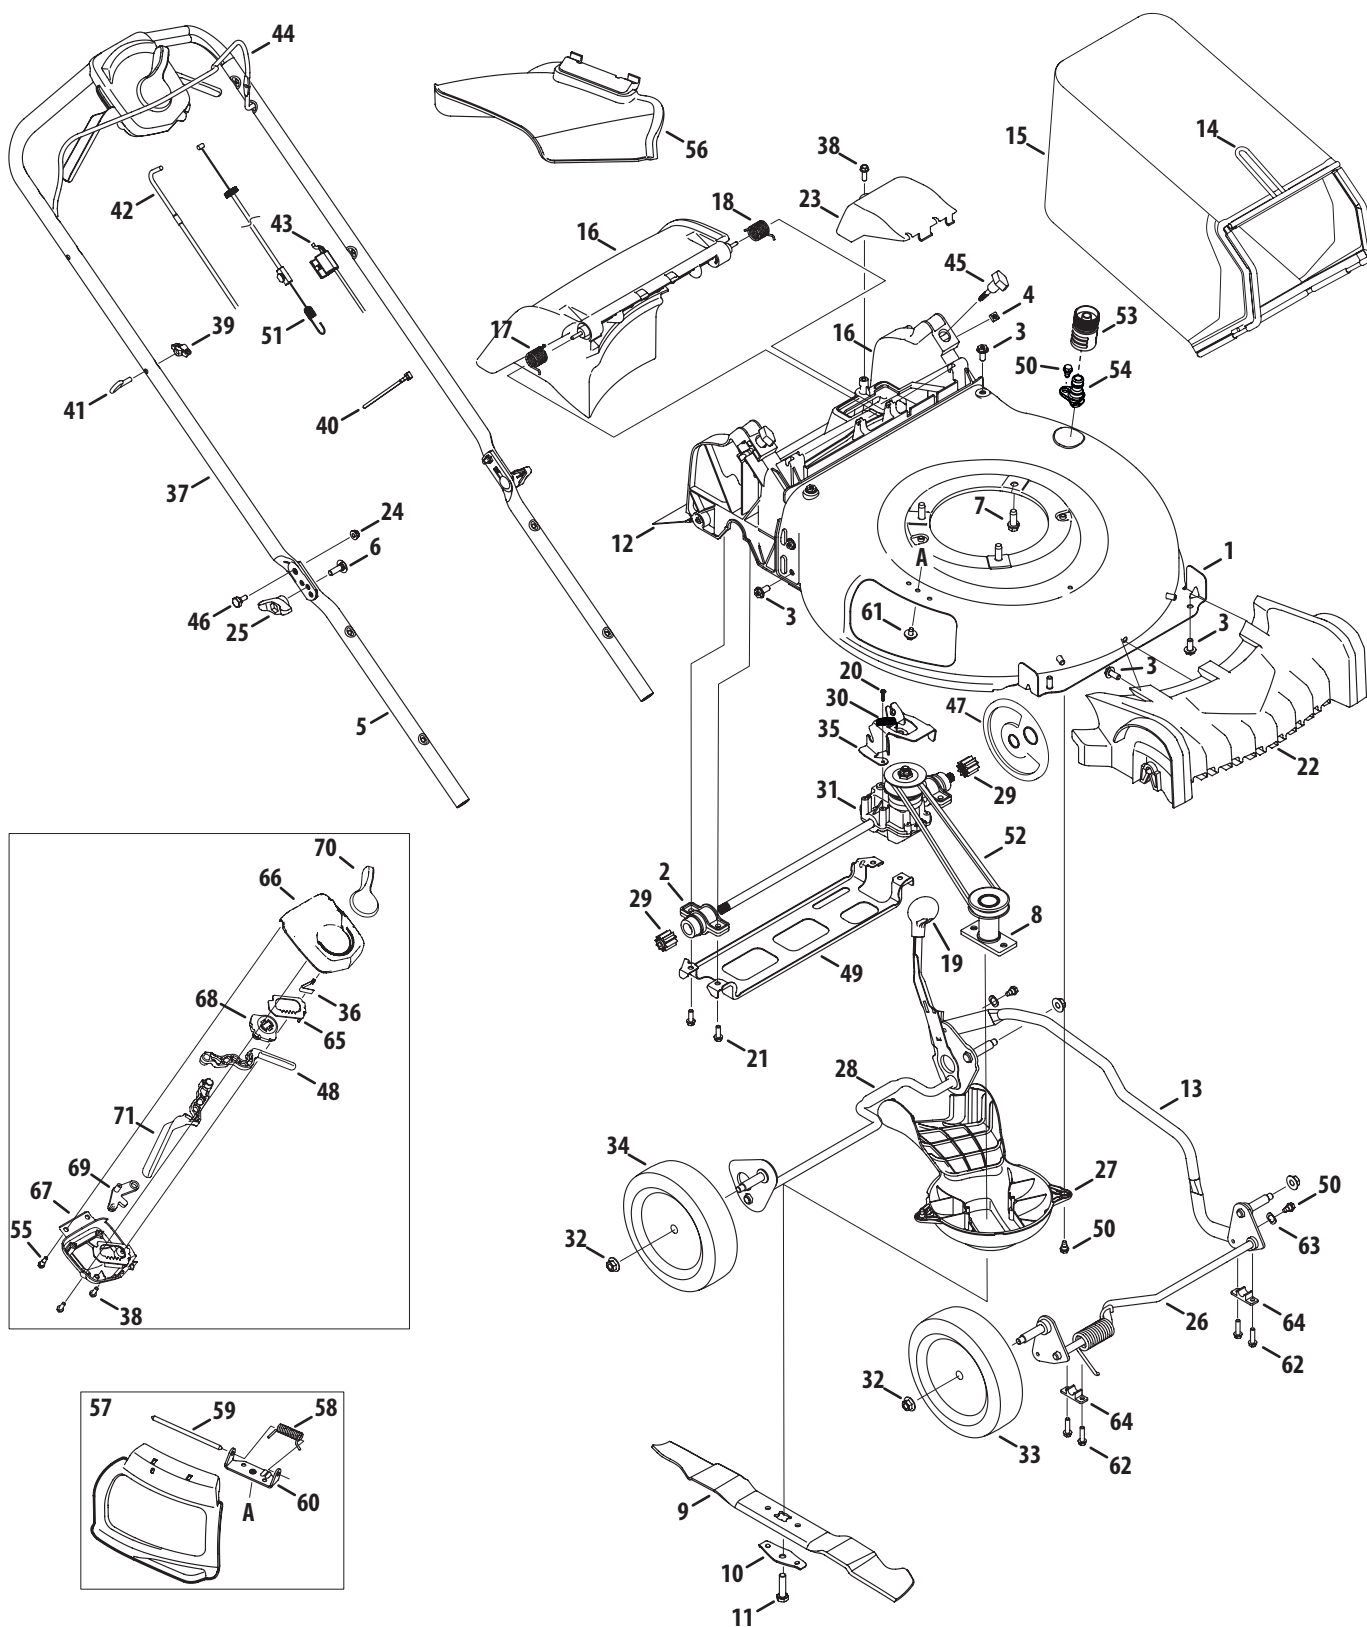

Ref No.	Part Number	Description
1	787-01874	Deck , 21"
2	631-04501	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02220	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	749-04713	Cross Bracket
14	747-05362	Grass Catcher Frame
15	964-04141	Grass Bag
16	631-04514	Rear Discharge Door Assembly
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04113	Adjustment Lever Knob
20	710-04374	Screw, Hex Washer, .159 x .43
21	710-04774	Screw, 1/4-15 x 1.25
22	731-07819	Front Cover
23	731-07799	Transmission Cover
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04124	Wing Knob
26	911-04190	Front Axle Assembly
27	631-04512	Engine Baffle
28	911-04189	Rear Axle Assembly
29	917-04852	Spur Gear, 10T
30	732-04826	Exten. Spring, 2.405
31	918-04971	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	634-04681	Rear Wheel
34	734-04564	Front Wheel
35	787-01868	Transmission Bracket
36	732-0627A	Spring

Ref No.	Part Number	Description
37	749-04701	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-04726	Drive Cable
43	946-04661	Control Cable
44	747-05463	Blade Control
45	720-04127A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	731-07795	Wheel Dust Cover
48	731-07766	Control Lever LH
49	787-01915	Rear Support Bracket
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	946-04729	Speed Adjustment Cable
52	954-04282	V-Belt
53	921-04041	Water Nozzle Adapter
54	731-07487	Water Nozzle
55	710-05204	Scr., Shldr, 1/4-15 x .970
56	731-07131	Side Discharge Chute
57	987-02516	Mulch Plug (Incl. 58-60)
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	710-1241	Screw, 1/4-15 x 1.000
63	736-04413	Wash., Wave, .385 ID x .598 OD
64	741-0492A	Bushing, Lock, .505 Dia. X .62
65	787-01851	Cable Adjust Plate
66	731-07763	Upper Housing
67	731-07764	Lower Housing
68	731-07804	Speed Adjust Actuator
69	731-07852	Drive Cable Actuator
70	731-07767	Speed Select Lever
71	731-07765	Control Lever RH

 
Model TB350 XP

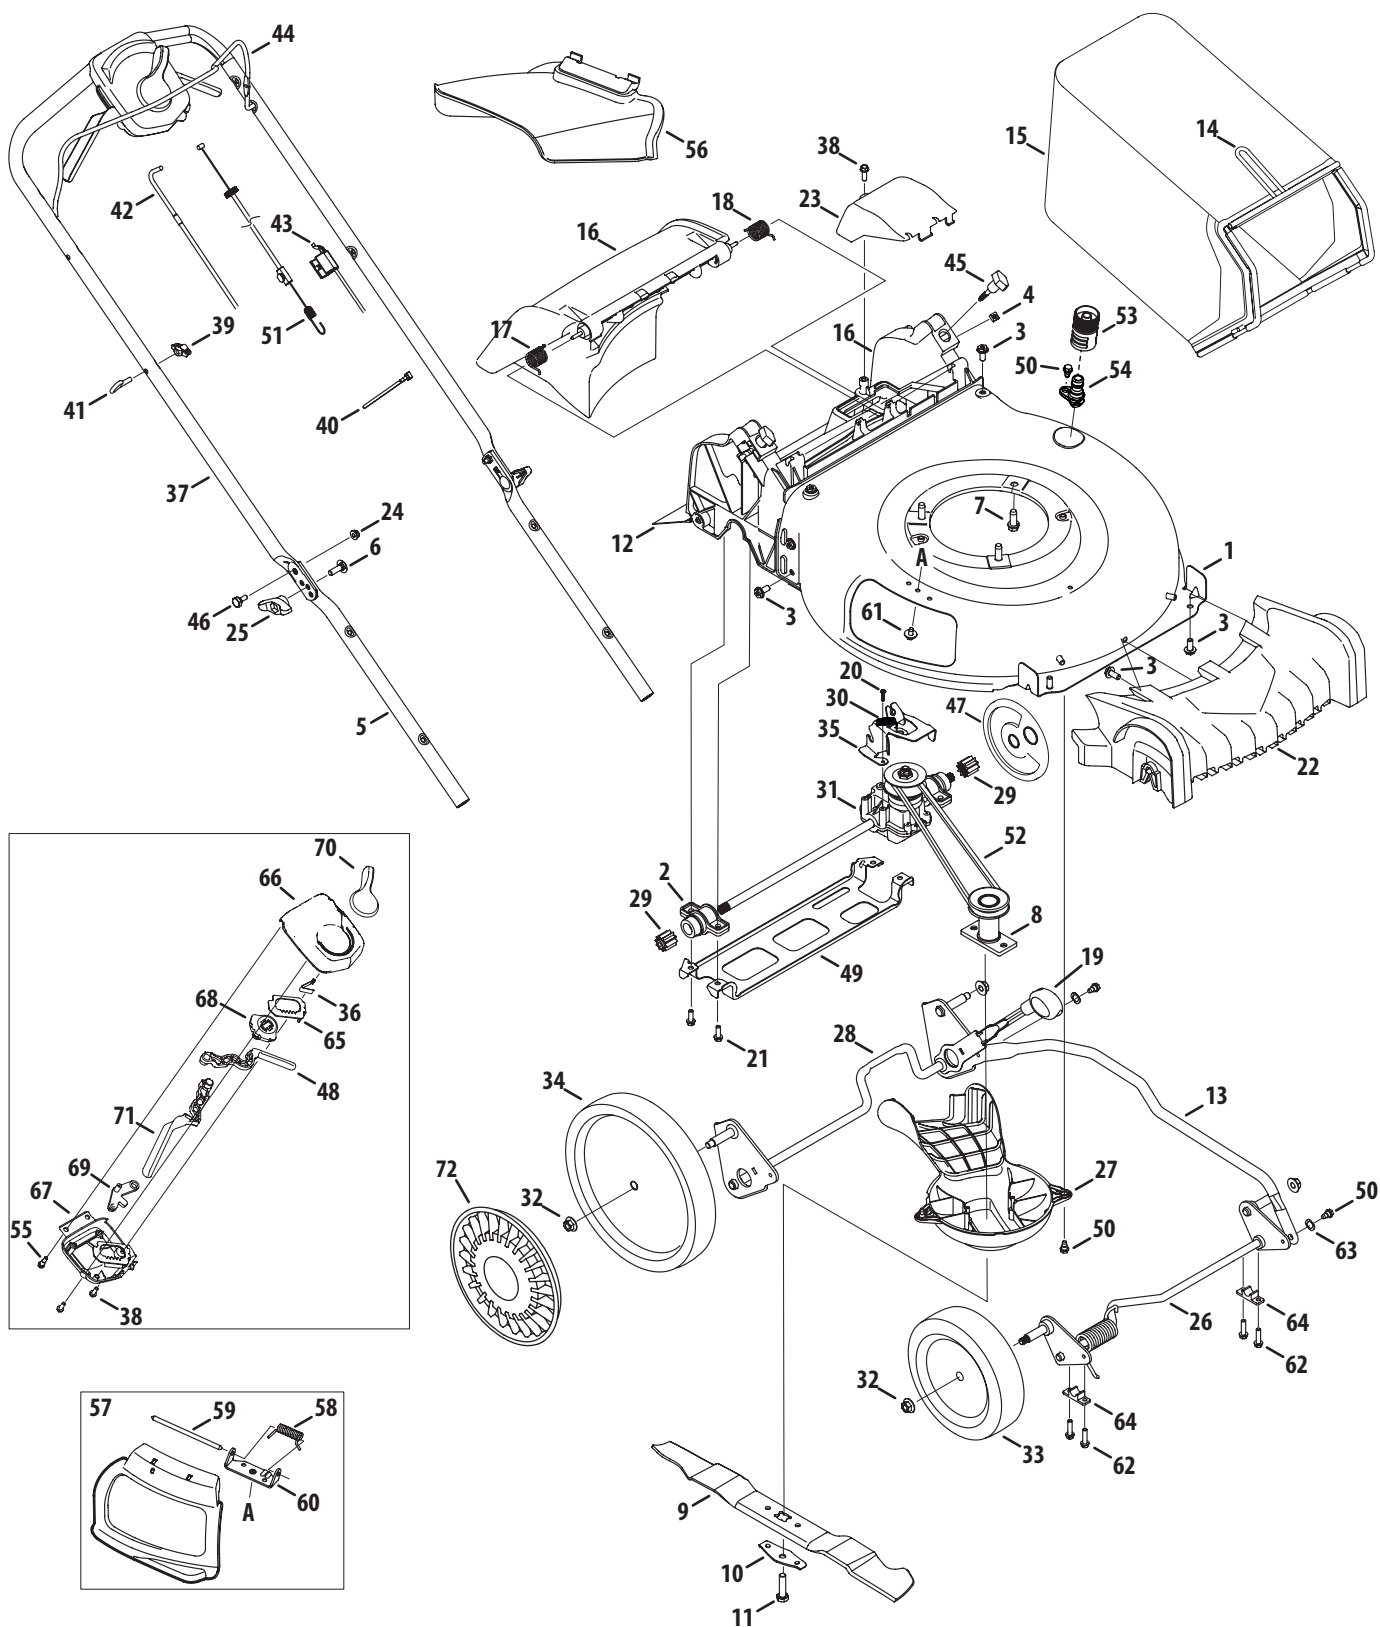


Ref No.	Part Number	Description
1	787-01874	Deck , 21"
2	631-04501	Bearing Assembly
3	710-04995	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-0654A	Screw, 3/8-16 x 1.00
8	687-02220	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	749-04705	Cross Bracket
14	747-05362	Grass Catcher Frame
15	964-04141	Grass Bag
16	631-04514	Rear Discharge Door Assembly
17	732-04673	Torsion Spring - RH
18	732-04674	Torsion Spring - LH
19	720-04113	Adjustment Lever Knob
20	710-04374	Screw, Hex Washer, .159 x .43
21	710-04774	Screw, 1/4-15 x 1.25
22	731-07819	Front Cover
23	731-07799	Transmission Cover
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04124	Wing Knob
26	911-04191	Front Axle Assembly
27	631-04512	Engine Baffle
28	911-04192	Rear Axle Assembly
29	917-04849	Spur Gear, 9T
30	732-04826	Exten. Spring, 2.405
31	918-04971	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	734-04564	Front Wheel
34	634-04666	Rear Wheel
35	787-01868	Transmission Bracket
36	732-0627A	Spring

Ref No.	Part Number	Description
37	749-04701	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-04726	Drive Cable
43	946-04661	Control Cable
44	747-05463	Blade Control
45	720-04127A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	731-07731	Wheel Dust Cover
48	731-07766	Control Lever LH
49	787-01915	Rear Support Bracket
50	738-04278	Scr., Shldr., 1/4-20 x .50
51	946-04729	Speed Adjustment Cable
52	954-04282	V-Belt
53	921-04041	Water Nozzle Adapter
54	731-07487	Water Nozzle
55	710-05204	Scr., Shldr, 1/4-15 x .970
56	731-07131	Side Discharge Chute
57	987-02516	Mulch Plug (Incl. 58-60)
58	732-1014	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	710-1241	Screw, 1/4-15 x 1.000
63	736-04413	Wash., Wave, .385 ID x .598 OD
64	741-0492A	Bushing, Lock, .505 Dia. X .62
65	787-01851	Cable Adjust Plate
66	731-07763	Upper Housing
67	731-07764	Lower Housing
68	731-07804	Speed Adjust Actuator
69	731-07852	Drive Cable Actuator
70	731-07767	Speed Select Lever
71	731-07765	Control Lever RH
72	731-07199	Hubcap

 1P65B0B Air Cleaner

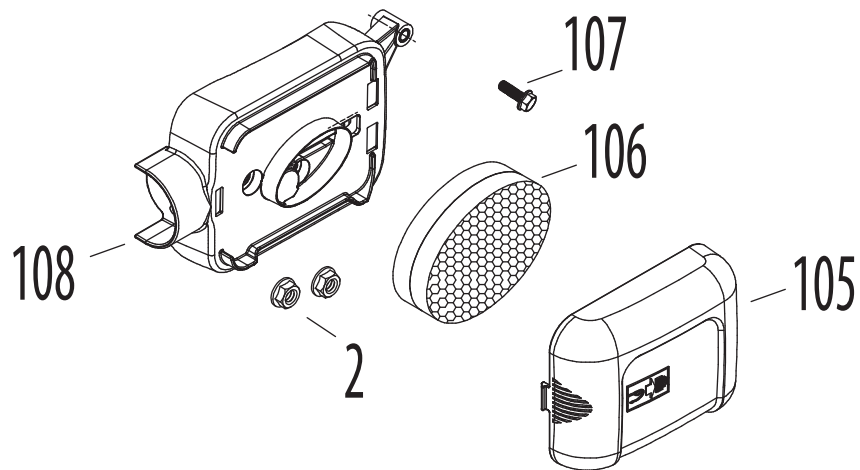


Ref.	Part Number	Description
2	712-04212	Nut M6 X 10 Mm
105	N/A	Outer Air Filter Cover
106	951-10732	Air Filter Element, Oval
107	710-04969	A/F Base Bolt M6×30
108	N/A	Inner Air Filter Housing
	951-10739	Air Cleaner Housing Ass'y
		Not Shown (Incl. Ref No. 105,108)

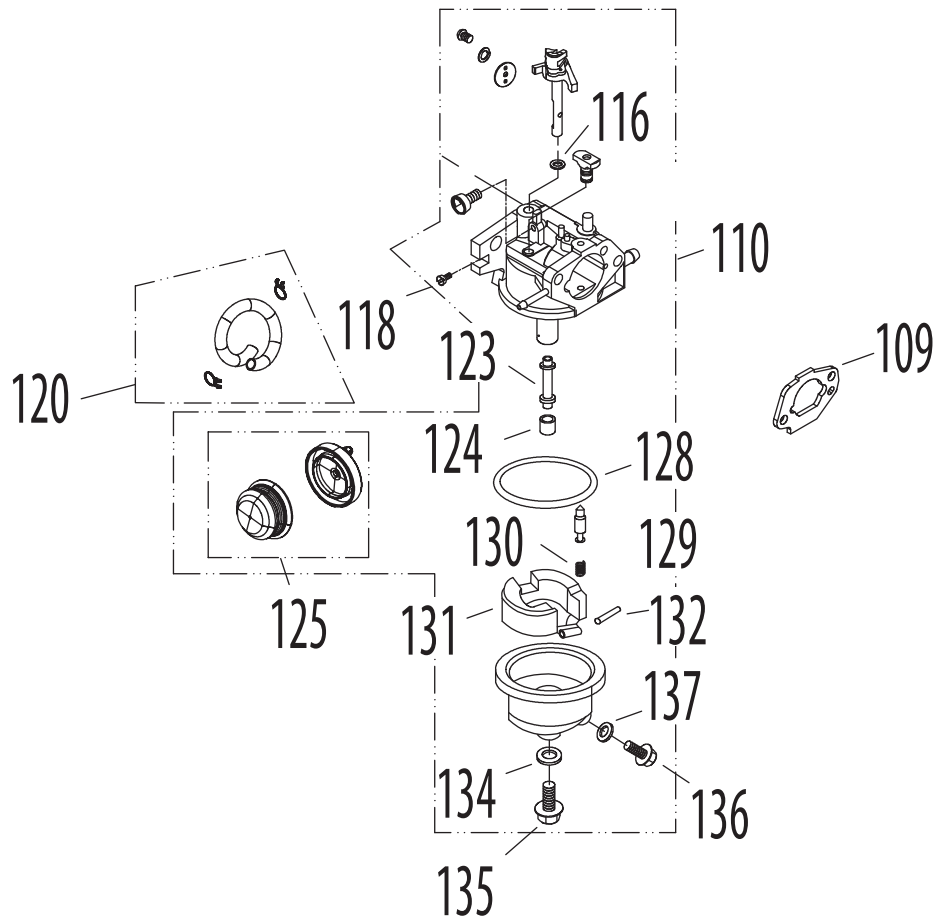 


Ref.	Part Number	Description
109	951-11527	Carburetor Gasket Plate
110	951-11707	Carburetor Assembly
120	951-11736	Primer Hose Assembly
	951-11708	Carburetor Repair Kit - Major (Incl. Ref No. 116,118,123, 124,128-134,137)

 1P65B0B Crankcase

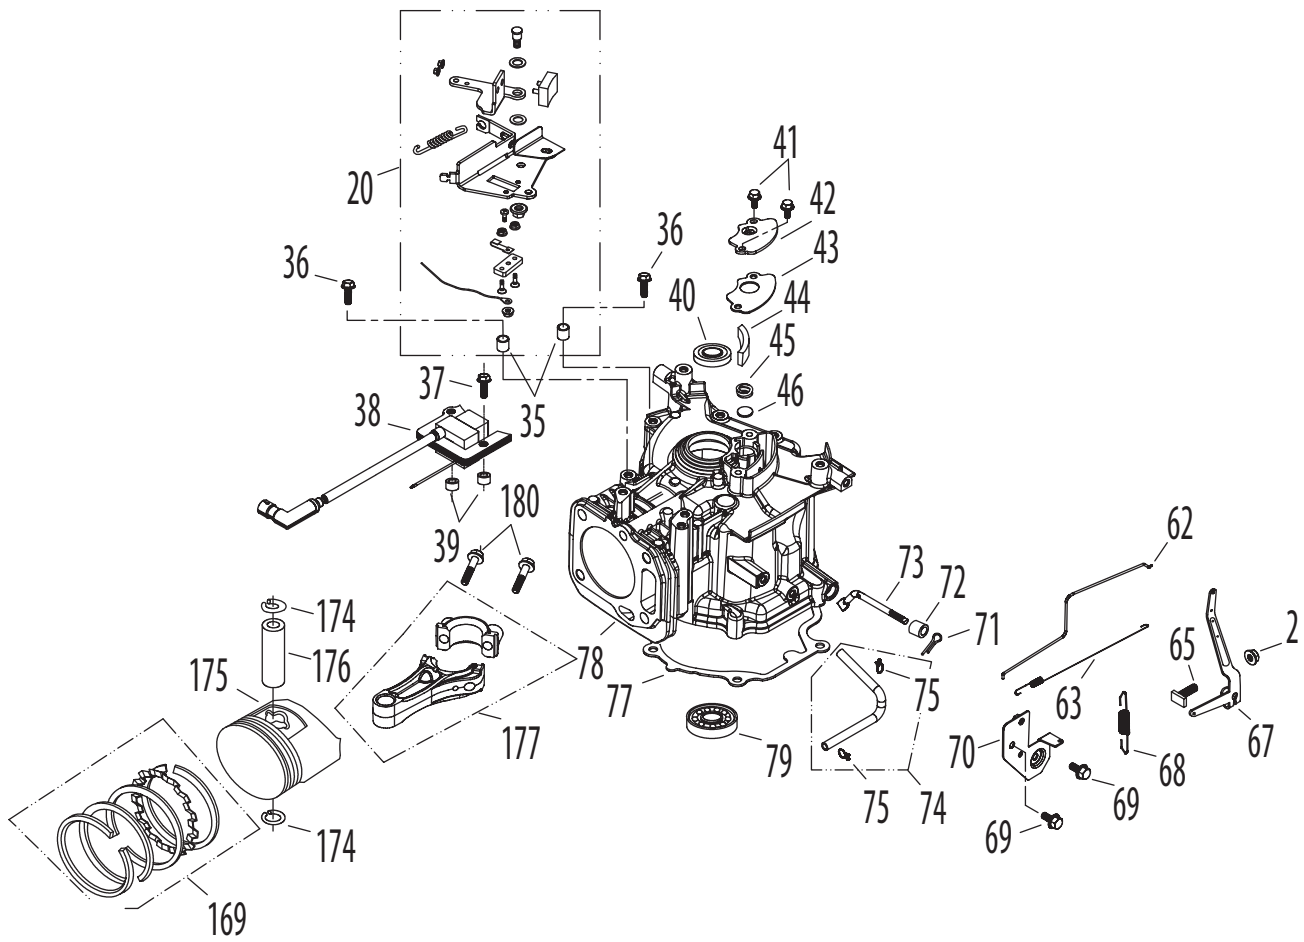


Ref.	Part Number	Description	Ref.	Part Number	Description
2	712-04212	Nut M6 X 10 Mm	73	951-11608	Governor Arm Shaft
20	951-10320A	Brake Assembly	74	951-11725	Breather Hose Assembly
35	750-05384	Brake Spacer	75	726-04101	Breather Hose Clamp
36	710-04980	Brake Assy Bolt M6x35	77	951-11732	Crankcase Cover Gasket
37	710-04920	Bolt M6x28	78	N/A	Crankcase
38	951-10367	Ignition Coil Assembly	79	951-11369	Main Bearing
39	951-11675	Ignition Coil Spacer	169	951-11688	Piston Ring Set
40	951-11596	Upper Crankshaft Seal	174	951-11603	Piston Pin Snap Ring
41	710-04916	Bolt M6x14	175	951-11605	Piston
42	951-11728	Breather Cover Plate	176	951-11604	Piston Pin
43	951-11729	Breather Gasket	177	951-11744	Connecting Rod Assembly
44	951-11730	Breather Screen	180	710-05162	Connecting Rod Bolt
45	732-04718	Breather Spring		951-11710	Gasket Kit, External (Incl. Ref No. 43,97,99,138-140,155,159)
46	951-11735	Breather Valve		951-11709	Gasket Kit, Complete (Incl. Ref No. 40,43,72,77,97,99,103, 138-140,155,159,164)
62	951-11677	Throttle Linkage		951-11747	Short Block Assembly (Incl. Ref No. 37,40-46,71-73,77-79,80, 81,83,84,85,98-103,109,139,140,155, 159,164,165,167-169,174-177)
63	951-11522	Throttle Linkage Spring			
65	710-04908	Governor Arm Bolt			
67	951-11523	Governor Arm			
68	951-10293	Governor Spring			
69	710-04915	Bolt M6x12			
70	951-11544	Throttle/Governor Bracket			
71	714-04074	Governor Cotter Pin			
72	951-11574	Governor Seal			

 1P65B0B Crankshaft

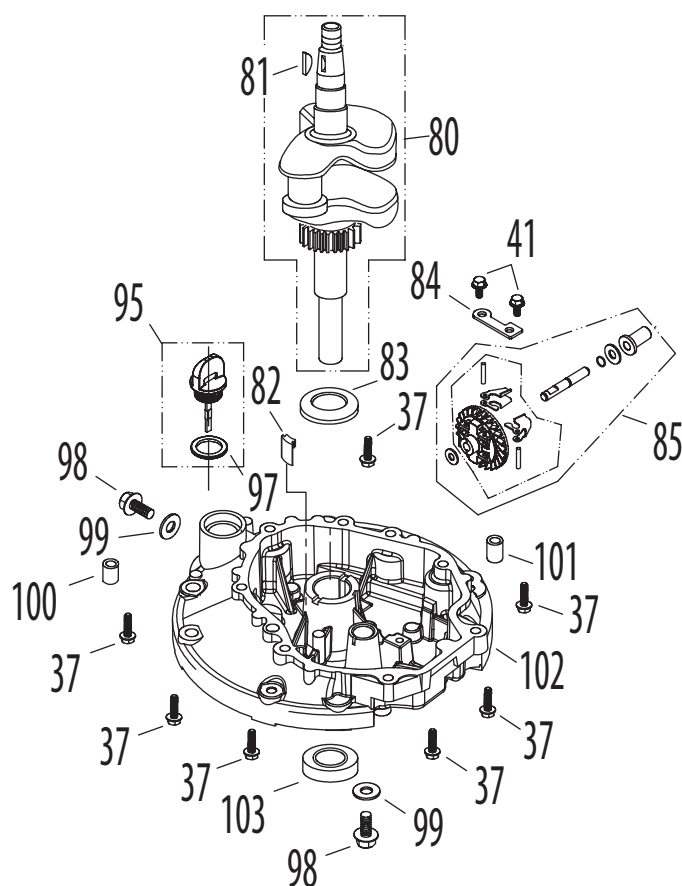


Ref.	Part Number	Description
37	710-04920	Bolt M6x28
38	951-10367	Ignition Coil Assembly
41	710-04916	Bolt M6x14
80	951-11591	Crankshaft Assembly
81	951-10307	Woodruff Key
82	951-11733	Oil Return Seal
83	736-04491	Crankshaft Thrust Washer
84	951-11609	Governor Gear Mounting Plate
85	951-11549	Governor Gear/Shaft Assembly
95	951-10617	Dipstick Assembly

Ref.	Part Number	Description
97	951-11734	Dipstick O-Ring
98	710-04906	Oil Drain Plug
99	736-04440	Oil Drain Plug Washer
100	715-04089	Crankcase Cover Dowel 9x14
101	715-04092	Crankcase Cover Dowel 7x14
102	N/A	Crankcase Cover
103	951-11545	Lower Crankshaft Seal
	951-10370	Oil Drain Plug & Washer Ass'y (Incl. Ref No. 98,99)

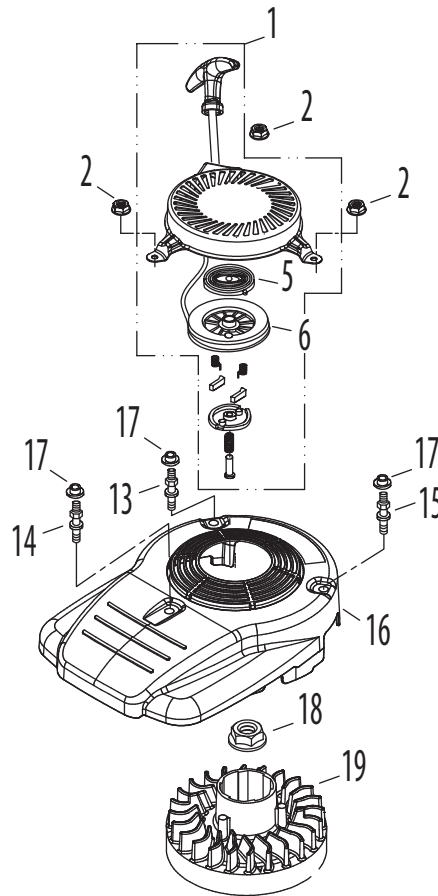 

Ref.	Part Number	Description
1	951-11720	Recoil Starter Assembly
2	712-04212	Nut M6 X 10 Mm
5	951-11721	Recoil Pulley & Spring Ass'y
6	951-11721	Recoil Pulley & Spring Ass'y
13	751-11722	Starter/Shroud Stud Black M6 x 75
14	951-11723	Starter/Shroud Stud Front M6 x 5.3
15	951-11724	Starter/Shroud Stud White M6-73
16	731-05692	Engine Shroud (M0)
17	750-05320	Engine Shroud Spacer
18	712-04221	Flywheel Nut M14
19	951-11043	Flywheel

 1P65B0B Cylinder Head

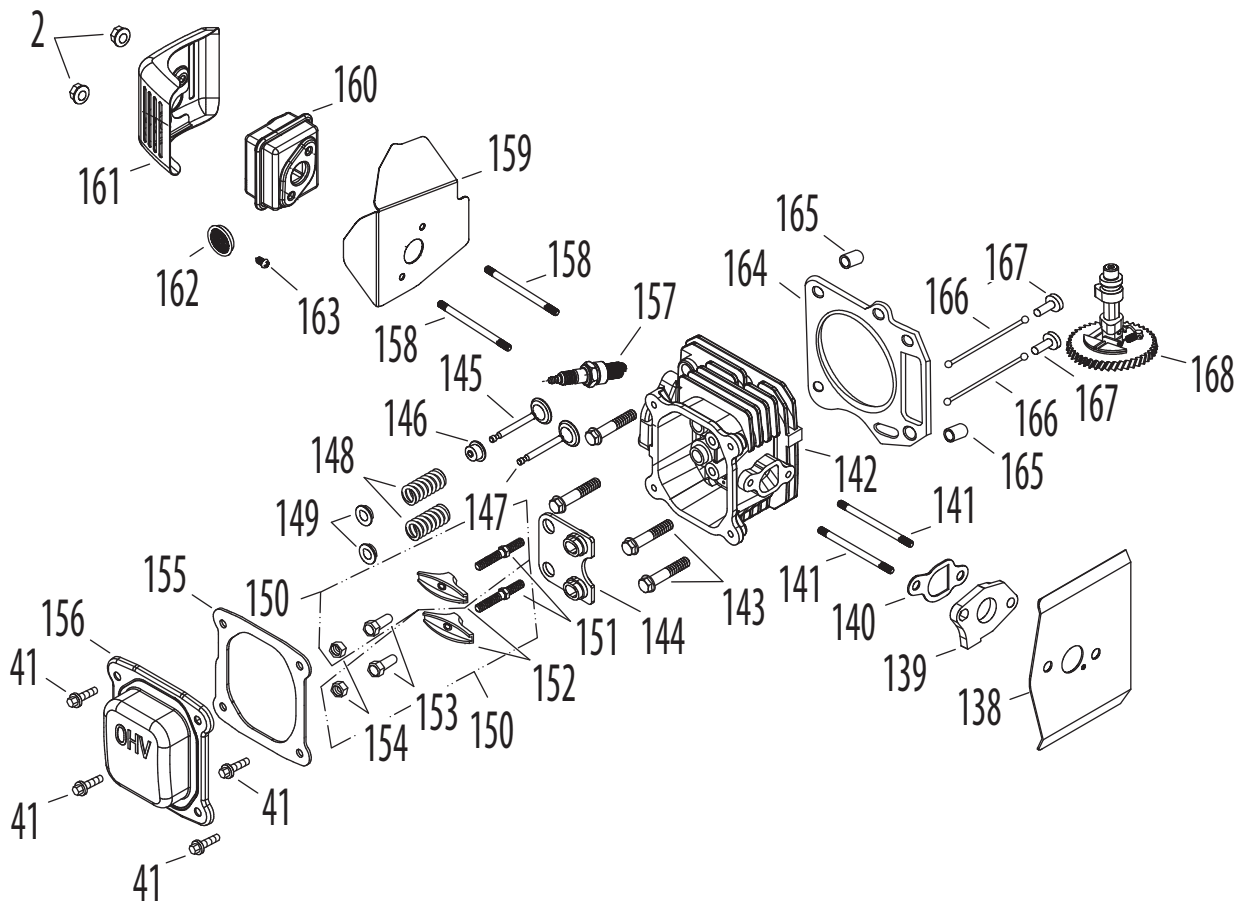


1P65B0B Cylinder Head

Ref.	Part Number	Description
2	712-04212	Nut M6 X 10 Mm
41	710-04916	Bolt M6x14
138	951-11737	Carburetor Gasket
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
141	710-05093	Carb Stud M6x92
142	951-11746	Cylinder Head
143	710-04982	Head Bolt M8x54
143	710-04982	Head Bolt M8x54
144	951-11687	Push Rod Guide
145	N/A	Intake Valve
146	N/A	Intake Valve Seal
147	N/A	Exhaust Valve
148	N/A	Valve Spring
149	N/A	Valve Spring Retainer
150	951-11606	Rocker Arm Assembly
151	710-04902	Rocker Arm Stud
152	N/A	Rocker Arm
153	751-11123	Fulcrum Nut
154	751-11124	Jam Nut
155	951-11551	Valve Cover Gasket
156	951-11548	Valve Cover
157	951-10292	Spark Plug/F6rtc
158	951-11740	Muffler Stud M6x95
159	951-11739	Muffler Gasket

Ref.	Part Number	Description
160	951-11742	Muffler Assembly
161	951-11743	Muffler Shield
162	951-10351	Spark Arrestor
163	710-04983	Spark Arrestor Screw
164	951-11555	Cylinder Head Gasket
165	715-04108	Cylinder Head Dowel 10x16
166	951-10314	Push Rod (2 per order)
167	951-11607	Tappet
168	951-11741	Camshaft Assembly
	951-10313	Valve Kit (Incl. Ref No. 145,147)
	951-11745	Muffler Stud Ass'y (Incl. Ref No. 158)
	952Z1P65B0B	Engine Complete
	951-10846	Cylinder Head Service Kit (Incl. Ref No. 143,146,155,164)
	951-11746	Cylinder Head (Incl. Ref No. 139,140,142, 144-149,151-155,159,164)
	951-11710	Gasket Kit, External (Incl. Ref No. 43,97,99, 138-140,155,159)
	951-11709	Gasket Kit, Complete (Incl. Ref No. 40,43,72,77,97, 99,103,138-140,155,159,164)

 
1P65B0B Fuel Tank

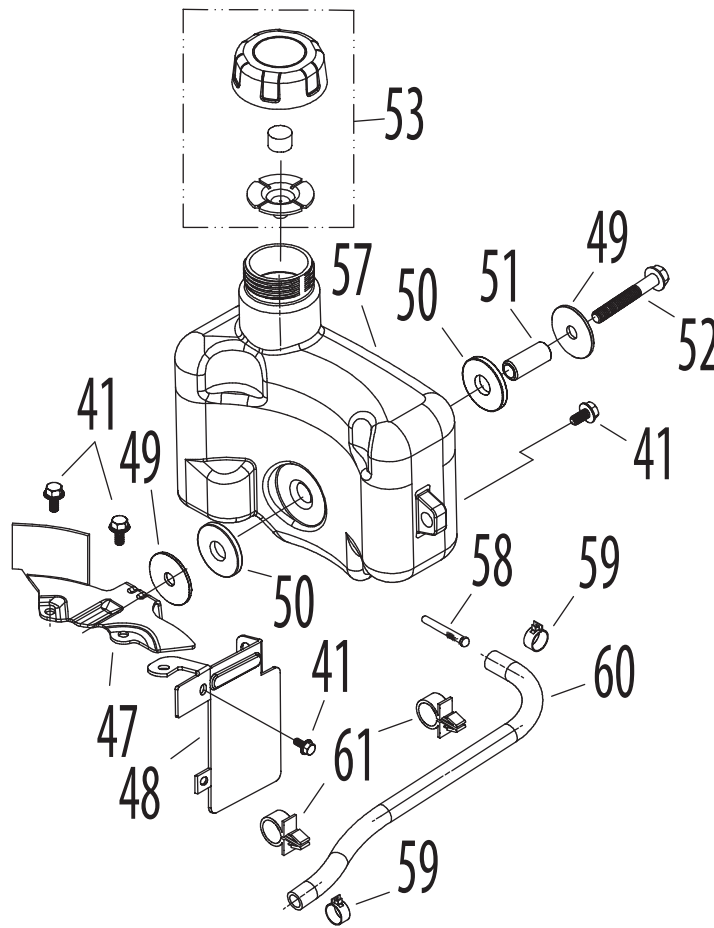

Ref.	Part Number	Description
41	710-04916	Bolt M6x14
47	951-11542	Fuel Tank Bottom Bracket
48	951-11748	Tank/Label Bracket
49	736-04456	Fuel Tank Washer
50	951-10335	Rubber Bushing
51	750-05322	Fuel Tank Bushing
52	710-04922	Tank Bolt M8x50
53	951-10300	Fuel Cap Assembly
57	951-10337	Fuel Tank Assembly
58	951-10358	Fuel Filter
58	951-10358	Fuel Filter
59	951-11731	Fuel Hose Clamp
59	951-11731	Fuel Hose Clamp
60	951-10363	Fuel Line Kit
61	723-04071	Plastic Support Clamp

Page Left Blank Intentionally

 Engine Model - 2P70MOB

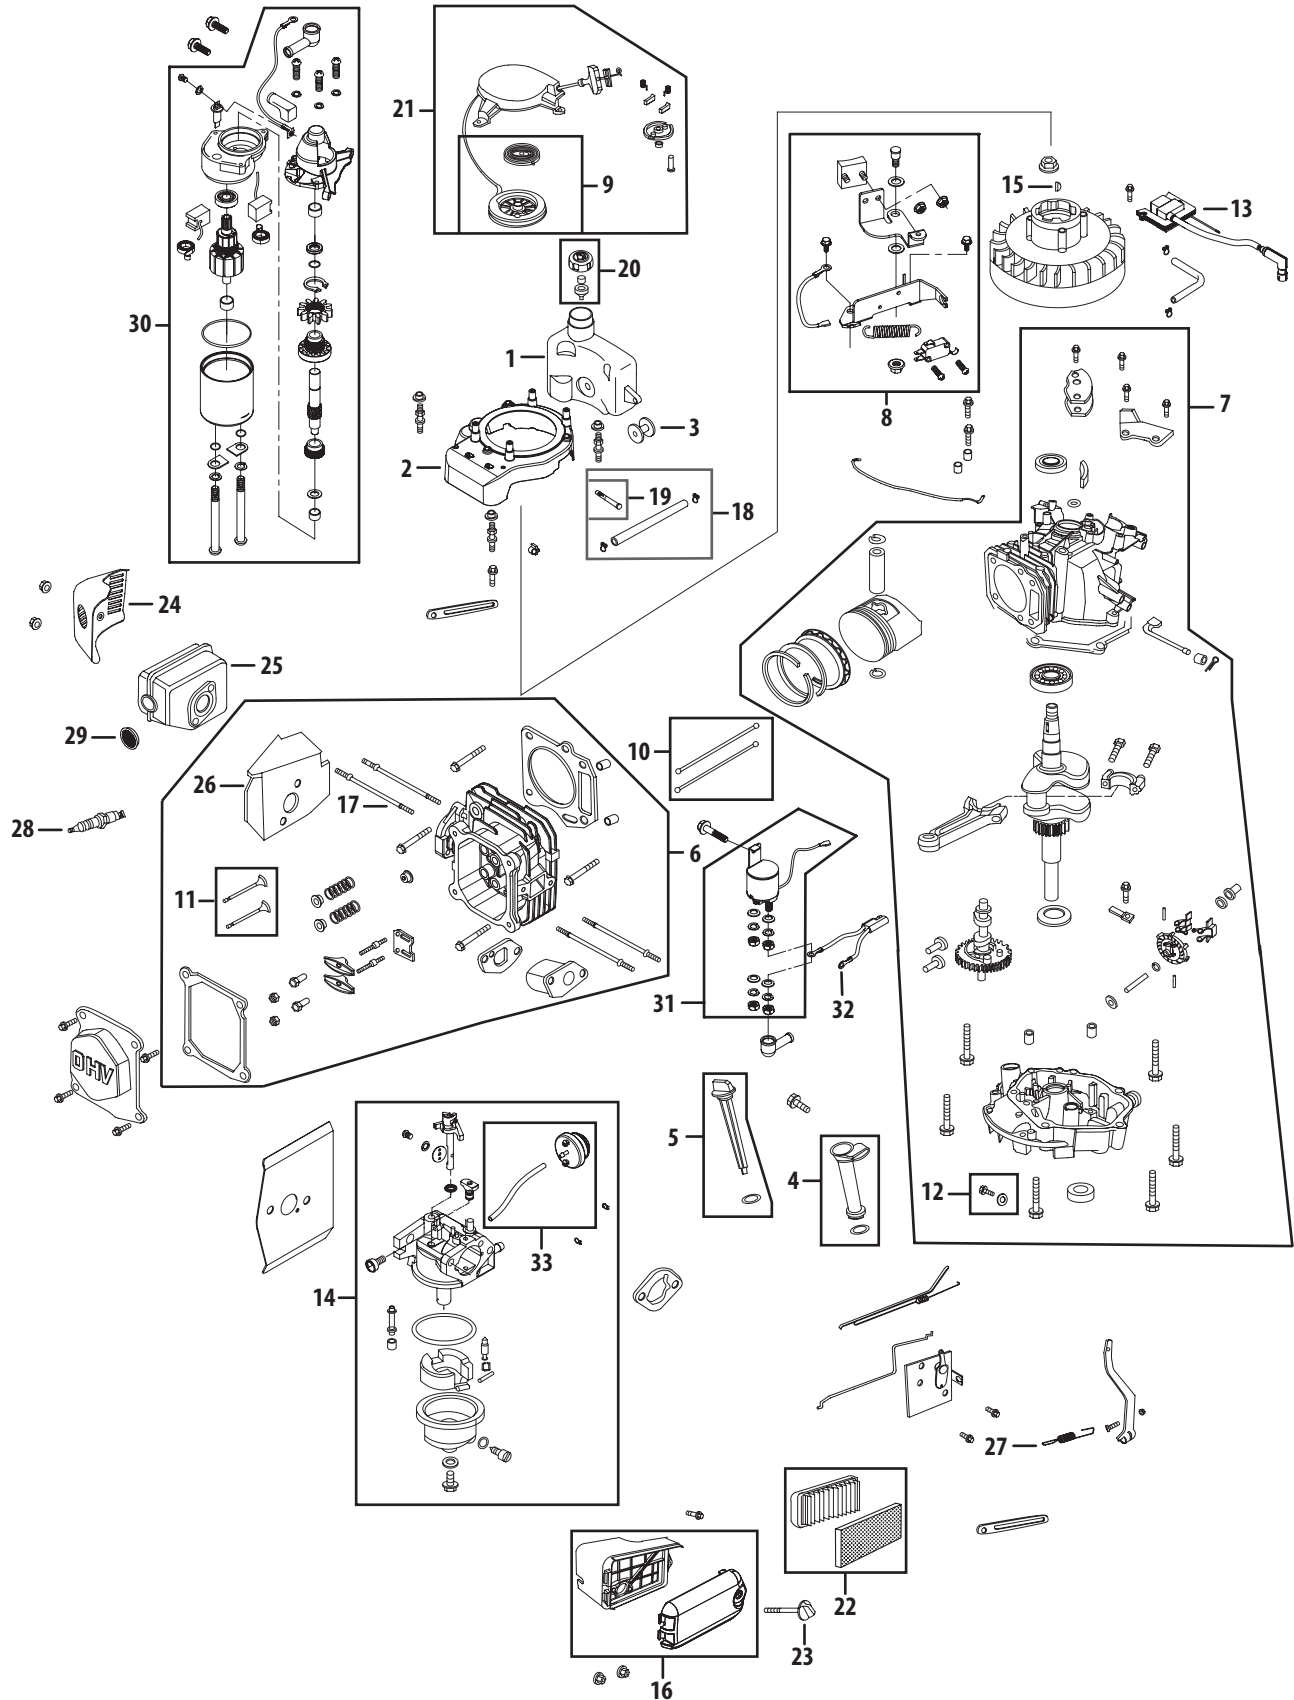


Ref No.	Part Number	Description
1.	951-10368	Fuel Tank
2.	951-10855	Flywheel Shroud
3.	951-10335	Rubber Fuel Tank Mntg. Washer
4.	951-10334	Oil Filler Tube Assembly
5.	951-10852	Dipstick Assembly
6.	951-10413A	Cylinder Head Complete
7.	951-10857A	Short Block Assembly
8.	951-10858	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Ass'y.
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Ass'y.
13.	951-10854	Ignition Coil
14.	951-10881	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10412A	Air Cleaner Housing Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10300	Fuel Cap Assembly


Ref No.	Part Number	Description
21.	951-10299A	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10411	Muffler Guard
25.	951-10403	Muffler
26.	951-11179	Muffler Gasket /Heat Shield
27.	951-11178	Governor Return Spring
28.	951-10292	Spark Plug
29.	951-10351	Spark Arrestor
30.	951-10880A	Electric Starter
31.	951-10823	Relay Assembly
32.	951-10824	Relay Harness Connector
33.	951-10888	Primer Assembly
–	952Z2P70MOB	Engine – Complete
–	712-04221	Flywheel Nut
–	951-11045	Flywheel
–	951-11238	Governor Arm Bracket
–	951-10890	Carburetor Kit – Major
–	951-10859	Cylinder Head Service Kit
–	951-10416	Gasket Kit – Complete
–	951-10417	Gasket Kit – External

NOTE: Illustrated parts without a numeric call-out are not servicable components.

 5P70M0B Air Cleaner

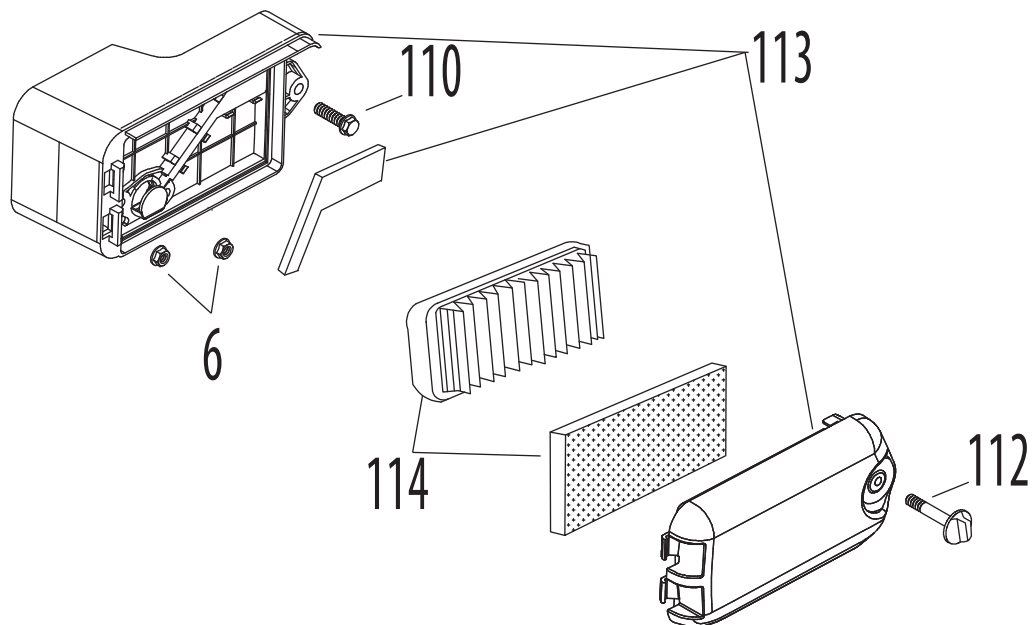


Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
110	710-04969	A/F Base Bolt M6×30
112	951-10297	Air Filter Cover Thumb Screw
113	951-10412A	Air Cleaner Housing Ass'y Comp
114	951-10298	Air Filter, Sponge Pre-Filter

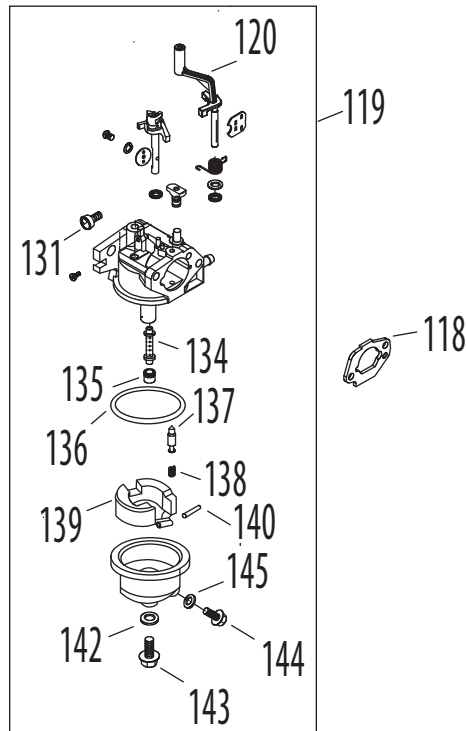 

Ref.	Part Number	Description
118	951-11257	Carburetor Gasket Plate
119	951-10765	Carburetor Assembly
120	N/A	Choke & Throttle Shaft Dust Seals
131	N/A	Idle Speed Adjusting Screw
134	N/A	Main Nozzle / Emulsion Tube
135	N/A	Main Jet
136	951-11589	Fuel Bowl O-Ring
137	N/A	Needle Valve (Float)
138	N/A	Needle Valve Spring

Ref.	Part Number	Description
139	N/A	Float
140	N/A	Float Pin
142	951-11348	Fuel Bowl Gasket
143	710-04945	Fuel Bowl Mounting Bolt
144	710-04903	Fuel Drain Plug
145	951-11349	Fuel Drain Plug Gasket
	951-11773	Carburetor Repair Kit - Major (Incl Ref No. 120,131,134-142,145)

 
5P70M0B Crankcase

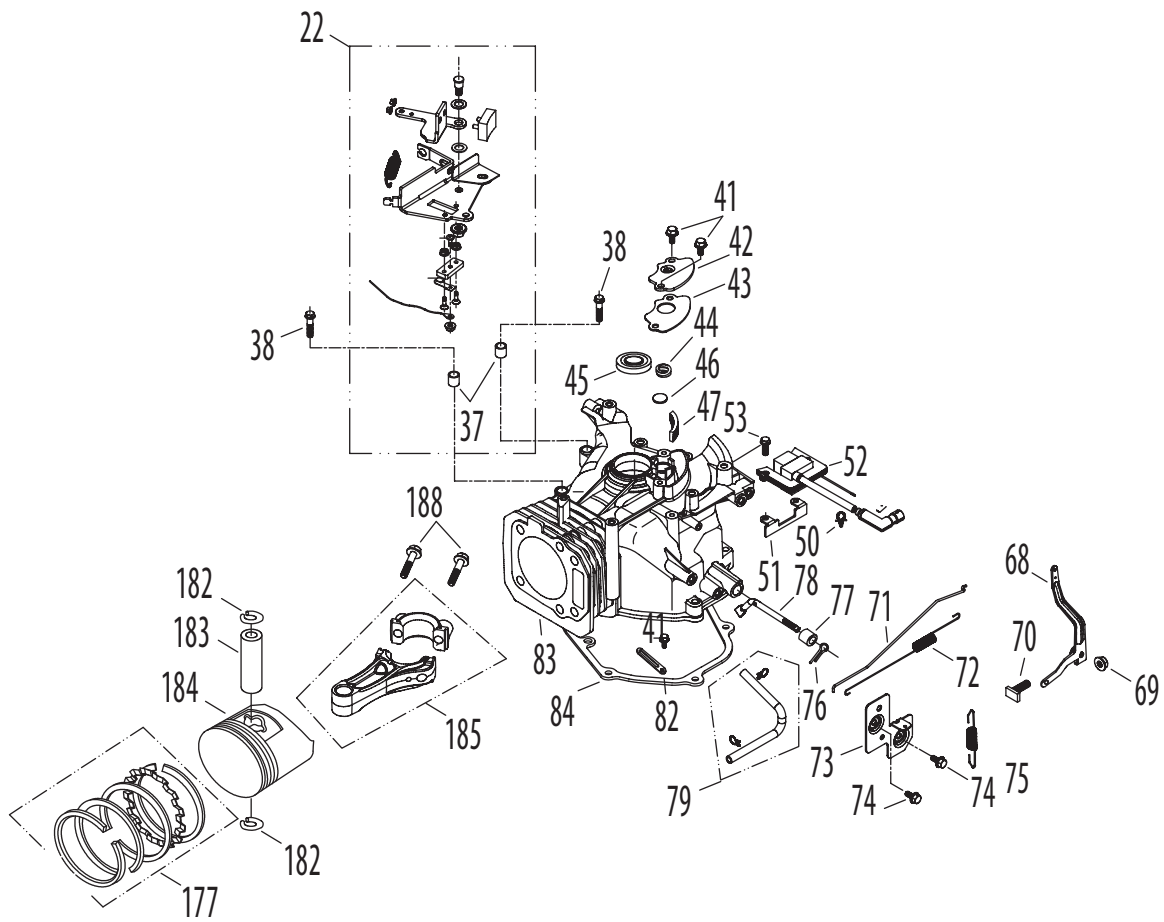

Ref.	Part Number	Description
22	951-10321A	Brake Assembly
41	710-04916	Bolt M6×14
42	951-11728	Breather Cover Plate
43	951-11729	Breather Gasket
44	732-04718	Breather Spring
45	951-11545	Lower Crankshaft Seal
46	951-11735	Breather Valve
47	951-11762	Breather Screen
50	951-11618	Plastic Clamp 6.3×8
51	951-11619	Ignition Coil Bracket
52	951-10366	Ignition Coil Assembly
53	710-04979	Bolt M6×18
68	951-11238	Governor Arm Bracket
69	712-04212	Governor Arm Nut M6
70	710-04908	Governor Arm Bolt
71	951-11259	Throttle Linkage
72	951-11258	Throttle Linkage Spring
73	951-11620	Component Bracket
74	710-04915	Bolt M6×12
75	951-10293	Governor Spring
76	714-04074	Governor Cotter Pin
76	714-04074	Governor Cotter Pin


Ref.	Part Number	Description
77	951-11574	Governor Seal
78	951-11608	Governor Arm Shaft
79	951-11260	Breather Hose Assembly
82	951-11622	Flexible Clamp
83	N/A	Crankcase Complete
84	951-11763	Crankcase Cover Gasket
177	951-11253	Piston Ring Set
182	951-11632	Piston Pin Snap Ring
183	951-11633	Piston Pin
184	951-11634	Piston
185	951-11768	Connecting Rod Assembly
188	710-05162	Connecting Rod Bolt
	951-10414B	Short Block Assembly (Incl Ref No. 41-47,57,76-78,83-86, 88,91,93-97,107-109,118,147,148,164, 167,172,173,175-177,182-185,188)
	951-11770	Gasket Kit - Complete (Incl Ref No. 43,45,77,84,91,94, 109,146,148,164,167,182)
	951-11772	Gasket Kit - External (Incl Ref 43,91,94,146,148,164,167)
	952Z5P70M0B	Engine Complete

 5P70M0B Crankshaft

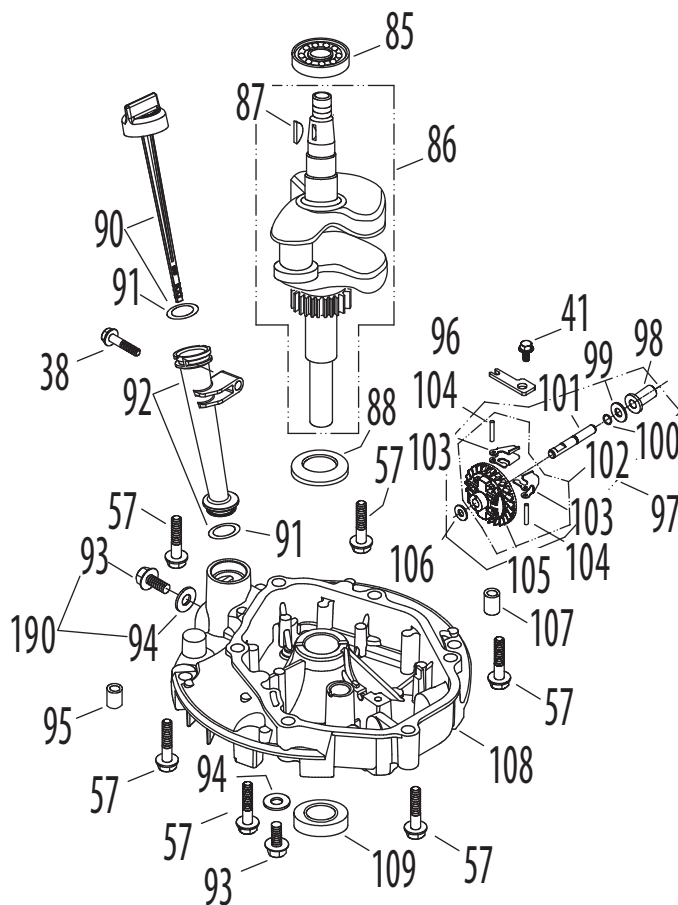

Ref.	Part Number	Description
38	710-04980	Bolt M6×35
41	710-04916	Bolt M6×14
57	710-04922	Tank/Sump Bolt M8x50
85	951-11369	Main Bearing
86	951-11624	Crankshaft Assembly
87	951-10307	Woodruff Key
88	736-04491	Crankshaft Thrust Washer
90	951-11764	Dipstick Assembly
91	951-11547	Dipstick / Oil Fill Tube O-Ring
92	951-11765	Oil Filler Tube Assemblby


Ref.	Part Number	Description
93	710-04906	Oil Drain Plug
94	736-04440	Oil Drain Plug Washer
95	715-04089	Crankcase Cover Dowel 9×14
96	951-11625	Governor Gear Mounting Plate
97	951-11626	Governor Gear/Shaft Assembly
107	715-04092	Crankcase Cover Dowel 7×14
108	N/A	Crankcase Cover - dual drain
109	951-11627	Lower Crankshaft Seal
190	951-10370	Oil Drain Plug and Washer Ass'y

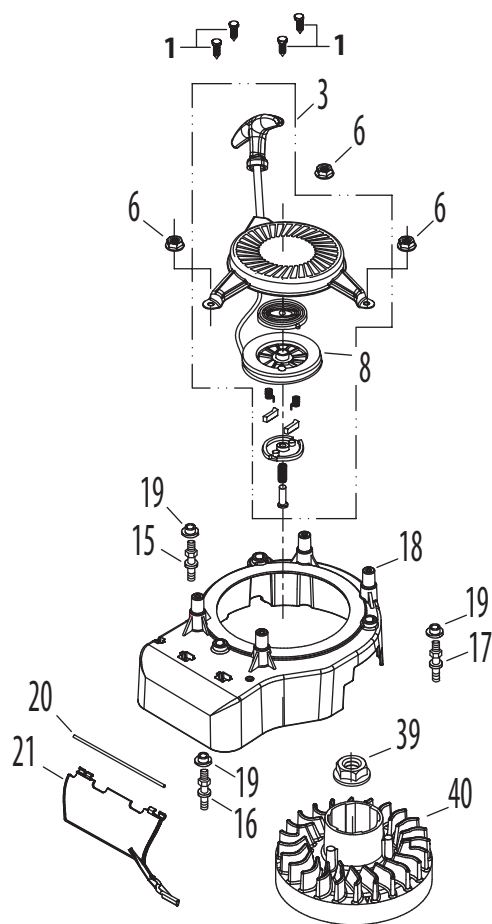 

Ref.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1.0"
3	951-11720	Recoil Starter Assembly
6	712-04212	Nut M6 X 10 Mm
8	951-11721	Recoil Spring & Pulley Assembly
15	710-04976	Starter/Shroud Stud M6x85-48
16	710-04977	Starter/Shroud Stud M6x87-51.5
17	710-04978	Starter/Shroud Stud M6x79

Ref.	Part Number	Description
18	951-10764	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	951-11610	Air Vane Shaft
21	951-11611	Air Vane
39	712-04221	Flywheel Nut M14
40	951-11046	Flywheel

 5P70M0B Cylinder Head

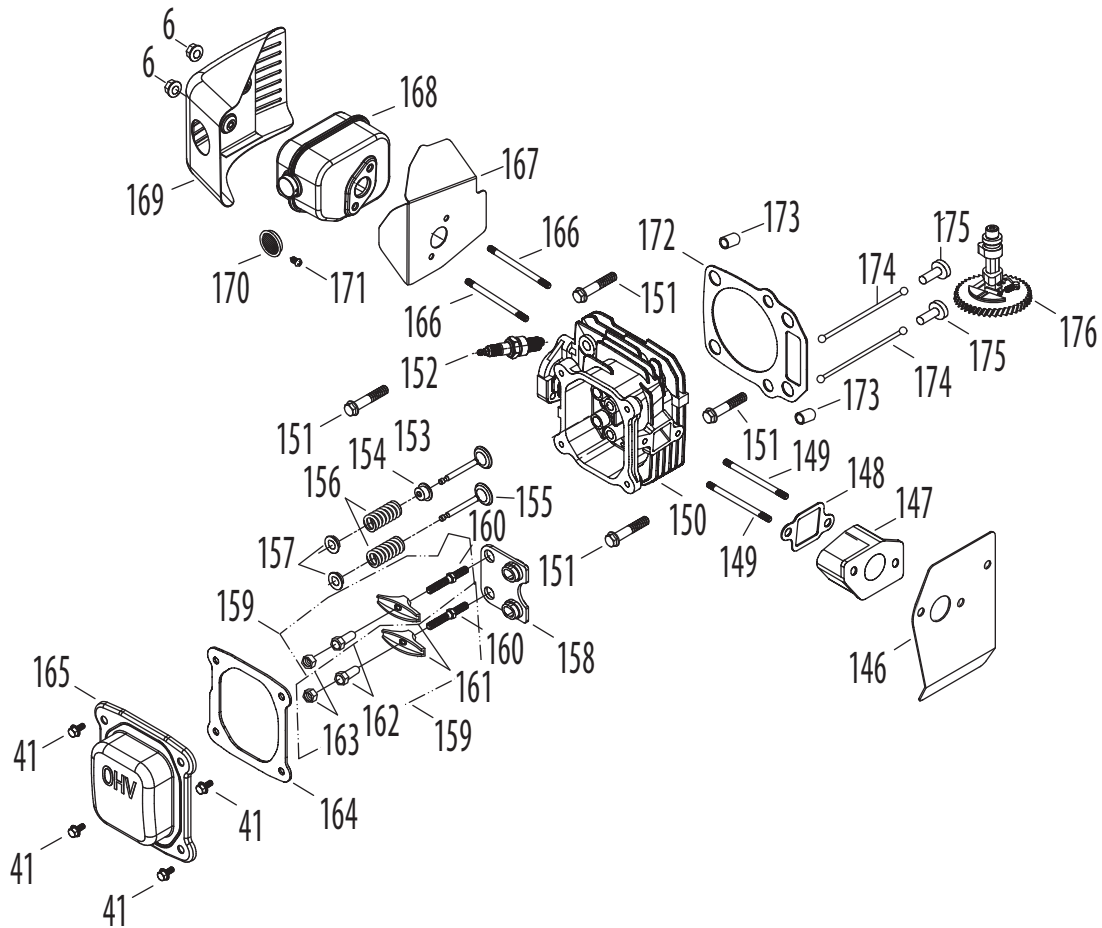


5P70M0B Cylinder Head

Ref.	Part Number	Description
6	712-04212	Nut M6 X 10 Mm
41	710-04916	Bolt M6x14
146	951-11766	Carburetor Gasket
147	951-11255	Carburetor Insulator
148	951-11254	Carburetor Insulator Gasket
149	710-04981	Carb Stud M6x113
150	N/A	Cylinder Head
151	710-04982	Head Bolt M8x54
152	951-10292	Spark Plug/F6rtc
153	951-10345	Valve Kit
154	N/A	Valve Seal
155	951-10345	Valve Kit
156	N/A	Valve Spring
157	N/A	Valve Spring Retainers
158	951-11629	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
161	N/A	Rocker Arm
162	751-11123	Fulcrum Nut
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-11548	Valve Cover
166	710-05094	Muffler Stud M6x95
166	951-10342	Muffler Stud Assemblby

Ref.	Part Number	Description
167	951-11739	Muffler Gasket
168	951-10403	Muffler Assembly
169	951-10411	Muffler Shield
170	951-10351	Spark Arrestor
171	710-04983	Spark Arrestor Screw
172	951-11630	Cylinder Head Gasket
173	715-04108	Cylinder Head Dowel 10x16
174	951-10344	Push Rod Kit
175	951-11607	Tappet
176	951-11767	Camshaft Assembly
	951-10413A	Cylinder Head Assembly (Incl Ref No. 147,148,150, 153-158,160-164,167,172)
	951-10414B	Short Block Assembly (Incl Ref No. 41-47,57,76-78,83-86, 88,91,93-97,107-109,118,147,148,164, 167,172,173,175-177,182-185,188)
	951-11770	Gasket Kit - Complete (Incl Ref No. 43,45,77,84,91,94, 109,146,148,164,167,182)
	951-11772	Gasket Kit - External (Incl Ref 43,91,94,146,148,164,167)
	952Z5P70M0B	Engine Complete

 
5P70M0B Fuel Tank

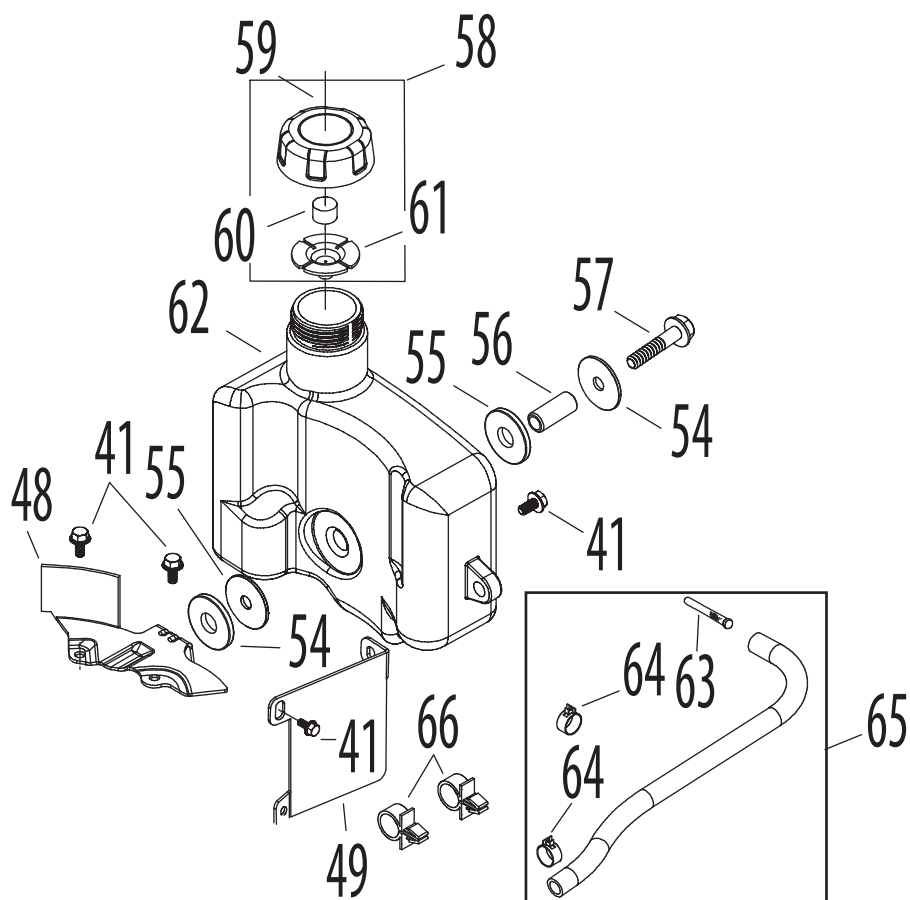

Ref.	Part Number	Description
41	710-04916	Bolt M6×14
48	951-11616	Fuel Tank Bottom Bracket
49	951-11617	Tank/Label Bracket
54	736-04456	Fuel Tank Washer
55	951-10335	Rubber Bushing
56	750-05322	Fuel Tank Bushing
57	710-04922	Tank/Sump Bolt M8x50
58	951-10300	Fuel Cap Assembly
59	N/A	Fuel Cap
60	N/A	Foam Insert
61	N/A	Vent Gasket
62	951-10368	Fuel Tank Assembly
63	951-10358	Fuel Filter
64	951-11731	Fuel Hose Clamp
65	951-10364	Fuel Line Kit
66	723-04071	Plastic Support Clamp


Page Left Blank Intentionally

 1P65B0B-1 Air Cleaner

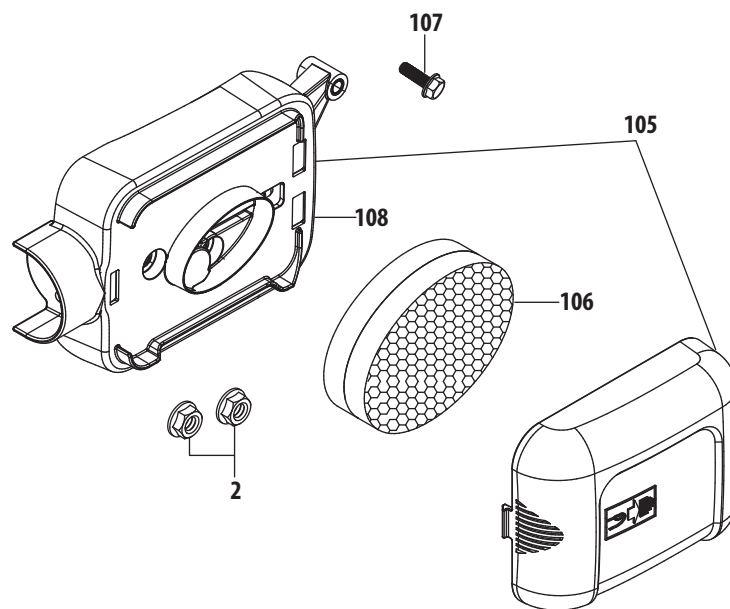

Ref.	Part Number	Description
2	712-04212	Nut M6 X 10 Mm
105	951-10739	Air Cleaner Housing Assy (Incl. 108)
106	951-10732	Air Filter Element, Oval
107	710-04969	Bolt M6×30
108	951-10739	Air Filter Base

 
1P65B0B-1 Carburetor Assembly

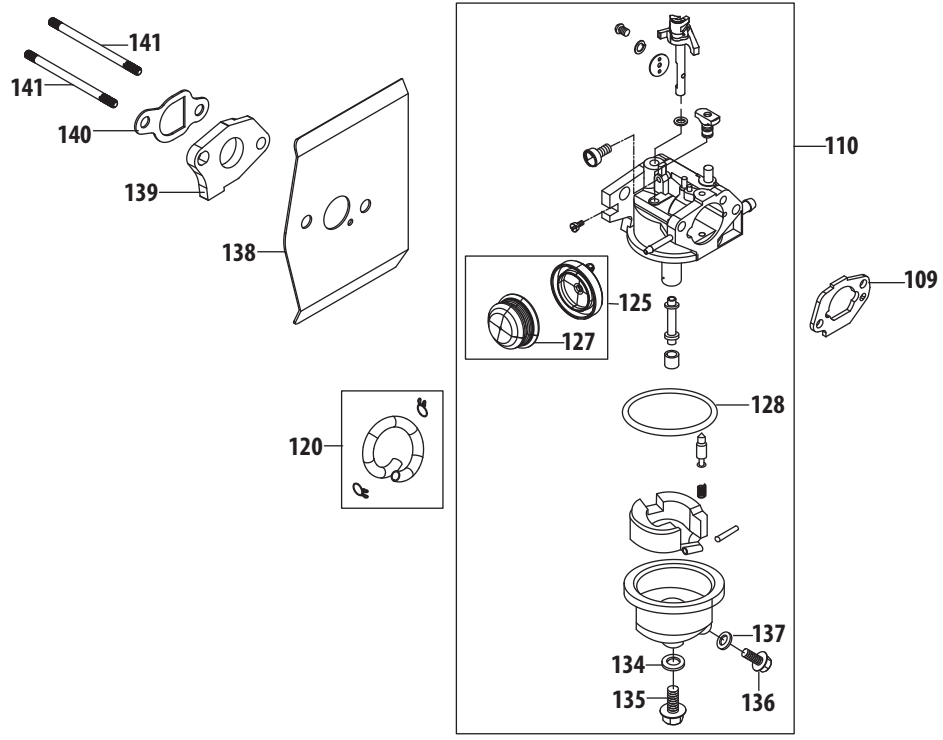

Ref.	Part Number	Description
109	951-11525	Carburetor Gasket Plate
110	951-11707	Carburetor Assembly
120	951-11736	Primer Hose Assembly
125	951-10639A	Primer Assembly
127	951-11824	Primer Bulb
128	951-11589	Fuel Bowl O-Ring
134	951-11348	Fuel Bowl Gasket
135	710-04945	Fuel Bowl Mounting Bolt
136	710-04938	Fuel Drain Plug

Ref.	Part Number	Description
137	951-11349	Fuel Drain Plug Gasket
138	951-11737	Carburetor Gasket
139	951-11738	Carburetor Insulator
140	951-11528	Carburetor Insulator Gasket
141	710-05093	Carb Stud M6X92
	951-12431	Carburetor Kit - Major (Incl. 116,117,123,124, 128-132,134,137)

 
1P65B0B-1 Crankcase

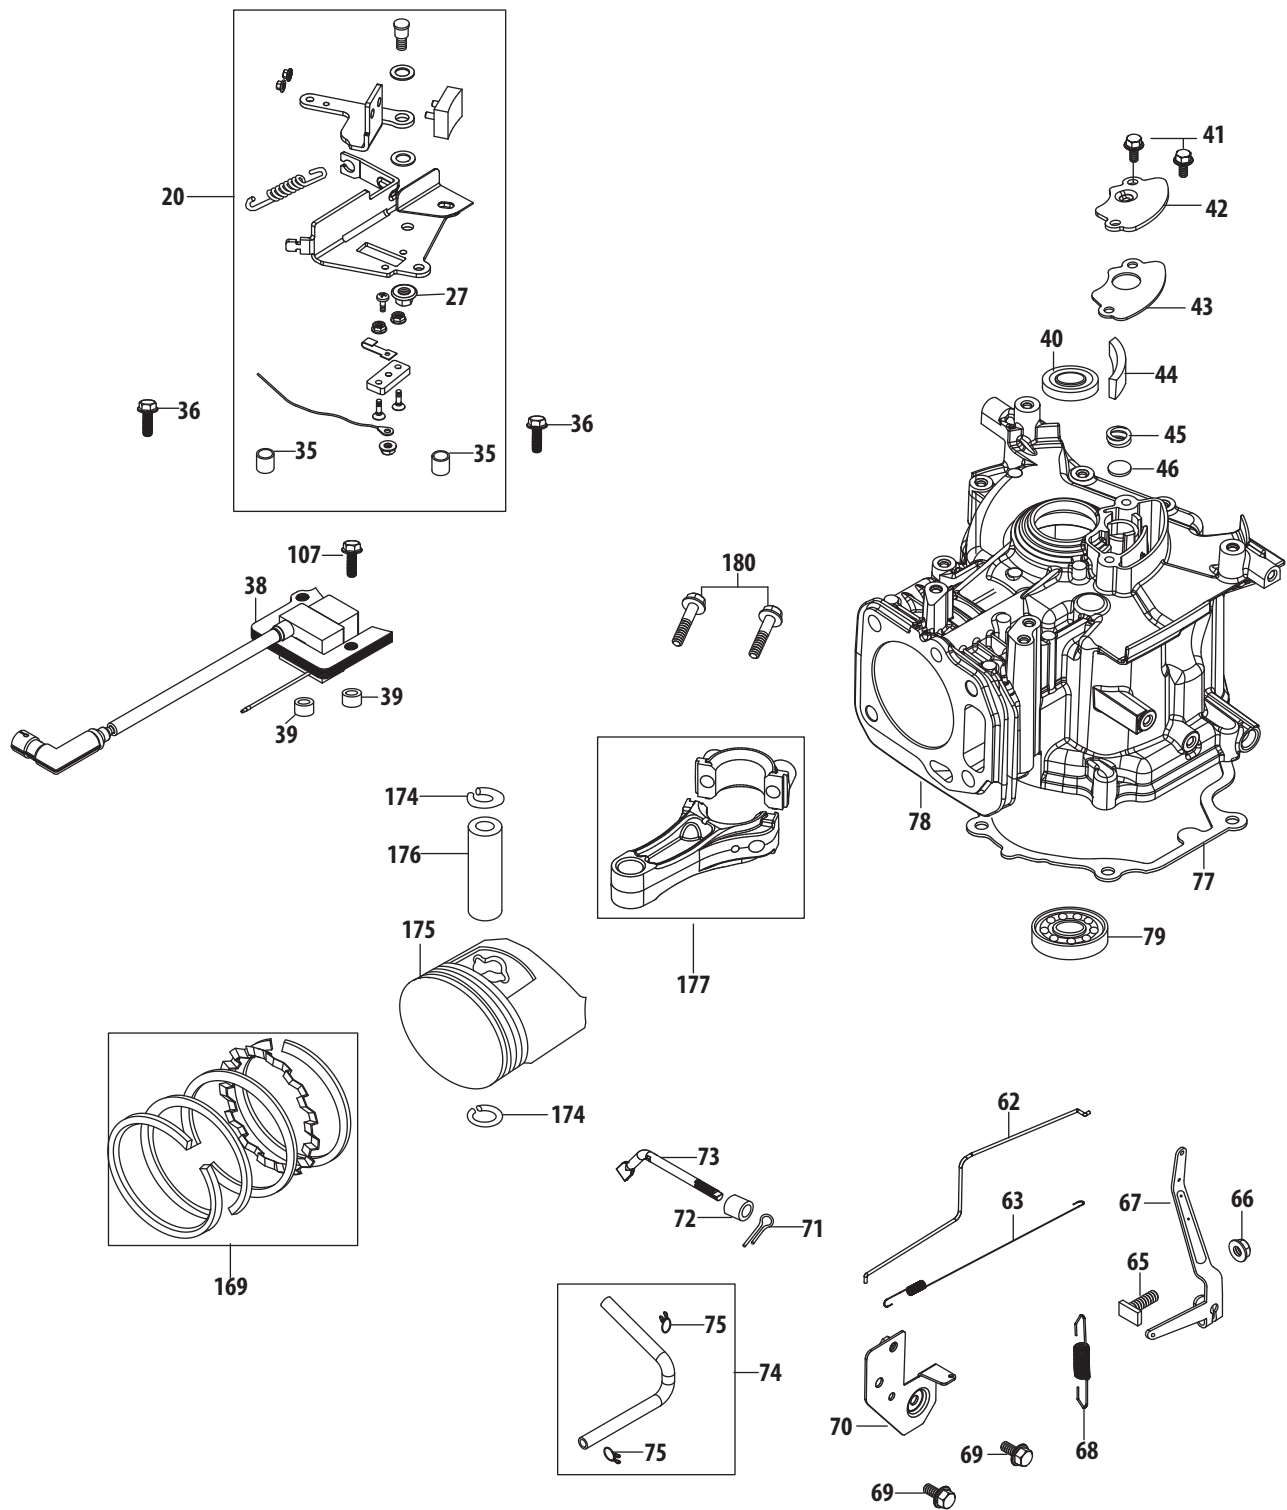

Ref.	Part Number	Description
20	951-10320	Brake Assembly
27	712-04219	Brake Arm Nut
35	750-05384	Brake Spacer
36	710-04980	Brake Assy Bolt M6x35
38	951-10367	Ignition Coil Assembly
39	951-11675	Ignition Coil Spacer
40	951-11596	Upper Crankshaft Seal
41	710-04916	Bolt M6x14
42	951-11612	Breather Cover Plate
43	951-11613	Breather Gasket
44	951-11730	Breather Screen
45	732-04718	Breather Spring
46	951-11614	Breather Valve
62	951-11677	Throttle Linkage
63	951-11522	Throttle Linkage Spring
65	710-04908	Governor Arm Bolt
66	712-04212	Governor Arm Nut M6
67	951-11523	Governor Arm
68	951-11273	Governor Spring
69	710-04915	Bolt M6x12
70	951-11544	Component Bracket
71	714-04074	Governor Cotter Pin
72	951-11574	Governor Seal


Ref.	Part Number	Description
73	951-11608	Governor Arm Shaft
74	951-11725	Breather Hose Assembly
75	726-04101	Breather Hose Clamp
77	951-11732	Crankcase Cover Gasket
78	951-11747	Short Block Assembly (Incl. 37,40-46,71-73,77-81,83-85, 98-103,109,139,140,155,159,164, 165,167-169,174-177)
79	951-11369	Main Bearing
107	710-04969	Bolt M6x30
169	951-11688	Piston Ring Set
174	951-11603	Piston Pin Snap Ring
175	951-11605	Piston
176	951-11604	Piston Pin
177	951-11744	Connecting Rod Assembly
180	710-05162	Connecting Rod Bolt
	952Z1P65B0B-1	Complete Engine
	951-11710	Gasket - External (Incl. 43,97,99,138-140,155,159)
	951-11709	Gasket Kit - Complete (Incl. 40,43,72,77,97,99,103, 139-140,155,159,164)

 1P65B0B-1 Crankshaft & Crankcase Cover

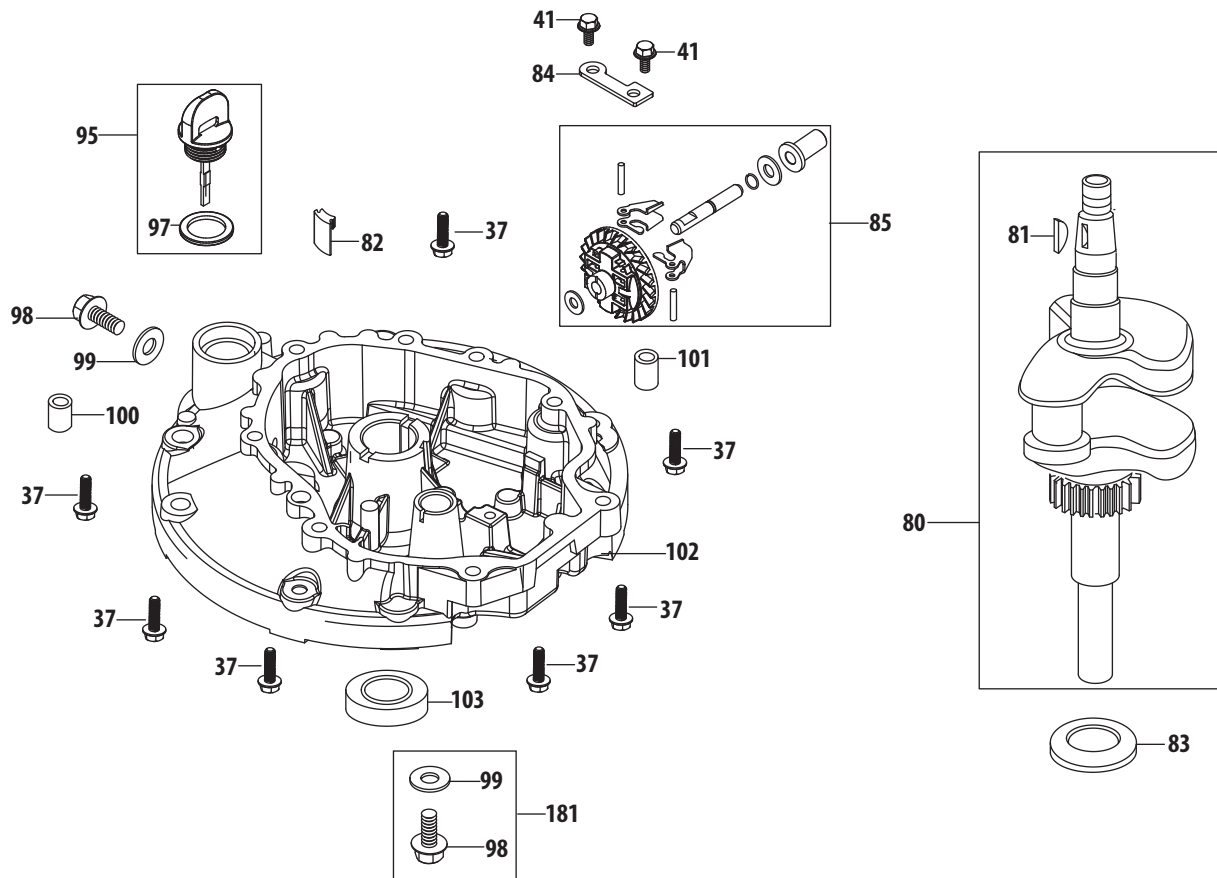


Ref.	Part Number	Description
37	710-04920	Bolt M6X28
41	710-04916	Bolt M6x14
80	951-11591	Crankshaft Assembly
81	951-10307	Woodruff Key
82	951-11733	Oil Return Seal
83	736-04491	Crankshaft Thrust Washer
84	951-11609	Governor Gear Mounting Plate
85	951-11549	Governor Gear/Shaft Assembly
95	951-10617	Dipstick Assembly

Ref.	Part Number	Description
97	951-11734	Dipstick O-Ring
98	710-04906	Oil Drain Plug
99	736-04440	Oil Drain Plug Washer
100	715-04089	Crankcase Cover Dowel 9X14
101	715-04092	Crankcase Cover Dowel 7X14
102	951-11823	Crankcase Cover
103	951-11545	Lower Crankshaft Seal
181	951-10370	Oil Drain Plug & Washer Ass'y

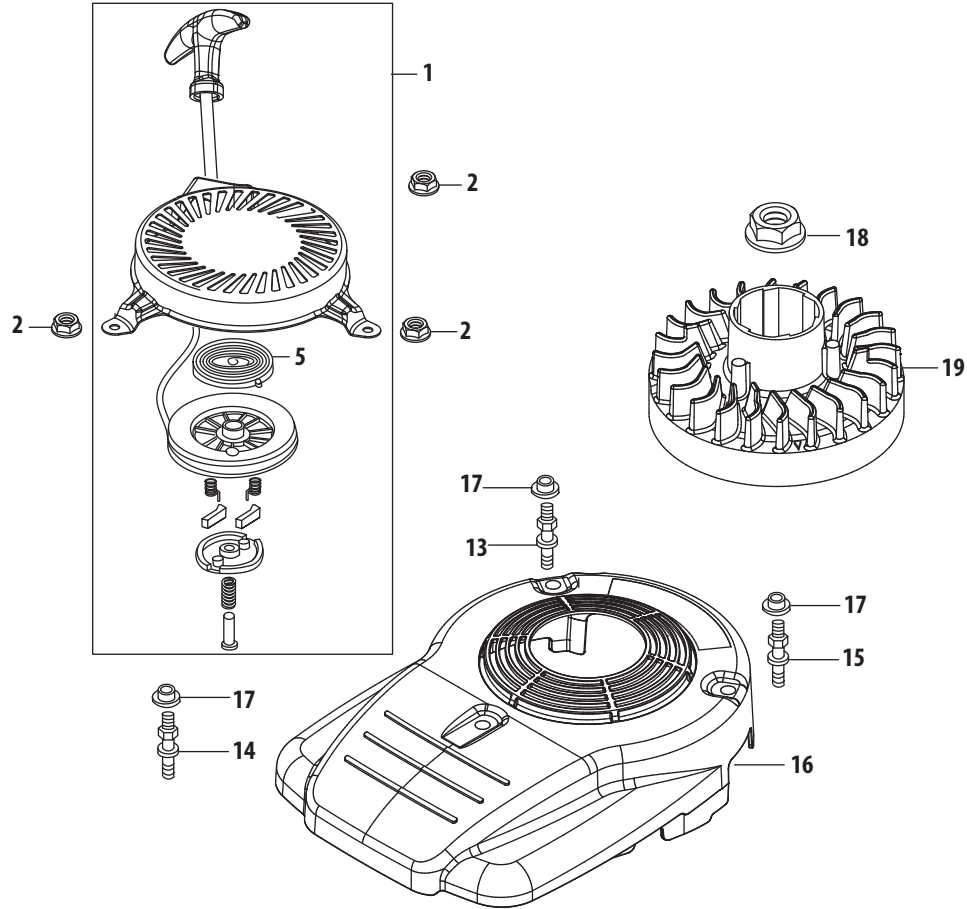 

Ref.	Part Number	Description
1	951-11720	Recoil Starter Assembly
2	712-04212	Nut M6 X 10 Mm
5	951-11721	Recoil Spring
13	751-11722	Starter/Shroud Stud Black
14	951-11723	Starter/Shroud Stud Front
15	951-11724	Starter/Shroud Stud White
16	731-05692	Engine Shroud (M0)
17	750-05320	Engine Shroud Spacer
18	712-04287	Flywheel Nut M14
19	951-11043	Flywheel

 
1P65B0B-1 Cylinder Head

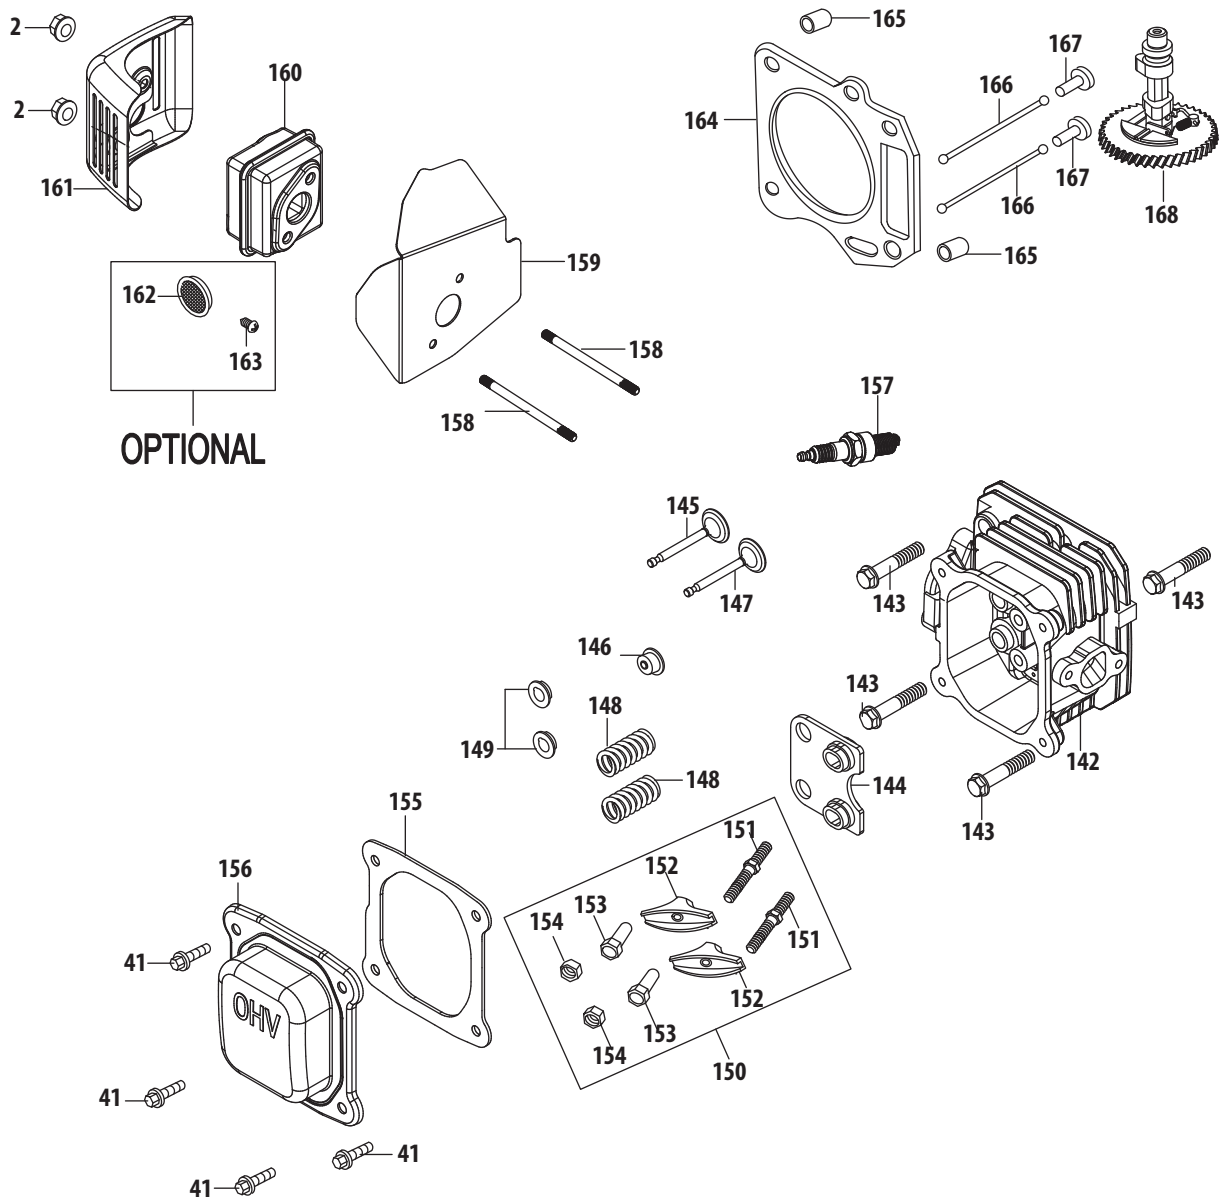

Ref.	Part Number	Description
2	712-04212	Nut M6 X 10 Mm
41	710-04916	Bolt M6x14
142	951-11746	Cylinder Head (Incl. 139,140,142,144-149, 151-155,159,164)
143	710-04982	Head Bolt M8x54
144	951-11687	Push Rod Guide
145	951-10313	Intake Valve
146	951-11818	Intake Valve Seal
147	951-10313	Exhaust Valve
148	951-12004	Valve Spring
149	951-11977	Valve Spring Retainer
150	951-11606	Rocker Arm Assembly
151	710-04902	Rocker Arm Stud
152	951-12001	Rocker Arm
153	751-11123	Fulcrum Nut
154	751-11124	Jam Nut
155	951-11551	Valve Cover Gasket
156	951-11548	Valve Cover
157	951-10292	Spark Plug/F6Rtc

Ref.	Part Number	Description
158	951-11740	Muffler Stud M6X68
158	951-11745	Muffler Stud Assembly
159	951-11739	Muffler Gasket
160	951-10734	Muffler Assembly
161	951-10735	Muffler Shield
162	951-10351	Spark Arrestor
163	710-04983	Spark Arrestor Screw
164	951-11555	Cylinder Head Gasket
165	715-04090	Cylinder Head Dowel 10X16
166	951-10314	Push Rod
167	951-11607	Tappet
168	951-11741	Camshaft Assembly
	952Z1P65B0B-1	Complete Engine
	951-10846A	Cylinder Head Svc Kit (Incl. 143,146,155,164)
	951-11710	Gasket - External (Incl. 43,97,99,138-140,155,159)
	951-11709	Gasket Kit - Complete (Incl. 40,43,72,77,97,99,103, 139-140,155,159,164)

 
1P65B0B-1 Fuel Tank & Mounting

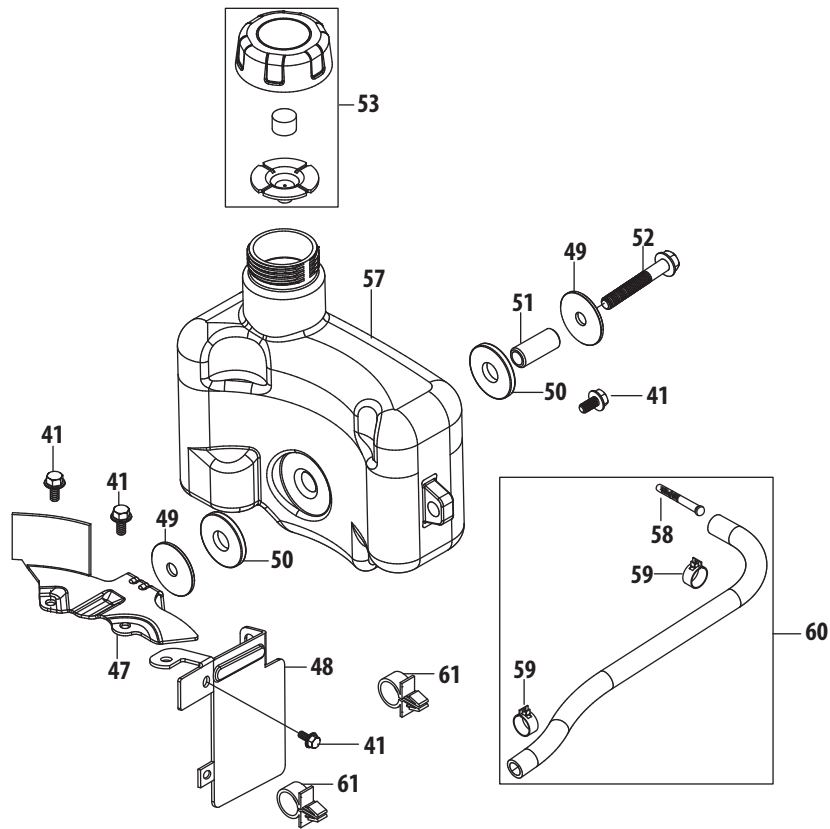

Ref.	Part Number	Description
41	710-04916	Bolt M6x14
47	951-11542	Fuel Tank Bottom Bracket
48	951-11748	Tank/Label Bracket
49	736-04456	Fuel Tank Washer
50	951-10335	Rubber Bushing
51	750-05322	Fuel Tank Bushing
52	710-04922	Tank Bolt M8X50
53	951-10300	Fuel Cap Assembly
57	951-10337	Fuel Tank Assembly
58	951-10358A	Fuel Filter
59	951-11700	Fuel Hose Clamp
60	951-10363	Fuel Line Kit
61	723-04071	Plastic Support Clamp


[illegible]

 2P70M0C Air Cleaner

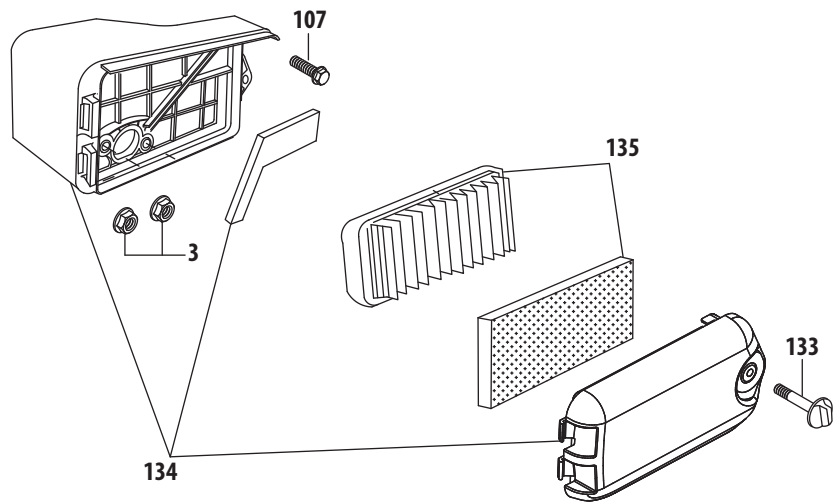

Ref.	Part Number	Description
3	712-04212	Nut M6 X 10 Mm
107	710-04980	Bolt M6×35
133	951-10297	Air Filter Cover Thumb Screw
134	951-10412A	Air Cleaner Housing Assy Comp
135	951-10298	Air Cleaner Kit

 
2P70M0C Carburetor Assembly

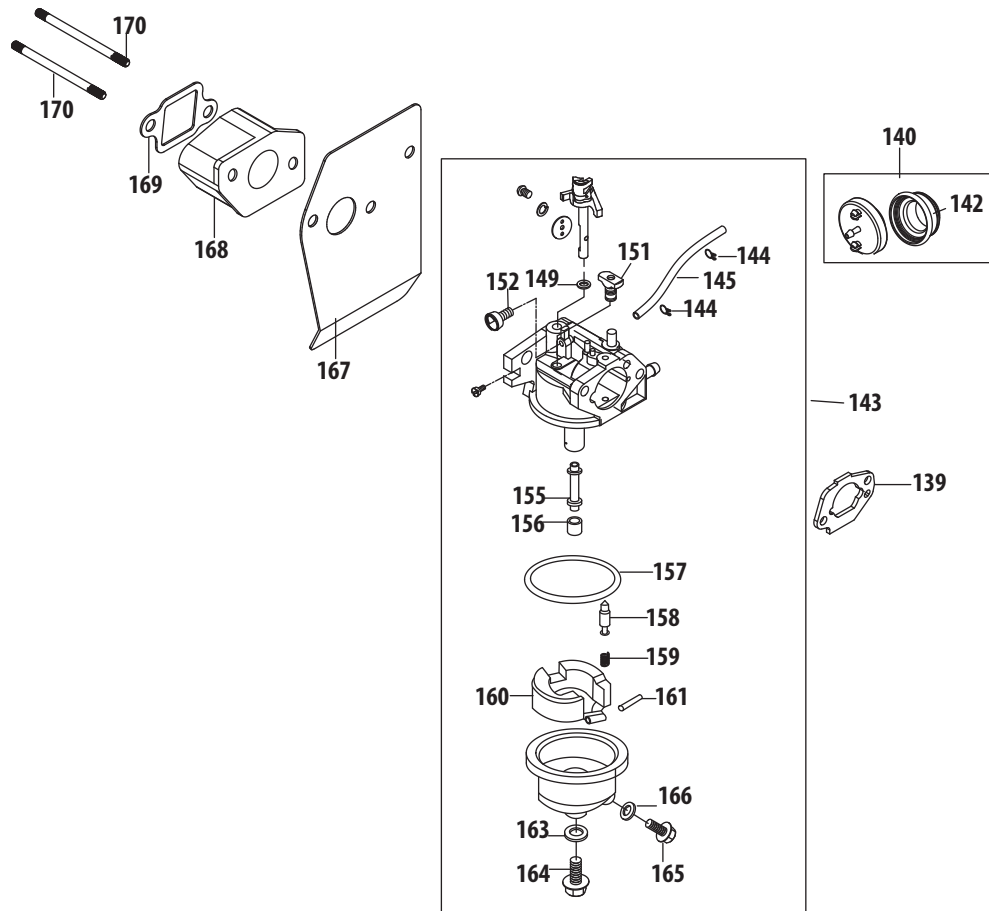

Ref.	Part Number	Description
139	951-11525	Carburetor Gasket Plate
140	951-10639A	Primer Assembly
142	951-11824	Primer Bulb
143	951-10881	Carburetor Assembly
144	723-04093	Primer Hose Clamp
145	951-12473	Primer Hose
149	N/A	Throttle Shaft Fiber O-Ring
151	N/A	Idle Jet Assembly
152	N/A	Idle Speed Adjusting Screw
155	N/A	Emulsion Tube
156	N/A	Main Jet
157	951-11597	Fuel Bowl O-Ring
158	N/A	Needle Valve
159	N/A	Needle Valve Spring

Ref.	Part Number	Description
160	N/A	Float
161	N/A	Float Pin
163	951-11348	Fuel Bowl Gasket
164	710-04945	Fuel Bowl Mounting Bolt
165	710-04938	Fuel Drain Plug
166	951-11349	Fuel Drain Plug Gasket
167	951-12110	Carburetor Gasket
168	951-11255	Carburetor Insulator
169	951-11254	Carburetor Insulator Gasket
170	710-04981	Carb Stud M6x113
	951-10888B	Primer Assembly (Incl.140 145)
	951-12425	Carburetor Kit - Major (Incl.149,151,152,155-161,163,166)

 
2P70M0C Crankcase

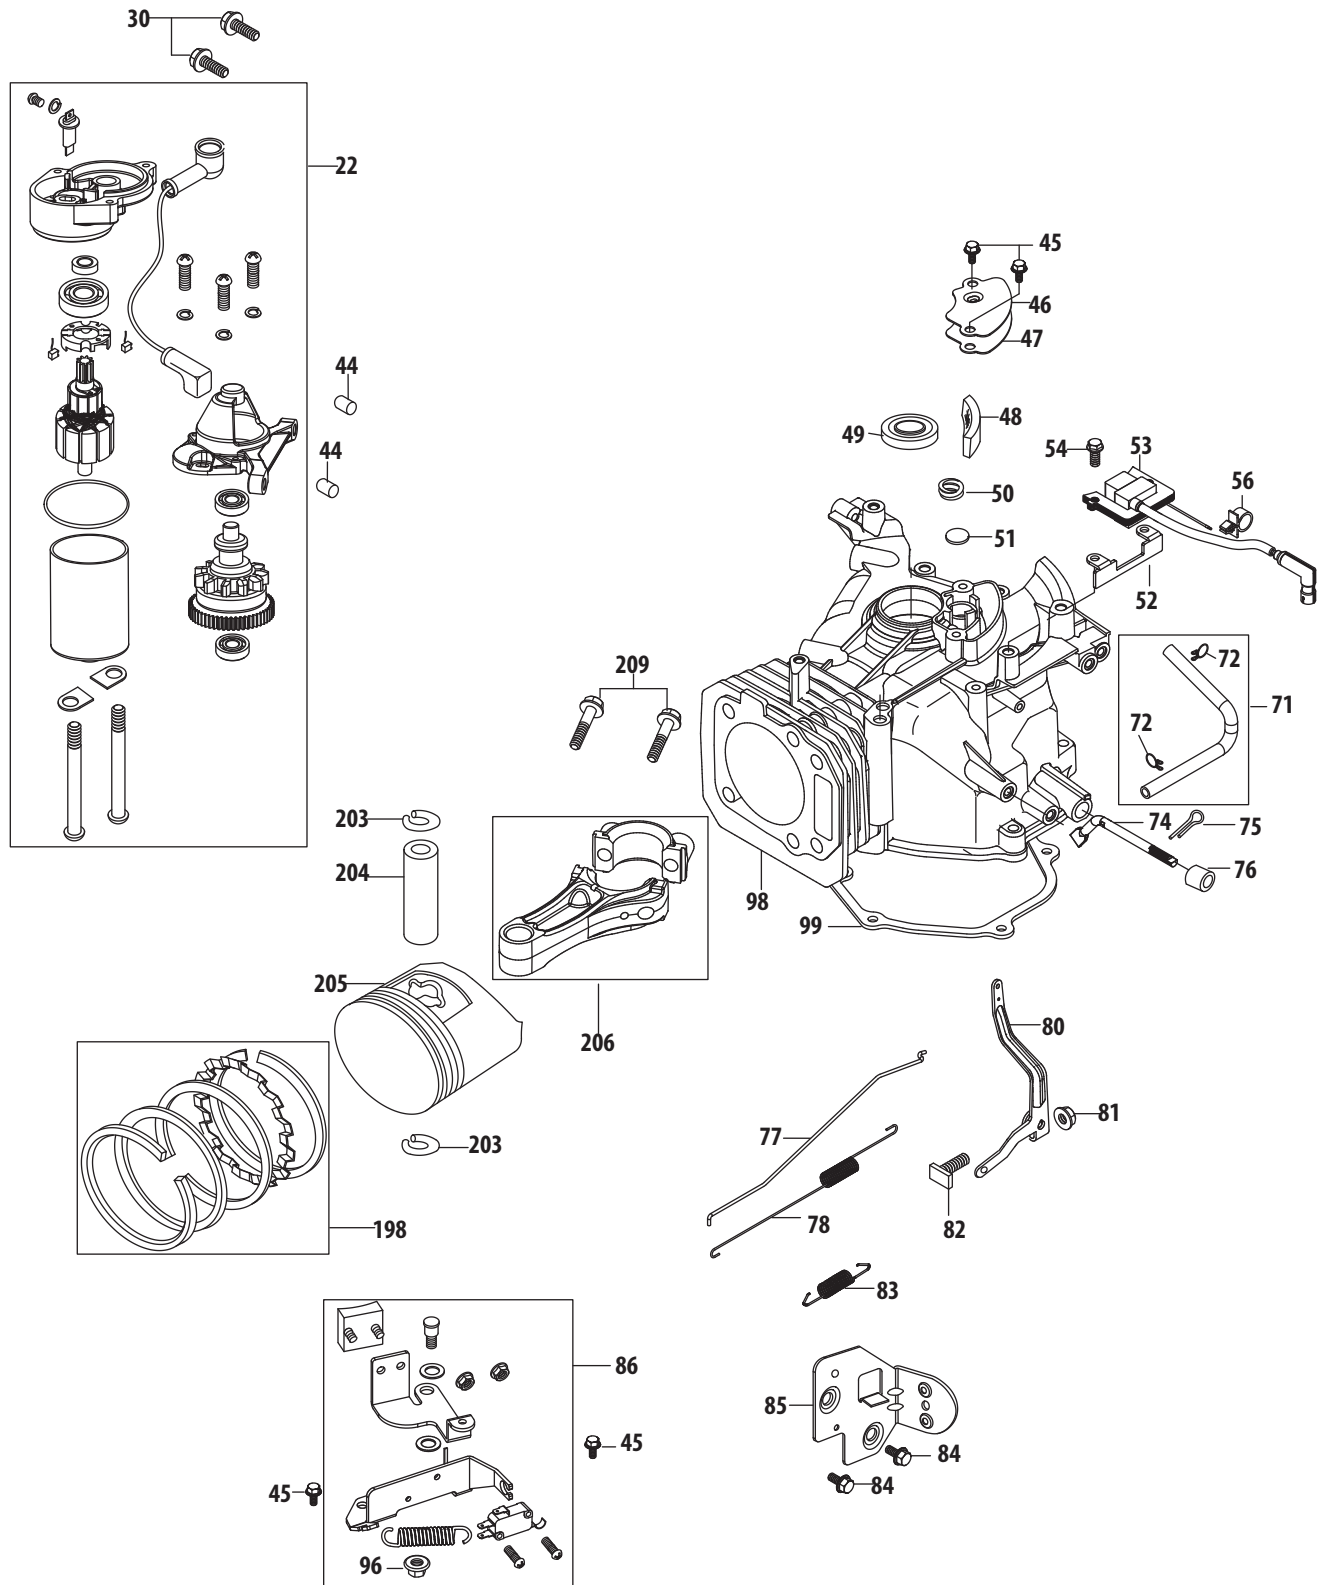

Ref.	Part Number	Description
22	951-12457	Electrical Starter Assembly
30	710-04969	Bolt M6×30
44	715-04088	Dowel Pin 8×8
45	710-04916	Bolt M6×14
46	951-11612	Breather Cover Plate
47	951-11613	Breather Gasket
48	951-11762	Breather Screen
49	951-11545	Upper Crankshaft Seal
50	732-04718	Breather Spring
51	951-11614	Breather Valve
52	951-11619	Ignition Coil Bracket
53	951-10854	Ignition Coil Assembly
54	710-04979	Bolt M6×18
56	951-11618	Plastic Clip
71	951-11260	Breather Hose Assembly
72	726-04101	Breather Hose Clamp
74	951-11608	Governor Arm Shaft
75	714-04074	Governor Arm Cotter Pin
76	951-11574	Governor Seal
77	951-11259	Throttle Linkage
78	951-11258	Throttle Linkage Spring
80	951-11238	Governor Arm
81	712-04212	Governor Arm Nut M6


Ref.	Part Number	Description
82	710-04908	Governor Arm Bolt
83	951-11273	Governor Spring
84	710-04915	Bolt M6×12
85	951-12472	Primer Bracket
86	951-10858	Brake Assembly
96	712-04219	Brake Arm Nut
98	951-10857B	Short Block Assembly (Incl.45-49,51,61,74-76,95,99,100,101, 105,114-119,129-131,139,168,169, 185,188,193,196-198,203-206)
99	951-11763	Crankcase Cover Gasket
198	951-12111	Piston Ring Set
203	951-11632	Piston Pin Snap Ring
204	951-11633	Piston Pin
205	951-11634	Piston
206	951-11768	Connecting Rod Assembly
209	710-05162	Connecting Rod Bolt
	952Z2P70M0C	Complete Engine
	951-10417A	Gasket Kit - External (Incl.47,105,115,167,169,185,188)
	951-10416A	Gasket Kit - Complete (Incl.47,49,76,99,105,115,131, 167,169,185,188,193)

 2P70M0C Crankshaft & Crankcase Cover

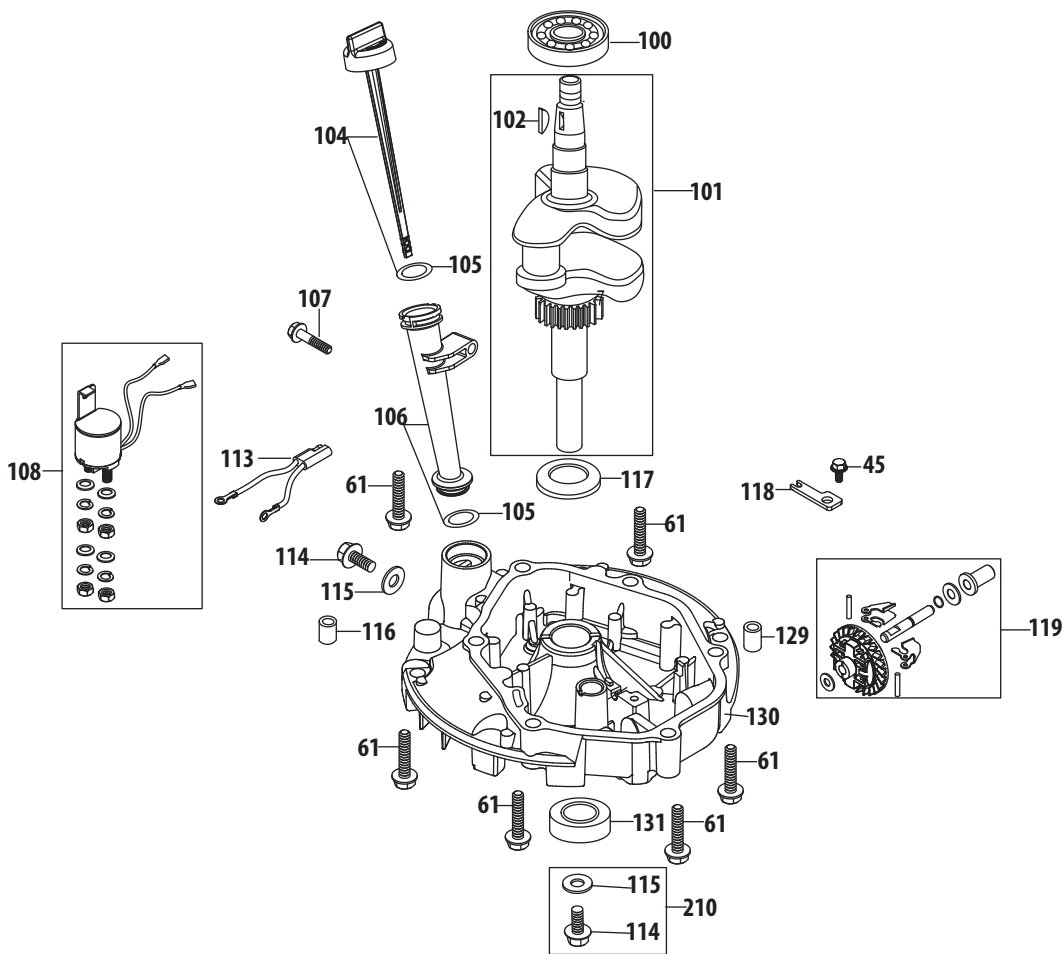


Ref.	Part Number	Description
45	710-04916	Bolt M6x14
61	710-04922	Fuel Tank Bolt M8x50
100	951-11369	Main Bearing
101	951-11624	Crankshaft Assembly
102	951-10307	Woodruff Key
104	951-11764A	Dipstick Assembly
105	951-11547	Oil Fill Tube O-Ring
106	951-11765A	Oil Fill Tube Assemblby
107	710-04980	Bolt M6x35
108	951-10823	Starter Relay Assembly
113	951-10824	Power Connector Harness

Ref.	Part Number	Description
114	710-04906	Oil Drain Plug
115	736-04440	Oil Drain Plug Washer
116	715-04089	Crankcase Cover Dowel 9x14
117	736-04491	Crankshaft Thrust Washer
118	951-11625	Governor Gear Mounting Plate
119	951-11626	Governor Gear/Shaft Assembly
129	715-04092	Crankcase Cover Dowel 7x14
130	951-11794	Crankcase Cover
131	951-11627	Lower Crankshaft Seal
210	951-10370	Oil Drain Plug And Washer Assy

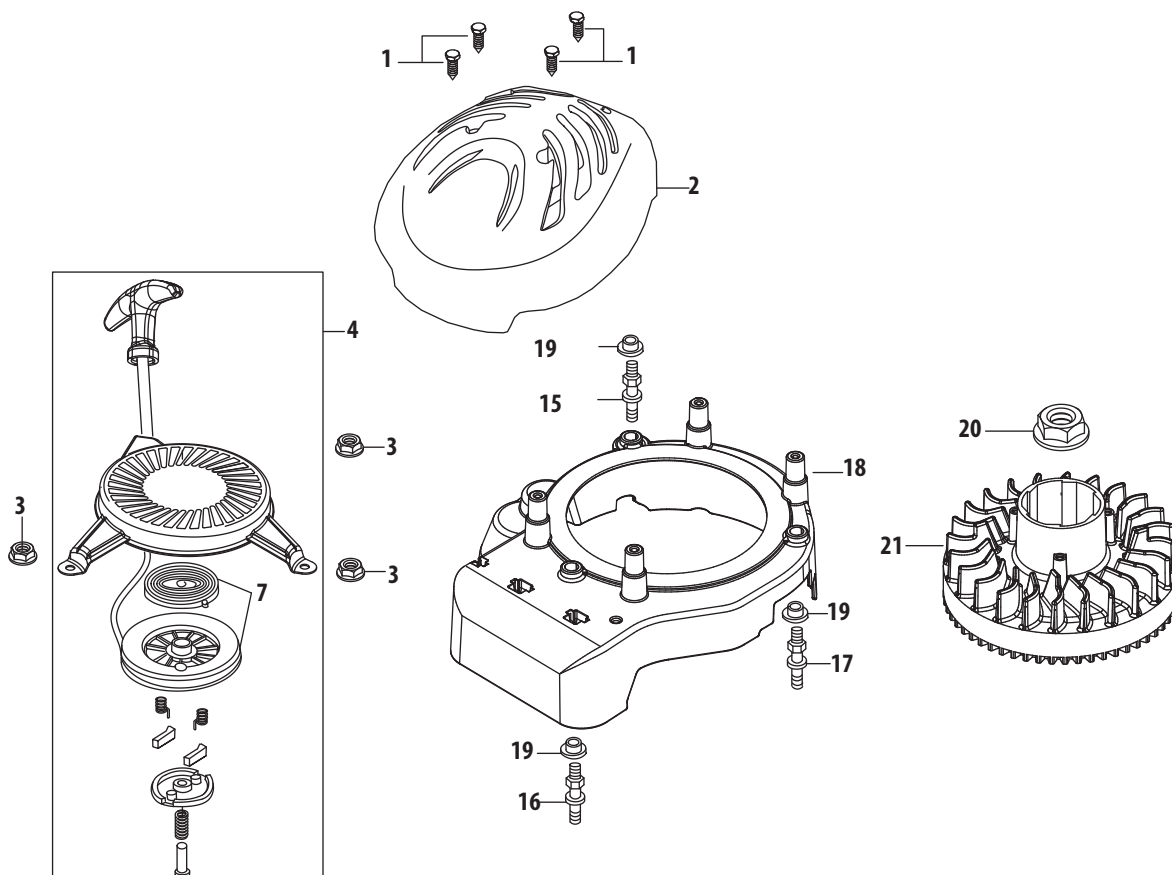 


Ref.	Part Number	Description
1	710-04744	Self-Tapping Bolt, #12-16 x 1"
3	712-04212	Nut M6 X 10 Mm
4	951-11720	Recoil Starter Assembly
7	951-11721	Recoil Spring And Pulley Assy
15	710-04976	Starter/Shroud Stud Left/Black
16	710-04977	Starter/Shroud Stud Front/Yellow
17	710-04978	Starter/Shroud Stud Right/White
18	951-10855	Inner Shroud
19	750-05320	Engine Shroud Spacer
20	712-04287	Flywheel Nut M14x1.5
21	951-12470	Flywheel

 2P70M0C Cylinder Head

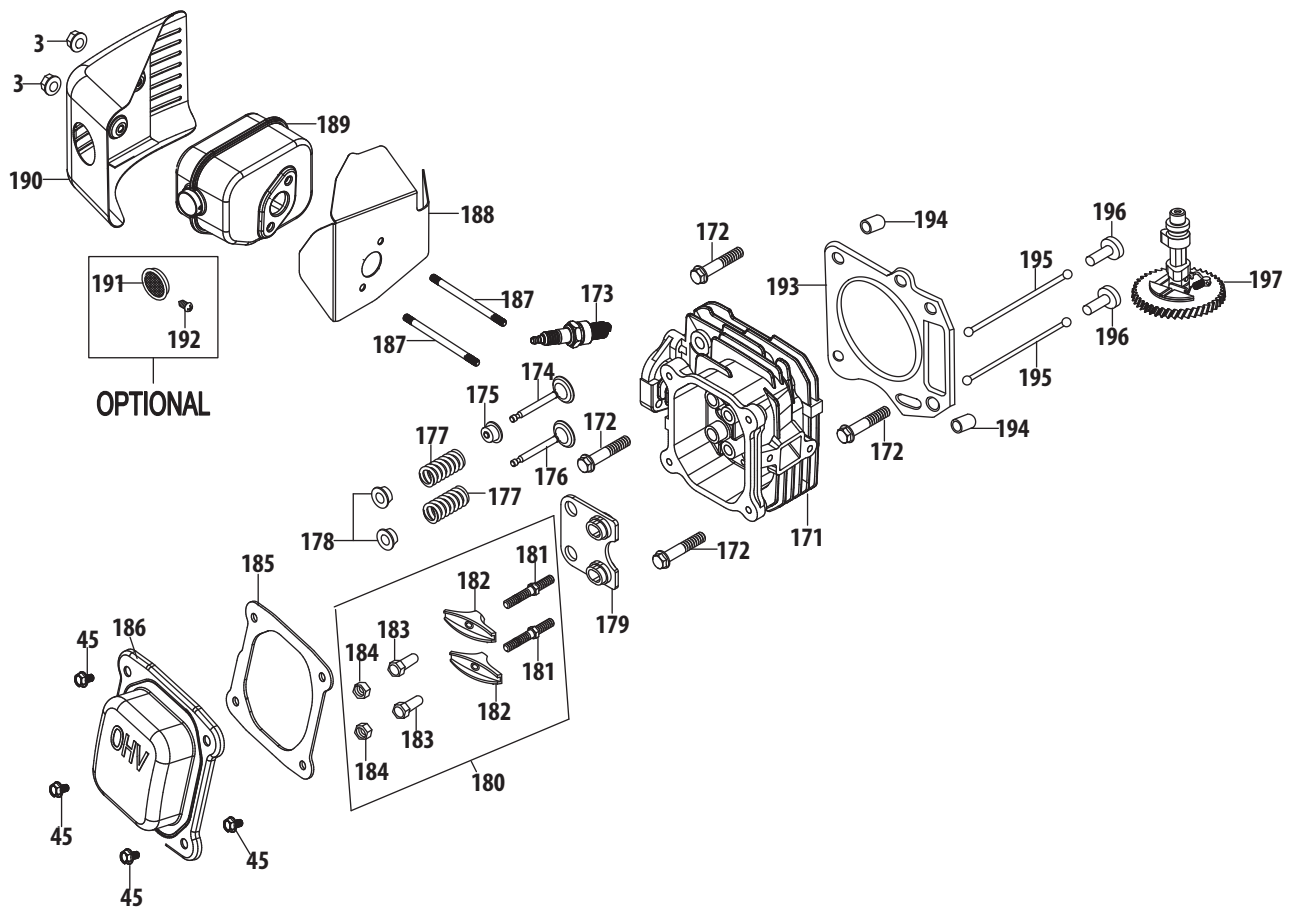

Ref.	Part Number	Description
3	712-04212	Nut M6 X 10 Mm
45	710-04916	Bolt M6x14
171	951-10413B	Cylinder Head Assembly (Incl.168,169,171,174-179, 181-185,188,193)
172	710-04982	Head Bolt M8x54
173	951-10292	Spark Plug/F6Rtc
174	951-10345	Valve Kit
175	951-11818	Intake Valve Seal
176	951-10345	Valve Kit
177	951-12116	Valve Spring
178	951-12000	Valve Spring Retainer
179	951-11629	Push Rod Guide
180	951-11606	Rocker Arm Assembly
181	710-04902	Rocker Arm Stud
182	951-12001	Rocker Arm
183	751-11123	Fulcrum Nut
184	751-11124	Jam Nut
185	951-11551	Valve Cover Gasket
186	951-11548	Valve Cover
187	710-05094	Muffler Stud M6x95
187	951-10342	Muffler Stud Assemblby
188	951-12474	Muffler Gasket
189	951-10295	Muffler Assembly
190	951-10411	Muffler Shield
191	951-10351	Spark Arrestor
192	710-04983	Spark Arrestor Screw
193	951-11630	Cylinder Head Gasket
194	715-04090	Cylinder Head Dowel 10x16
195	751-10344	Push Rod Kit
196	951-11607	Tappet
197	951-11767	Camshaft Assembly
	951-10870	Cylinder Head Service Kit (Incl.172,175,185,193)
	951-10417A	Gasket Kit - External (Incl.47,105,115,167,169,185,188)
	951-10416A	Gasket Kit - Complete (Incl.47,49,76,99,105,115,131, 167,169,185,188,193)

 2P70M0C Fuel Tank & Mounting

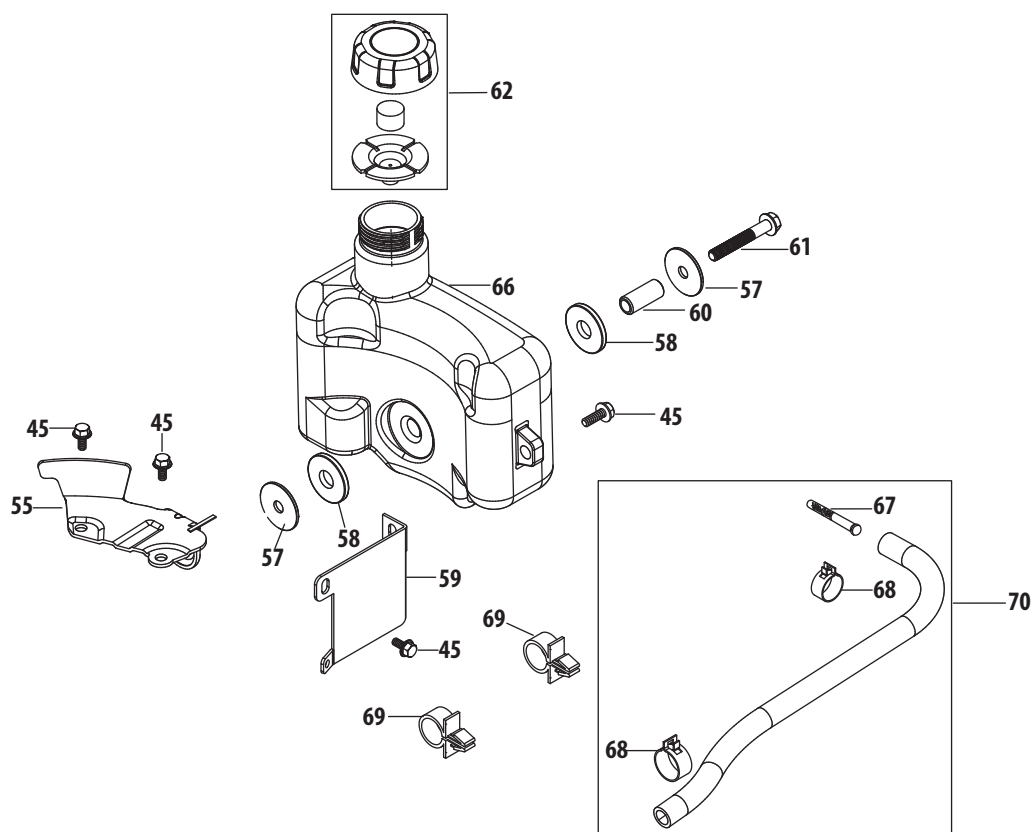

Ref.	Part Number	Description
45	710-04916	Bolt M6×14
55	951-12471	Fuel Tank Bottom Bracket
57	736-04456	Fuel Tank Washer
58	951-10335	Rubber Bushing
59	951-11617	Fuel Tank / Label Bracket
60	750-05322	Fuel Tank Bushing
61	710-04922	Fuel Tank Bolt M8x50
62	951-10300	Fuel Cap Assembly
66	951-10368	Fuel Tank Assembly
67	951-10358A	Fuel Filter
68	951-11700	Fuel Hose Clamp
69	723-04071	Plastic Support Clamp
70	951-10364	Fuel Line Kit

[illegible]

[illegible]

[illegible]



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
