

ILLUSTRATED PARTS MANUAL

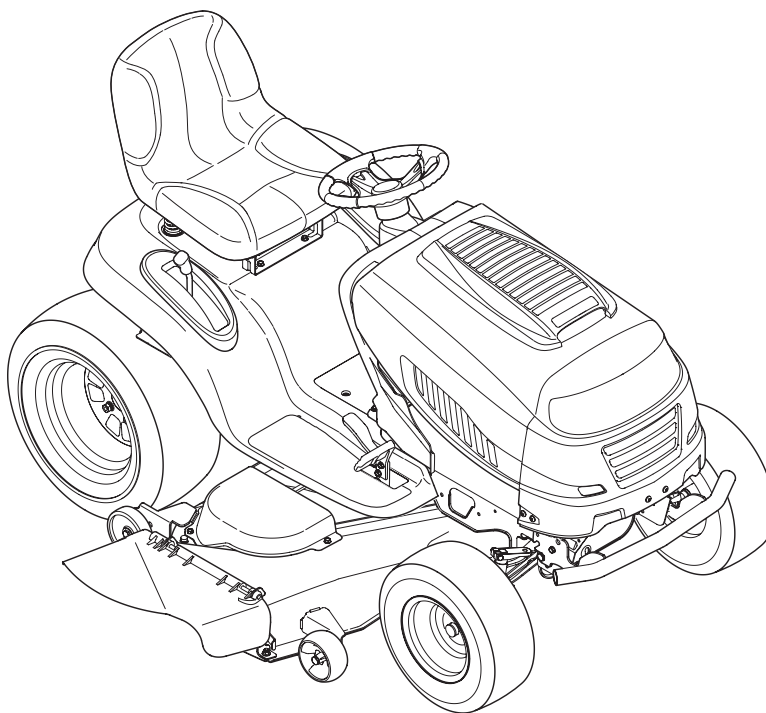

50" Hydrostatic Lawn Tractor, 900 Series

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank you for purchasing an MTD Lawn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Axle, Front	6	Meter, Systems Indicator, 5 Style	14
Battery	4	Meter, Systems Indicator, K Style	16
Choke Control, 5 Style	14	Mower Deck, 50-inch	12
Dash Panel, 5 Style	14	Muffler	3
Dash Panel, K Style	16	Pedal Controls	10
Deck Lift Handle/Linkage	8	PTO Pulley	4
Drive System	10	PTO Switch, 5 Style	14
Electrical Schematic	18	PTO Switch, K Style	16
Engine Accessories	3	Seat	8
Fender	8	Solenoid	4
Frame	4	Steering Wheel	6
Fuel Tank, 5 Style	14	Switches, Interlock	4
Fuel Tank, K Style	16	Throttle Control, 5 Style	14
Head Lamps, 5 Style	14	Throttle/Choke Control, K Style	16
Head Lamps, K Style	16	Wheels, Front	6
Hood, 5 Style	14	Wheels, Rear	10
Hood, K Style	16		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

SERIAL NUMBER


-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black
0709	Dark Green (Bolens, Yard-Man)
0662	Oyster Gray (MTD Gold)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)
0691	Black Jack (MTD Gold, MasterCut)

0674	Yellow (Yard-Man)
0650	Metallic Red (White Outdoor)
0629	Silver Flake (MTD Platinum)
04038	Day Orange (Daedong)
04033	Flint Mica (Troy-Bilt XP)

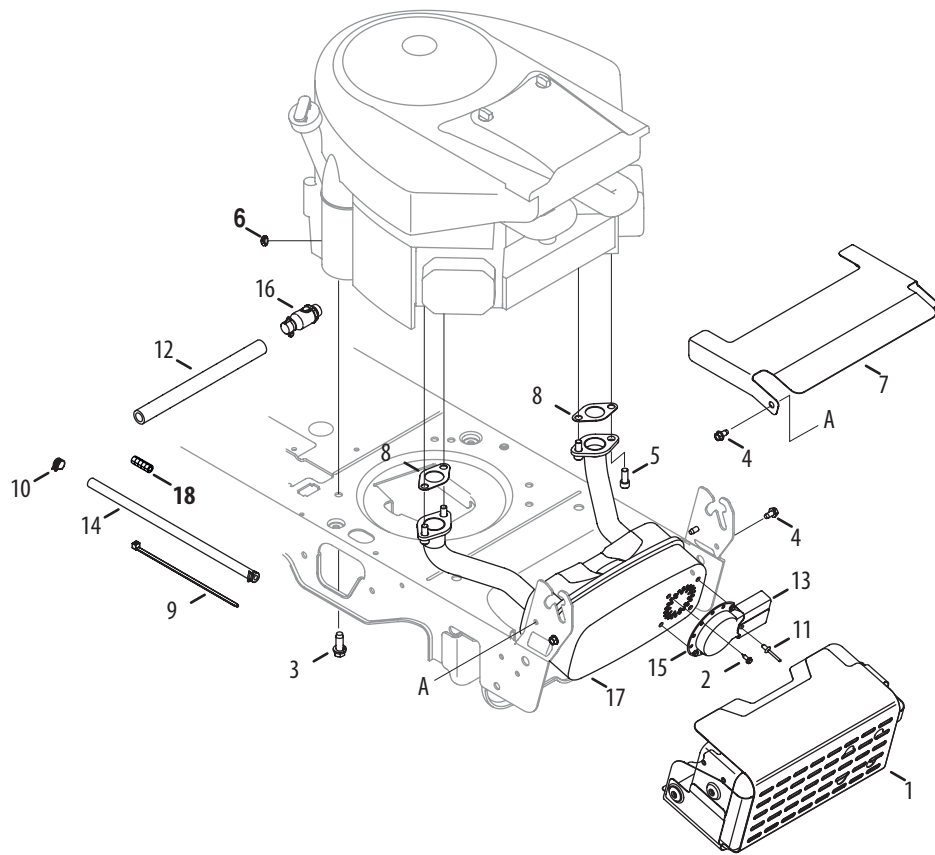


Ref.	Part Number	Description
1	683-04549	Muffler Shield Assembly
2	710-0227	Screw, Indented Washer, #8-18:0.500
3	710-04683	Taptite Screw, 3/8-16:1.000
4	710-0599	Taptite Screw, 1/4-20:0.500
5	710-1314A	Socket Head Screw, 5/16-18:.750
6	712-0271	Sems Nut, 1/4-20
7	783-06378A	Heat Shield
8	KH-24-041-49-S	Exhaust Gasket
9	725-0157	Cable Tie, 3/16 x .05 x 7.4
10	726-0205	Hose Clamp, .490 DIA.

Ref.	Part Number	Description
11	728-04000†	Rivet, .188 DIA x .300 L
12	751-3141-14	Oil Drain Extension Hose
13	751-0564B†	Muffler Deflector
14	751-10349	Fuel Hose
15	751-10353	Long Muffler Deflector
	751-11053	Long Muffler Deflector, EPA
16	951-10517A	Oil Drain
17	751-10528A	Muffler Deflector
18	751-12089-28†	Hose Vent


† If Equipped

PTO and Battery

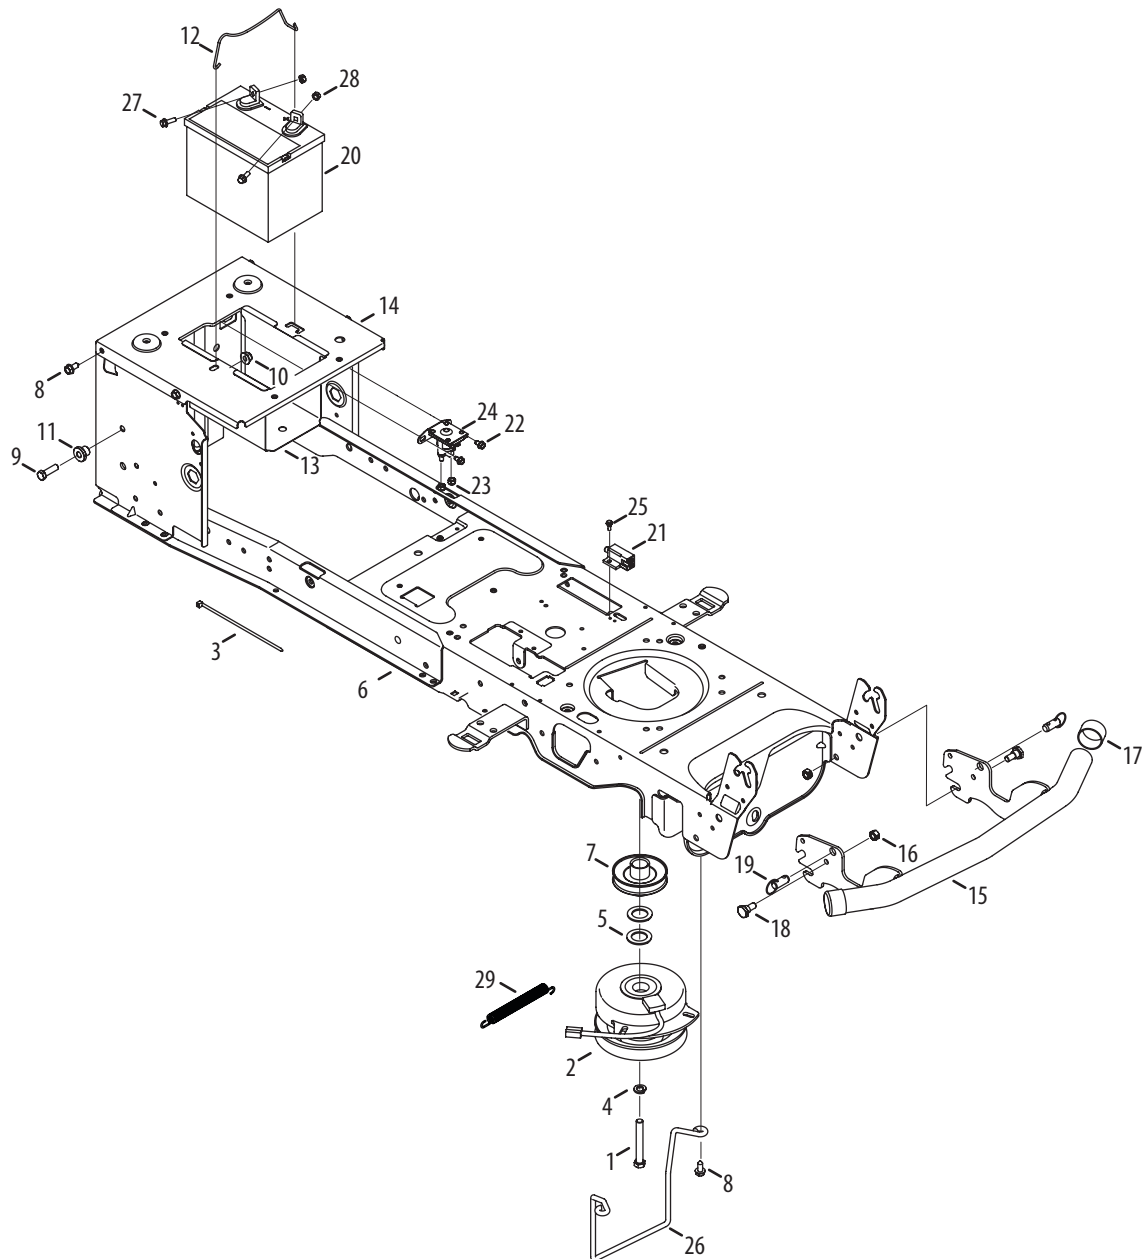

Ref.	Part Number	Description
1	710-04379A	Hex Head Screw, 7/16-20:3.50
2	917-04174A	Electric PTO Clutch
3	725-0157	Cable Tie, 3/16 x .05 x 7.4
4	936-0171	Lock Washer, 7/16
5	736-0277	Flat Washer, 1.031 x 1.620 x .095
6	683-04469B	Frame
7	756-0978B	Electric PTO Engine Pulley
8	710-04484	Taptite Screw, 5/16-18:.750
9	710-3005	Hex Head Screw, 3/8-16:1.25
10	712-04065	Flangelock Nut, 3/8-16
11	738-04058	Shoulder Spacer, .38 x 1.0 x .70
12	747-04121A	Battery Holder Rod
13	783-0349	Battery Tray
14	783-06089	Seat Frame Bracket
15	683-04219B	Bumper
16	912-3000	Hexlock Nut, 3/8-16
17	731-05674	Bumper Cap
18	738-0143	Shoulder Bolt, .496 x .336
19	714-04061	Quick Release Pin
20	925-1707D	Battery
21	725-04363	Interlock Switch
22	710-0653	Taptite Screw, 1/4-20:0.375
23	712-04064	Flangelock Nut, 1/4-20
24	725-04439	Solenoid, 12 V
25	738-04237A	Shoulder Screw, #10-32:.500
26	747-05195	Belt Keeper Rod
27	710-04666	Hex Head Flange, 1/4-20:.75
28	712-0271	Sems Nut, 1/4-20
29	732-0814	Spr, Extn, .56 Dia X 5.52
—	925-04104	Wire harness, Main


Steering and Axle

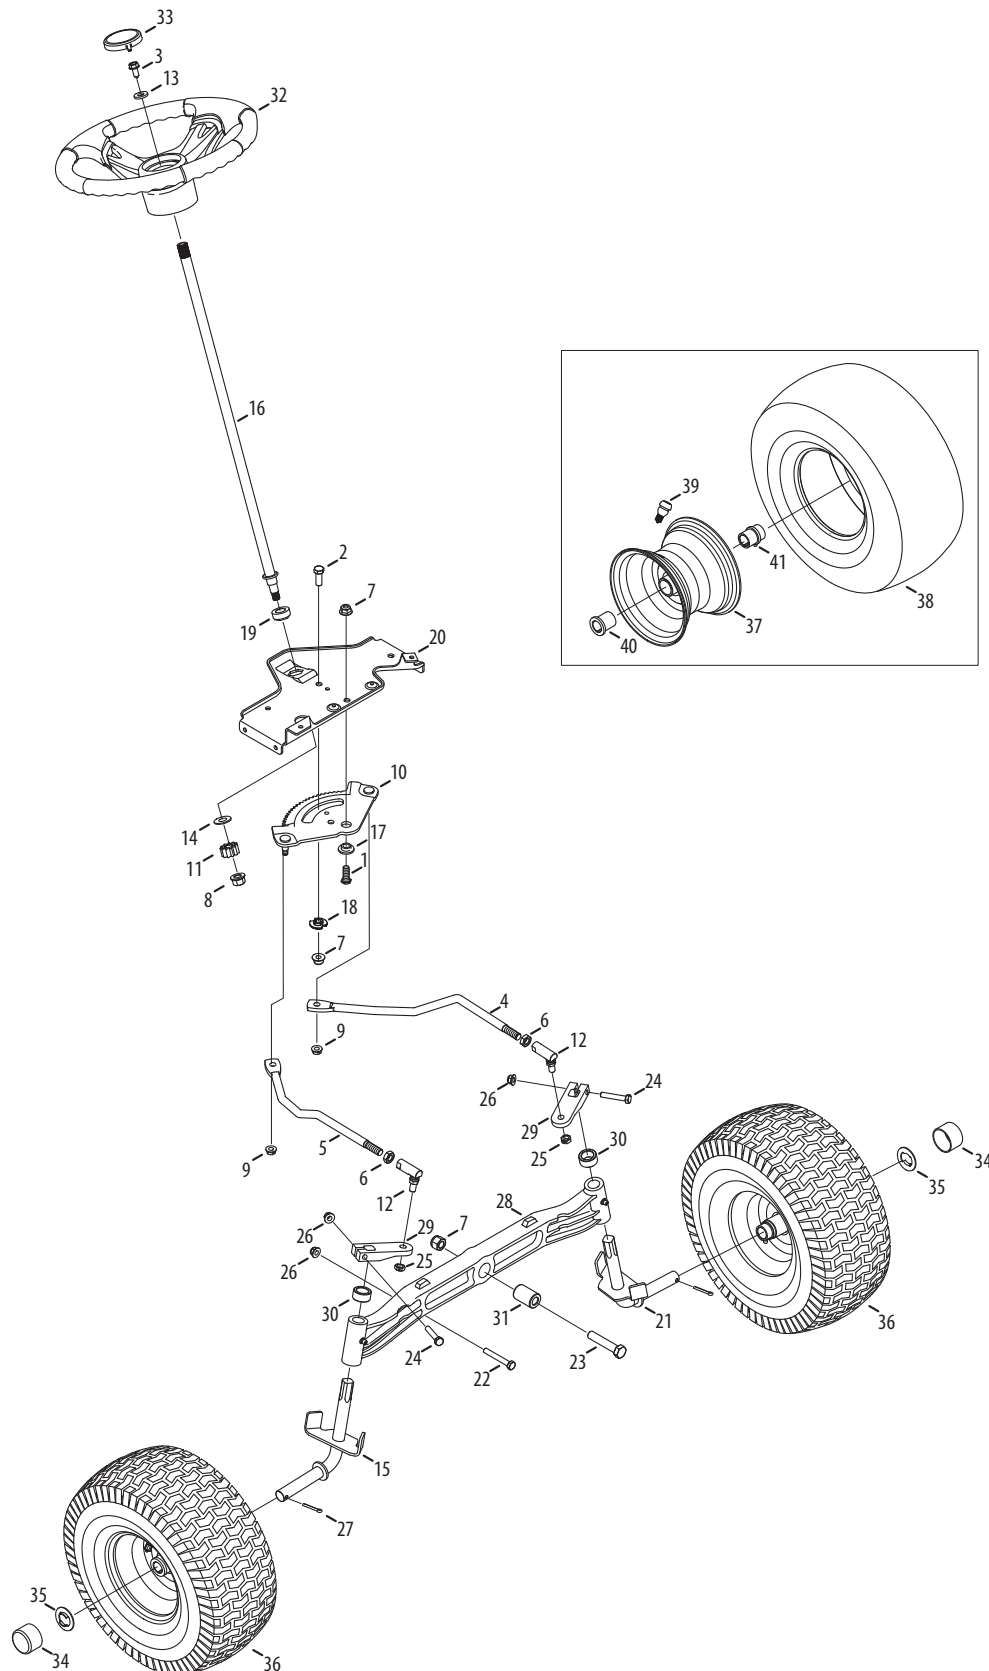

Ref.	Part Number	Description
1	710-04095	Hex Head Screw, 3/8-16:1.00
2	710-0514	Hex Head Screw, 3/8-16:1.00
3	710-0643	Hex Head Screw, 5/16-18:1.00
4	711-04998	LH Drag Link
5	711-04999	RH Drag Link
6	912-0240	Jam Nut, 7/16-20
7	712-04065	Flangelock Nut, 3/8-16
8	712-0459	Flangelock Nut, 7/16-20
9	712-3004A	Flangelock Nut, 5/16-18
10	717-1550F	Steering Gear
11	717-1554	Steering Pinion Gear
12	923-0448A	Ball Joint, 7/16-20
13	936-3004	Flat Washer, .406 x .875 x .105
14	736-3084	Flat Washer, .51 x 1.12 x .06:HT
15	638-04036P	RH Axle Assembly
16	738-04263	Steering Shaft, .625 OD x 24.25 LG
17	738-04363	Shoulder Spacer, .385X 1.25 x .3025
18	738-04364B	Spacer, .38 x 1.375
19	741-04237B	Hex Flange Bearing 5/8 PM
20	783-06043	Steering Support Bracket
21	638-04037P	LH Axle Assembly
22	710-0395	Hex Head Screw, 5/16-18:2.25
23	710-0859	Hex Head Screw, 3/8-16:2.50
24	710-3180	Hex Head Screw, 5/16-18:1.75

Ref.	Part Number	Description
25	912-0214	Hexlock Nut, 3/8-24
26	712-04063	Flangelock Nut, 5/16-18
27	714-0162	Cotter Pin, 5/32:1.25
28	719-04413A	Pivot Bar Axle
29	748-04065	Steering Block
30	748-04068	Spacer, .71 ID x .125 OD x .56LG
31	750-05280	Spacer, .385 x 1.00 x 1.5075
32	631-04028	Steering Wheel, 5 Style
—	631-04008A	Steering Wheel, Export
33	731-04040	Steering Wheel Cap, 5 Style
—	731-04039	Steering Wheel Cap, K Style
—	731-04681	Steering Wheel Cap, TB
34	731-08049	Bumper Cap
35	736-04228A	Flat Washer, .781ID x 1.590OD
36	634-04406	Wheel Assembly, 5 Style
—	634-04466	Wheel Assembly, Export
37	634-04405	Rim Assembly, 5 Style
—	934-04082	Rim Assembly, Export
38	734-1731	Tire, 5 Style
—	734-1727	Tire, Export
39	934-0255	Tubeless Air Valve
40	741-0516B	Flange Bearing, .760 x 1.00 x 1.20LG
41	741-0990B	Flange Bearing, .760ID


Seat and Fender

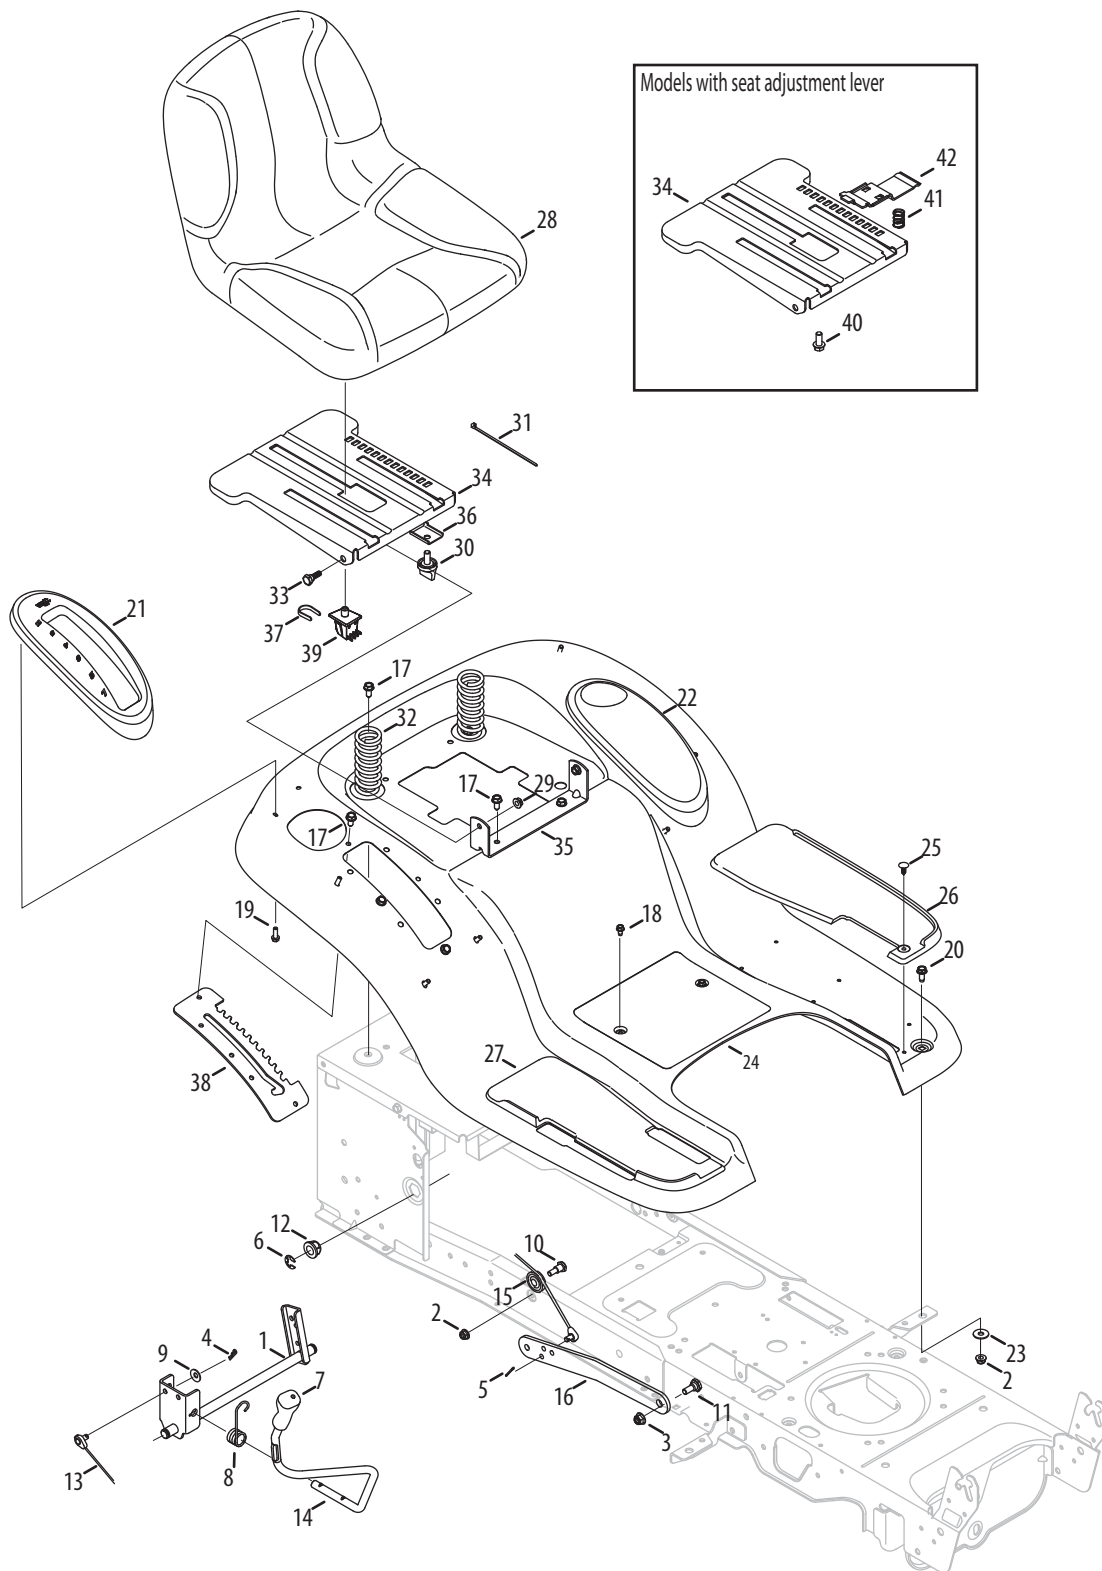

Ref.	Part Number	Description
1	683-04223	Lift Shaft Assembly
2	712-04063	Flangelock Nut, 5/16-18
3	712-04065	Flangelock Nut, 3/8-16
4	914-0104	Cotter Pin, .072 DIA. x 1.13 LG
5	714-04040	Bow-Tie Cotter Pin
6	716-0106A	E-Ring, .625 DIA. SHAFT
7	720-0311	Handle Grip
8	732-0874	Torsion Spring
9	736-0105	Spring Washer, .401 x .870 x .063
10	738-0138A	Shoulder Screw, .437 x .470:5/16-18
11	938-0380	Shoulder Bolt, .500 x .270:3/8-16
12	941-0225	Hex Flange Bearing
13	946-04436	Lift Cable, 16.64 LG
14	747-04962A	Lift Handle
15	756-04331	Pulley Roller Cable
16	783-05546A	Lift Arm
17	710-04484	Taptite Screw, Lock Washer, 5/16-18
18	710-0599	Taptite Screw, Lock Washer, 1/4-20
19	710-0895	Hi-Lo Screw, Lock Washer, 1/4-15
20	710-1260A	Taptite Screw, 5/16-18:.750
21	731-06795	Lift Lever Cover
22	731-1993A	Cover with Cup Holder

Ref.	Part Number	Description
23	736-3078	Flat Washer, .344 x 1.00 x .063 HDN
24	783-06259	Fender
25	726-3046	Ratchet Clip
26	735-04138	LH Foot Pad
27	735-04158	RH Foot Pad
28	757-04086	Seat
29	712-3004A	Flangelock Nut, 5/16-18
30	720-04061	Knob
31	725-0157	Cable Tie, 3/16 x .05 x 7.4
32	732-04849	Compression Spring, 1.50 x 3.90 x .200
33	938-0296	Shoulder Screw, .437 x .268:5/16-18
34	783-06049	Seat Mounting Bracket
35	783-06088	Seat Pivot Bracket
36	783-06266	Knob Adjust Bracket
37	783-06448	Switch Retainer Clip
38	783-06548	Lift Bracket, 5 Style
—	783-06181	Lift Bracket, Export
39	925-05013	Seat Switch
40	710-04482	Hex Head Flange, 3/8-16:.875
41	732-04563	Compression Spring, .68 x 1.065 x .055
42	783-06050	Seat Adjustment Lever

Drive and Rear Wheels

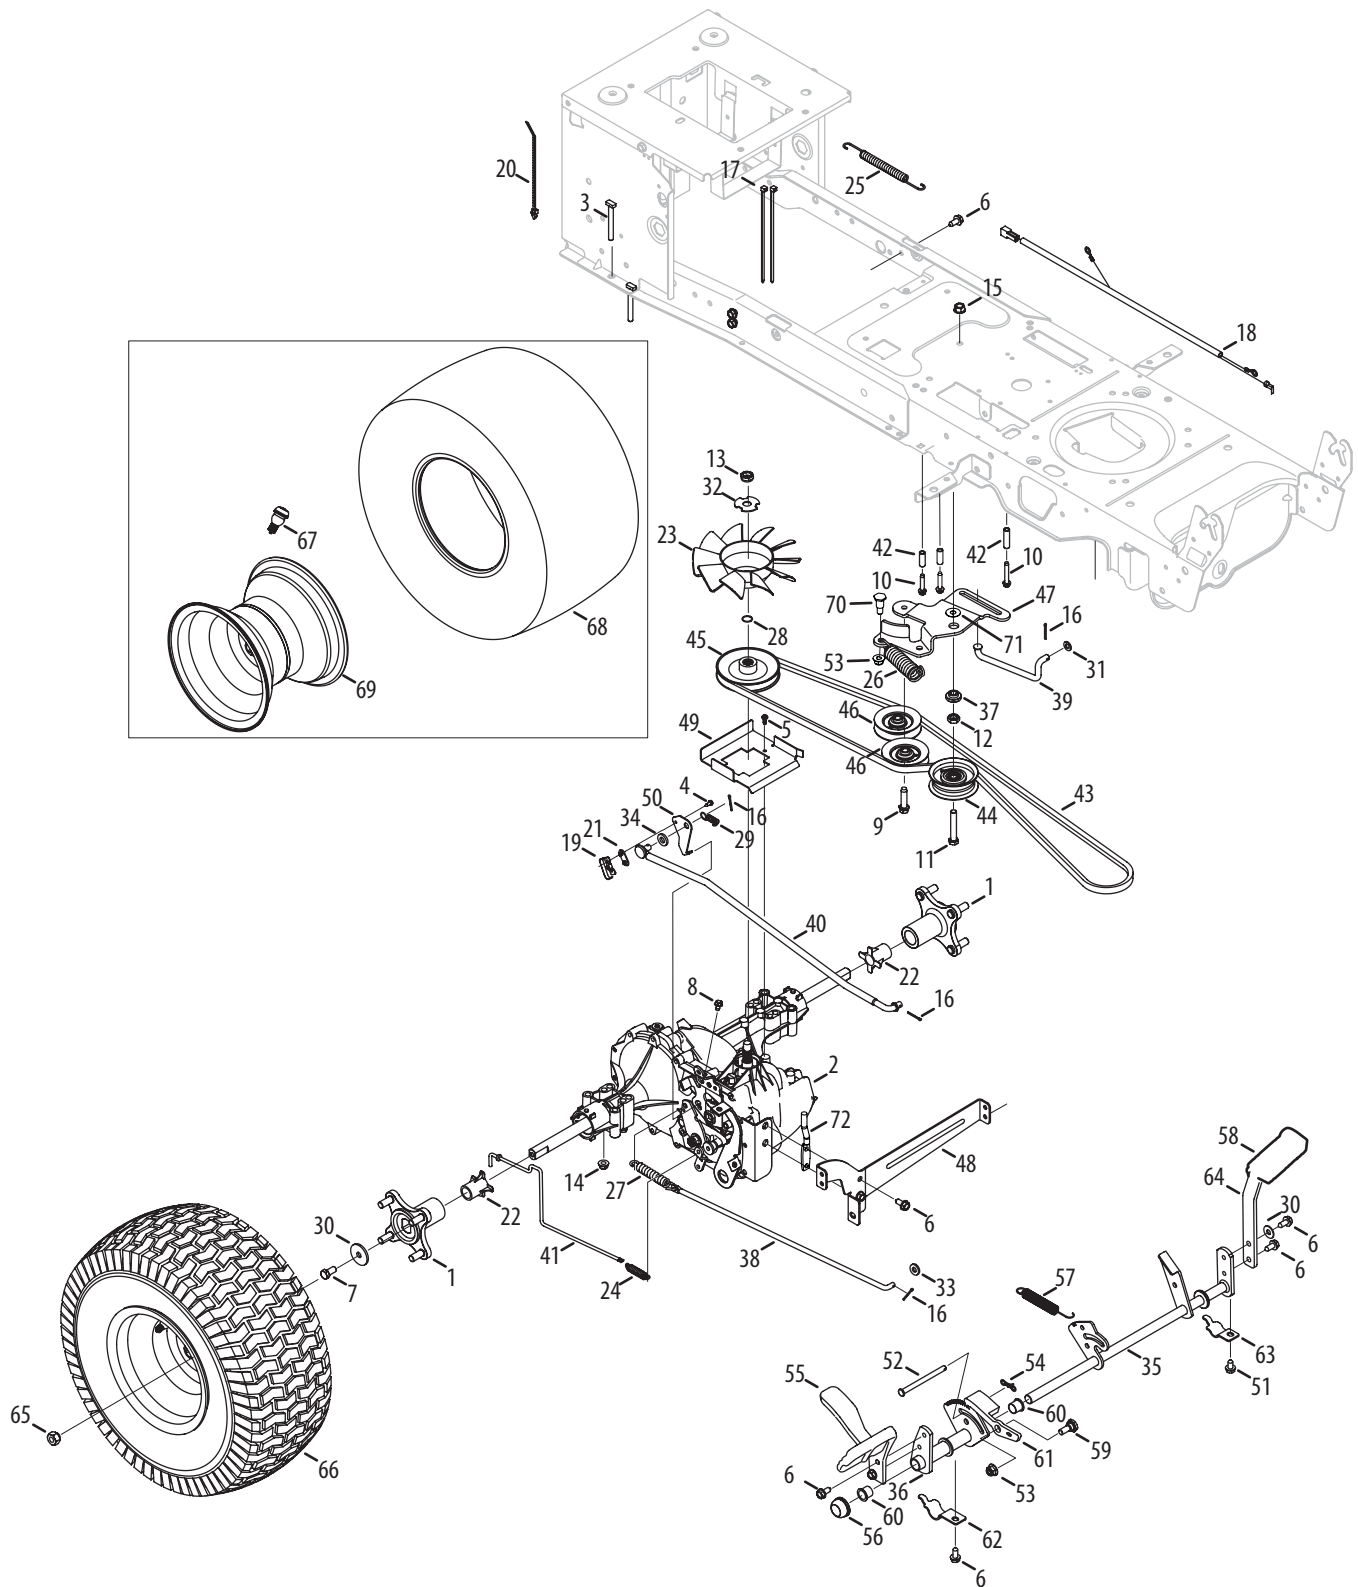


Drive and Rear Wheels

Ref.	Part Number	Description
1	918-04228	Wheel Hub Assembly
2	918-04270B	Hydro Transmission
3	710-0176	Hex Head Screw, 5/16-18:2.75
4	710-0227	Screw, Indented Washer, #8-18:0.500
5	710-0351	Screw, #10-16:0.500
6	710-04484	Taptite Screw, 5/16-18:.750
7	710-0627	Hex Head Screw, 5/16-24:.750
8	710-0653	Taptite Screw, 1/4-20:0.375
9	710-1007	Taptite Sems Screw, :3/8-16:1.500
10	710-1325	Taptite Screw, 1/4-20:1.625
11	710-3011	Hex Head Screw, 3/8-16:2.25
12	912-0240	Jam Nut, 7/16-20
13	912-0346	Jamlock Nut, 1/2-20
14	712-04063	Flangelock Nut, 5/16-18
15	912-0431	Flangelock Nut, 3/8-16
16	914-0111	Cotter Pin, 3/32:1.0
17	725-0157	Cable Tie. 3/16 x .05 x 7.4
18	725-04791A	Jumper Harness
19	725-1644	Short Spring Switch
20	926-0154	Push Mount Cable Tie 7.5 LG
21	926-0320	Insulator Nut Plate
22	731-05300A	Sleeve, .765 ID x 1.500 LG
23	731-06098	Hydro Fan
24	932-0209	Extension Spring, .48 OD x 2.03
25	732-04606	Extension Spring, .500 DIA x 12.6 LG
26	732-04792	Extension Spring, 1.00 DIA x 4.75
27	732-0716D	Extension Spring, .59 OD x 4.00 LG
28	732-0729	Wire Ring
29	732-3118	Extension Spring, .375 OD x 1.44 LG
30	736-0242	Bell Washer, .340 x .872 x .060
31	936-0264	Flat Washer, .330 x .630 x .0635
32	736-04263	Lock Washer
33	936-3008	Flat Washer, .344 x .750 x .120
34	736-3010	Flat Washer, .407 x .812 x .135
35	647-04152B	Brake Control Assembly
36	683-04537	Hydro Pedal Bracket Assembly

Ref.	Part Number	Description
37	738-04420	Shoulder Spacer, 1.375 x .380 x .183
38	747-04139	Brake Rod
39	747-04957A	Footpedal Bypass Transmission Rod
40	747-04979	Hydro Control Rod
41	747-04991	Hydro Bypass Rod
42	750-04456	Spacer, 260 x .372 x 1.420 LG
43	954-04207	V-Belt, 4L x 78.9 POLY
44	756-04224	Flat Idler Pulley, 2.75 OD
45	756-04308	Input Pulley, 4.13 DIA
46	756-04325	V Idler Pulley, x 3.06
47	783-06027A	Center Idler Bracket
48	783-06133	Hydro Mounting Bracket
49	783-06260	Belt Disengage Support Bracket
50	783-1019B	Switch Actuator Bracket
51	710-0604A	Taptite Screw, 5/16-18:0.625
52	711-05068	Clevis Pin, 5/16 x 3.985
53	712-04065	Flangelock Nut, 3/8-16
54	714-04040	Bow-Tie Cotter Pin
55	719-0584B	Control Pedal
56	726-0214	Push Cap
57	732-04587	Extension Spring, .63 DIA x 4.95 LG
58	735-04136	Brake Pedal Pad
59	938-0380	Shoulder Bolt, .500 x .270:3/8-16
60	741-0495	Flange Bearing, .630 ID x .695 OD x .60
61	748-04203	Cruise Latch
62	783-05914	Pedal Support Bracket
63	783-05940	Pedal Support Bracket, 5/8
64	783-06103A	Brake Pedal Bracket
65	712-3050	Lug Nut
66	634-04210	Wheel Assembly
67	934-0255	Tubeless Air Valve
68	734-04174	Tire
69	634-04238	Rim Assembly
70	738-0430	Scr, Shldr, .50 x .685 3/8-16
71	936-0344	Washer, Flat, .385 x 1.0 x .030
72	747-05444	Belt Keeper Rod


50" Deck

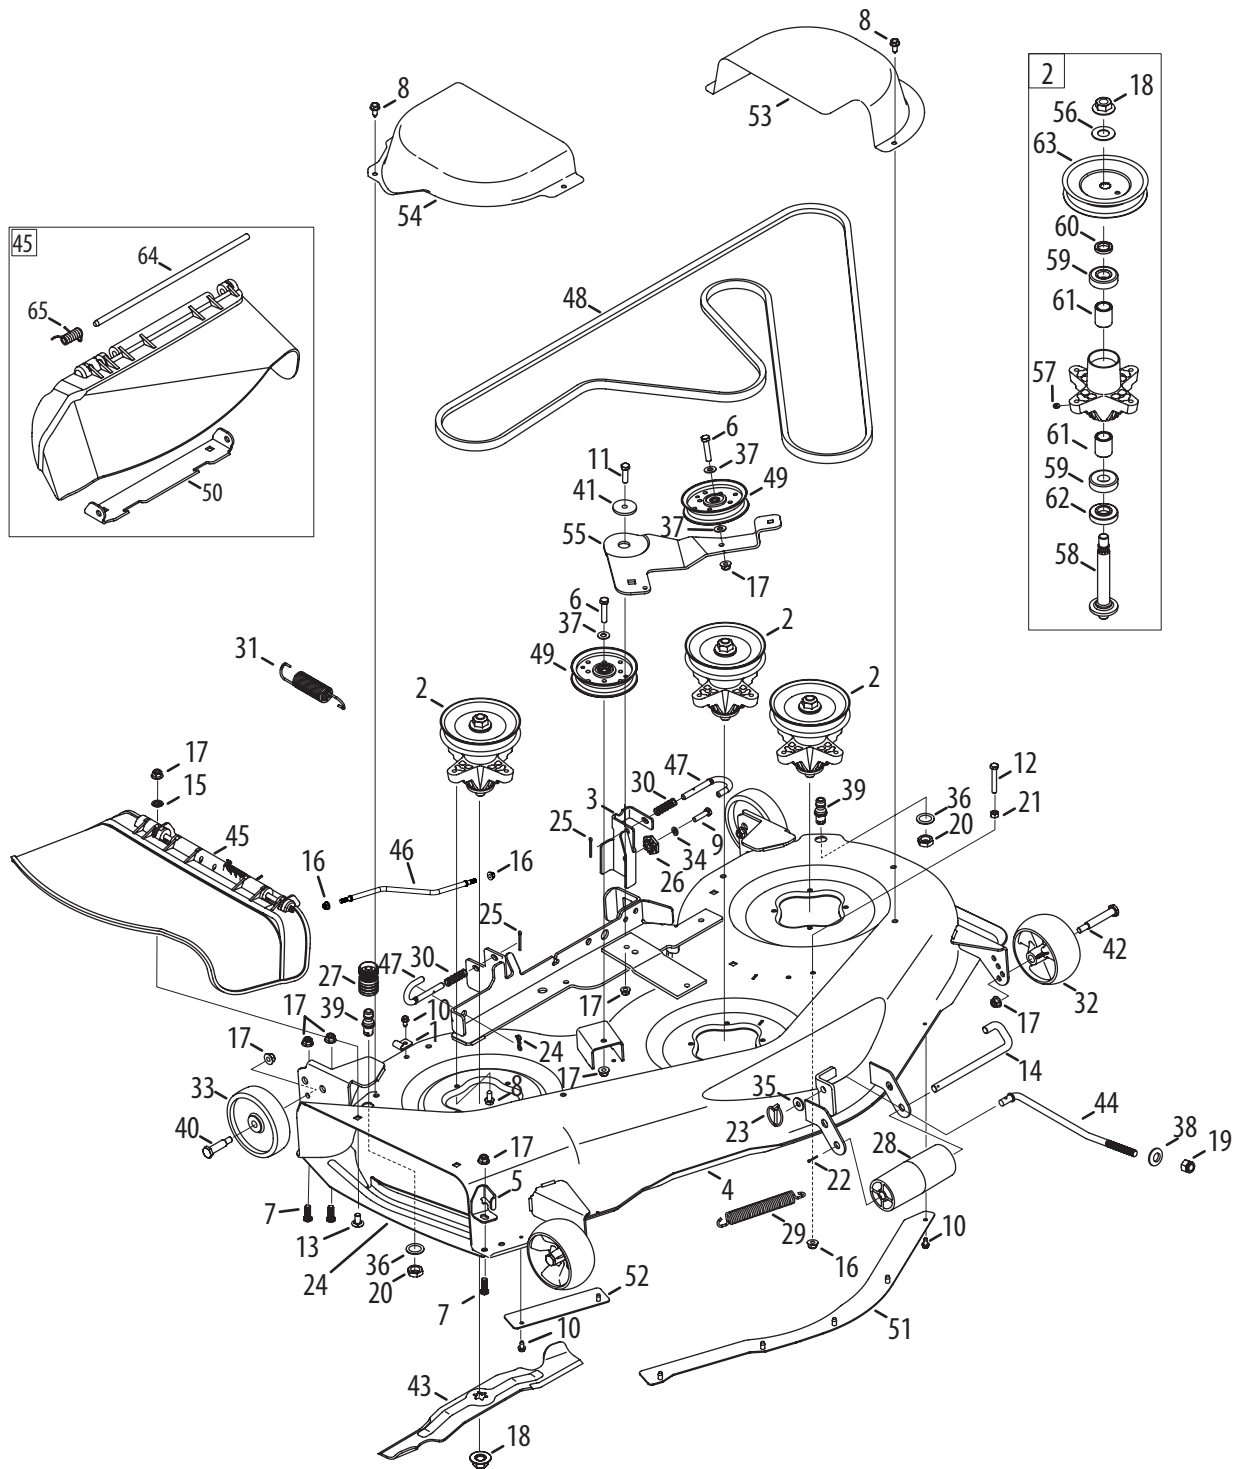

Ref.	Part Number	Description
1	96606	Hook Retainer Bracket
2	918-04125B	Pulley Spindle Assembly, 5.39
3	683-0254B	Deck Hanger Bracket Assembly
4	983-04645	Deck Assembly
5	703-3279	Chute Deflector Stop
6	710-0347	Hex Screw, 3/8-16:1.75
7	710-04095	Hex Screw, 3/8-16:1.00
8	710-04484	Taptite Screw, 5/16-18:.750
9	710-0528	Hex Screw, 5/16-18:1.25
10	710-0599	Taptite Screw, 1/4-20:0.500
11	710-3005	Hex Screw, 3/8-16:1.25
12	710-3103	Hex Screw, 5/16-18:2.0
13	710-3178	Carriage Bolt, 3/8-16:0.75
14	911-3314	Roller Pin, 1/2 DIA x 7.31 LG
15	712-0229	Push Nut, 3/8
16	712-04063	Flangelock Nut, 5/16-18
17	712-04065	Flangelock Nut, 3/8-16
18	712-0417A	Flange Nut, 5/8-18
19	712-04243	Flexlock Nut, 1/2-13
20	912-0641	Hex Nut, M16-1.5 DIN 936
21	912-3010	Hex Nut, 5/16-18:GR5
22	914-0111	Cotter Pin, 3/32:1.0
23	753-04070	Lynch Pin, .1875
24	703-3511A	Finger Guard
25	914-0470	Cotter Pin, 1/8 x 1.25
26	917-04074	Deck Adjustment Gear
27	921-04041	Water Nozzle Adaptor
28	731-05679	Front Roller
29	732-0459C	Extension Spring, .94 DIA. x 6.74 LG
30	732-04652	Compression Spring, .535 OD x 1.751 LG
31	732-0934	Extension Spring, 1.15 OD x 5.99 LG
32	734-04155	Front Deck Wheel
33	734-0973	Rear Deck Wheel


Ref.	Part Number	Description
34	936-0119	Lock Washer, 5/16
35	936-0179	Flat Washer, .531 x 1.25 x .100
36	736-0225	Lock Washer, 5/8
37	936-0300	Flat Washer, .406 x .875 x .059
38	736-0317	Bell Washer, .63 x 1.25 x .18
39	737-04003D	Water Nozzle
40	938-0373	Shoulder Bolt, .496 x 1.525:3/8-16
41	738-04162A	Shoulder Spacer, .8840 x .190
42	938-3056	Shoulder Bolt, .496 x 2.50:3/8-16
43	942-04053C	Blade
44	747-05067A	Front Deck Lift Rod
45	631-04070A	Chute Assembly
—	631-04092B	Chute Assembly, Export
46	747-05462	Deck Sway Rod
47	747-1116	Deck Release Handle Rod
48	954-04077	V Belt
49	756-04129B	Idler Pulley, 4.25"DIA
50	783-05030	Chute Bracket
51	783-04414A	Center Skirt
52	783-04415	RH Skirt
53	783-05280	LH Belt Cover
54	783-05281	RH Belt Cover
55	783-05030	Idler Bracket
56	736-0315	Flat Washer, .760 x 1.50 x .120
57	937-3000	Lube Fitting
58	738-1010A	Spindle Shaft
59	941-0919	Ball Bearing, .787ID x 1.85
60	748-0160A	Spacer, .790 ID x 1.25 OD x .175
61	750-1000	Spacer, .80 x 1.10 x 1.322
62	750-1349A	Spacer, .79 x 1.82 x .55
63	756-04216	Deck Pulley
64	711-04565	Hinge Pin
65	732-04372	Torsion Spring

Hood and Dash, 5 Style

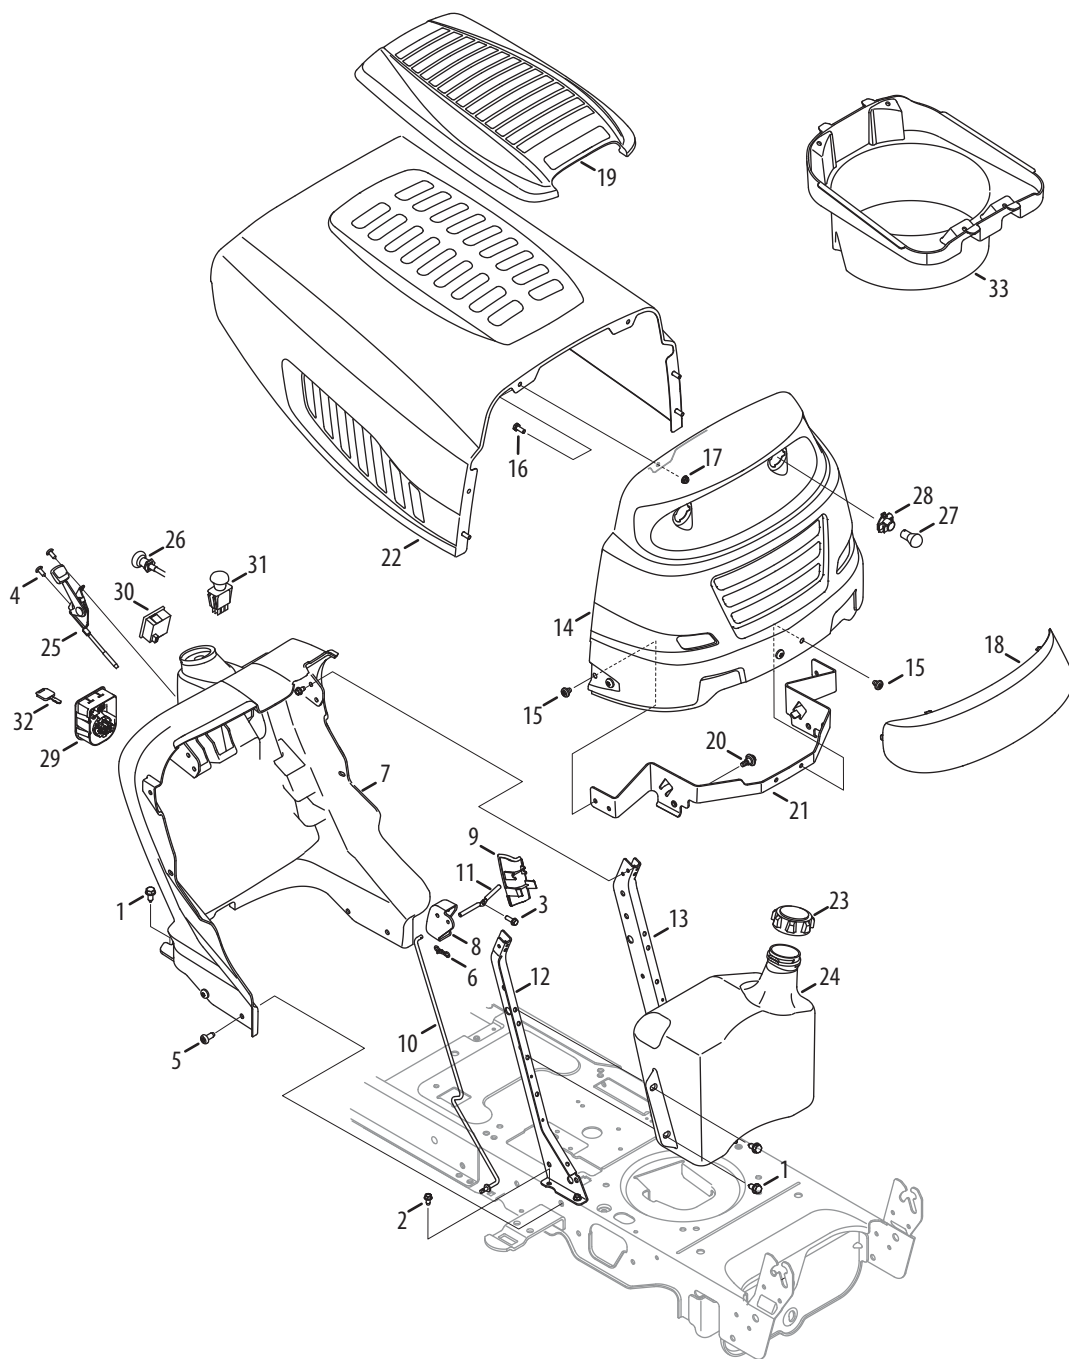


Ref.	Part Number	Description
1	710-04484	Taptite Screw ,5/16-18:.750
2	710-0599	Taptite Screw ,1/4-20:0.500
3	710-0895	Hi-Lo Screw, 1/4-15:0.750
4	710-1017	Screw, 1/4-14:0.625
5	710-1611B	Taptite Screw ,5/16-18:0.750
6	714-04040	Bow Tie Cotter Pin
7	731-06169	Dash Panel
8	731-06639	Dash Lever
9	731-06642	Cruise Cover
10	747-05008	Control Rod
11	747-1196	Lever
12	783-04285F	RH Support Plate
13	783-04323F	LH Support Plate
14	783-05685	Grill
15	710-04593	Taptite Screw ,5/16-18:0.375
16	710-0751	Hex Screw, 1/4-20:.620
17	712-04064	Flangelock Nut, 1/4-20
18	731-04949A	Grill Lens
19	731-05522A	Hood Scoop
20	738-04091A	Shoulder Screw, .43X.29:5/16-18
21	783-05454	Hood Pivot Bracket
22	783-05683	Hood
23	751-0603A	Fuel Cap
24	751-0658E	Fuel Tank
25	946-04541	Throttle Control
26	946-04132	Choke Control
27	925-0963	Lamp
28	925-1649	Lamp Socket
29	925-04227B	Key Switch
30	925-04036C	Hour Meter
31	925-04174	Electric PTO Switch
32	925-1745A	Key
33	731-05165A	Plenum

Hood and Dash, K Style

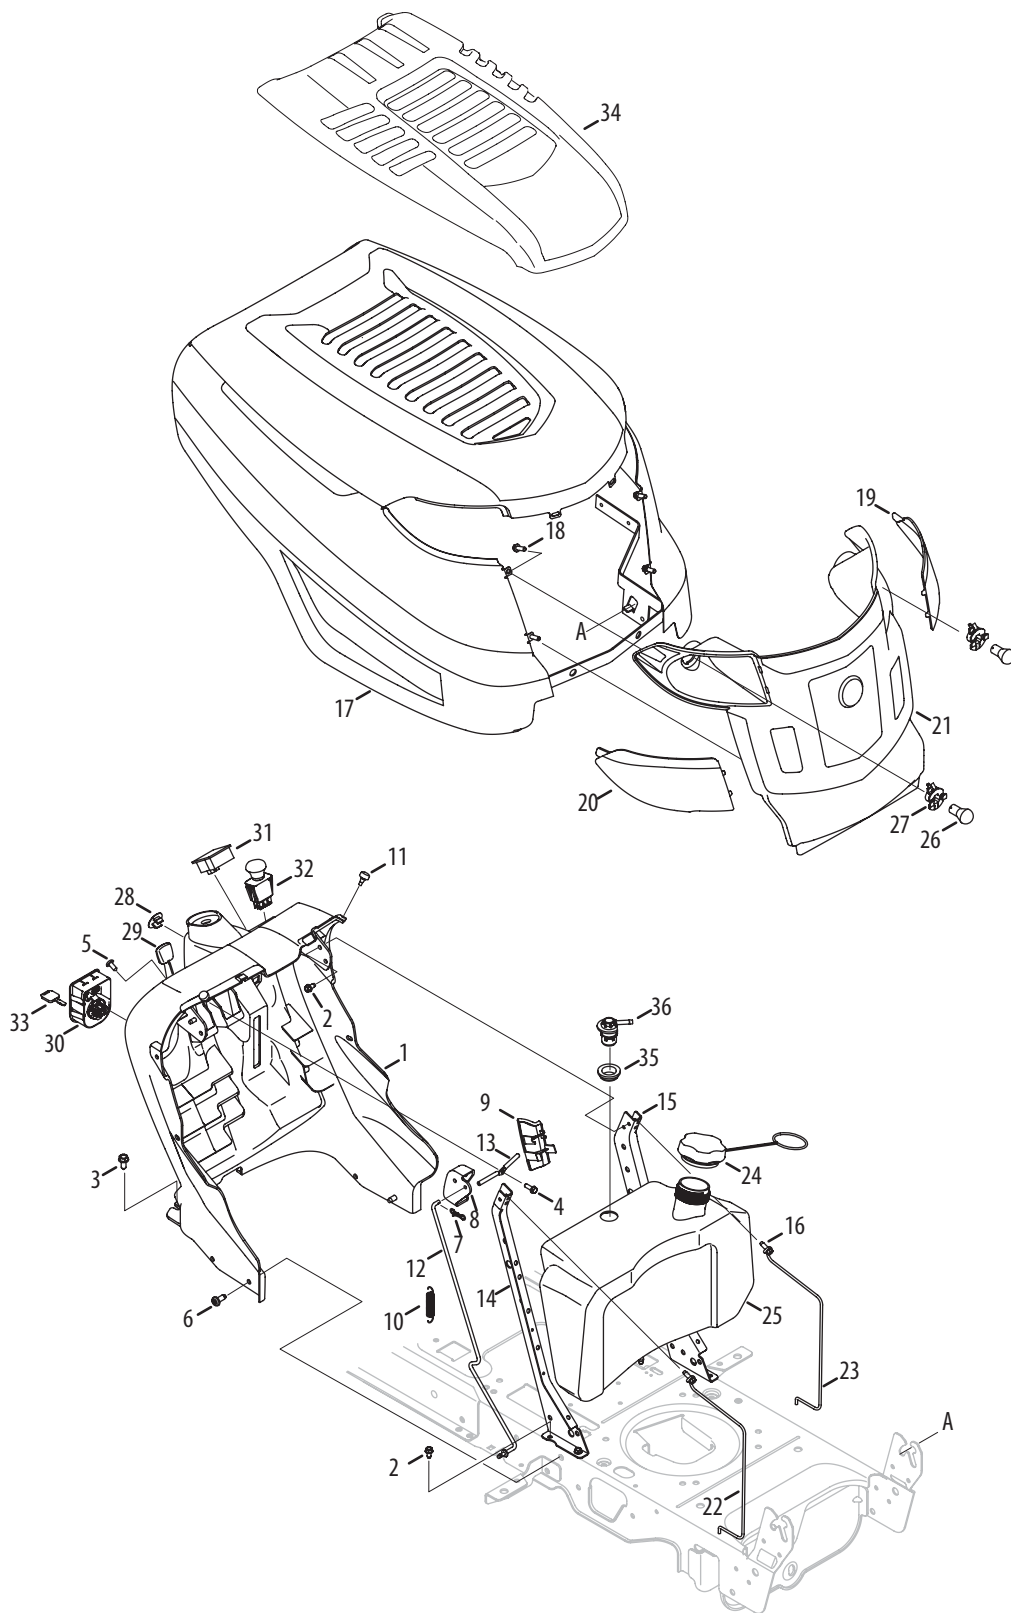

Ref.	Part Number	Description
1	731-06168	Dash Assembly
2	710-0599	Taptite Screw ,1/4-20:0.500
3	710-0607	Taptite Screw, 5/16-18:0.500
4	710-0895	Hi-Lo Screw, 1/4-15:0.750
5	710-1017	Screw, 1/4-14:0.625
6	710-1611B	Taptite Screw ,5/16-18:0.750
7	714-04040	Bow Tie Cotter Pin
8	731-06639	Dash Lever
9	731-06642	Cruise Cover
10	732-04580	Extension Spring, .500 DIA x 2.733 LG
11	735-0271A	Bumper
12	747-05008	Control Rod
13	747-1196	Lever
14	783-04285F	RH Support Plate
15	783-04323F	LH Support Plate
16	710-0642	Taptite Screw, 1/4-20:0.750
17	683-04441	Hood Assembly
18	710-05108	Screw, 1/4 DIA.:750
19	731-06095	LH Lens
20	731-06096	RH Lens
21	631-04272	Grill
22	747-04161	LH Tank Support Rod
23	747-04946	RH Tank Support Rod
24	951-12182	Fuel Cap, EPA
25	951-04309	Fuel Tank, w/ rollover valve
26	925-0963	Lamp
27	925-1649	Lamp Socket
28	731-1999	Choke Plug
29	946-04542	Throttle/Choke Cable
30	925-04230B	Key Switch Module
31	925-04036C	Hour Meter
32	925-04174	Electric PTO Switch
33	925-1745A	Key
34	731-06194A	Hood Scoop
35	735-04081	Grommet, Rubber, 23.0 ID
36	751-12118	Valve, Rollover Grommet
—	931-06212	Plenum (Not Shown)

Electrical Schematic

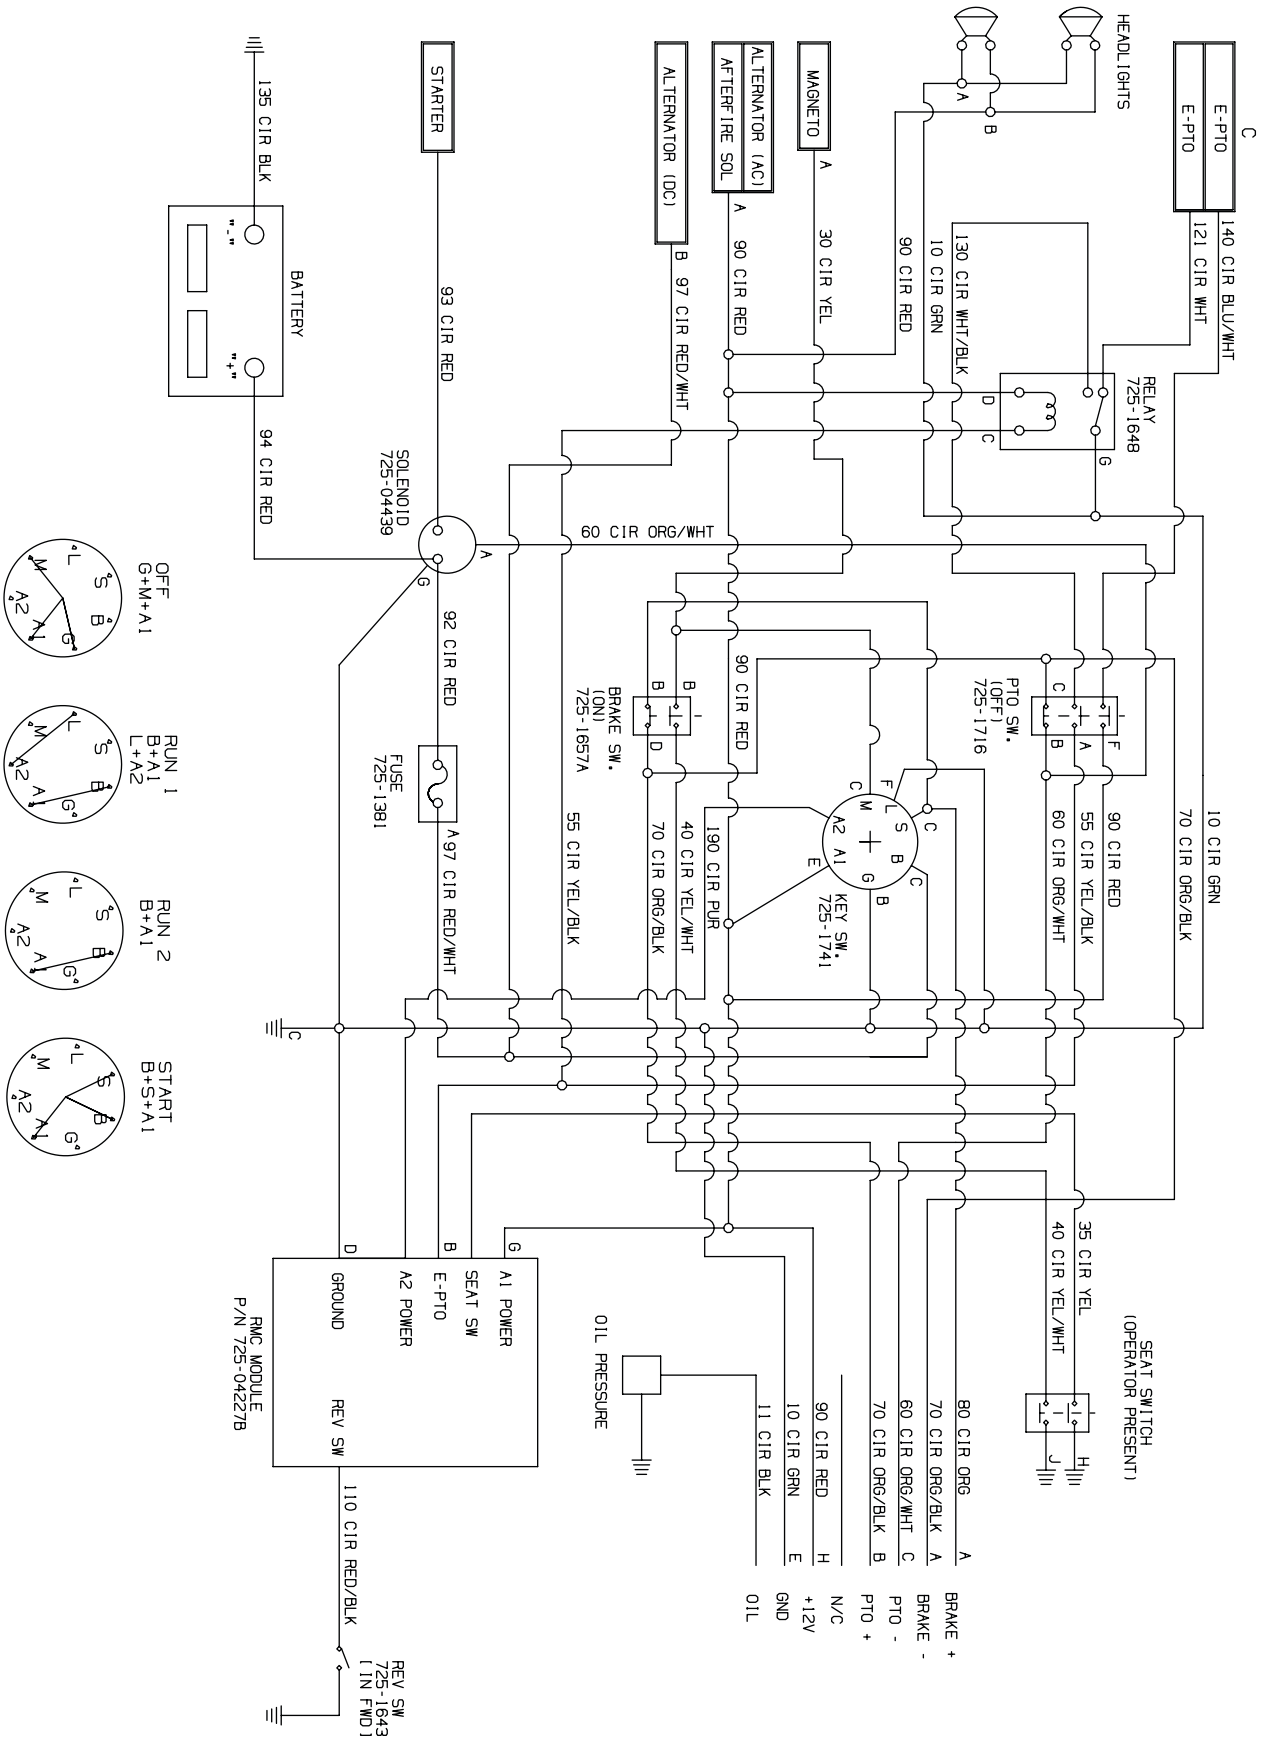

This image shows a full page of white paper with horizontal grey ruling lines. The word "Notes" is printed at the top left in a large, bold, black font. A vertical grey line runs down the right side of the page, creating a margin. There are 21 horizontal lines in total, spaced evenly across the page.



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
