




ILLUSTRATED PARTS MANUAL

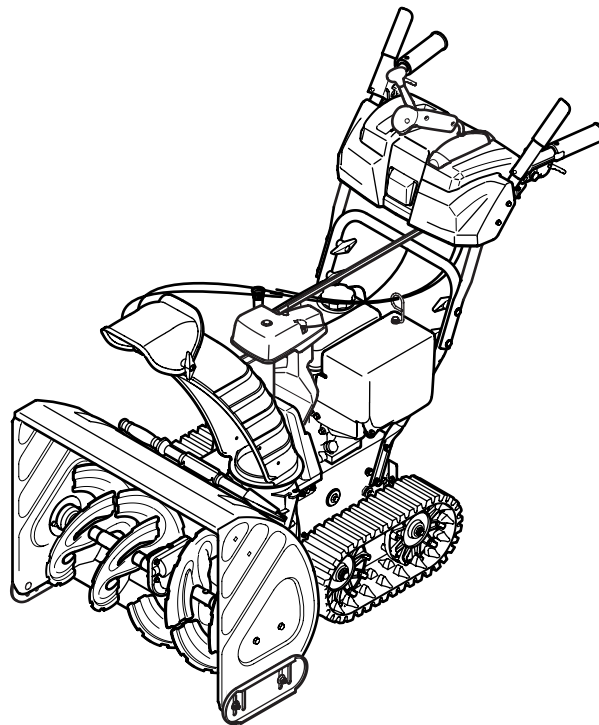

Snow Tracker 2690

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing an MTD Snow Thrower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Augers Housing & Assembly	8	4 Way Extended Chute.....	6
Drive System	12	P/Q Style Panel.....	4
Engine Model 370-SUB-11.....	14	Transmission & Track Drive System	10

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by standing at the operator's position and looking down at the rear of the deck.

MODEL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

SERIAL NUMBER

-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------	-------------

Painted Parts


When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black
0709	Dark Green (Bolens, Yard-Man)
0662	Oyster Gray (MTD Gold)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)
0691	Black Jack (MTD Gold, MasterCut)

0674	Yellow (Yard-Man)
0650	Metallic Red (White Outdoor)
0629	Silver Flake (MTD Platinum)
04038	Day Orange (Daedong)
04033	Flint Mica (Troy-Bilt XP)


This page left intentionally blank.

P/Q Style Panel

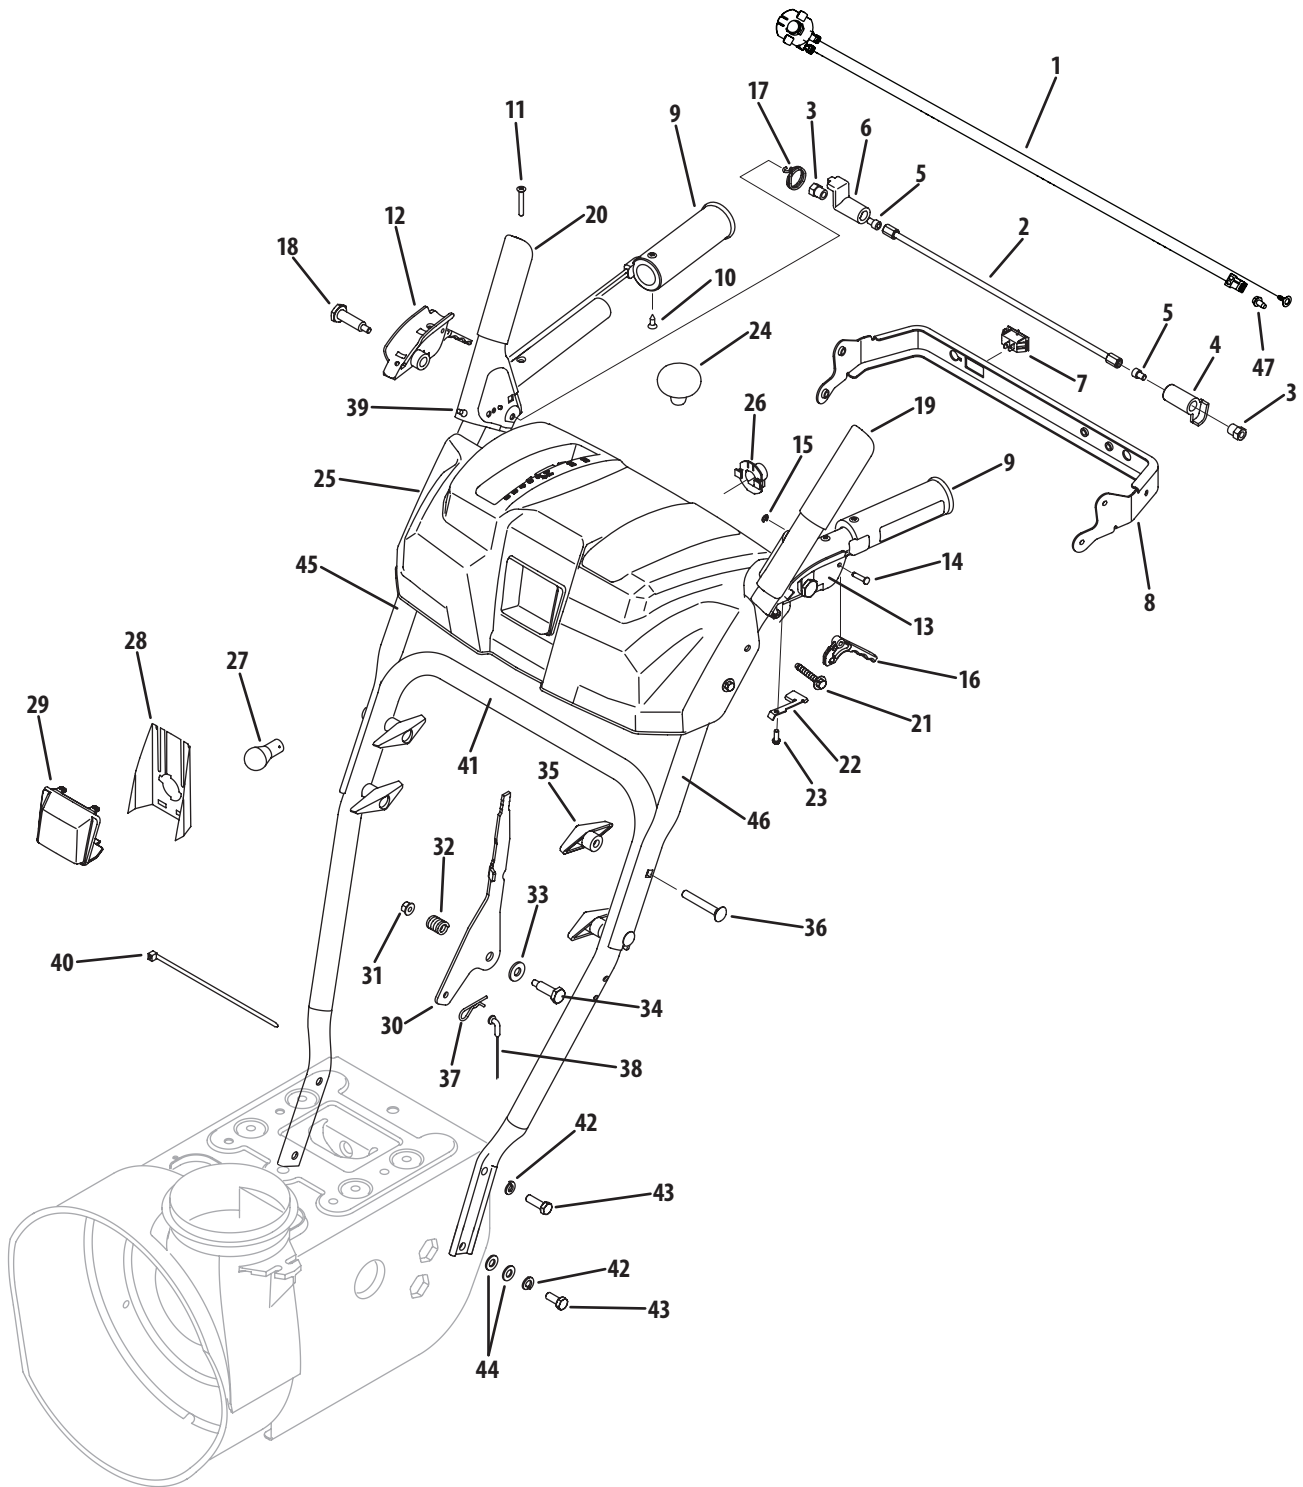

Ref.	Part Number	Description	Ref.	Part Number	Description
1.	725-05148	Wire Harness	25.	931-05332A	Handle Panel
2.	684-04250	Clutch Lock Rod Assembly	26.	925-1649	Light Socket
3.	712-04081A	Hex Shoulder Nut, ¼-20	27.	725-1629	Lamp
4.	731-04896B	Clutch Lock Cam	28.	777X41805	Lens Label
5.	710-3069	Socket Cap Screw ¼-20 x .50	29.	731-05319	Lens
6.	731-04894D	Lock Plate	30.	790-00281B	Shift Lever
7.	725-04393	Heated Grip Switch	31.	712-04064	Flange Lock Nut, ¼-20
8.	790-00248B	Panel Bracket	32.	732-0193	Compression Spring, .39 x .60 x .88
9.	725-05149	Heated Grip	33.	936-0267	Flat Washer, .385 x .87 x .06
10.	710-0837	AB Screw, #10-16 x .625	34.	738-04125	Shoulder Screw, .374 x 1.05
11.	710-1233	Machine Screw, #10-24 x 1.375	35.	920-0284	Wing Knob
12.	631-04134B	Clutch Lock Handle Assembly, RH	36.	710-0572	Carriage Screw, ⅝-18 x 2.25
13.	631-04133A	Clutch Lock Handle Assembly, LH	37.	914-0145	Click Pin, .092 x 1.64
14.	738-04126	Pin, 3/16	38.	946-04518	Speed Selector Cable
15.	716-04036	E-Type Ring, .375	39.	935-0199A	Rubber Bumper, .62 x .22
16.	731-06113	Clutch Trigger Lock	40.	725-0157	Cable Tie, ⅜ x .05 x 7.43
17.	732-04238	Torsion Spring, .8156 ID x .3038	41.	749-0951A	Lower Handle
18.	738-04348	Shoulder Screw, .437 x 1.345 x ¼-20	42.	936-0119	Lock Washer, ⅝
19.	684-04111B	Engagement Handle Assembly, LH	43.	710-1880	Hex Bolt, ⅝-18 x .75
20.	684-04112B	Engagement Handle Assembly, RH	44.	936-0275	Flat Washer, .344 x .688 x .065
21.	710-04586	Hex Washer Screw, ¼-20 x 1.625	45.	749-04310	Upper Handle, RH
22.	732-04219C	Clutch Lock Spring	46.	749-04309	Upper Handle, LH
23.	710-04326	Hex Washer Screw, #8-16 x .50	47.	710-0599	Screw, 1/4-20 x .500
24.	720-04039	Shift Knob			

4-Way Extended Chute

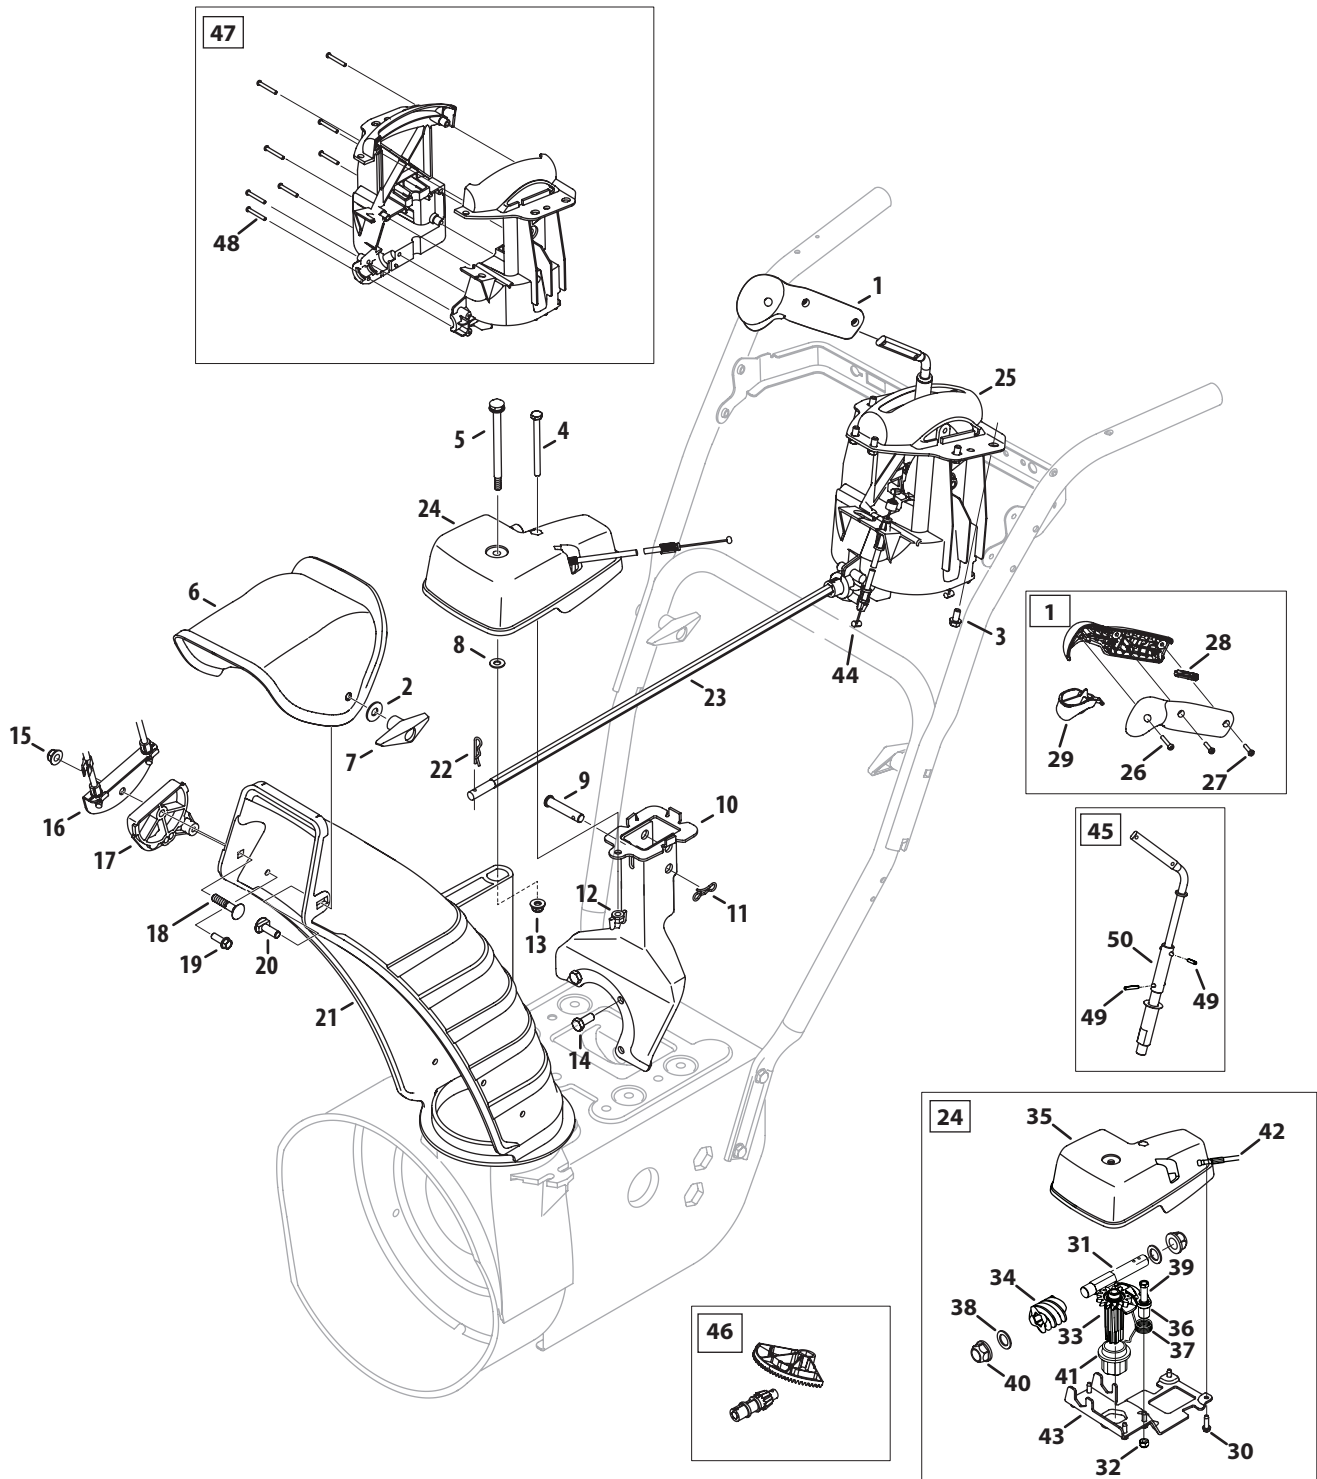


4-Way Extended Chute

Ref.	Part Number	Description
1.	753-06151	Chute Control Assembly
2.	936-0159	Washer, Flat, .349 x .879
3.	710-04187	Hex Washer Screw, 1/4-15 x .50
4.	710-04370	Hex Head Screw, 1/4-20 x 3.00
5.	738-04367	Screw, Shoulder, .312 x 3.5 x 1/4-20
6.	731-04427A	Upper Chute
7.	920-0284	Wing Knob
8.	736-04446	Washer, Flat, .25 x .630
9.	711-04469A	Clevis Pin, 3/8 x 1.87
10.	684-04311A	Chute Support Bracket
11.	714-04040	Bow-Tie Cotter Pin
12.	712-3087	Wing Nut, 1/4-20
13.	712-04064	Flange Lock Nut, 1/4-20
14.	710-0627	Hex Lock Screw, 5/16-24 x .750
15.	712-04063	Flange Lock Nut, 5/16-18
16.	784-5594	Cable Bracket
17.	731-06451	Chute Tilt Cable Guide
18.	710-0262	Carriage Bolt, 5/16-18 x 1.50
19.	710-0895	Hex Washer Screw, 1/4-15 x .750
20.	710-04071	Carriage Bolt, 5/16-18 x 1.00
21.	731-06440A	Lower Chute, 5.0
22.	914-0101	Internal Cotter Pin
23.	747-05116	Chute Rod, 3/8 Hex
24.	918-04801A	Gearbox Assembly, Chute Rotation
25.	984-04338A	4-Way Chute Control
26.	710-04353	Screw, #8 x 1.00

Ref.	Part Number	Description
27.	710-04879	Screw, 8-32 x .750
28.	731-04893A	Joystick Plug
29.	731-07031	Joystick Trigger
30.	710-04373A	Screw, 12-16 x .75
31.	711-05186	Hex Shaft
32.	712-0896	Hexlock Nut, 1/4-28
33.	717-04667	Gear, 14 T
34.	717-04672	Worm
35.	731-06906	Gear Cover
36.	731-06943	Pawl Lock
37.	732-04638C	Torsion Spring, .721 ID x .474
38.	736-0290	Washer, Flat, .625 x 1.0 x .067
39.	738-04391	Screw, Shoulder, .340 x .950 x 1/4-28
40.	941-0225	Hex Bearing
41.	741-04388	Flange Bearing
42.	946-04619B	Cable Lock
43.	790-00342B	Gear Bracket
44.	946-04528A	4-Way Cable
	946-04477†	4-Way Cable w/Clip
45.	984-04324A	Shift Assembly
46.	753-06152	Gear Set Assembly
47.	753-06153	Handle Housing Assembly
48.	710-1256	Screw, #8-18 x 1.250
49.	715-04095	Pin, Roll
50.	684-04350	Block, Asm Joint

† Not Shown

Auger Housing & Assembly

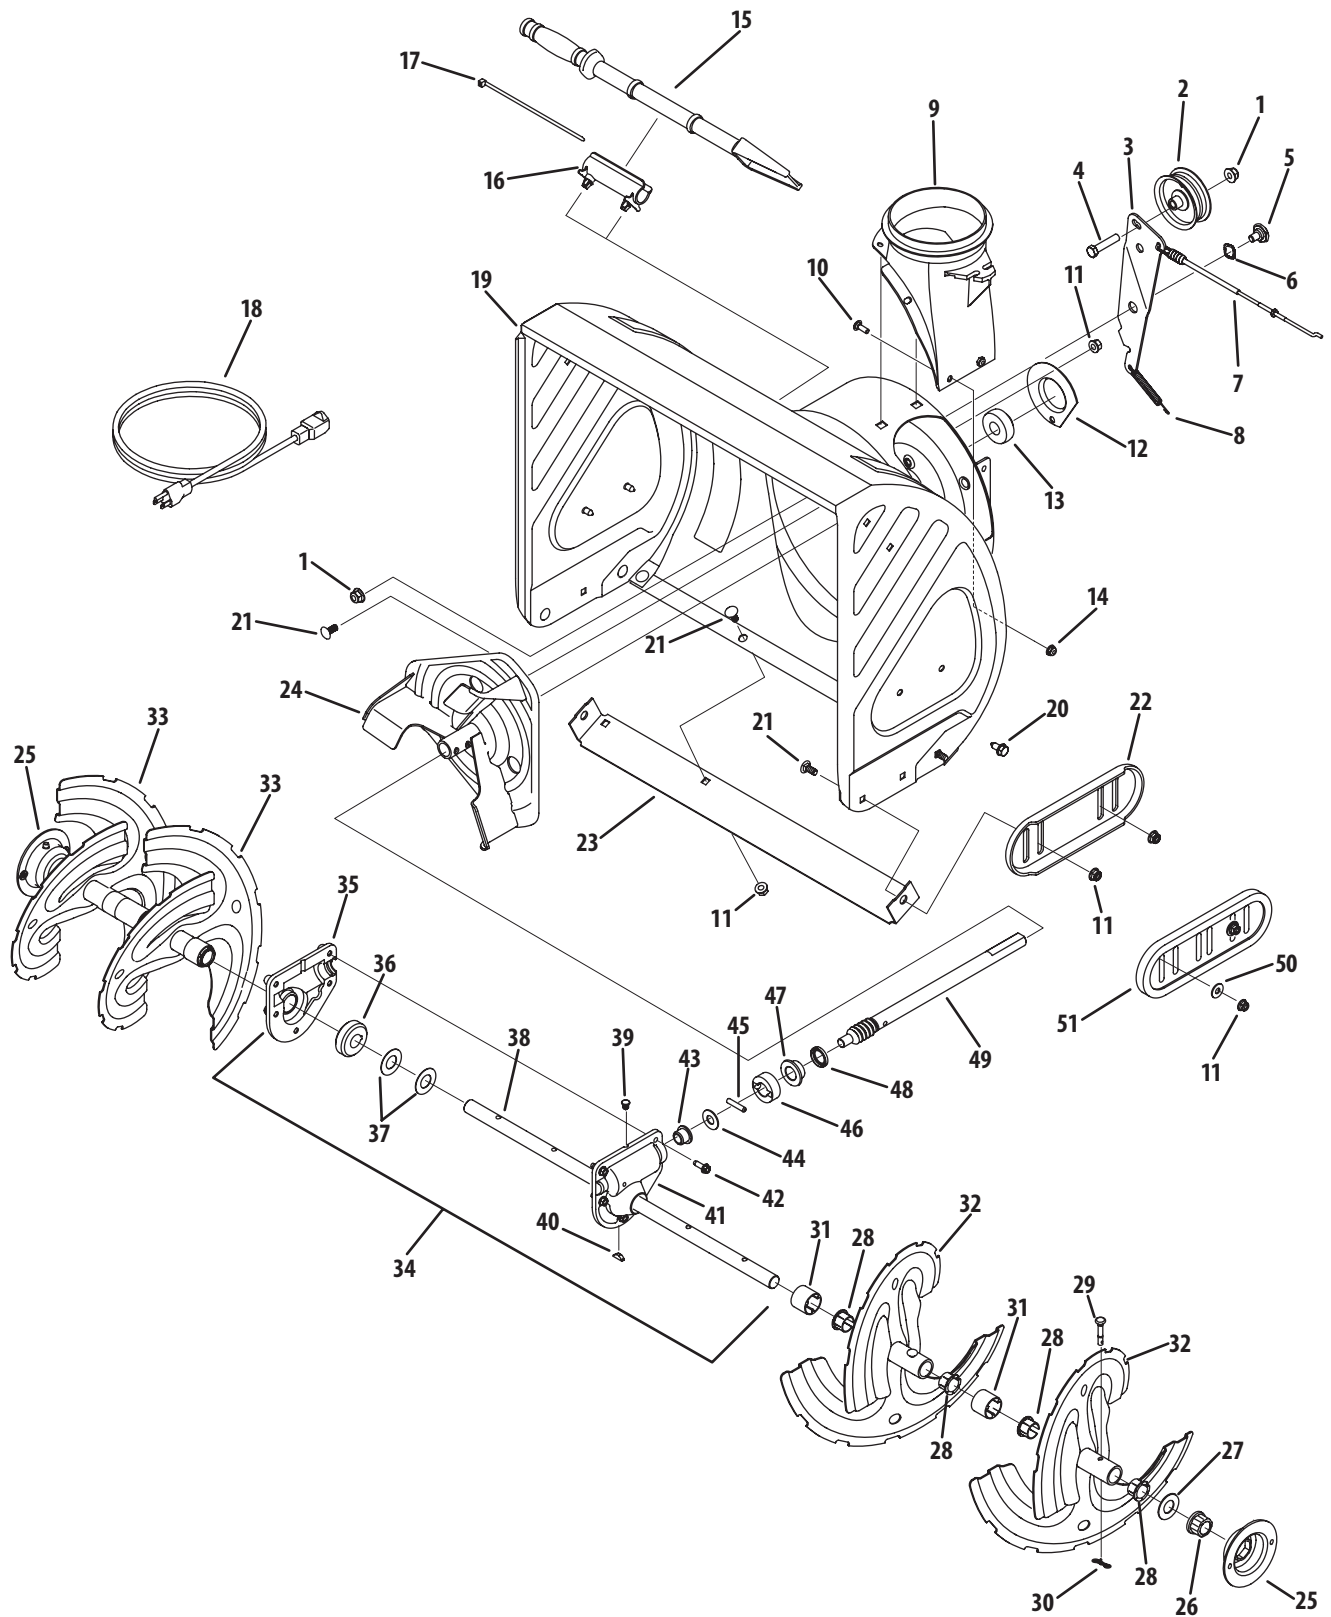


Auger Housing & Assembly

Ref.	Part Number	Description
1.	712-04065	Flange Lock Nut, 3/8-16
2.	756-04224	Idler Pulley
3.	790-00080A	Auger Idler Bracket w/ Brake
4.	710-0347	Hex Bolt, 3/8-16 x 1.75
5.	938-0281	Shoulder Screw, .625 x .17 x 3/8-16
6.	736-0174	Wave Washer, .625 x .885 x .015
7.	946-0897	Clutch Cable
8.	932-0611	Extension Spring, .38 OD x 3.6
9.	731-07525	Chute Adapter, 5.0
10.	710-0703	Carriage Screw, 1/4-20 x .75
11.	712-04063	Flange Lock Nut, 5/16-18
12.	05931A	Bearing Housing
13.	941-0309	Ball Bearing, .75 ID x 1.85 OD
14.	712-04064	Flange Lock Nut, 1/4-20
15.	931-2643	Cleanout Tool
16.	731-2635	Cleanout Tool Mount
17.	725-0157	Cable Tie, 3/16 x .05 x 7.4
18.	929-0071A	Extension Cord, 3-Prong
19.	684-04323	Auger Housing, 26"
20.	710-04484	Hex Washer Screw, 5/16-18 x .750
21.	710-0451	Carriage Bolt, 5/16-18 x .750
22.	790-00091	Deluxe Skid Shoe
23.	790-00121	Shave Plate, 2.25 x 26"
24.	684-04057A	Impeler Assembly
25.	790-00087A	Bearing Housing
26.	941-0245	Hex Flange Bearing

Ref.	Part Number	Description
27.	736-0188	Flat Washer, .76 x 1.49 x .06
28.	741-0493A	Flange Bushing .800 ID x .910 OD
29.	738-04124A	Shear Pin
30.	714-04040	Bow-Tie Cotter Pin
31.	731-04870	Spacer, 1.25 OD x .75 ID x 1.00
32.	684-04107	Spiral Assembly, LH
33.	684-04108	Spiral Assembly, RH
34.	918-04172B	Gearbox Assembly, 26"
35.	918-0123A	Housing Assembly, RH
36.	917-04861	Worm Gear, 20T
37.	936-0351	Flat Washer, .760 ID x 1.50 OD
38.	711-04284	Auger Axle, 26"
39.	721-0325	Plug, 1/4 x .437
40.	914-0161	Hi-Pro Key, 3/16 x 5/8
41.	918-0124A	Housing Assembly, LH
42.	710-0642	Hex Washer Screw, 1/4-20 x .750
43.	741-0663	Flng. Bearing, .50 ID x .75 OD x .59
44.	736-3084	Flat Washer, .51 x 1.12 x .06
45.	715-04021	Dowel Pin, .25 OD x 1.25
46.	718-04071	Thrust Collar, .756 ID x .600
47.	741-0662	Flng. Bearing, .75 ID x 1.0 OD x .59
48.	721-0327	Oil Seal, .75 x 1.131 x .188
49.	917-04126	Worm Shaft, .75 OD
50.	936-0159	Flat Washer, .349 x .879 x .063
51.	731-05984A	Deluxe Polymer Skid Shoe


Transmission & Track Drive System

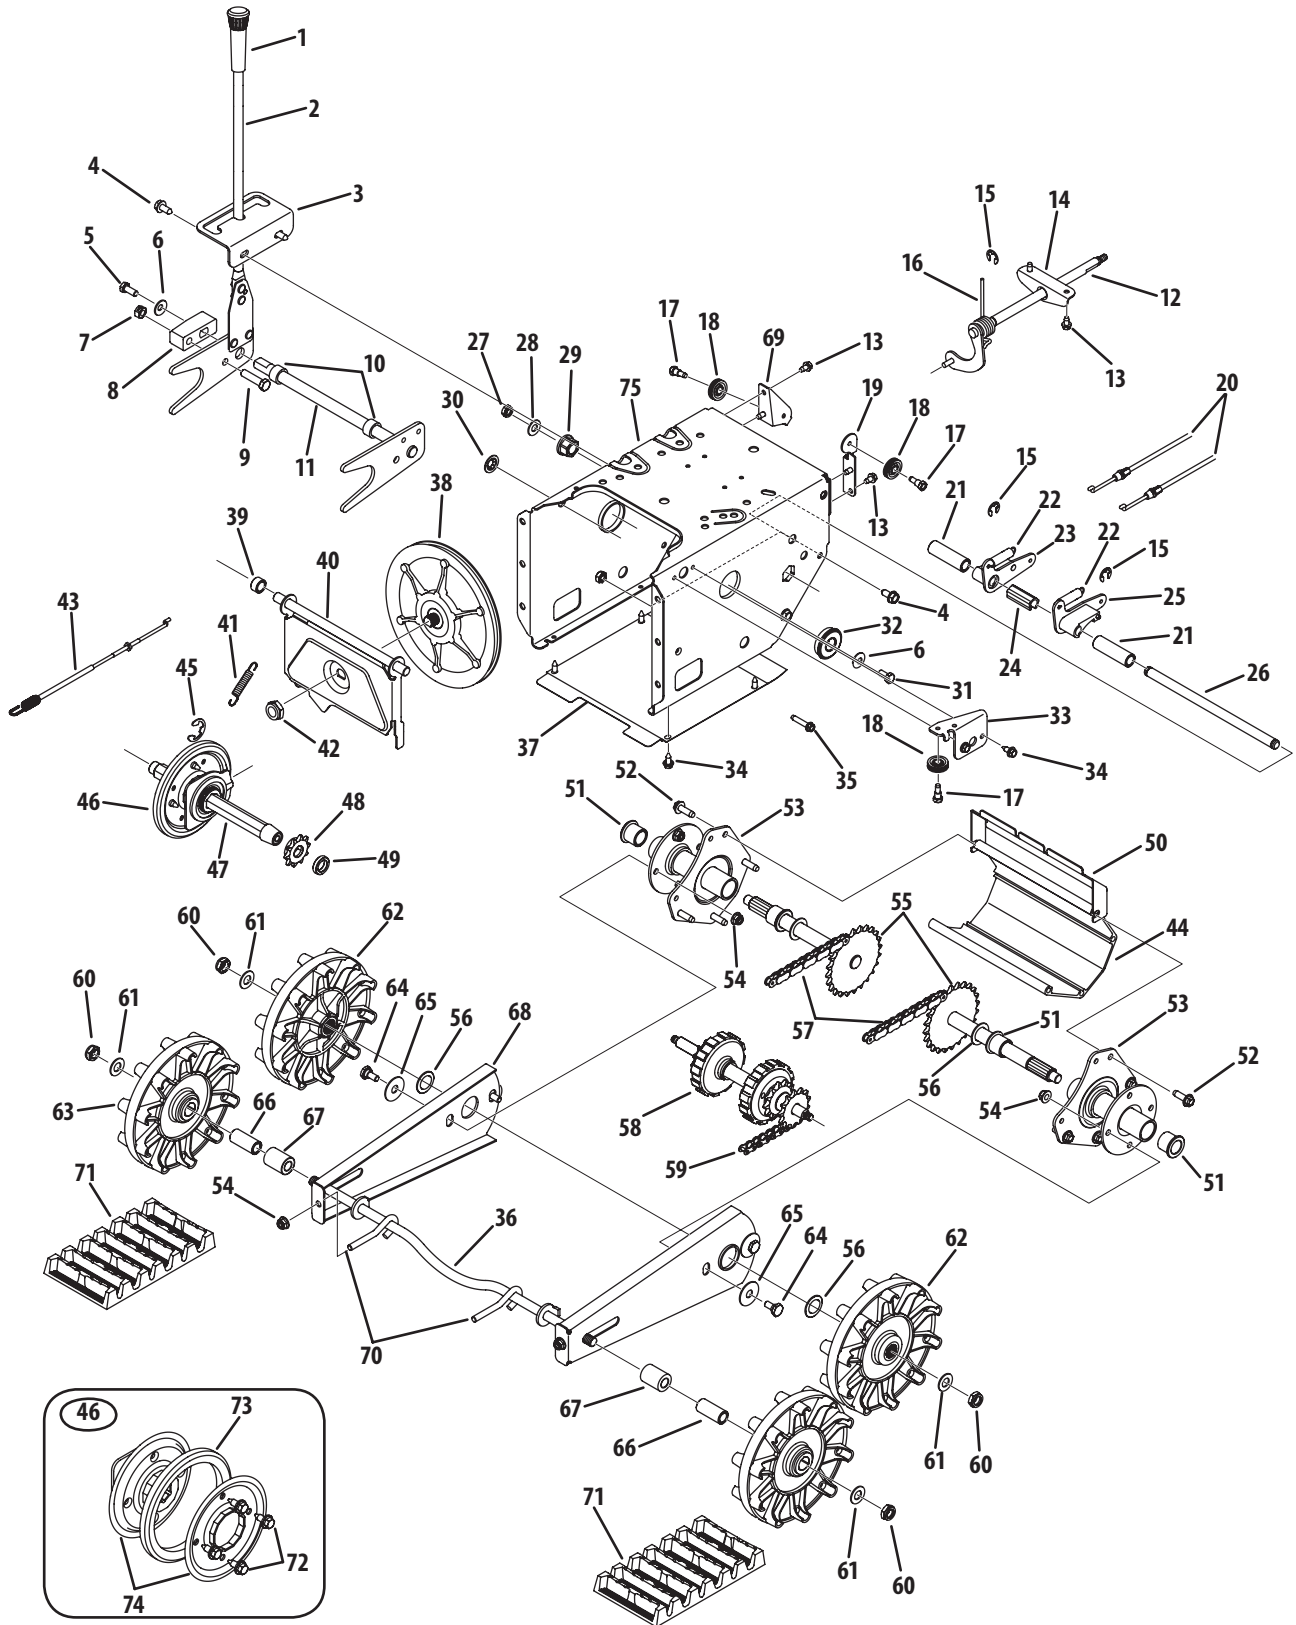

Transmission & Track Drive System


Ref.	Part Number	Description
1.	720-0223	Grip, .5 ID x 3.45
2.	684-0038	Track Lock Handle Assembly
3.	784-5642	Lockout Track Bracket Plate
4.	710-04484	Hex Washer Screw, 5/16-18 x .750
5.	710-0157	Hex Screw, 5/16-24 x .75
6.	736-0242	Bell Washer, .340 x .872 x .060
7.	912-3000	Hex Lock Nut, 3/8-16
8.	748-0353A	Lift Shaft Drive
9.	710-0344	Hex Screw, 3/8-16 x 1.50
10.	750-0547	Spacer, .828 ID x .875 OD x .500
11.	684-0009A	Pivot Rod Assembly
12.	684-04307	Shift Rod Assembly
13.	710-0599	Hex Washer Screw, 1/4-20 x .500
14.	784-5590	Shift Frame Bracket
15.	916-0104	E-Ring
16.	732-04514	Torsion Spring, .750 ID x .968
17.	738-0924A	Shoulder Screw, .34 x .335 x 1/4-28
18.	756-0625	Cable Roller
19.	784-5687A	Auger Cable Guide Bracket
20.	946-0948A	Track Steering Cable
21.	750-0903B	Spacer, .515 x 735 x 2.44
22.	932-0209	Extension Spring, .48 OD x 2.03
23.	618-0043	Dogg Assembly, RH
24.	750-05021	Spacer, .491 ID x 1.87
25.	618-0044	Dogg Assembly, LH
26.	911-04927	Shift Actuator
27.	912-0116	Jam Lock Nut, 3/8-24
28.	936-0300	Flat Washer, .406 x .875 x .059
29.	741-1111	Hex Flange Bearing
30.	726-0221	Speed Nut, .500
31.	710-0538	Hex Lock Screw, 5/16-18 x .625
32.	941-0563	Ball Bearing
33.	790-00287	Auger Cable Support Guide
34.	710-1652	Hex Washer Screw, 1/4-20 x .625
35.	710-0788	Hex Washer Screw, 1/4-20 x 1.000
36.	684-04240	Axle Assembly
37.	784-5648A	Track Frame Cover
38.	656-04055	Friction Wheel Disc Assembly

Ref.	Part Number	Description
39.	750-04748	Spacer, .525 ID x .750 x .42
40.	684-04241A	Friction Wheel Support Bracket
41.	932-0264	Extension Spring
42.	712-0417A	Flange Nut, 5/16-18
43.	946-0898	Drive Clutch Cable
44.	719-0295A	Housing
45.	716-0136	E-Ring
46.	684-04159	Friction Wheel Assembly
47.	911-04928	Hex Track Shaft
48.	913-04015	Sprocket, 10T
49.	950-0997	Spacer, .675 ID x 1.00 OD x .23
50.	784-5609	Steering Cable Bracket
51.	941-0339	Flange Bearing
52.	710-0602	Hex Washer Screw, 5/16-18 x 1.0
53.	683-0024	Track Hub Assembly
54.	712-04063	Flange Lock Nut, 5/16-18
55.	611-0053	Track Axle Assembly
56.	936-0287	Flat Washer, .793 x 1.24 x .06
57.	713-0437	Chain
58.	918-0169B	Drive Track Shift Assembly
59.	713-0233	Chain
60.	912-0346	Jam Lock Nut, 1/2-20
61.	936-0272	Flat Washer, .510 x 1.00 x .060
62.	731-1538A	Track Drive Wheel
63.	631-0032	Track Idler Wheel
64.	938-0140	Shoulder Screw, .43 x .56 5/16-18
65.	936-0406	Flat Washer, .442 x 1.38 x .060
66.	750-0995	Spacer, .51 ID x .75 OD x 1.67
67.	750-0909	Spacer, .510 ID x 1.0 OD x 1.34
68.	784-5639	Side Plate
69.	784-5688	Drive Cable Guide Bracket
70.	710-1231	Eye Bolt, 5/16-18 x 3.0
71.	731-1292	Snow Trac
72.	710-0896	Hex Washer Screw, 1/4-14 x .625
73.	935-04054	Friction Wheel
74.	790-00174	Friction Plate
75.	684-04302B	Frame Assembly

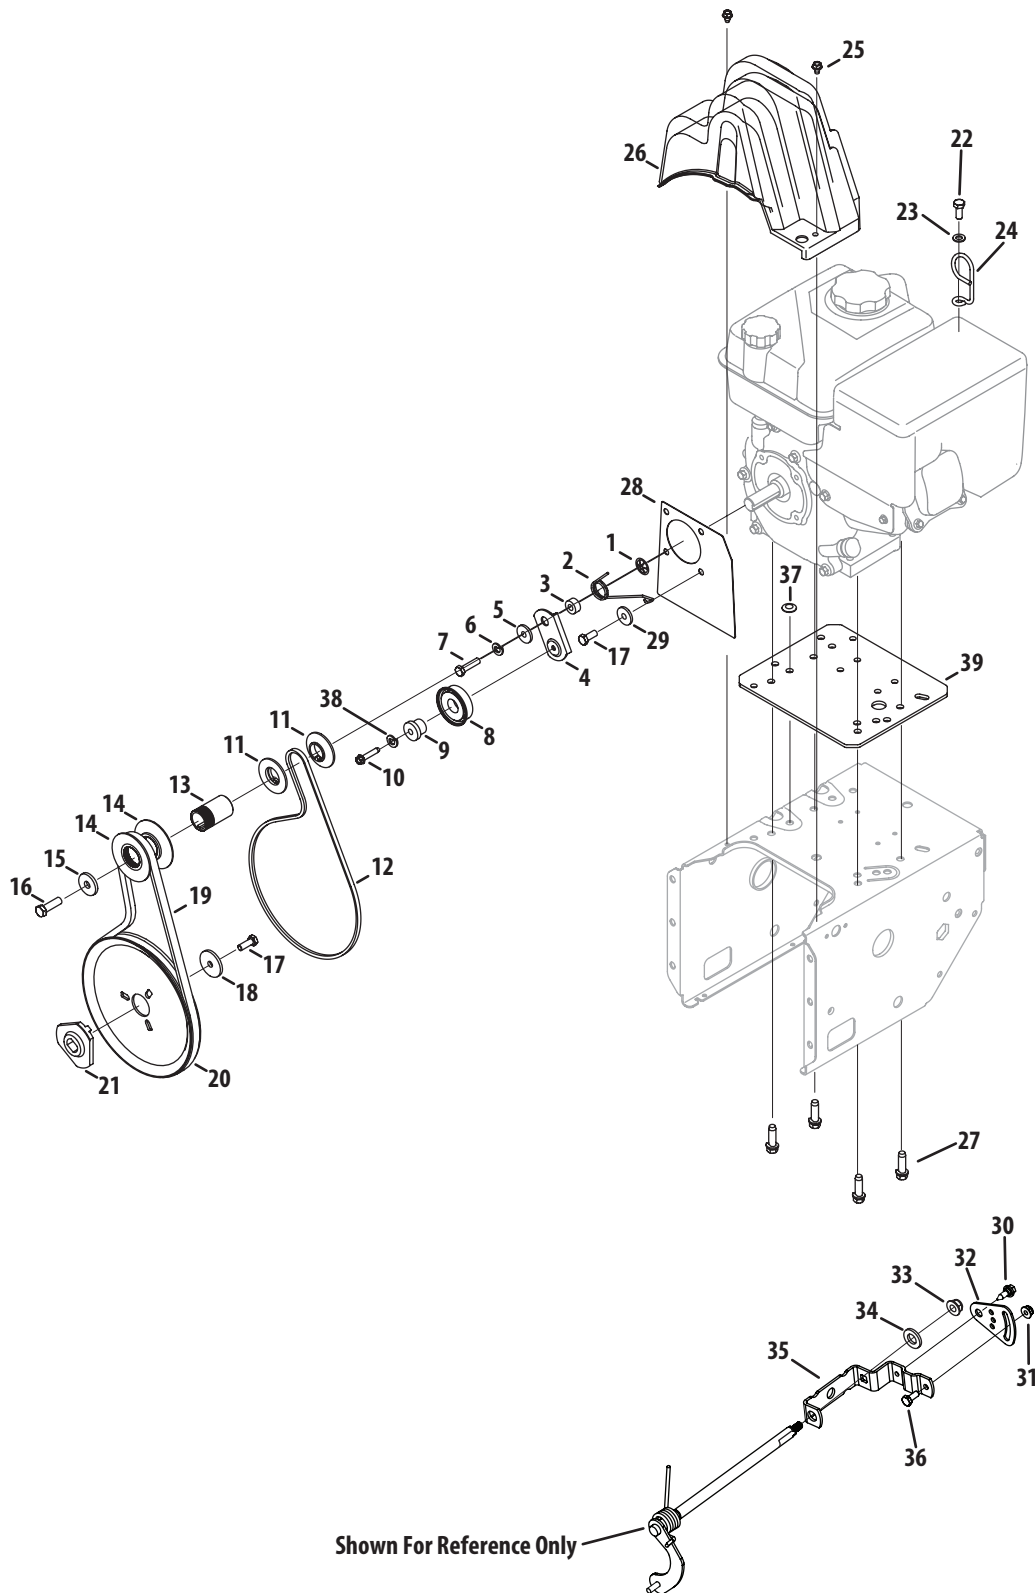


Ref.	Part Number	Description
1.	926-04012	Push-On Nut
2.	732-04308A	Torsion Spring, .850 ID x .333
3.	750-04477A	Spacer, .340 x .750 x .330
4.	790-00208C	Idler Bracket
5.	748-04112B	Shldr. Spacer, .3175 ID x .500 x .0975
6.	936-0119	Lock Washer, $\frac{5}{16}$
7.	710-0672	Hex Screw, $\frac{5}{16}$ -24 x 1.25
8.	684-04169	Idler Pulley
9.	750-04571	Shoulder Spacer, .260 x .785 x .538
10.	710-0809	Hex Washer Screw, $\frac{1}{4}$ -20 x 1.250
11.	756-04252	Pulley Half, $\frac{3}{8}$ -V x 1.7160 OD
12.	954-0367	V-Belt
13.	750-04303	Spacer, .875 ID x 1.185 OD
14.	756-04113	Pulley Half, 4L-V x 2.600 OD
15.	736-0247	Flat Washer, .406 x 1.25 x .157
16.	710-0191	Hex Screw, $\frac{3}{8}$ -24 x 1.25
17.	710-1245B	Hex Lock Screw, $\frac{5}{16}$ -24 x .875
18.	736-0505	Flat Washer, .34 x 1.50 x .150
19.	954-04050	Belt
20.	756-04109	Auger Pulley
21.	748-04053A	Adapter Pulley
22.	710-04022	Hex Screw, M8-1.25 x 20
23.	936-0264	Flat Washer, .330 x .630 x .0635
24.	732-0705	Cable Control Wire
25.	710-0653	Hex Washer Screw, $\frac{1}{4}$ -20 x .375
26.	731-05353	Belt Cover
27.	710-0502A	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
28.	790-00289A	Cover Plate
29.	748-0234	Shoulder Spacer
30.	738-04184A	Shoulder Screw, .368 x .113 x $\frac{1}{4}$ -20
31.	712-04064	Flange Lock Nut, $\frac{1}{4}$ -20
32.	790-00217A	Speed Selector Pivot Bracket
33.	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
34.	936-3015	Flat Washer, .469 x .875 x .105
35.	790-00218A	Speed Selector Shift Bracket
36.	710-0751	Hex Screw, $\frac{1}{4}$ -20 x .620
37.	735-04099	Plug, 3/8 ID
38.	936-0329	Lock Washer, 1/4
39.	790-00322B	Engine Plate

370-SUB-11 Muffler

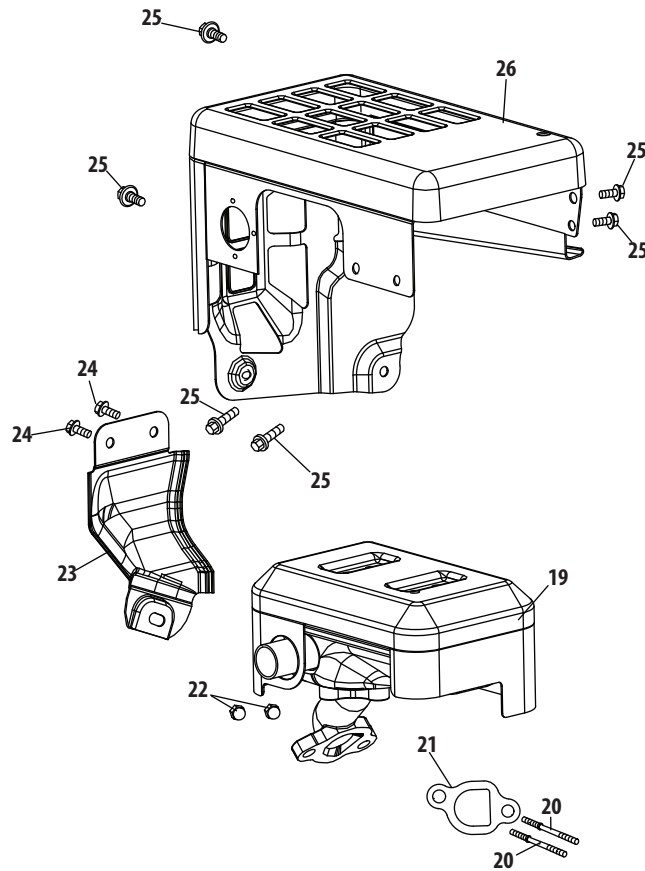


Ref.	Part Number	Description
19	951-11282	Muffler Assembly
20	710-04911	Muffler Stud M8×36
20	951-10657	Muffler Stud Assembly
21	951-11285	Exhaust Pipe Gasket
22	712-04214	Nut,M8
23	951-11111	Exhaust Pipe Shield
24	710-04914	Bolt M6×10
25	710-04915	Bolt M6×12
26	951-10642A	Muffler Shield
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning

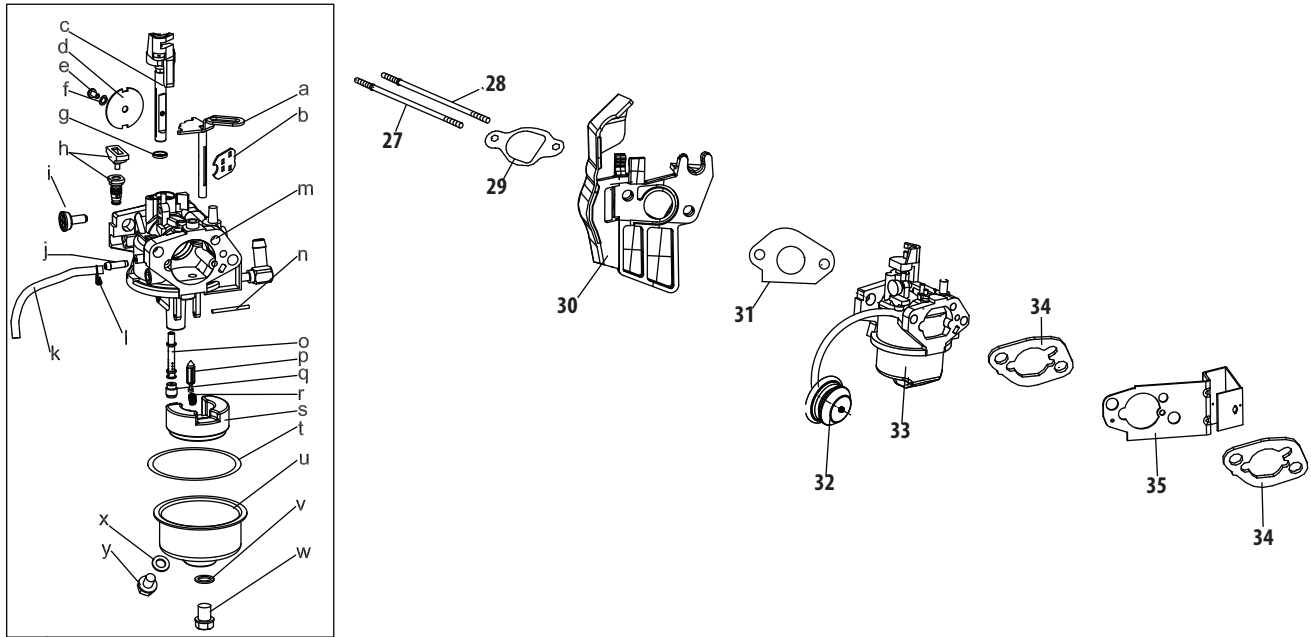

Ref.	Part Number	Description
27	710-04939	Stud M6×117
28	710-04910	Stud M6×105
29	951-11567	Carburetor Insulator Gasket
30	951-11896	Carburetor Insulator
31	951-11569A	Carburetor Gasket
32	951-10639A	Primer Assembly
32	951-11824	Primer Bulb
33	951-10638A	Carburetor Assembly
34	951-11897	Carburetor Gasket Plate
35	951-11112	Choke Control
a		Choke Shaft
b		Choke Plate
c		Throttle Shaft
d		Throttle Plate
e		Screw M3×5
f		Lock Washer
g		Gasket, Throttle Plate
h		Idle Jet Assembly
i		Idle Speed Adjusting Screw

Ref.	Part Number	Description
j		Mixture Screw
k	951-11699	Primer Hose
l	951-11906	Hose Clamp
m		Carburetor Body
n		Float Pin
o		Emulsion Tube
p		Needle Valve
q		Main Jet
r		Needle Valve Spring
s		Float
t	951-11589	Fuel Bowl Gasket
u		Fuel Bowl
v	951-11348	Fuel Bowl Gasket
w	710-04945	Fuel Bowl Mounting Bolt
x	951-11349	Fuel Drain Plug Gasket
y	710-04938	Fuel Drain Plug
z	951-11021A	Carburetor Kit - Major (Incl.g,h,l,n,o,p,q,r,s,t,v,x)

370-SUB-11 Crankcase

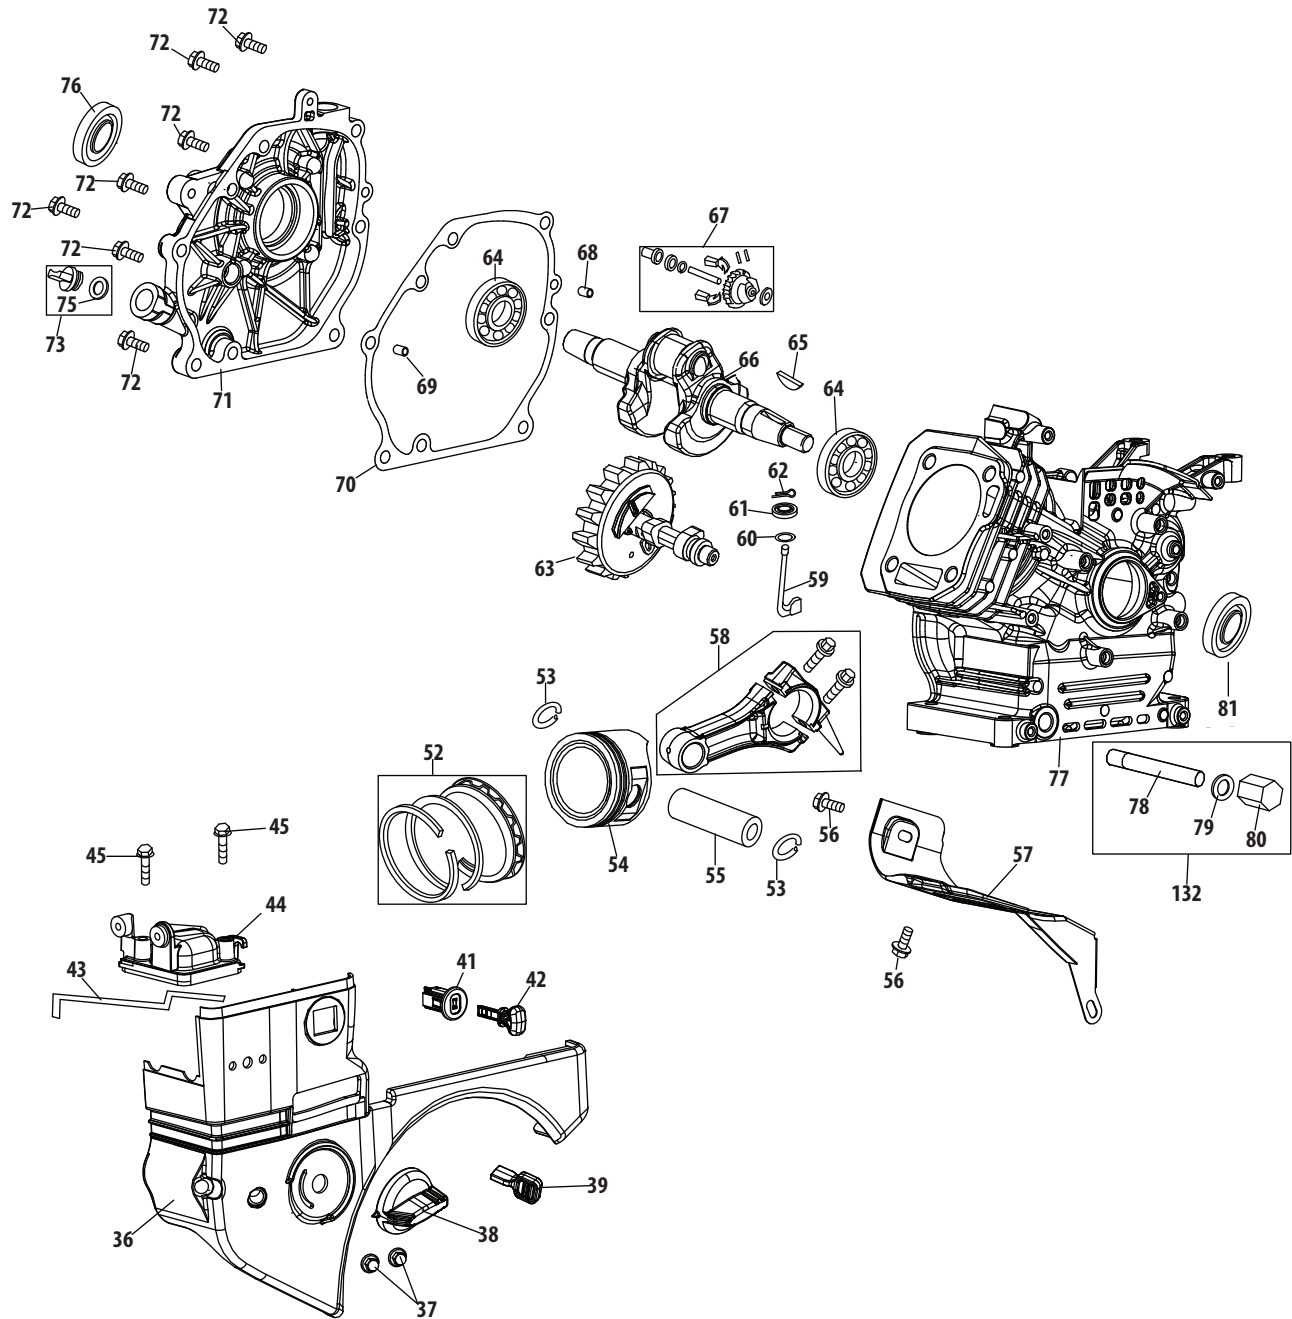


370-SUB-11 Crankcase

Ref.	Part Number	Description
36	951-10634	Air Cleaner Housing
37	712-04213	Nut
38	951-11284	Choke Knob
39	951-10757	Throttle Control Knob
41	951-10637	Key Switch Base
42	731-05632	Key
43	951-10640	Choke Push Rod
44	951-10635	Heater Box
45	710-04919	Bolt M6×25
52	951-12111	Piston Ring Set
53	951-11632	Piston Pin Snap Ring
54	951-12007	Piston
55	951-11633	Piston Pin
56	710-04915	Bolt M6×12
57	951-11113	Air Shield
58	951-11573	Connecting Rod Assembly
59	951-11356	Governor Arm Shaft
60	736-04461	Washer 5.2×1.9
61	951-11902	Governor Seal
62	714-04074	Cotter Pin
63	951-11575	Camshaft Assy.
64	951-11369	Radial Ball Bearing,6205
65	951-10307	Woodruff Key
66	951-11247A	Crankshaft Assembly
67	951-11576	Governor Gear/Shaft Assembly
68	715-04092	Dowel Pin 7×14
69	715-04089	Dowel Pin 9×14
70	951-11371	Crankcase Cover Gasket

Ref.	Part Number	Description
71	951-12125	Cover Comp,Left Crankcase
72	710-04932	Bolt M8×32
73	951-11283	Oil Fill Plug Asm
75	951-11577	O-Ring 15.8×2.5
76	951-11368	Oil Seal,25×41.25×6
77	951-11060A	Short Block (Incl.4,21,29,30,46,48,49, 52-55,58-72,74-81)
78	951-11350	Oil Drain Pipe Assy.
79	736-04440	Washer 10×16×1.5
80	710-04906	Oil Drain Plug
81	951-11370	Oil Seal 25×41.25×6
132	951-10641	Oil Drain Assembly
	952Z370-SUB-11	Complete Engine
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning
	951-11246	Crankcase Cover Kit (Incl.64,70-73,76)
	951-11247A	Crankshaft Kit (Incl.64-66,76,81)
	951-11249	Crankcase Kit (Incl.61,64,76,77,81)
	951-11059A	Gasket Kit - Complete (Incl.4,21,29-31,34,46, 60,61,70,76,79,81)


370-SUB-11 Starter Assembly & Blower Housing

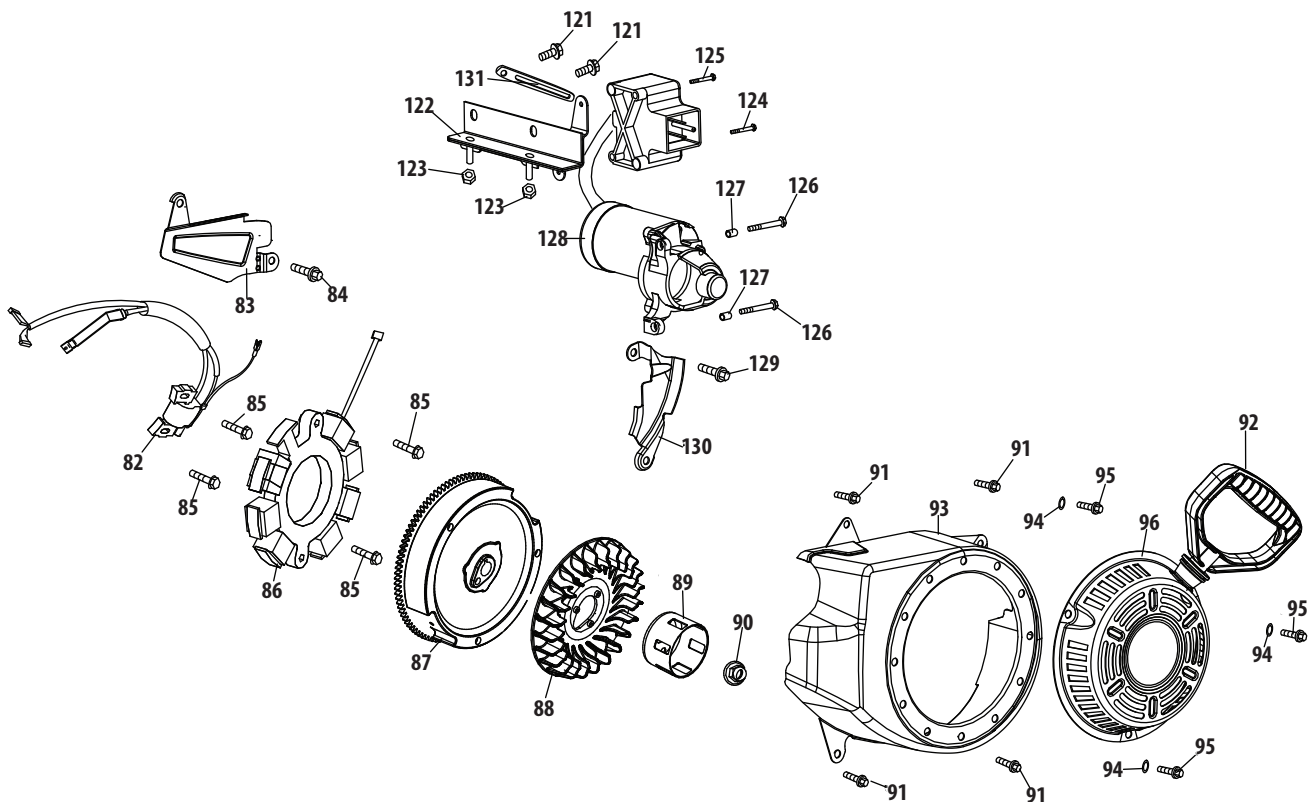

Ref.	Part Number	Description
82	951-10646	Ignition Coil Assembly
83	951-11110	Air Flow Shield
84	710-04940	Bolt M6x10
85	710-04919	Bolt M6x25
86	951-12050	Coil Assy., Charge
87	951-12051	Flywheel
88	951-10909	Fan, Cooling
89	951-10911	Pulley, Starter
90	712-04209	Nut, Special, M14x1.5
91	710-04915	Bolt M6x12
92	731-05696	Recoil Starter Handle
93	951-10663A	Blower Housing
94	736-04455	Gasket 6

Ref.	Part Number	Description
95	710-04974	Bolt M6x10
96	951-10658	Recoil Starter
121	710-04914	Bolt M6x10
122	951-11114	Switch Housing Mounting Bracket
123	712-04212	Nut, M6
124	710-04965	Bolt M4x55
125	710-04935	Bolt M4x60
126	710-05182	Bolt M6x32
127	715-04088	Dowel Pin 8x8
128	951-10645A	Startup Electromotor
129	710-04979	Bolt M6x18
130	951-11109	Blower Housing Shield
131	951-11680	Flexible Clamp


370-SUB-11 Fuel Tank & Mounting

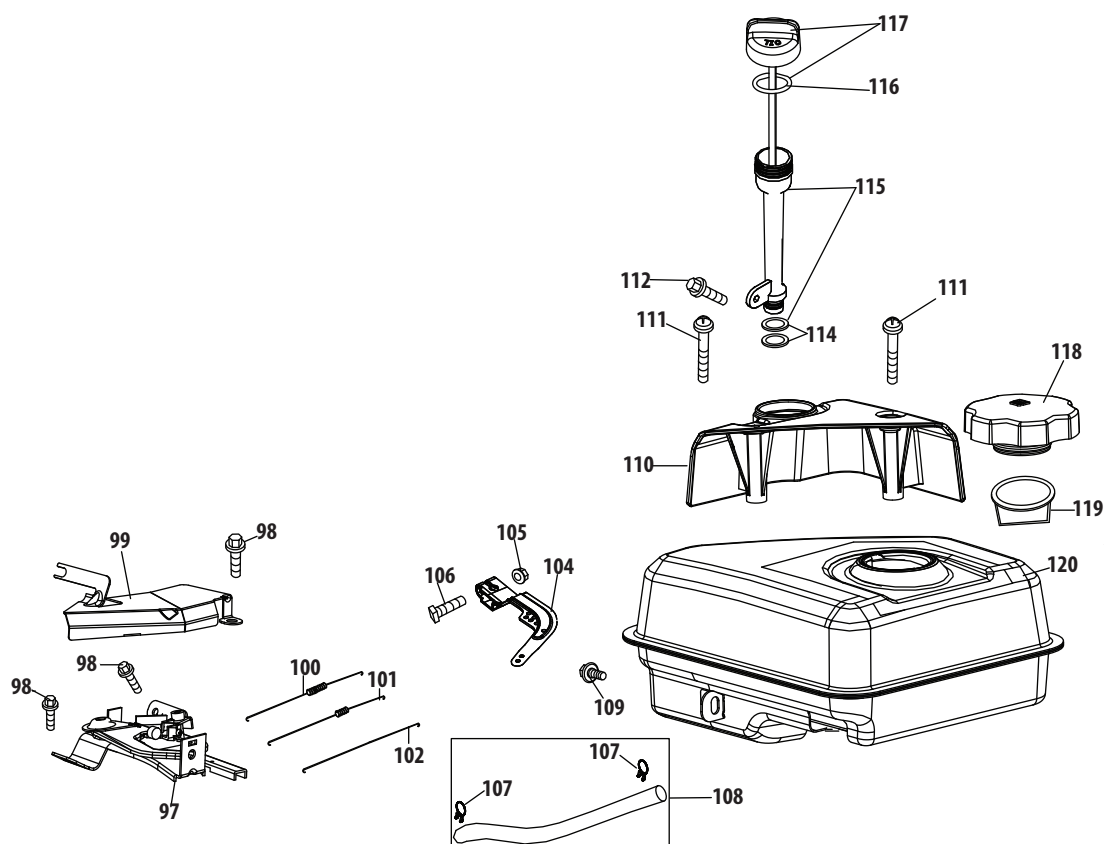

Ref.	Part Number	Description
97	951-10758	Primer Bracket
98	710-04928	Bolt M6×12
99	951-11108	Governor System Shield
100	951-11935	Governor Spring
101	951-10664	Throttle Linkage Spring
102	951-10665	Throttle Linkage
104	951-11106	Governor Arm
105	712-04212	Nut M6
106	710-04908	Governor Arm Bolt
107	951-11700	Fuel Hose Clamp
108	951-10650	Fuel Hose
109	710-04915	Bolt M6×12
110	951-10662	Dipstick Decoration Cover
111	710-04905	Bolt

Ref.	Part Number	Description
112	710-04915	Bolt M6×12
114	951-11381	Oil Fill Tube O-Ring
115	951-11913	Oil Fill Tube
116	951-11904	Oil Fill Tube O-Ring
117	951-12482	Dipstick Assembly
118	951-10649A	Fuel Cap Assembly
119	951-11933	Fuel Level Indicator
120	951-10653B	Fuel Tank Assembly
	777I22990	Label-Run/Choke
	777I22991	Label-Primer
	777I22992	Label-Electric Start
	777I23026	Label-Electric Start Warning
	777S33610	Label- Oil / Warning

370-SUB-11 Cylinder Head

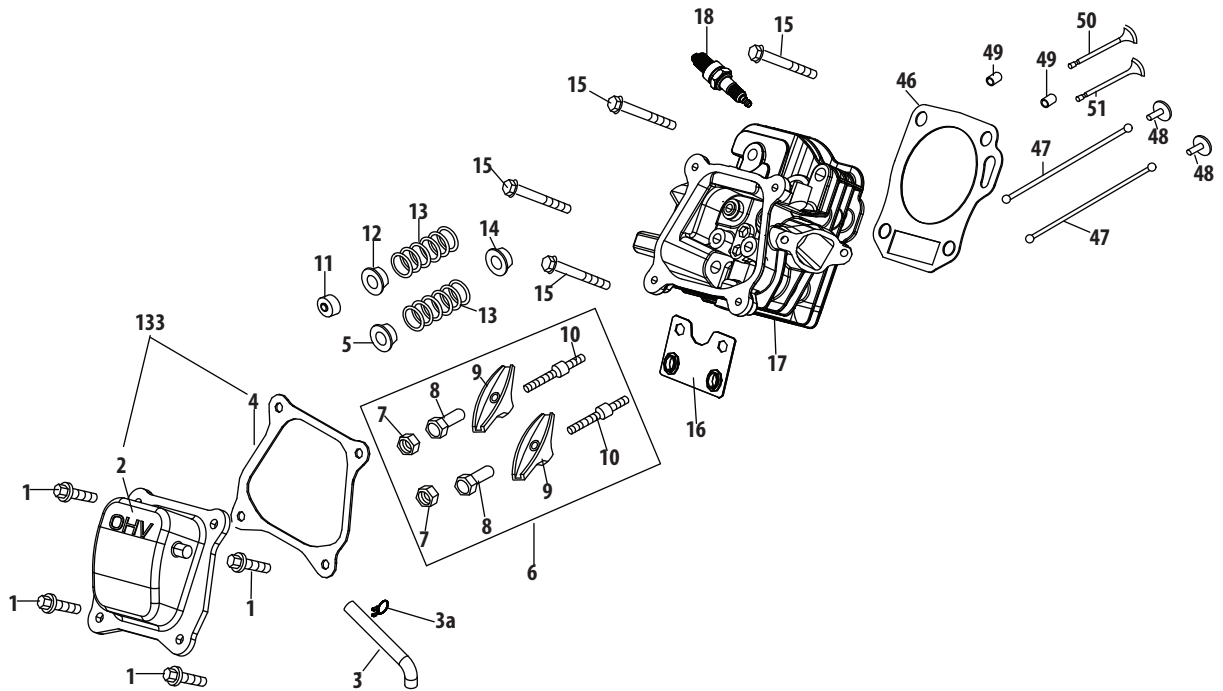

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054	Valve Cover
3	731-07059	Breather Hose
3a	726-04101	Breather Hose Clamp
4	951-11565	Valve Cover Gasket
5	951-12000	Retainer,In.Valve Spring
6	951-11892	Rocker Arm Assembly
7	751-11124	Nut,Pivot Locking
8	751-11123	Adjusting Nut ,Valve
9	951-11893	Rocker Arm
10	710-04902	Bolt,Pivot
11	951-12002	Adjuster,Exh Valve
12	951-12003	Retainer,Ex.Valve Spring
13	951-12004	Valve Spring
14	951-11894	Intake Valve Seal
15	710-04933	Bolt M8×55
16	951-11895	Push Rod Guide
17	951-10668A	Cylinder Head Assembly (Incl.4,5,7-14,16,17,21, 29,30,46,50,51)
18	951-10292	Spark Plug/F6Rtc
46	951-11572	Gasket,Cylinder Head
47	951-10648	Push Rod
48	951-11899	Tappet
49	715-04090	Dowel Pin 10×16
50	951-10647A	Exhaust Valve
51	951-10647A	Intake Valve
133	951-11063A	Valve Cover Kit
	952Z370-SUB-11	Complete Engine
	951-10661B	Gasket Kit - External (Incl.4,21,29-31,34,79)
	951-11059A	Gasket Kit - Complete (Incl.4,21,29-31,34,46, 60,61,70,76,79,81)

This image shows a full page of white paper with horizontal grey ruling lines. The word "Notes" is printed at the top left in a large, bold, black font. A vertical grey line runs down from the top of the page, separating the title area from the main writing area. There are 20 horizontal ruling lines in total, providing space for handwritten notes.

[illegible]

To order replacement parts or locate your nearest service dealer call Customer Support at (800) 828-5500.
or visit www.troybilt.com to find the nearest authorized dealer in your area.

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
