


PARTS LIST

REPLACEMENT PARTS - MODEL BV428
4-CYCLE BLOWER / VACUUM
PPN 41BS4BVG912

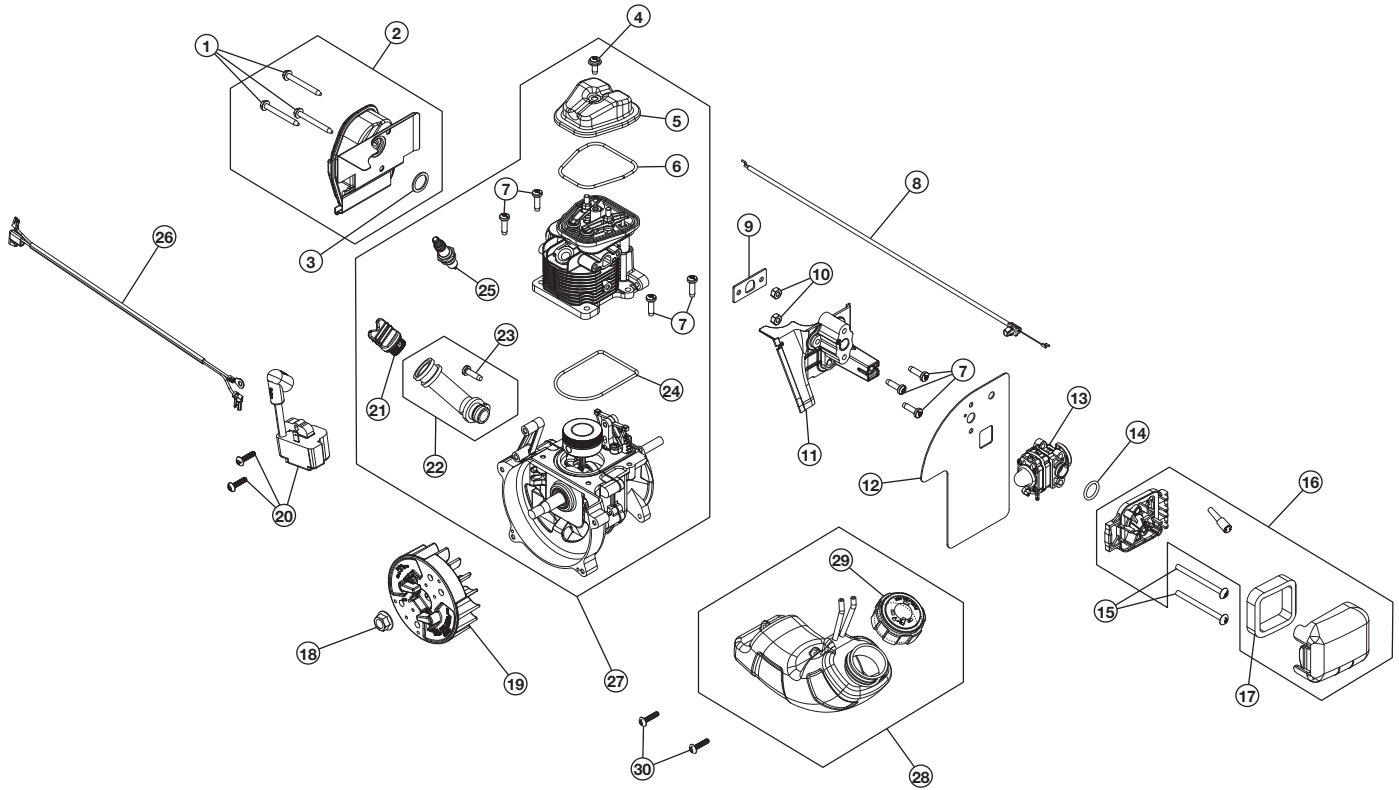


Item	Part No.	Description	Item	Part No.	Description
1	753-05246	Muffler Screws	16	753-04223	Air Cleaner Assembly (includes 17)
2	753-05900	Muffler Assembly (includes 1 & 3)	17	791-181757	Air Filter
3	753-05244	Muffler Gasket	18	753-05687	Nut
4	791-181025	Screw	19	753-05906	Flywheel Assembly
5	753-05901	Rocker Cover	20	753-05907	Module
6	753-05902	O-Ring	21	753-05400	Oil Plug
7	791-181003	Screw	22	753-05682	Oil Fill Tube (includes 23)
8	753-05903	Throttle Cable	23	753-05377	Screw
9	753-05673	Insulator Gasket	24	753-05910	O-Ring
10	753-05248	Nut	25	753-05784	Spark Plug
11	753-05904	Insulator	26	753-05911	Lead Wire
12	753-05905	Carburetor Gasket	27	753-06677	Short Block Assembly (includes 4-7 & 21-25)
13	753-05908	Carburetor	28	753-05933	Fuel Tank Assembly (includes 29)
14	791-181751	Carburetor O-Ring	29	753-05289	Fuel Cap
15	753-05253	Screw	30	753-04595	Screw

PARTS LIST

REPLACEMENT PARTS - MODEL BV428
4-CYCLE BLOWER / VACUUM

PPN 41BS4BVG912

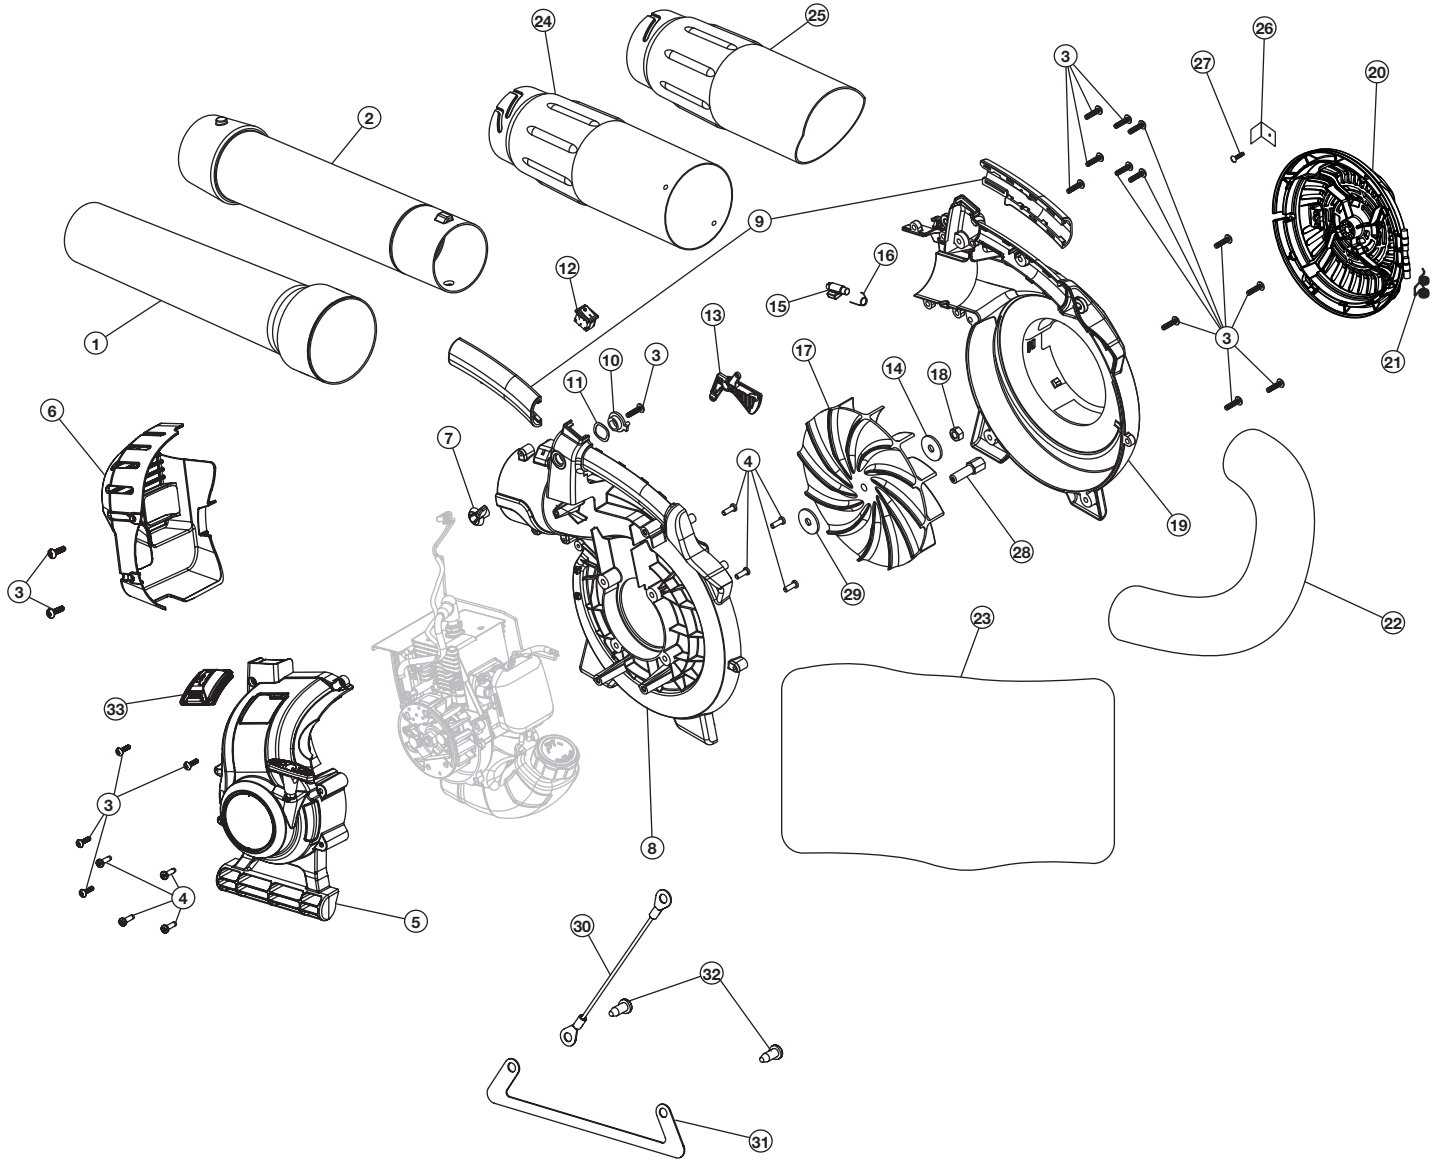

Item	Part No.	Description
1	753-05937	Lower Tube
2	753-05936	Upper Tube
3	753-04595	Screw
4	753-05377	Screw
5	753-06853	Engine Cover Assembly (includes 3, 4 & 33)
6	753-05931	Muffler Cover Assembly (includes 3)
7	753-06980	Outer Trigger Lock
8	753-06693	Impeller Housing
9	753-06711	Handle Grips
10	753-06979	Inner Trigger Lock
11	753-05925	Wavey Washer
12	791-182405	Switch
13	753-06981	Throttle Trigger
14	753-05928	Washer
15	753-05926	Latch Tube
16	753-05939	Latch Spring

Item	Part No.	Description
17	753-05929	Impeller
18	753-06701	Nut
19	753-06679	Impeller Housing
20	753-06982	Intake Cover
21	753-05918	Spring
22	753-06658	Elbow
23	753-06659	Bag
24	753-06660	Upper Vac Tube
25	753-06661	Lower Vac Tube
26	753-06696	Door Lock
27	753-1202	Screw
28	753-06700	Adapter
29	753-06806	Spacer
30	753-05964	Wire Ground
31	753-05965	Strap Ground
32	753-1202	Screw
33	753-05935	Spark Plug Cover