




ILLUSTRATED PARTS MANUAL

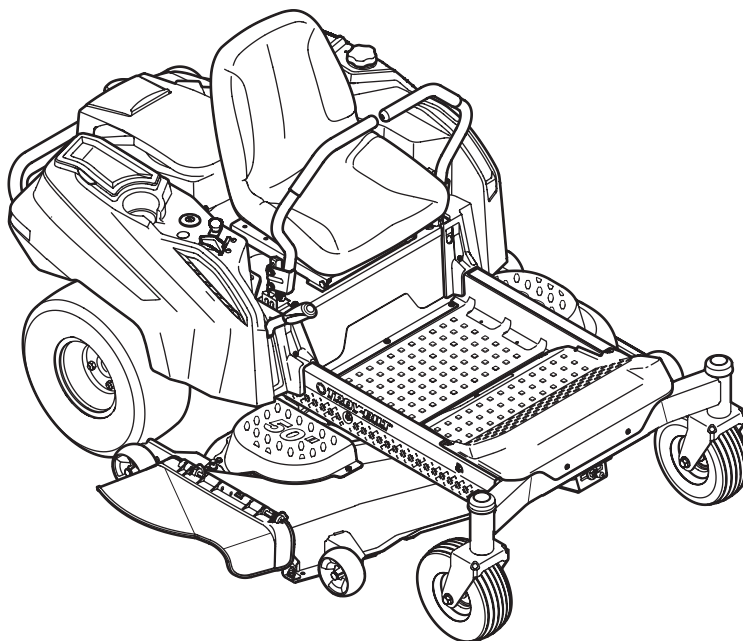

Mustang Series RZT

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank you for purchasing an MTD Zero Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Axles	12-13	Fuel Tank	14-15
Battery	6	Meter, Systems Indicator	6
Bumper	26	Muffler	8-9
Controls	16	Operator's Platform	10
Deck, 42-inch	18	PTO Switch	6
Deck, 46-inch	20	Seat	11
Deck, 50-inch	22	Solenoid	6
Deck, 54-inch	24	Switches, Interlock	6
Deck Lift Handle/Linkage	3	Throttle Control	8-9
Drive System	4	Transmission	4
Electrical Schematic	27	Wheels, Front	12-13
Engine Accessories	8-9	Wheels, Rear	4
Frame	6		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--


SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXXX-0637). Please refer to the table below for current color codes:

0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

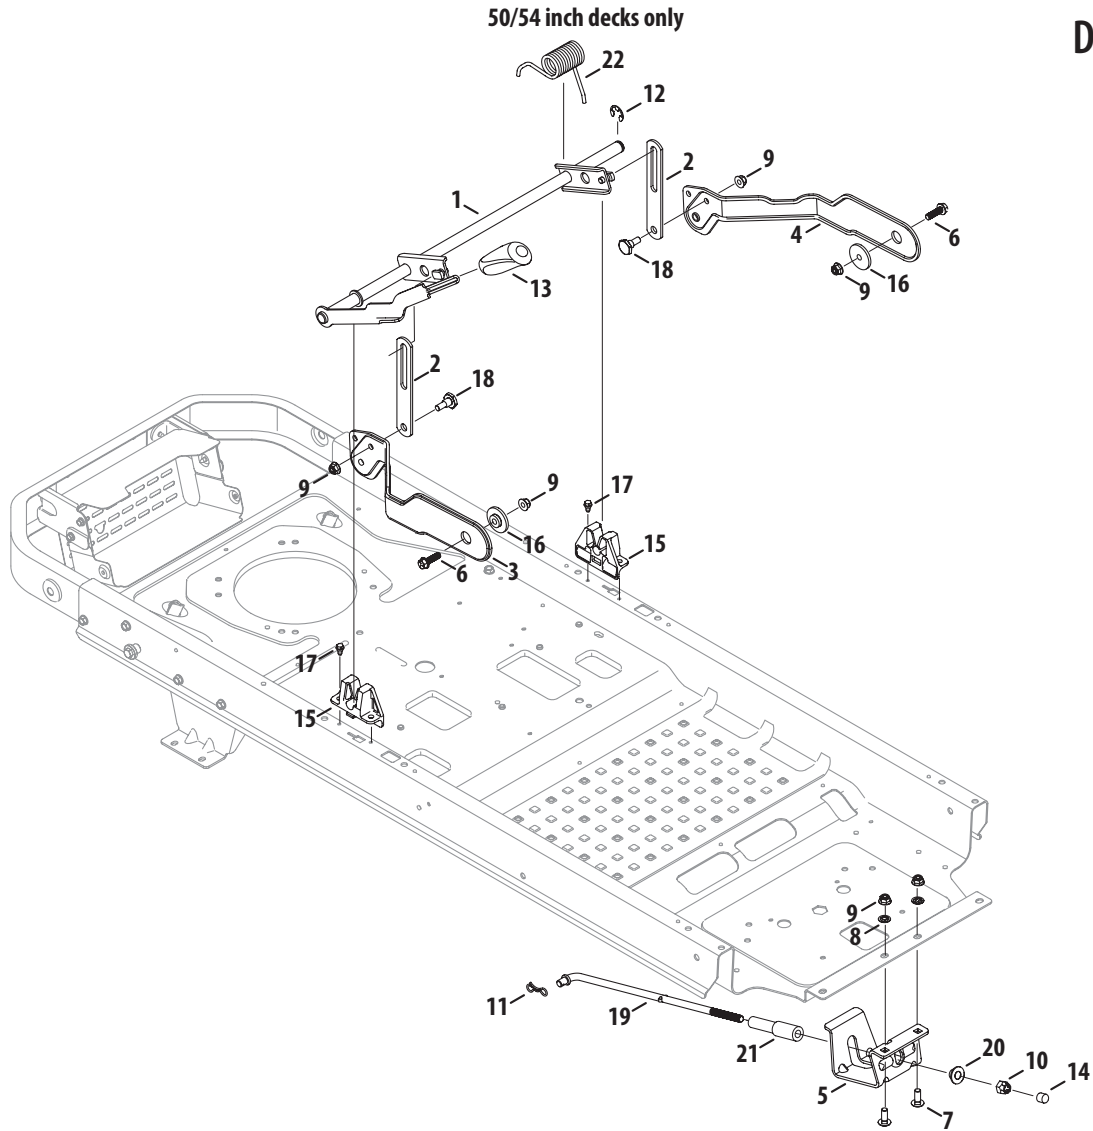


Ref	Part Number	Description
1	603-04983A	Deck Lift Shift Assembly
2	703-08591A	Lift Link Plate
3	703-08592	Deck Lift Plate, RH
4	703-08593	Deck Lift Plate, LH
5	703-08644	Rod Support Mounting Bracket
6	710-1315	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
7	710-3168	Carriage Bolt, $\frac{3}{8}$ -16 x 1.00
8	712-0229	Push Nut, 3/8
9	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
10	712-04243	Flange Lock Nut, $\frac{1}{2}$ -13
11	714-04043	Bow-Tie Cotter Pin

Ref	Part Number	Description
12	916-0231	E-Type Ring, .750
13	720-04139B	Grip, .50 ID
14	726-05009	End Cap
15	731-08782	Deck Lift Bracket
16	738-04162C	Shoulder Spacer, .884 x .190
17	738-04278	Shoulder Screw, .500 x $\frac{1}{4}$ -20
18	938-0507B	Shoulder Screw, .500 Dia. x .434
19	747-05552A	Deck Lift Rod
20	748-04069	Deck Lift pivot Cup
21	750-05658	Nylon Sleeve, .55 ID x 4.50 LG
22	732-04947A†	Torsion Spring, 1.323 ID x 2.83 LG


† If Equipped

Drive System

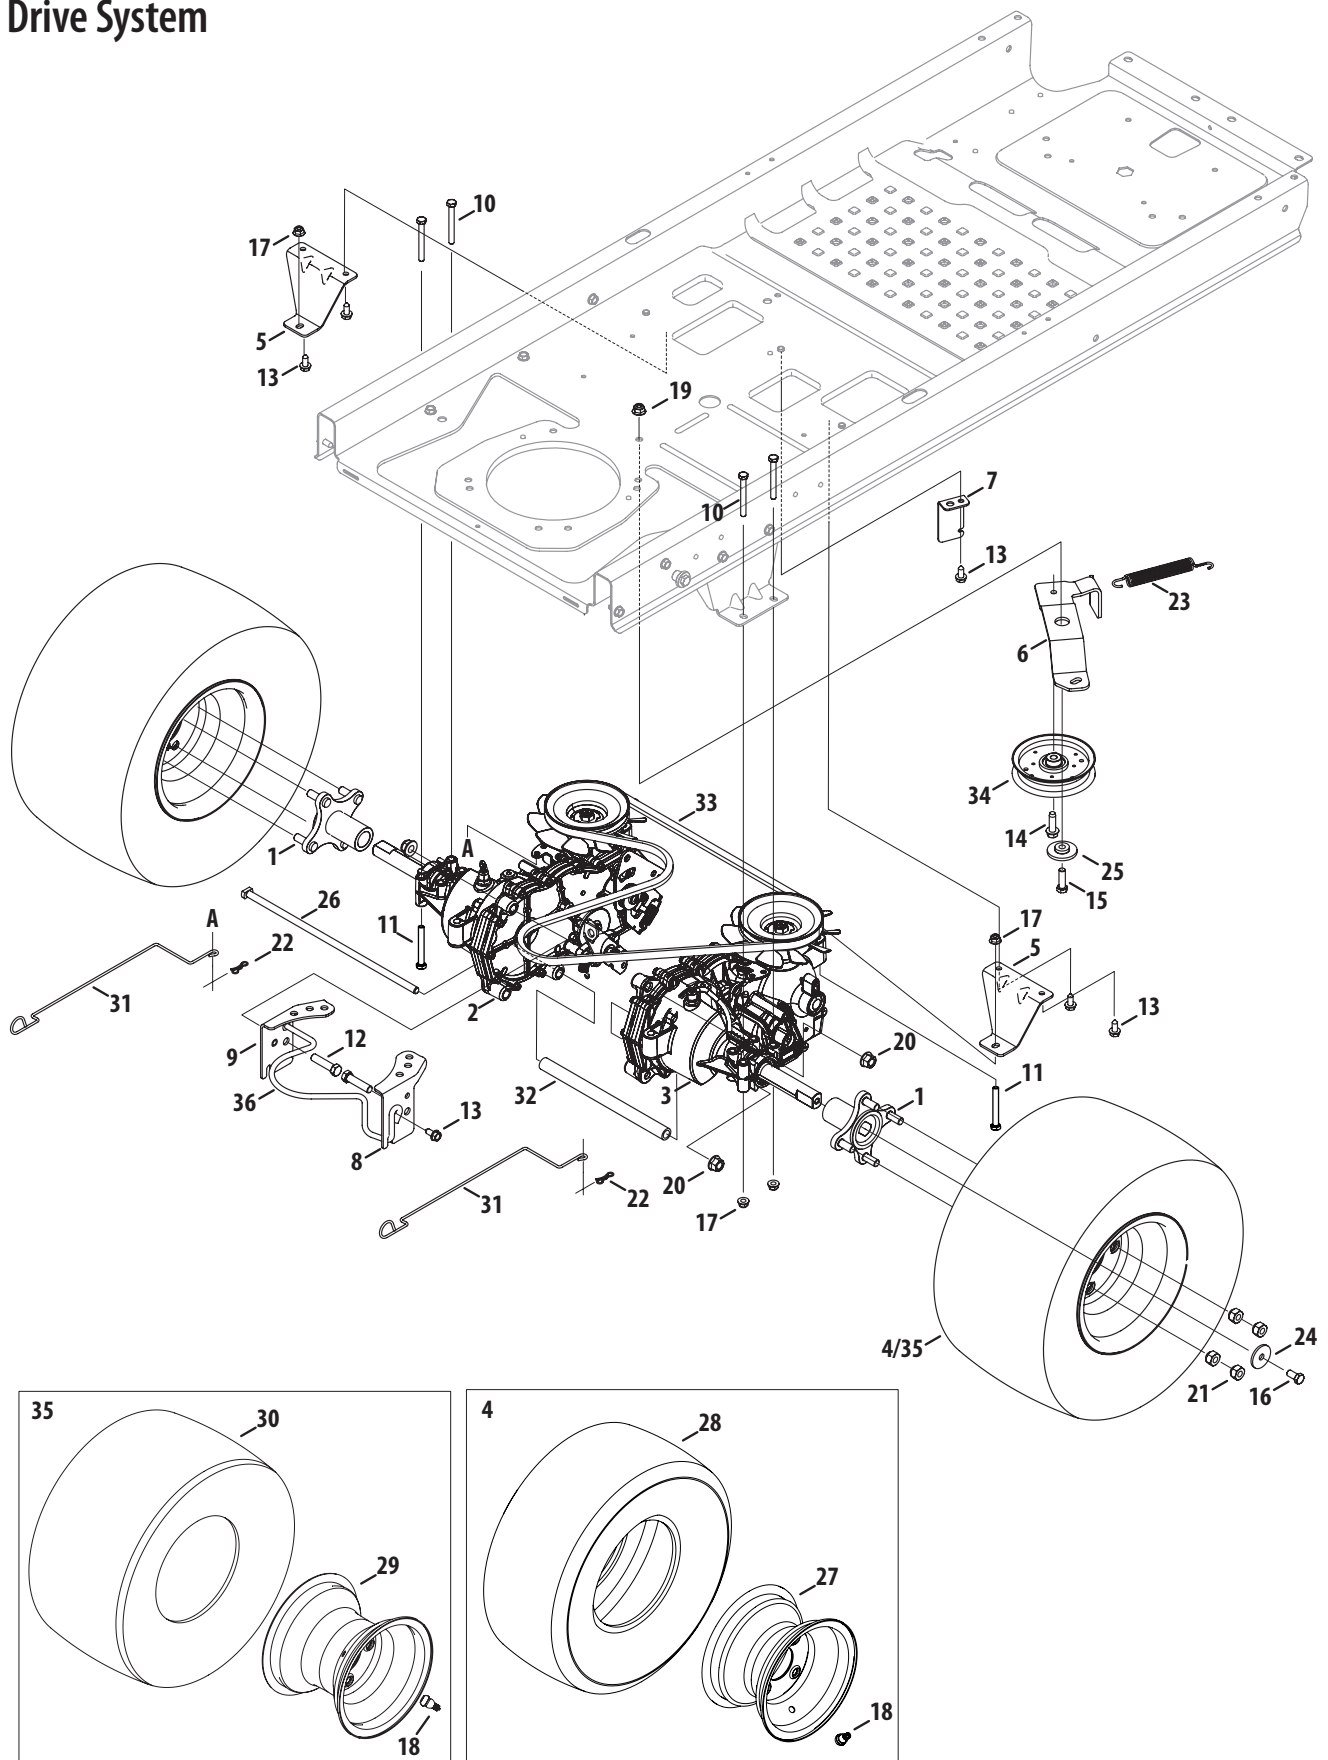


Ref.	Part Number	Description
1	918-04317	Wheel Hub Assembly
2	918-05128	Transmission Assembly, LH
3	918-05129	Transmission Assembly, RH
4	634-04293-0911	Complete Wheel, 18 x 8.5-8 (42" & 46")
5	703-08570	Transmission Mounting Bracket
6	703-08605	Idler Bracket
7	703-08613	Spring Mounting Bracket
8	703-08614A	Transmission Bracket
9	703-08615A	Transmission Bracket
10	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11	710-0395	Hex Screw, $\frac{5}{16}$ -18 x 2.25
12	710-04092	Hex Screw, $\frac{7}{16}$ -20 x 1.75
13	710-04484	Hex Washer Screw, $\frac{5}{16}$ -18 x .750
14	710-1315	Hex Washer Screw, $\frac{3}{8}$ -16 x 1.250
15	710-0514	Hex Screw, $\frac{3}{8}$ -16 x 1.00
16	710-3119	Hex Screw, $\frac{3}{8}$ -16 x .75
17	712-04063	Flange Lock Nut, $\frac{5}{16}$ -18
18	934-0255	Valve Tubeless
19	712-04065	Flange Lock Nut, $\frac{3}{8}$ -16
20	712-0459	Flange Lock Nut, $\frac{7}{16}$ -20
21	712-3050	Lug Nut, $\frac{7}{16}$ -14
22	714-04040	Bow-Tie Cotter Pin
23	732-04229	Extension Spring, .75 Dia. x 6.02
24	936-0227	Flat Washer, .390 x 1.50 x .134
25	738-04162C	Shoulder Spacer, .884 x .190
26	738-04192B	Rod, .405 Dia. x 14.0 LG
27	603-04173-0662	Rim Only, (42" & 26")
28	734-04246-0901	Tire Only, 18 x 8.5-8 (42" & 46")
29	603-04175-0662	Rim Only, (50" & 54")
30	734-1729-0901	Tire Only, 18 x 9.5-8 (50" & 54")
31	747-05657	Bypass Rod
32	750-04561	Tube, .51 ID x .75 OD x 10.2
33	954-04317	Belt, A-Type x 67.0
34	756-04129B	Idler Pulley, 4.25 Dia.
35	634-04128-0911	Complete Wheel, 18 x 9.5-8 (50" & 54")
36	747-06037	Engine Keeper Rod (42")
	747-06070	Engine Keeper Rod (46", 50" & 54")

Frame & Electrical

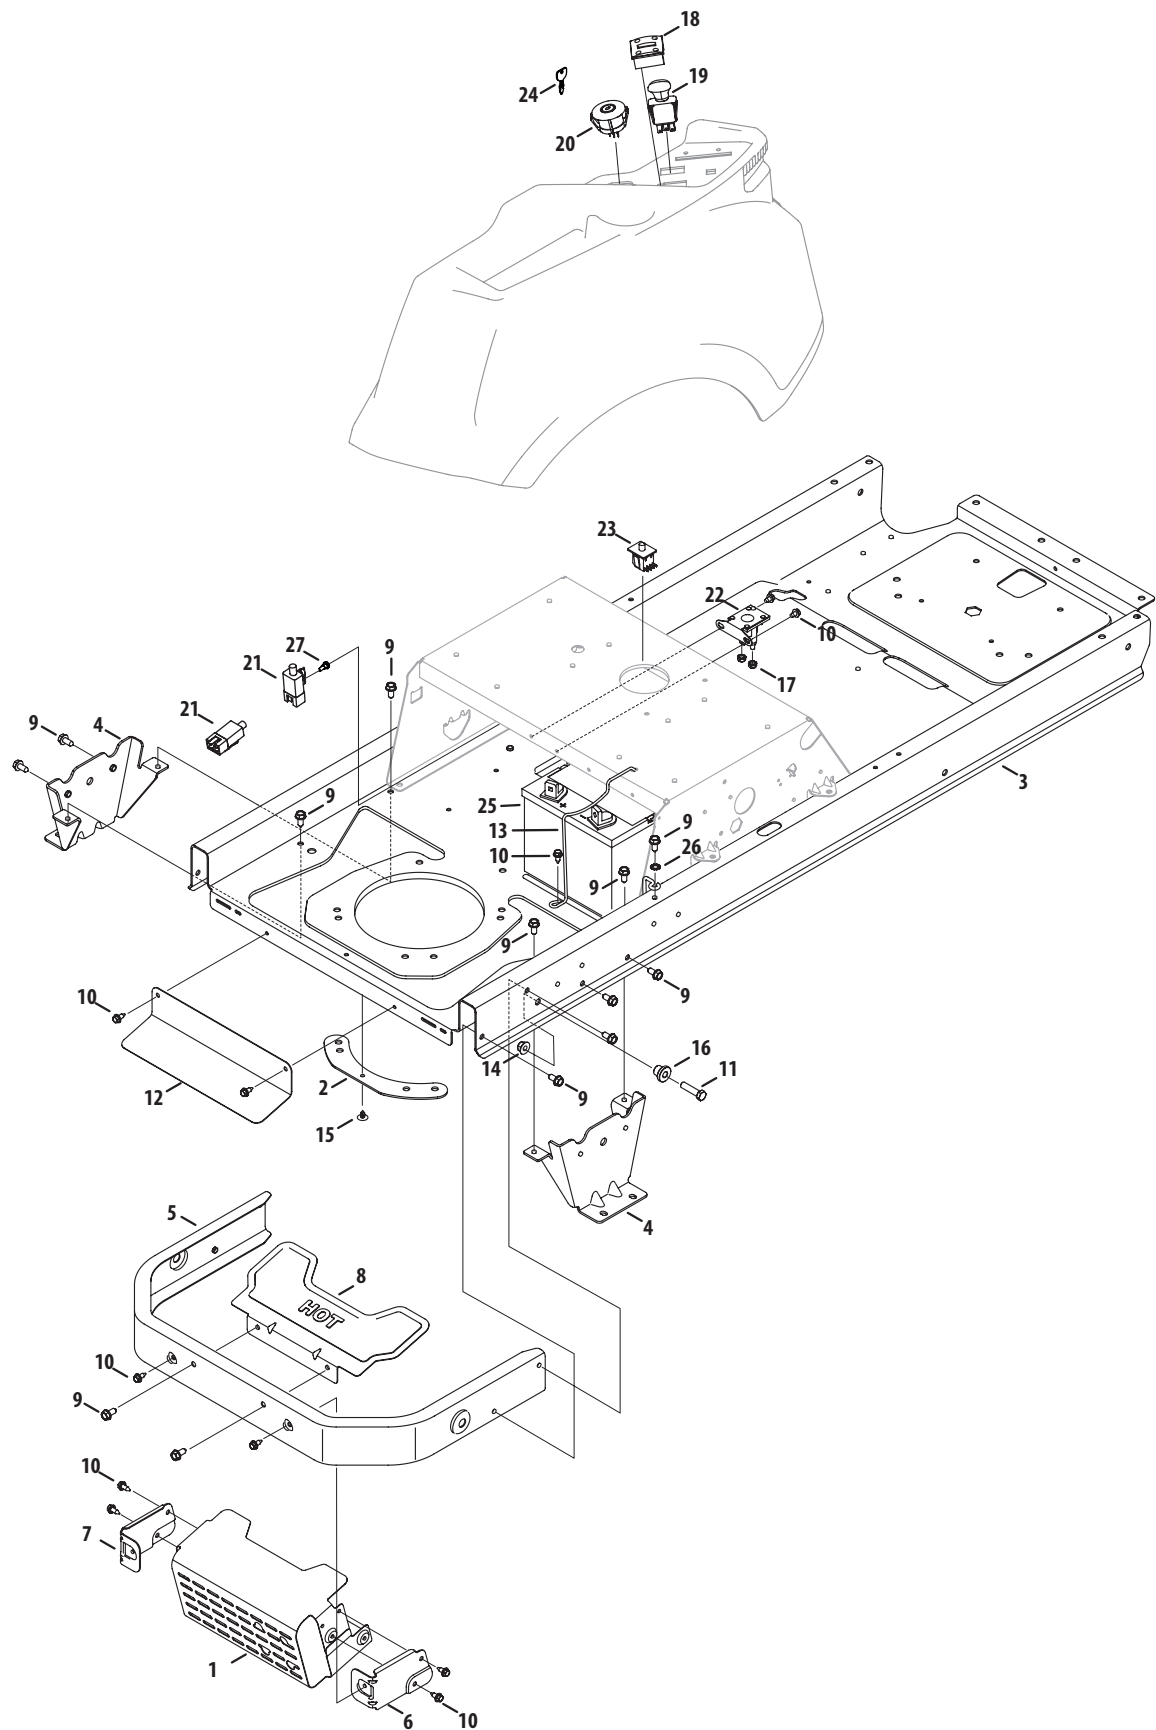


Ref	Part Number	Description
1	683-04549	Muffler Shield Assembly
2	703-05383B	Retainer Plate
3	703-08884B	Frame Assembly
4	703-08555	Transmission Mounting Bracket
5	703-08558	Rear Bumper
6	703-08671	Muffler Mounting Shield Bracket, RH
7	703-08695	Muffler Mounting Shield Bracket, LH
8	703-09083	Muffler Shield
9	710-04484	Hex Washer Screw, 5/16-18 x .750
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3005	Hex Screw, 3/8-16 x 1.25
12	703-09195	Lower Heat Shield
13	747-05685	Battery Rod
14	712-04065	Flange Lock Nut, 3/8-16
15	726-04072A	Clip, .250 Dia. x .500 LG
16	738-04058	Shoulder Spacer, .38 x 1.0 x .70
17	712-04064	Flange Lock Nut, 1/4-20
18	925-04022B	Hour Meter/Service Minder
19	925-3233	Electric PTO Switch
20	925-04228	Key Switch
21	725-04363	Interlock Switch
22	725-04439	Solenoid
23	925-05013	Seat Switch
24	625-05002	Key, Assembly
25	925-1707D	Battery
26	736-0607	Lock Washer, 5/16
27	738-04237A	Shoulder Screw, #10-32 x .500
—	925-06000	Harness Assembly

Engine Accessories (B&S)

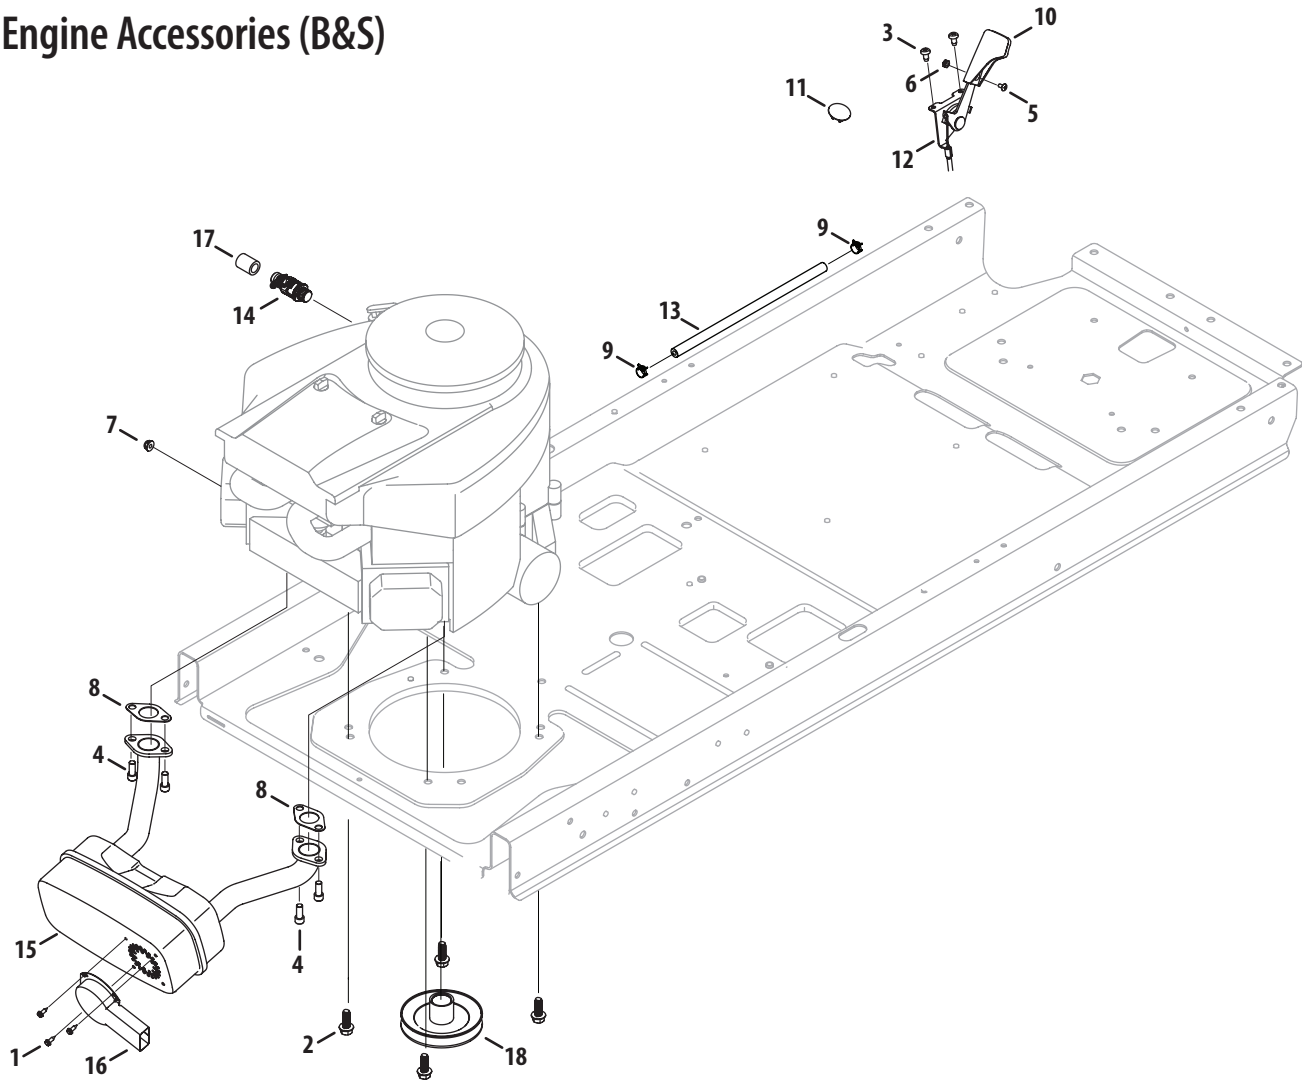

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683A	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp, .490 Dia.


Ref.	Part Number	Description
10	731-04914	Throttle Control Knob
11	731-1999	Choke Plug
12	946-04556	Throttle/Choke Control Cable
13	751-10349-28	Fuel Hose, 1/4
14	951-10517A	Oil Drain
15	751-10542A	Muffler, Intek Twin
16	751-11053A	Muffler Deflector Long
17	751-3141-14	Oil Drain Hose
18	756-04494	Engine Pulley

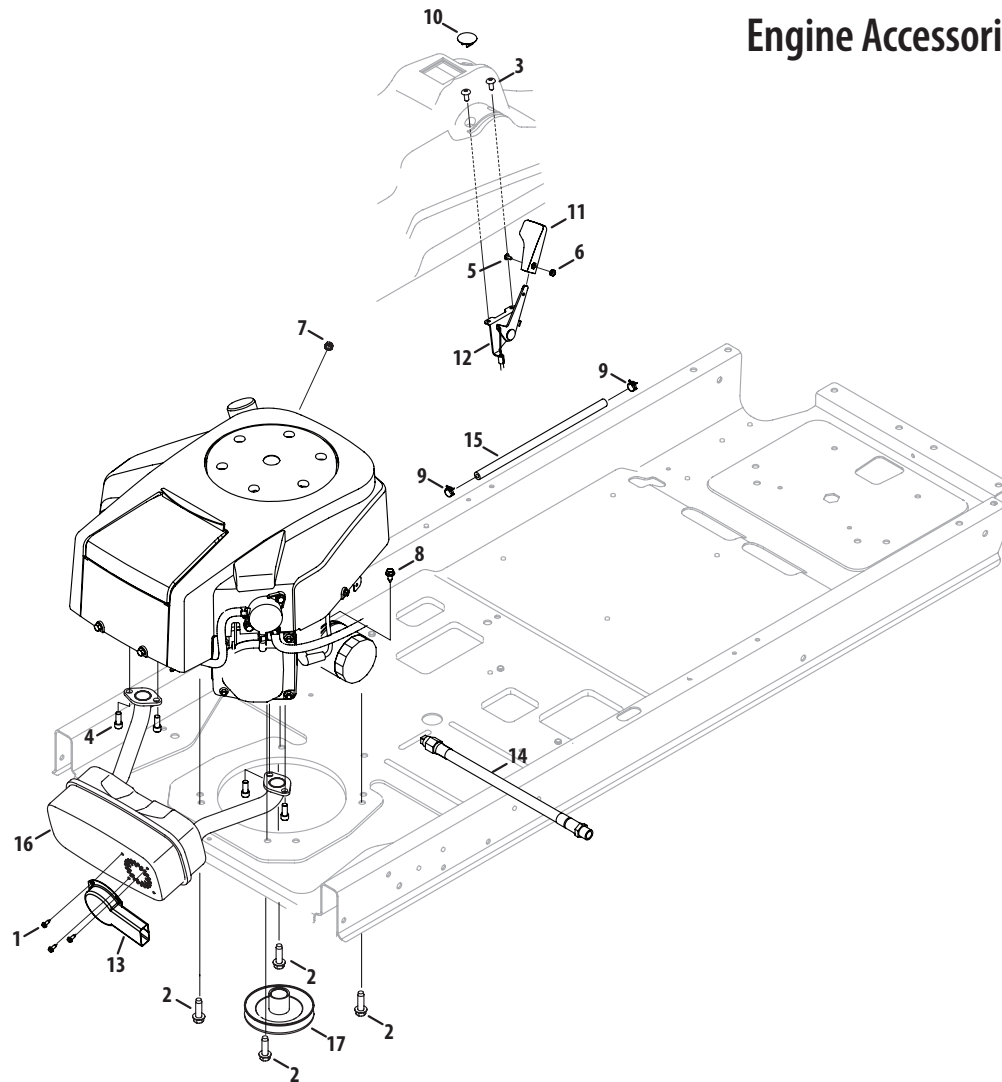

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683A	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	710-1652	Hex Washer Screw, 1/4-20 x .625
9	726-0205	Hose Clamp, .490 Dia.


Ref.	Part Number	Description
10	731-1999	Choke Plug
11	731-04914	Throttle Control Knob
12	946-04830A	Throttle/Choke Control Cable
13	751-0564B	Muffler Deflector
14	751-10291A	Oil Drain Hose
15	751-10349-28	Fuel Hose, 1/4
16	751-10528A	Twin Muffler
17	756-04494	Engine Pulley

Operator's Platform

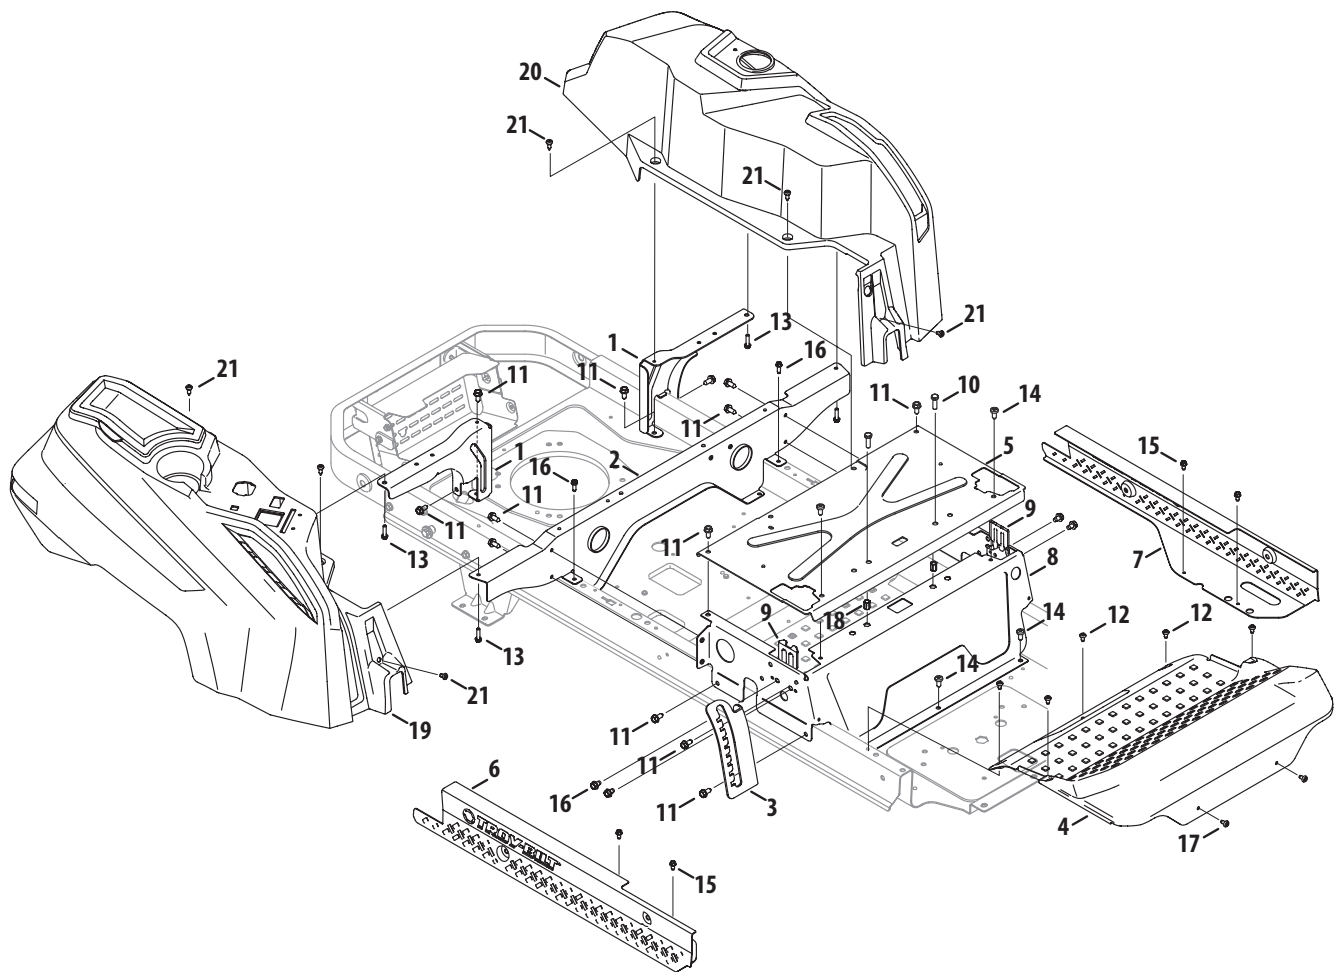


Ref.	Part Number	Description
1	703-08720A	Rear Tank Bracket
2	703-08722	Rear Seatbox Brace
3	703-08762B	Height Index Bracket
4	703-08902	Floor Board
5	703-09045	Seatbox Plate
6	703-09119	Frame Support, RH
7	703-09139	Frame Support, LH
8	703-09175	Seat Frame
9	703-09211	Lapbar Brace Bracket
10	710-0376	Hex Cap Screw, 5/16-18 x 1.00
11	710-04484	Hex Washer Screw, 5/16-18 x .750

Ref.	Part Number	Description
12	710-05070	Screw, 1/4-20 x .500
13	710-05109	Hex Washer Screw, 5/16-14 x 1.00
14	710-05424	Self Tapping Screw, 5/16-18 x .750
15	710-0599	Hex Washer Screw, 1/4-20 x .500
16	710-0607	Hex Washer Screw, 5/16-18 x .50
17	710-06096	Self Tapping Screw, 5/16-18 x .750
18	728-05012	Nut, 5/16-18
19	931-09040	RH Console
20	931-09042	LH Console
21	738-04549A	Shoulder Screw, 1/4-20

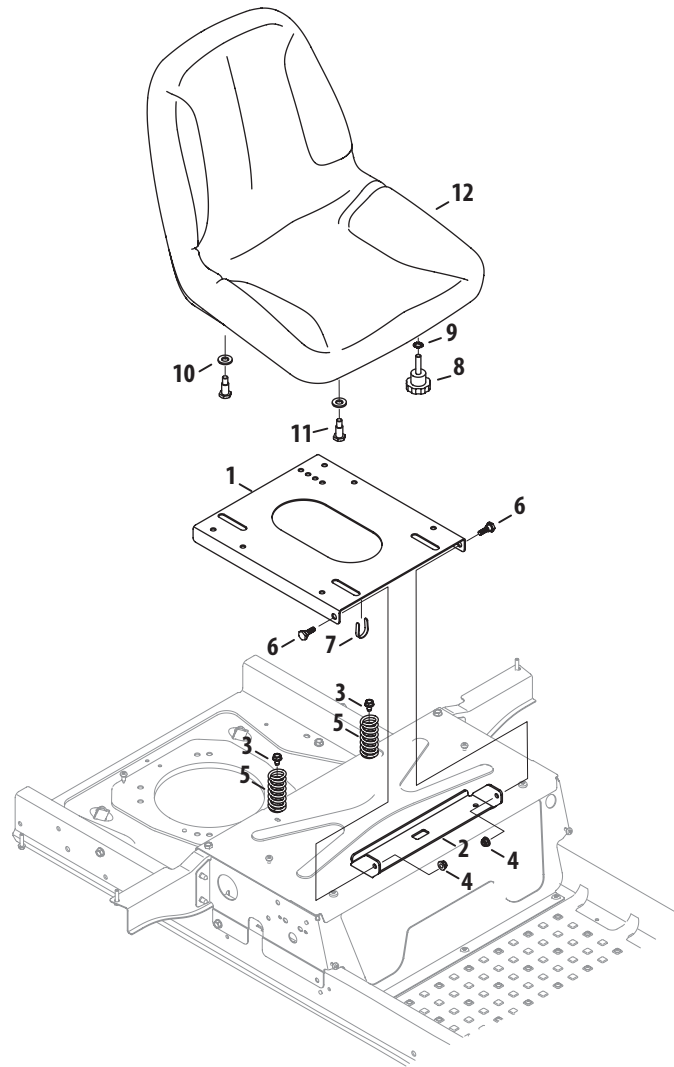

Ref.	Part Number	Description
1	703-07668E	Seat Mount Bracket
2	703-08746	Seat Bracket
3	710-0607	Hex Washer Screw, 5/16-18 x .50
4	712-04063	Flange Lock Nut, 5/16-18
5	732-04035	Spring, Compression, 1.28 OD x 3.125 Lg
6	938-0140	Shoulder Screw, .435 x .178, 5/16 x .56
7	783-06448	Clip
8	731-05131	Knob Assembly
9	736-0148	External Tooth Lock Washer, 3/8
10	936-0326	Flat Washer, .510 x 1.00 x .125
11	938-0145	Shoulder Screw, 3/8-16
12	757-05004	Seat


Front Axle 42"

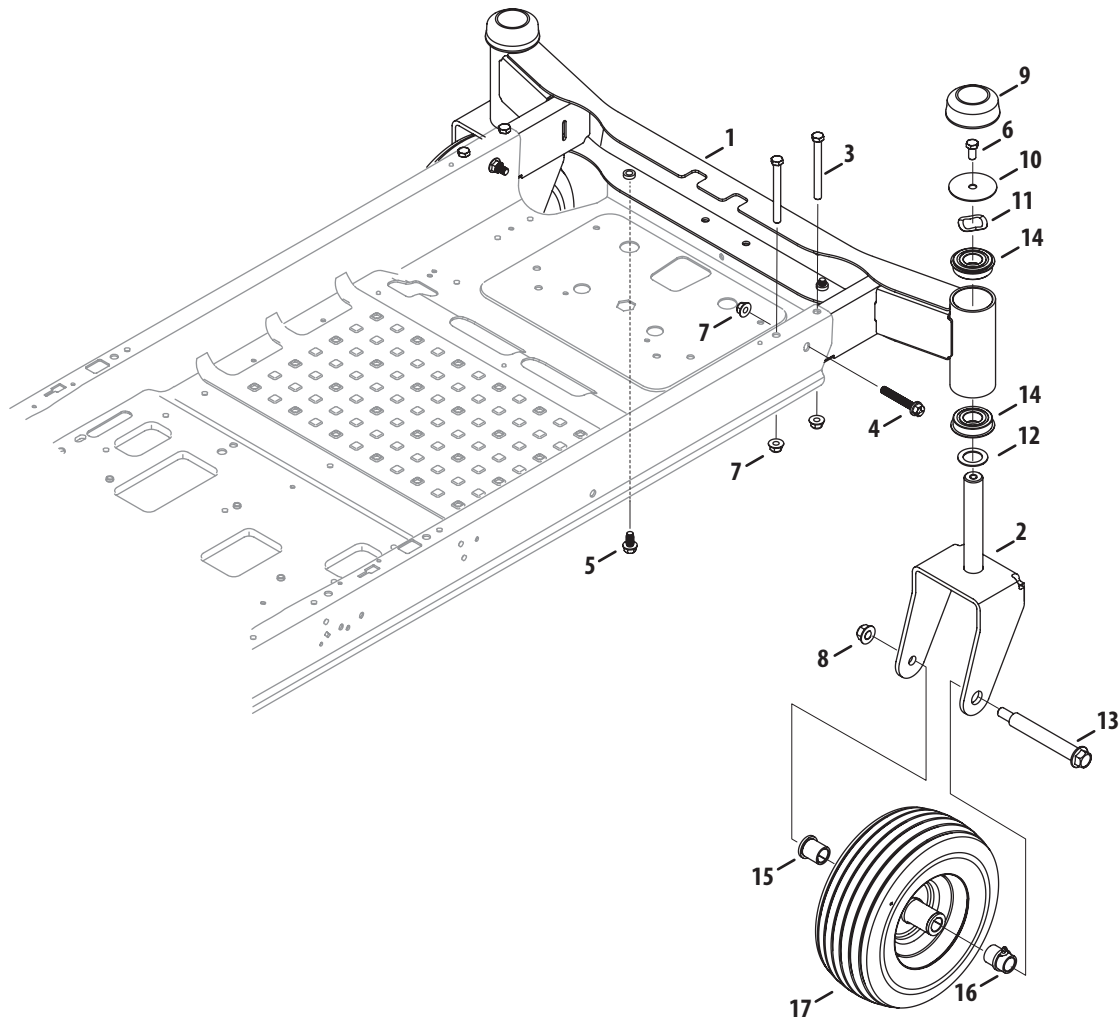

Ref.	Part Number	Description
1	603-05053	Front Axle
2	603-05057A	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-06045	Hex Flange Screw, 3/8-16 x 2.25
5	710-0623	Screw TT, 3/8-16 x .750
6	710-3119	Hex Cap Screw, 3/8-16 x .750
7	712-04065	Flange Lock Nut, 3/8-16
8	712-04150	Flange Lock Nut, 1/2-13
9	731-09347	Cap

Ref.	Part Number	Description
10	736-05022	Flat Washer, .406 x 2.50 x .060
11	736-05033	Wave Washer, 1.25 x 1.00 x .300
12	736-0745	Flat Washer, 1.010 x 1.56 x .060
13	738-04182B	Shoulder Screw, 1/2-13
14	941-05022	Ball Bearing
15	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
16	741-0990B	Flange Bearing, .76 ID w/Lube Ftg.
17	634-04237B	Wheel Assembly, 11.0 x 4.0 x 5.0


Front Axle 46/50/54"

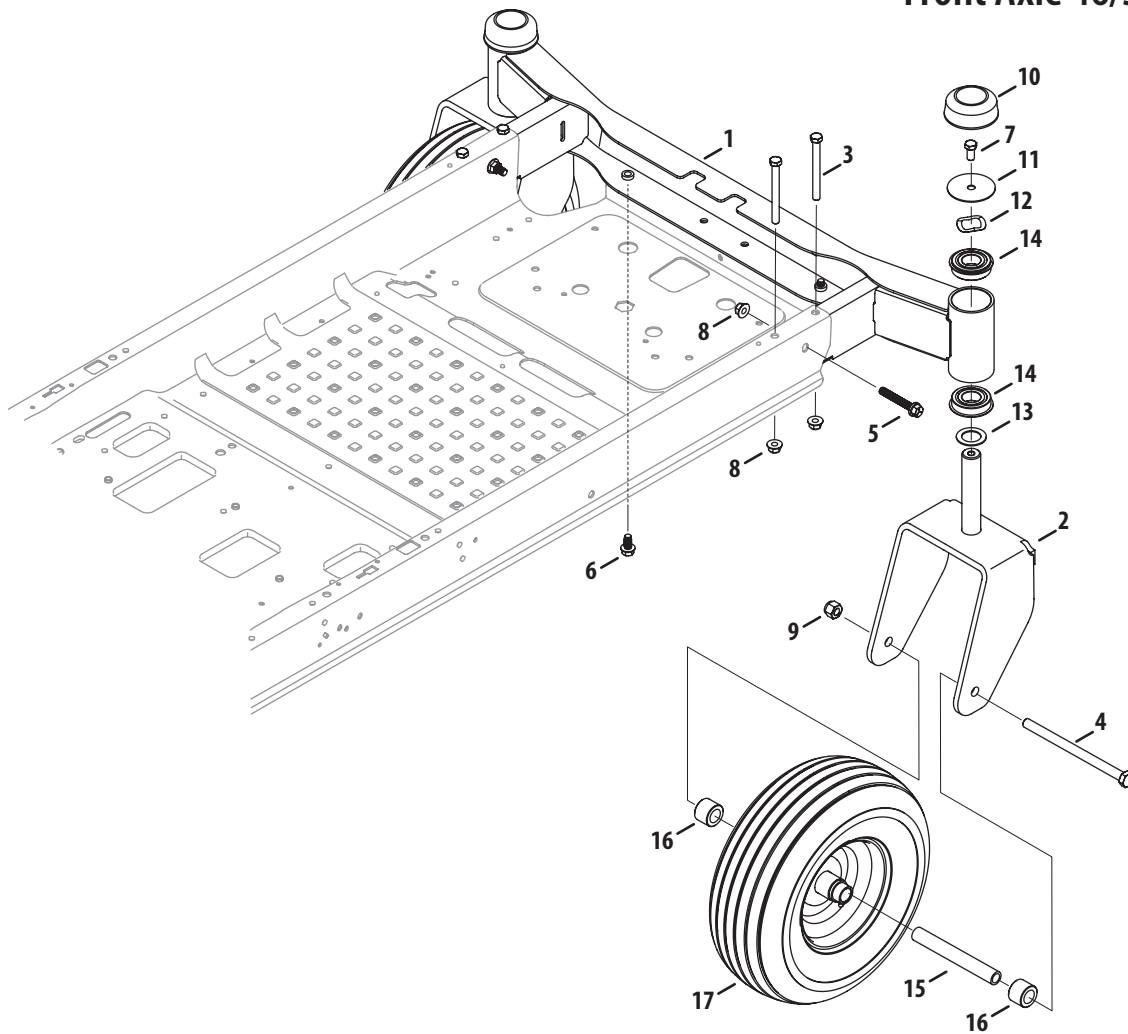


Ref.	Part Number	Description
1	603-05001	Front Axle
2	603-05058A	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-04652	Hex cap Screw, 1/2-20 x 7.25
5	710-06045	Hex Flange Screw, 3/8-16 x 2.25
6	710-0623	Screw TT, 3/8-16 x .750
7	710-3119	Hex Cap Screw, 3/8-16 x .750
8	712-04065	Flange Lock Nut, 3/8-16
9	912-3058	Hex Lock Nut, 1/2-20

Ref.	Part Number	Description
10	731-09347	Cap
11	736-05022	Flat Washer, .406 x 2.50 x .060
12	736-05033	Wave Washer, 1.25 x 1.00 x .300
13	736-0745	Flat Washer, 1.010 x 1.56 x .060
14	941-05022	Ball Bearing
15	750-04775A	Spacer, .51 x .75 x 5.825
16	750-04792	Hub, .76 x 1.23 x .92
17	634-04711-0931	Wheel Assembly, 13 x 5 x 6


Fuel Tank

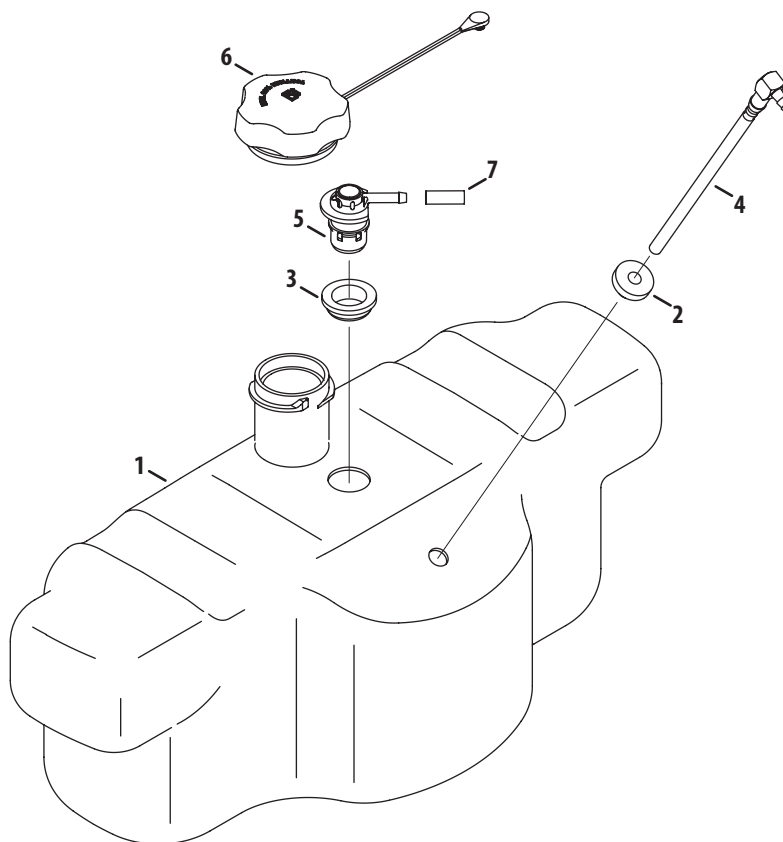

Ref.	Part Number	Description
1	951-04395	Fuel Tank
2	935-0149	Fuel Tank Bushing
3	735-04081	Rubber Grommet
4	751-10442	Fuel Pickup Fitting
5	751-12118	Rollover Valve
6	951-12428	Fuel Cap
7	751-12089-51	Vent Hose

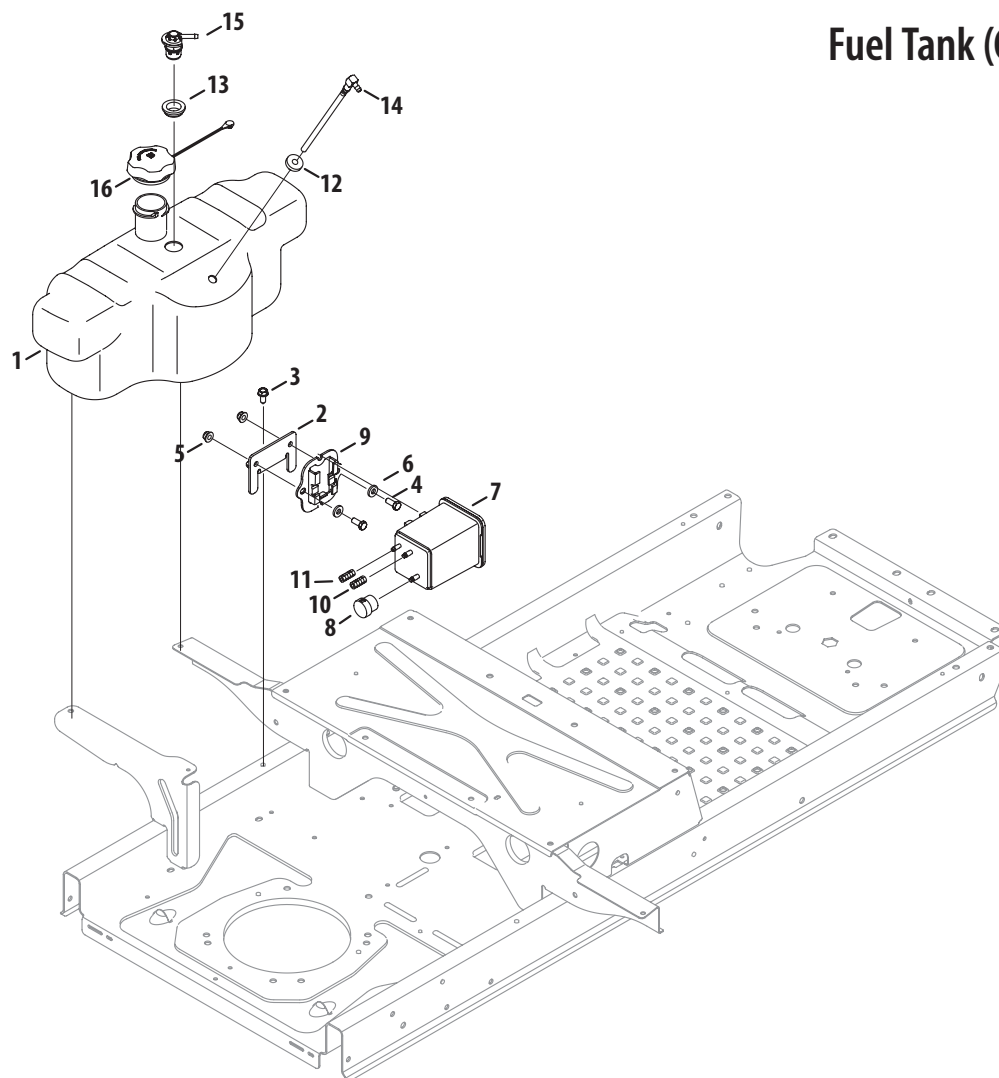


Ref.	Part Number	Description
1	951-04395	Fuel Tank
2	703-08769	Carbon Canister Bracket
3	710-04484	Hex Washer Screw, 5/16-18 x .750
4	710-3008	Hex Screw, 5/16-18 x .75
5	712-04063	Flange Lock Nut, 5/16-18
6	936-3008	Flat Washer, .344 x .750 x .120
7	951-10589	Carbon Canister
8	951-10590	Cannister Filter Vent
9	951-10610	Cannister Adapter Bracket
10	751-10750	Low Perm Fuel Hose 7/32 Yellow
11	751-10749	Vent Hose, Carb
12	935-0149	Fuel Tank Bushing
13	735-04081	Rubber Grommet
14	751-10442	Fuel Pickup Fitting
15	751-12118	Rollover Valve
16	951-12429	Fuel Cap

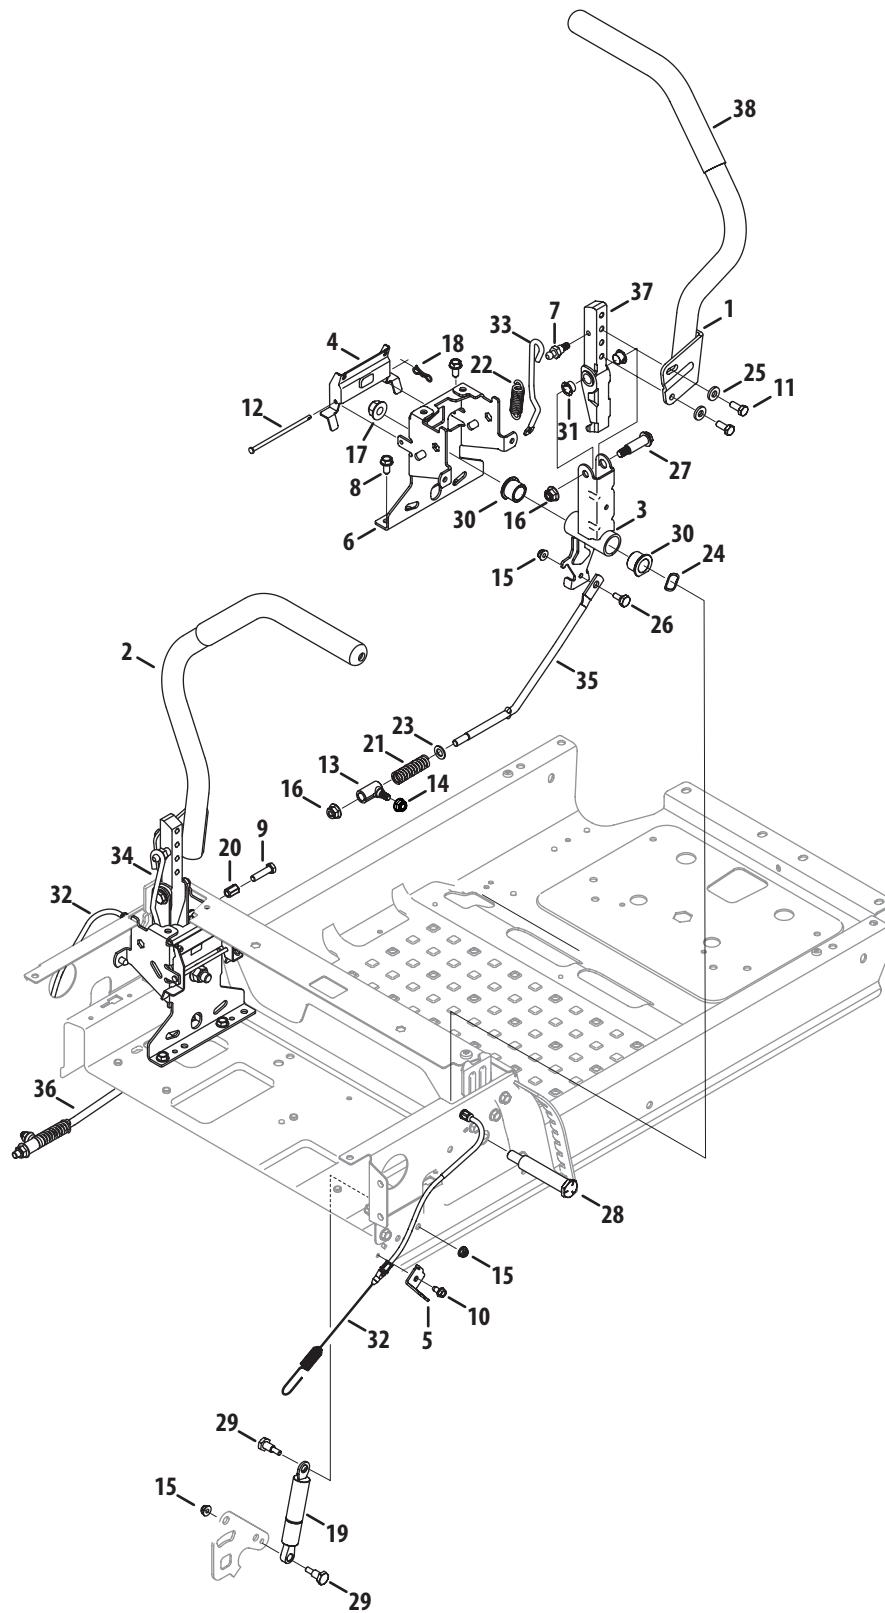

Ref.	Part Number	Description	Ref.	Part Number	Description
1	603-05016A	RH Lapbar Lever Assembly	20	728-05012	Nut, 5/16-18
2	603-05019A	LH Labpar Lever Assembly	21	732-05075	Compression Spring, .45 x 3.215
3	603-05033A	Lapbar Pivot bracket	22	732-1162	Extension Spring, .56 x 2.31 x .105
4	703-09069	Brake Lever Actuator	23	936-0140	Flat Washer, .385 x .62 x .063
5	703-09220	Brake Cable Bracket	24	736-0621	Washer, Wave, .785 x 1.0 x .012
6	703-09325	Lapbar Pivot Support Bracket	25	936-3008	Flat Washer, .344 x .750 x .120
7	710-04471	Screw, Shoulder Ball, 5/16-18 x .48	26	738-04419A	Shoulder Screw, .375 x .148 x 1/4-20
8	710-04484	Hex Washer Screw, 5/16-18 x .750	27	738-05025	Shoulder Screw, .498 Dia. x 1.296
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25	28	738-05033	Shoulder Screw, .75 x 3.25 x 1/2-13
10	710-0599	Hex Washer Screw, 1/4-20 x .500	29	738-05034	Shoulder Screw, .395 Dia. x .56
11	710-1880	Hex Head Screw, 5/16-18 x .75, Patch	30	741-04050	Bearing, .75 x 1.00 x .73
12	711-06068	Pin, .188 x 4.1	31	741-0491	Flange Bearing, .500 x .34
13	711-06094A	Ferrule, 3/8 ID x .420 Shldr	32	946-05008	Park Brake Cable
14	712-04063	Flange Lock Nut, 5/16-18	33	747-06085	Lapbar Detent Rod, RH
15	712-04064	Flange Lock Nut, 1/4-20	34	747-06086	Lapbar Detent Rod, LH
16	712-04065	Flange Lock Nut, 3/8-16	35	747-06149	Hydro Control Rod, RH
17	712-04150	Flange Lock Nut, 1/2-13	36	747-06160	Hydro Control Rod, LH
18	714-04040	Bow-Tie Cotter Pin	37	748-05000	Lower Arm
19	727-04400A	Dampener, .87 OD x 7.06 Lg	38	720-05008	Lapbar Grip


42" Deck

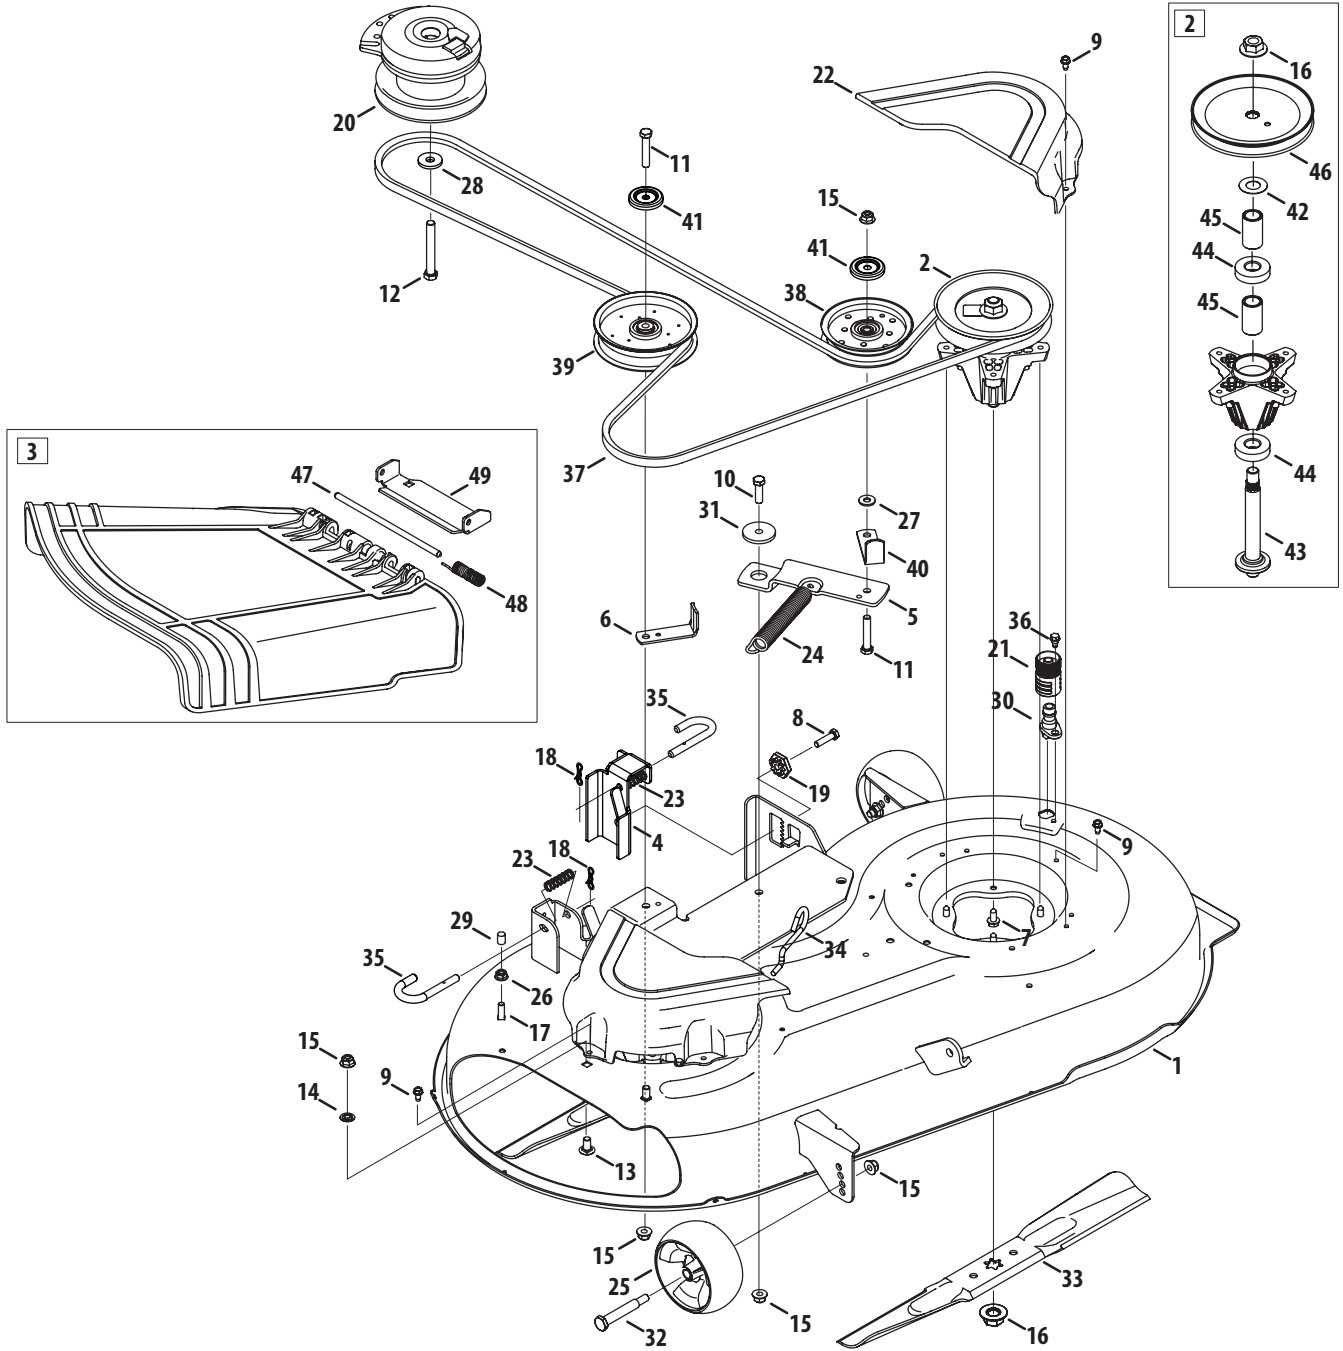

Ref.	Part Number	Description
1	903-04927A	42" Deck Assembly
2	918-04822A	Spindle Assembly
3	631-04288	Discharge Chute Assembly
4	683-05031	Deck Lift Bracket
5	703-08336C	Pivot Idler Bracket
6	703-08705	Bracket, Belt Guard
7	710-1260A	Hex Washer Head Screw, 5/16-18 x .75
8	710-0573	Hex Cap Screw, 5/16-18 x 1.25
9	710-1652	Hex Washer Screw, 1/4-20 x .625
10	710-3005	Hex Cap Screw, 3/8-16 x 1.25
11	710-3144	Hex Cap Screw, 3/8-16 x 2.00
12	710-3157A	Screw, 7/16-20 x 3.25
13	710-3178	Carriage Screw, 3/8-16 x .75
14	712-0229	Push Nut, 3/8
15	712-04065	Flange Lock Nut, 3/8-16
16	712-0417A	Hex Flange Nut, 5/8-18
17	710-0376	Hex Cap Screw, 5/16-18 x 1.00
18	714-04040	Bow-Tie Cotter Pin, 72
19	917-04074	Deck Adjustment Gear
20	917-05121	Electric PTO Clutch
21	921-04041	Water Nozzle Adapter
22	731-08698	Belt Cover
23	732-04652	Compression Spring, .535 x 1.751
24	732-04960	Extension Spring, .94 Dia. x 7.57
25	734-04155	Deck Ball Wheel, 5.0

Ref.	Part Number	Description
26	712-04063	Flange Lock Nut, 5/16-18
27	736-0262	Flat Washer, .385 x .870 x .092
28	736-0322	Flat Washer, .450 x 1.25 x .164
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	738-04162C	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33	942-04312	Blade, 2 in 1, 21.23
34	747-05608	Deck Spring Rod
35	747-06082	Deck Hanger Rod
36	738-04278	Shoulder Screw, .500 x 1/4-20
37	954-04033A	V-Belt
38	756-04129B	Idler Pulley, 4.25 Dia.
39	756-04511A	Idler Pulley, 5.00 Dia.
40	783-06368A	Bracket Belt Guard
41	783-07236	Pulley Cap
42	936-0351	Washer, .760 x 1.50 x .030
43	738-1186A	Spindle Shaft
44	941-0919A	Ball Bearing
45	750-04936	Spacer, .792 x 1.060 x 1.860
46	956-1227	Deck Pulley
47	711-04847B	Hinge Pin
48	732-04372	Torsion Spring
49	783-06074A	Chute Bracket


46" Deck

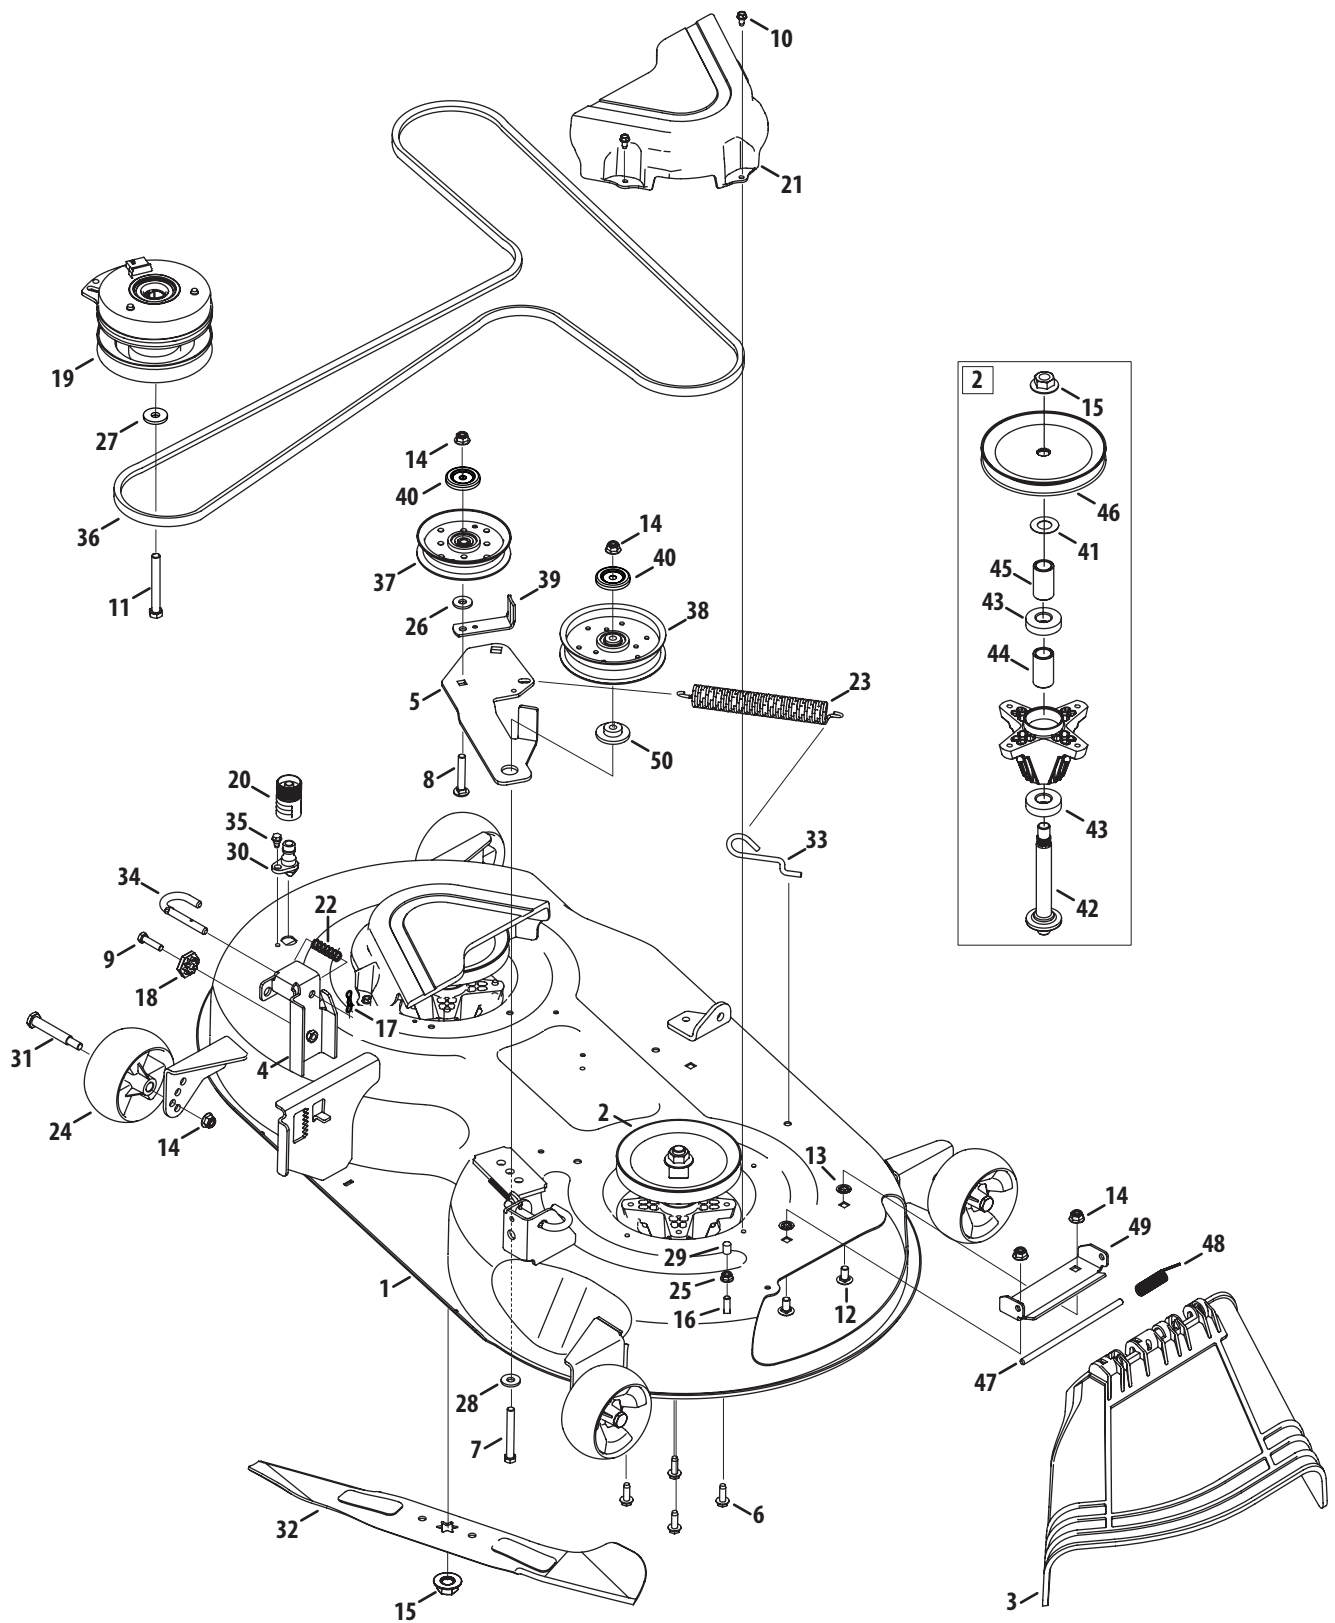

Ref.	Part Number	Description
1	903-04898A	46"Deck Assembly
2	918-05078	Spindle Assembly
3	631-04288	Chute Deflector Assembly
4	683-05031	Deck Lift Bracket
5	703-08612A	Idler Bracket
6	710-04484	Hex Washer Screw, 5/16-18 x .750
7	710-3085	Hex Cap Screw, 3/8-16 x 3.50
8	710-05376	Carriage Screw, 3/8-16 x 1.75
9	710-0573	Hex Cap Screw, 5/16-18 x 1.25
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3157A	Screw, 7/16-20 x 3.25
12	710-3178	Carriage Screw, 3/8-16 x .75
13	712-0229	Push Nut, 3/8
14	712-04065	Flange Lock Nut, 3/8-16
15	712-0417A	Hex Flange Nut, 5/8-18
16	710-0376	Hex Cap Screw, 5/16-18 x 1.00
17	714-04040	Bow-Tie Cotter Pin, 72
18	917-04074	Deck Adjustment Gear
19	917-05122	Electric PTO Clutch
20	921-04041	Water Nozzle Adapter
21	731-08698	Belt Cover
22	732-04652	Compression Spring, .535 x 1.751
23	732-04927	Extension Spring, 1.25 OD x 1.751
24	734-04155	Deck Ball Wheel, 5.0
25	712-04063	Flange Lock Nut, 5/16-18

Ref.	Part Number	Description
26	736-0262	Flat Washer, .385 x .870 x .092
27	736-0322	Flat Washer, .450 x 1.25 x .164
28	736-3052	Flat Washer, .406 x 1.00 x .105
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
32	942-04244A	Blade, 2 in 1, 23.25
33	747-05608	Deck Spring Rod
34	747-06082	Deck Hanger Rod
35	738-04278	Shoulder Screw, .500 x 1/4-20
36	954-04325	V-Belt
37	756-04129B	Idler Pulley, 4.25 Dia.
38	756-04511	Idler Pulley, 5.00 Dia.
39	783-06368A	Bracket Belt Guard
40	783-07236	Pulley Cap
41	936-0351	Washer, .760 x 1.50 x .030
42	938-1128	Spindle Shaft
43	941-0919A	Ball Bearing
44	750-04936	Spacer, .792 x 1.060 x 1.860
45	750-1343	Spacer, .8 x 1.1 x 2.26
46	756-04356	Deck Pulley
47	711-04847B	Hinge Pin
48	732-04372	Torsion Spring
49	783-06074A	Chute Bracket
50	738-05013A	Shoulder Spacer


50" Deck

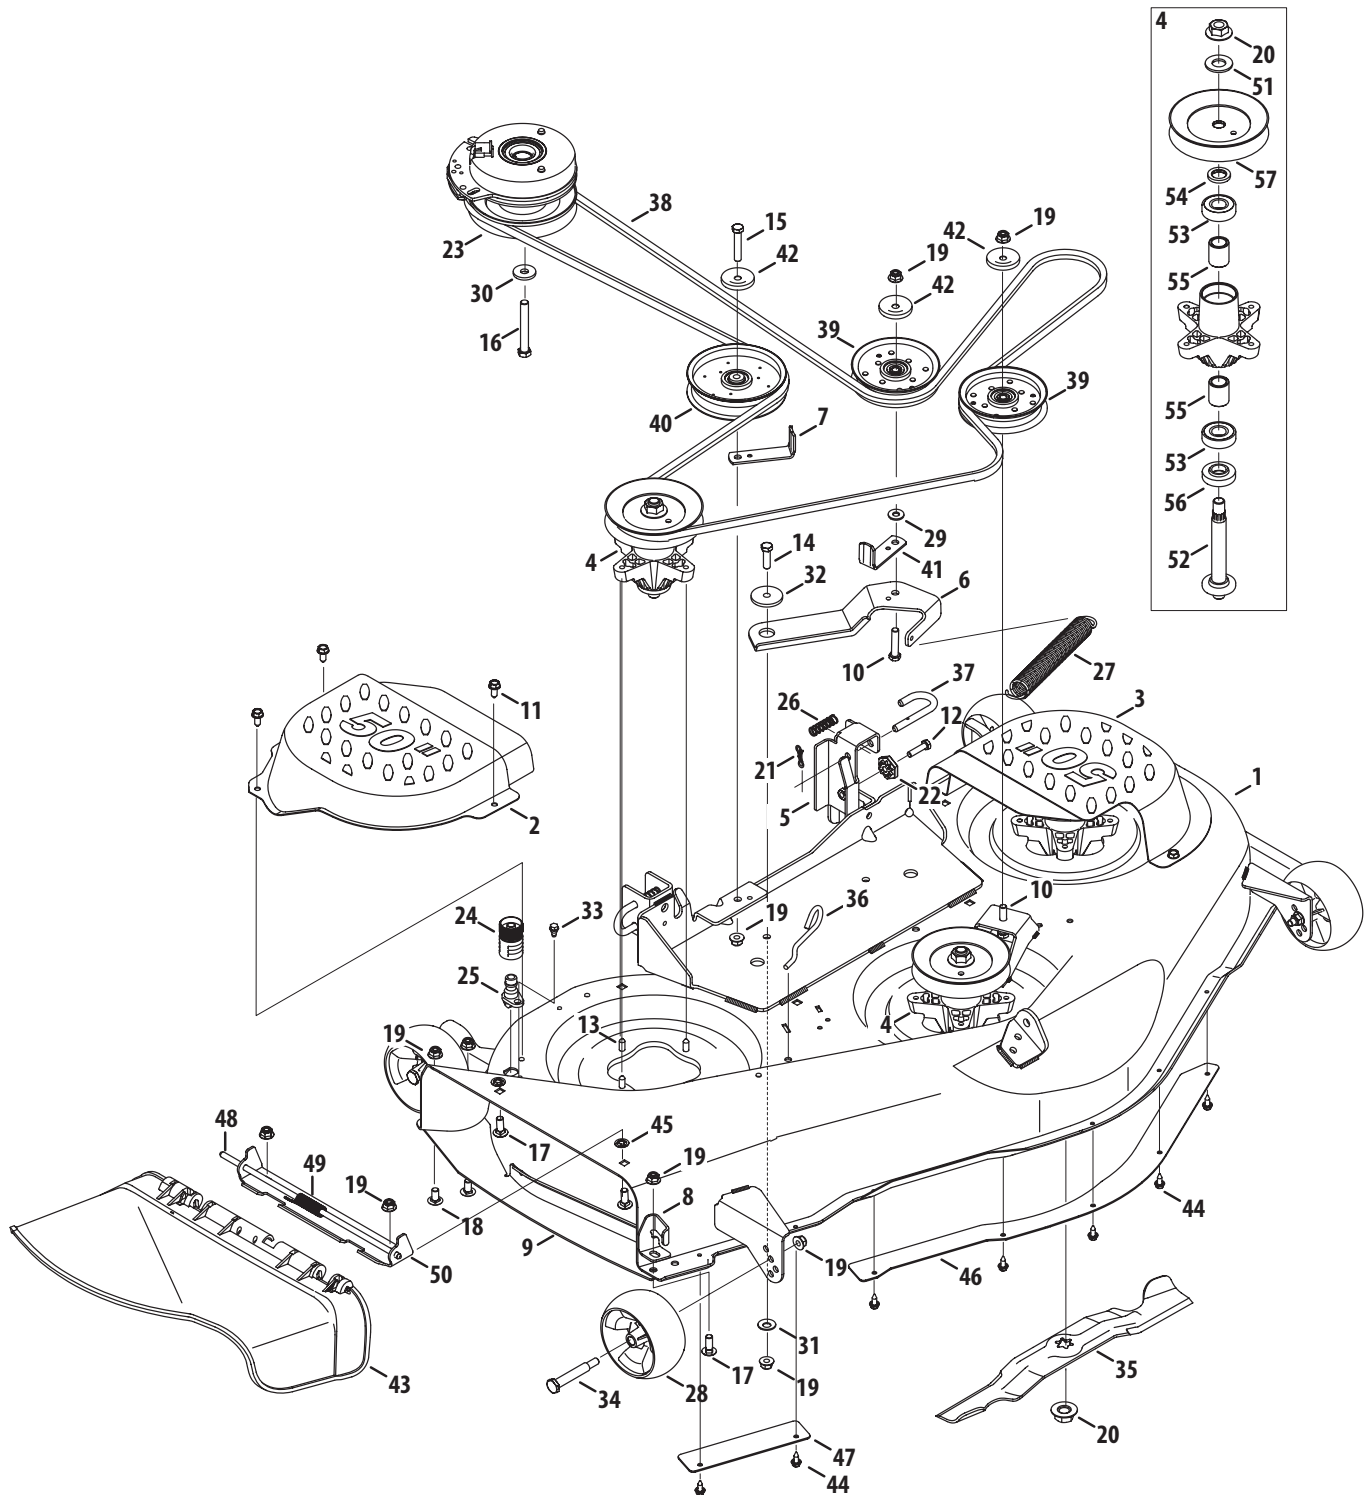

Ref.	Part Number	Description
1	603-04926B	50" Deck Assembly
2	603-04947	Belt Cover, RH
3	603-04948	Belt Cover, LH
4	918-04125B	Spindle Assembly
5	683-05031	Deck Lift Bracket
6	703-05825C	Idler Arm
7	703-08705	Bracket, Belt Guard
8	703-3279	Stop Bracket
9	703-3511B	Finger Guard
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75
11	710-04484	Hex Washer Screw, 5/16-18 x .750
12	710-0573	Hex Cap Screw, 5/16-18 x 1.25
13	710-1260A	Hex Washer Screw, 5/16-18 x .750
14	710-3005	Hex Cap Screw, 3/8-16 x 1.25
15	710-3144	Hex Cap Screw, 3/8-16 x 2.00
16	710-3157A	Screw, 7/16-20 x 3.25
17	710-3168	Carriage Screw, 3/8-16 x 1.00
18	710-3178	Carriage Screw, 3/8-16 x .75
19	712-04065	Flange Lock Nut, 3/8-16
20	712-0417A	Hex Flange Nut, 5/8-18
21	714-04040	Bow-Tie Cotter Pin, 72
22	917-04074	Deck Adjustment Gear
23	917-05122	Electric PTO Clutch
24	921-04041	Water Nozzle Adapter
25	731-07487	Deck Wash Nozzle
26	732-04652	Compression Spring, .535 x 1.751
27	732-04927	Extension Spring, 1.25 OD x 1.751
28	734-04155	Deck Ball Wheel, 5.0
29	736-0262	Flat Washer, .385 x .870 x .092

Ref.	Part Number	Description
30	736-0322	Flat Washer, .450 x 1.25 x .164
31	736-0407	Bell Washer, .45 x 1.0 x .062
32	738-04162C	Shoulder Spacer, .884 x .190
33	738-04278	Shoulder Screw, .500 x 1/4-20
34	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
35	942-04053C	Blade, 2 in 1, 17.9
36	747-05608	Deck Spring Rod
37	747-06082	Deck Hanger Rod
38	954-05008	V-Belt
39	756-04129B	Idler Pulley, 4.25 Dia
40	756-04511A	Idler Pulley, 5.00 Dia.
41	783-06368A	Bracket, Belt Guard
42	783-07236	Pulley Cap
43	631-05058	Discharge Chute Assembly
44	710-1652	Hex Washer Screw, 1/4-20 x .625
45	712-0229	Push Nut, 3/8
46	783-04414A	Center Skirt
47	783-04415	RH Skirt
48	711-04565	Hinge Pin
49	732-04372	Torsion Spring
50	703-09219	Chute Bracket
51	736-0315	Flat Washer, .76 x 1.50 x .12
52	738-1010A	Spindle Shaft, 5.75
53	941-0919A	Ball Bearing
54	748-0160A	Spacer, .79 x 1.25 x .175
55	750-1000	Spacer, .80 x 1.10 x 1.32
56	750-1349A	Spacer, .79 x 1.82 x .55
57	756-04216	V-Type Pulley, 5.39


54" Deck

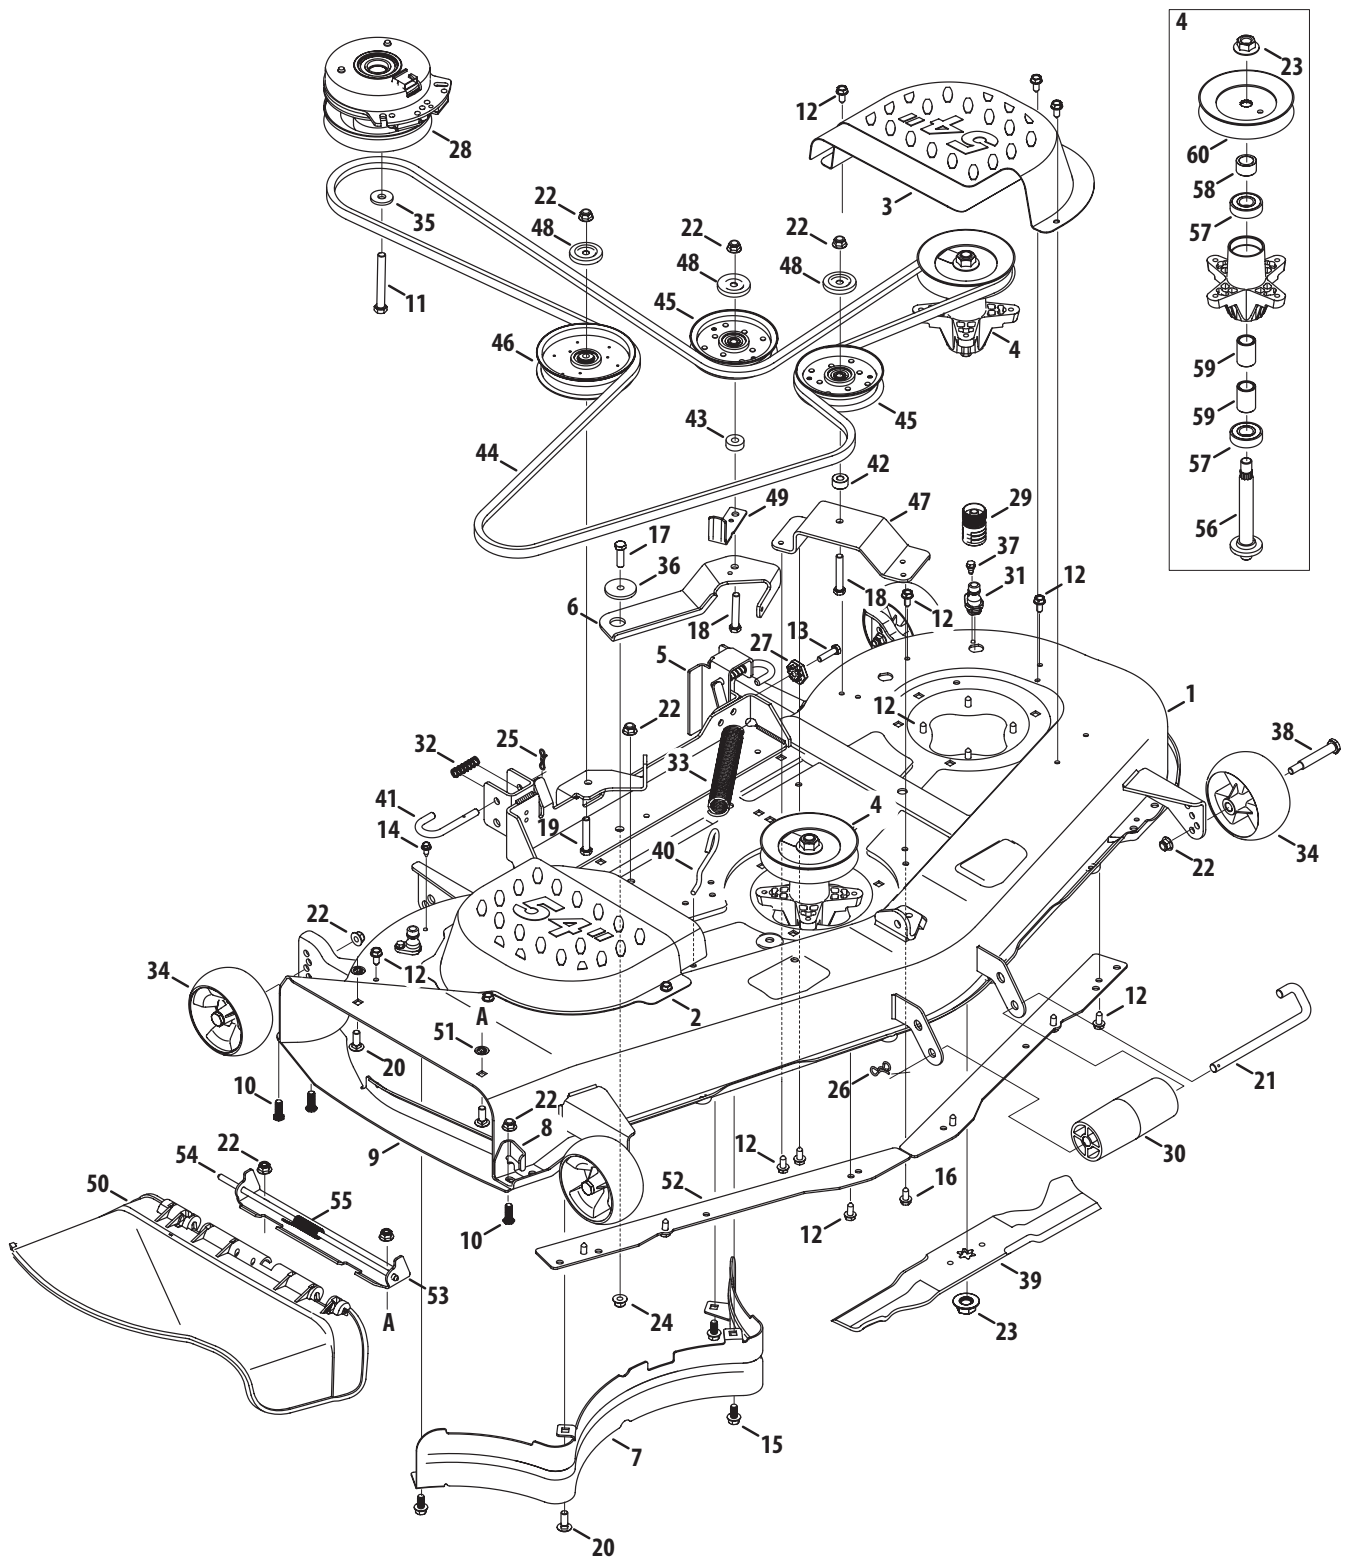

Ref.	Part Number	Description
1	903-04925	54" Deck Assembly
2	603-05004	Belt Cover, RH
3	603-05005	Belt Cover, LH
4	918-05137	Spindle Assembly
5	683-05031	Deck Lift Bracket
6	703-05825C	Idler Arm
7	703-2093C	Inner Baffle
8	703-3279	Stop Bracket
9	703-3511B	Finger Guard
10	710-04095	Hex Cap Screw, 3/8-16, 1.00
11	710-04379A	Hex Cap Screw, 7/16-20 x 3.50
12	710-04484	Hex Washer Screw, 5/16-18 x .750
13	710-0573	Hex Cap Screw, 5/16-18 x 1.25
14	710-0599	Hex Washer Screw, 1/4-20 x .500
15	710-0623	Hex Washer Screw, 3/8-16 x .75
16	710-0650	Self Tapping Screw, 5/16-18 x .875
17	710-3005	Hex Cap Screw, 3/8-16 x 1.25
18	710-3011	Hex Cap Screw, 3/8-16, 2.25
19	710-3144	Hex Cap Screw, 3/8-16 x 2.00
20	710-3168	Carriage Screw, 3/8-16 x 1.00
21	911-3314	Roller Pin, 1/2" x 7.31 Lg
22	712-04065	Flange Lock Nut, 3/8-16
23	712-0417A	Hex Flange Nut, 5/8-18
24	712-04217	Flange Lock Nut, 3/8-16
25	714-04040	Bow-Tie Cotter Pin, 72
26	714-04043	Bow-Tie Cotter Pin
27	917-04074	Deck Adjustment Gear
28	917-05123	Electric PTO Clutch
29	921-04041	Water Nozzle Adapter
30	731-05679	Front Roller

Ref.	Part Number	Description
31	731-07487	Deck Wash Nozzle
32	732-04652	Compression Spring, .535 x 1.751
33	732-04927	Extension Spring, 1.25 OD x 1.751
34	734-04155	Deck Ball Wheel, 5.0
35	736-0322	Flat Washer, .450 x 1.25 x .164
36	738-04162C	Shoulder Spacer, .884 x .190
37	738-04278	Shoulder Screw, .500 x 1/4-20
38	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
39	942-0677B	Blade, 18.5
40	747-05608	Deck Spring Rod
41	747-06082	Deck Hanger Rod
42	750-05635	Spacer, .385 ID x .875 OD x .458
43	750-3119	Spacer, .406 ID x 1.00 OD x .380
44	954-04329	V-Belt
45	756-04129B	Idler Pulley, 4.25 Dia
46	756-04511A	Idler Pulley, 5.00 Dia.
47	783-04726	Bracket, Idler, Stationary
48	783-07236	Pulley Cap
49	783-08027	Belt Guard Bracket
50	631-05058	Discharge Chute Assembly
51	712-0229	Push Nut, 3/8
52	783-04690B	Deck Skirt
53	703-09219	Chute Bracket
54	711-04565	Hinge Pin
55	732-04372	Torsion Spring
56	738-1186A	Spindle Shaft, 6.11 Long
57	941-0919A	Ball Bearing
58	748-04302	Spacer, .82 x 1.15 x .69
59	750-06055	Spacer, .792 x 1.06 x 1.52
60	756-04216	V-Type Pulley, 5.39

Bumper

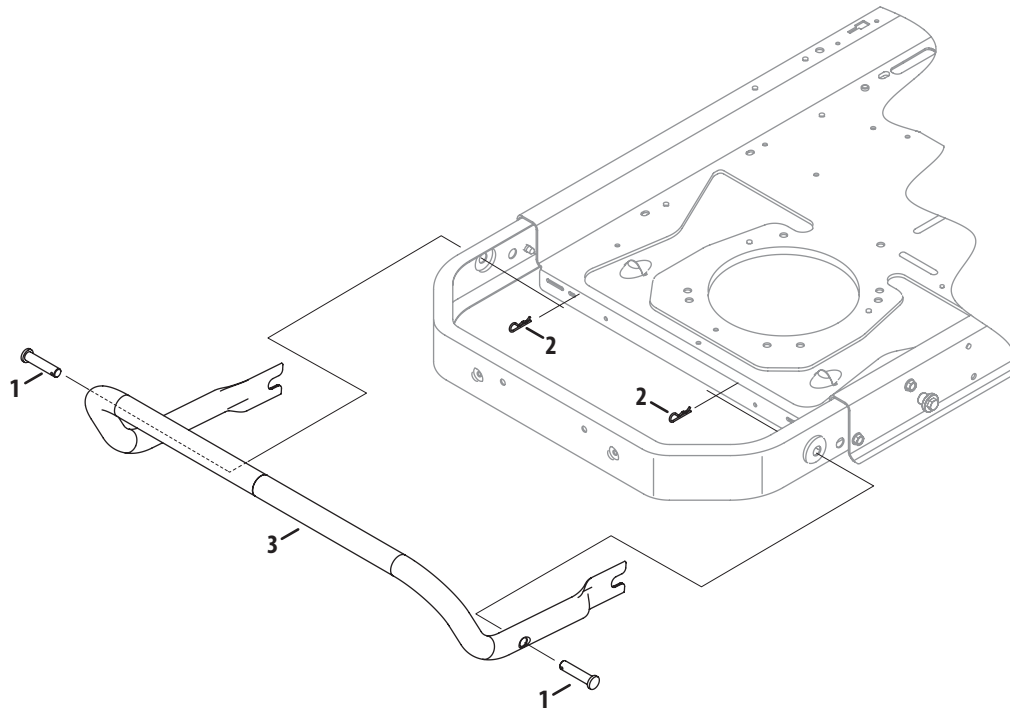

Ref. No.	Part No.	Description
1	711-0510A	Clevis Pin, .50 Dia. x 2.00
2	914-04023	Internal Cotter Pin, .080 x 1.56
3	749-05068	Bumper



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
