




ILLUSTRATED PARTS MANUAL

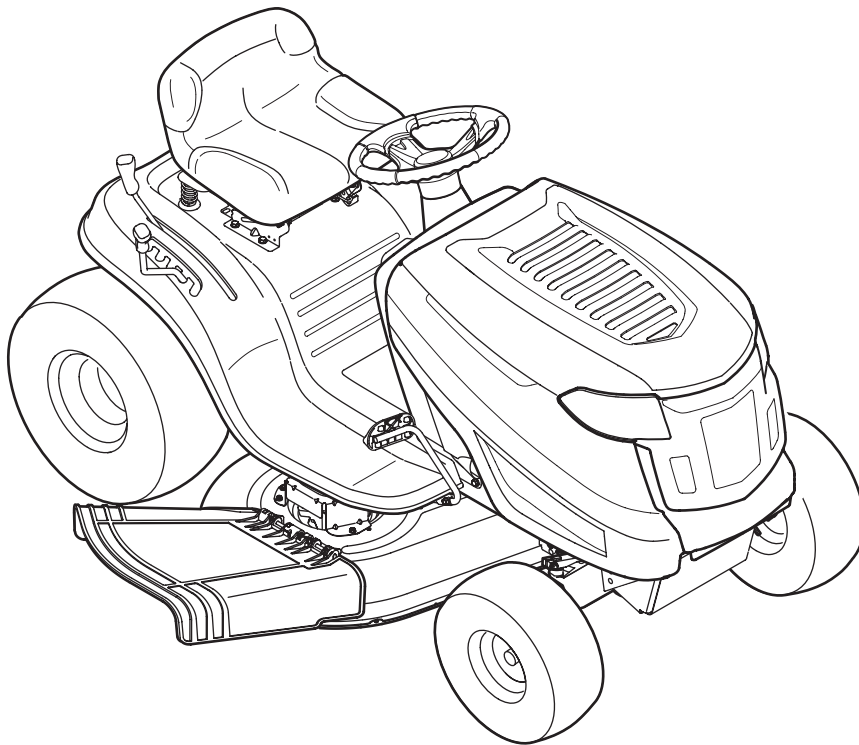

Transmatic Lawn Tractor — Bronco

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing an MTD Lawn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

K Style Hood.....	4	46" Deck.....	16
Frame and PTO Lift	6	Kohler Courage.....	18
Front End Steering.....	8	B&S Model 28.....	19
Seat and Fender	10	MTD P90.....	20
Transmission.....	12	Wiring Harness Schematic	21
42" Deck.....	14		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

This page intentionally left blank.

K Style Hood

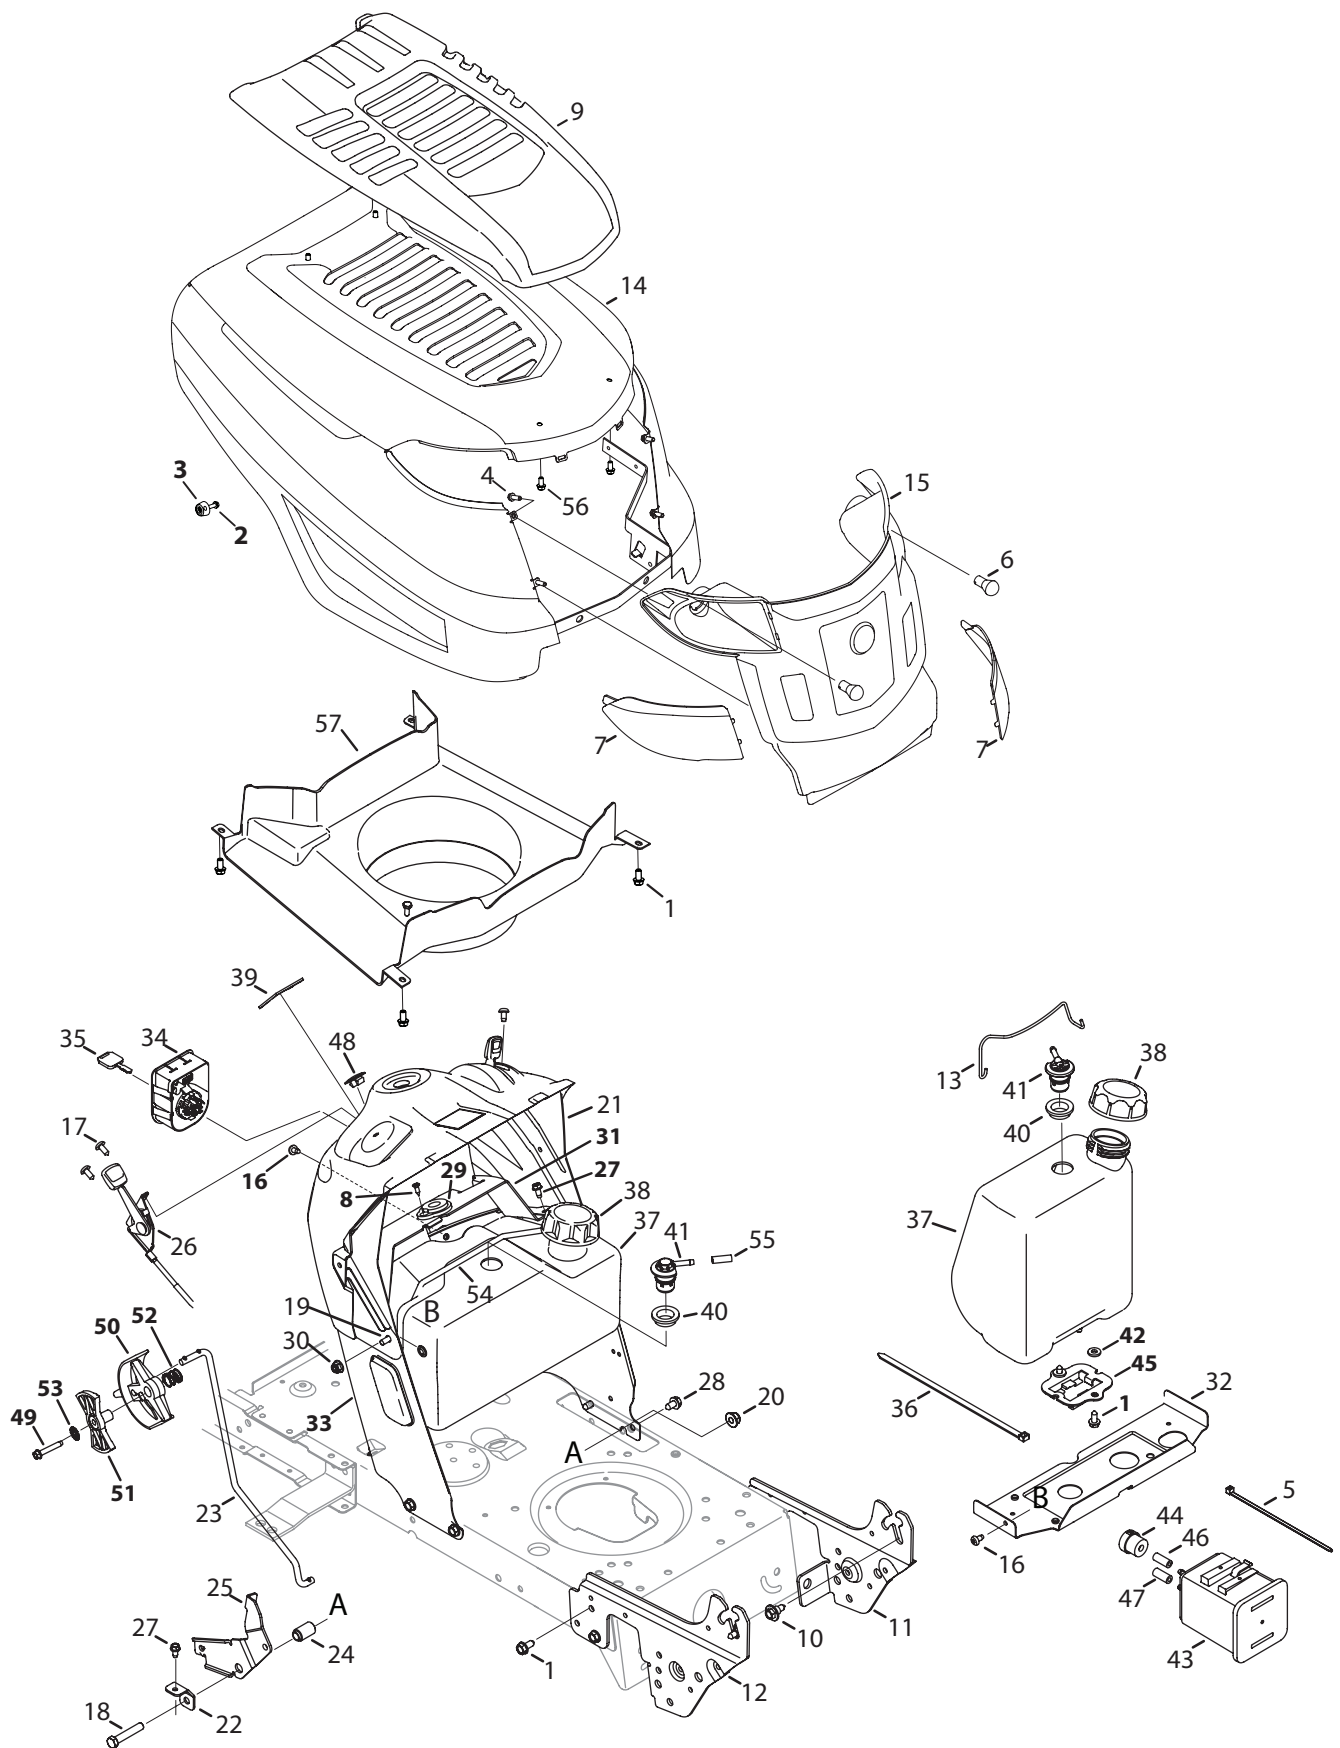


Ref. No.	Part No.	Description
1	710-04484	Screw 5/16-18 x .750
2	710-05281	Screw, #12-16 x 1.25
3	731-06404	K-Style Bumper
4	710-05108	Screw, 1/4 x .750
5	725-0157	Cable Tie
6	925-0963	Miniature lamp 12V socket
7	731-06095	Grill Lens - LH
	731-06096	Grill Lens - RH
8	910-0224	Screw, #10-16 x .500
9	731-06194B†	Hood Scoop
10	738-04091A	Shoulder Screw .43 x .29
11	783-05327B	Support Bracket LH
12	783-05328A	Support Bracket RH
13	683-04448	Battery Rod
14	683-04774	Hood, w/ scoop
	683-04441A	Hood Assembly
15	631-04272	Grill
16	710-05070	Screw, 1/4-20 x .500
17	710-04483	Screw 1/4-20 x .500
18	710-3144	Hex Screw 3/8-16 x 2.00
19	710-3025	Hex Screw, 5/16-18 x .625
20	712-04065	Flange Lock Nut 3/8-16
21	931-07770A	Dash, Upper
22	783-06823	Speed Latch Tab
23	747-05398	Speed Control Rod
24	750-04465C	Flange Spacer .39 x .671 x 1.095
25	683-04766	Transmission Speed Latch
26	746-04367	Throttle/Choke Control Cable
27	710-1652	Tap Screw, 1/4-20, 0.625
28	710-0604A	Screw 5/16-18 x .625
29	741-0587	Bearing, .628 ID x 1.36

Ref. No.	Part No.	Description
30	712-04063	Flange lock Nut 5/16-18
31	783-06785A	Bracket, Steering Support
32	783-07083†	Gas Tank Support Bracket
33	783-06811B	Dash, Lower NOWDO
34	925-06119	Key Switch Module
35	625-05002	Key, Assembly
36	726-0230†	Cable Tie
37	951-04295	Fuel Tank, 2 Gallons, EPA
	951-04304	Fuel Tank, 1.36 Gallon, CARB
38	951-12179B	Fuel Cap
	951-12426A	Fuel Cap, CARB
39	731-05232	Ammeter Plug
40	735-04081	Rubber Grommet
41	751-12118	Rollover Valve
42	936-3008††	Washer, Flat, .344 x .750 x .120
43	951-10589††	Canister, Carbon, 5 Gallon
44	951-10590††	Filter, Vent, Canister
45	951-10610††	Bracket., Adapter, Canister
46	751-10749††	Hose, Fuel, Low Perm., White
47	751-10750††	Hose, Fuel, Low Perm., Yellow
48	731-05265	Choke Plug
49	710-0778	Hex Washer Screw, 1/4-20 x 1.50
50	731-07885B	Shift Lever
51	731-07966A	Index Control
52	732-04877	Compr. Spring, .685 OD x .63
53	736-3006	Lock Washer, 1/4
54	747-05373	Fuel Tank Clamp Rod
55	751-12089-28	Hose Vent, 3/16 EPA
56	710-04187†	Screw, 1/4-15 x 0.50
57	931-09328†	Plenum
—	725-04432G	Harness, LT-5, RMC, Dual

† If Equipped


†† Equipped with CARB Fuel Tank

Frame and PTO Lift

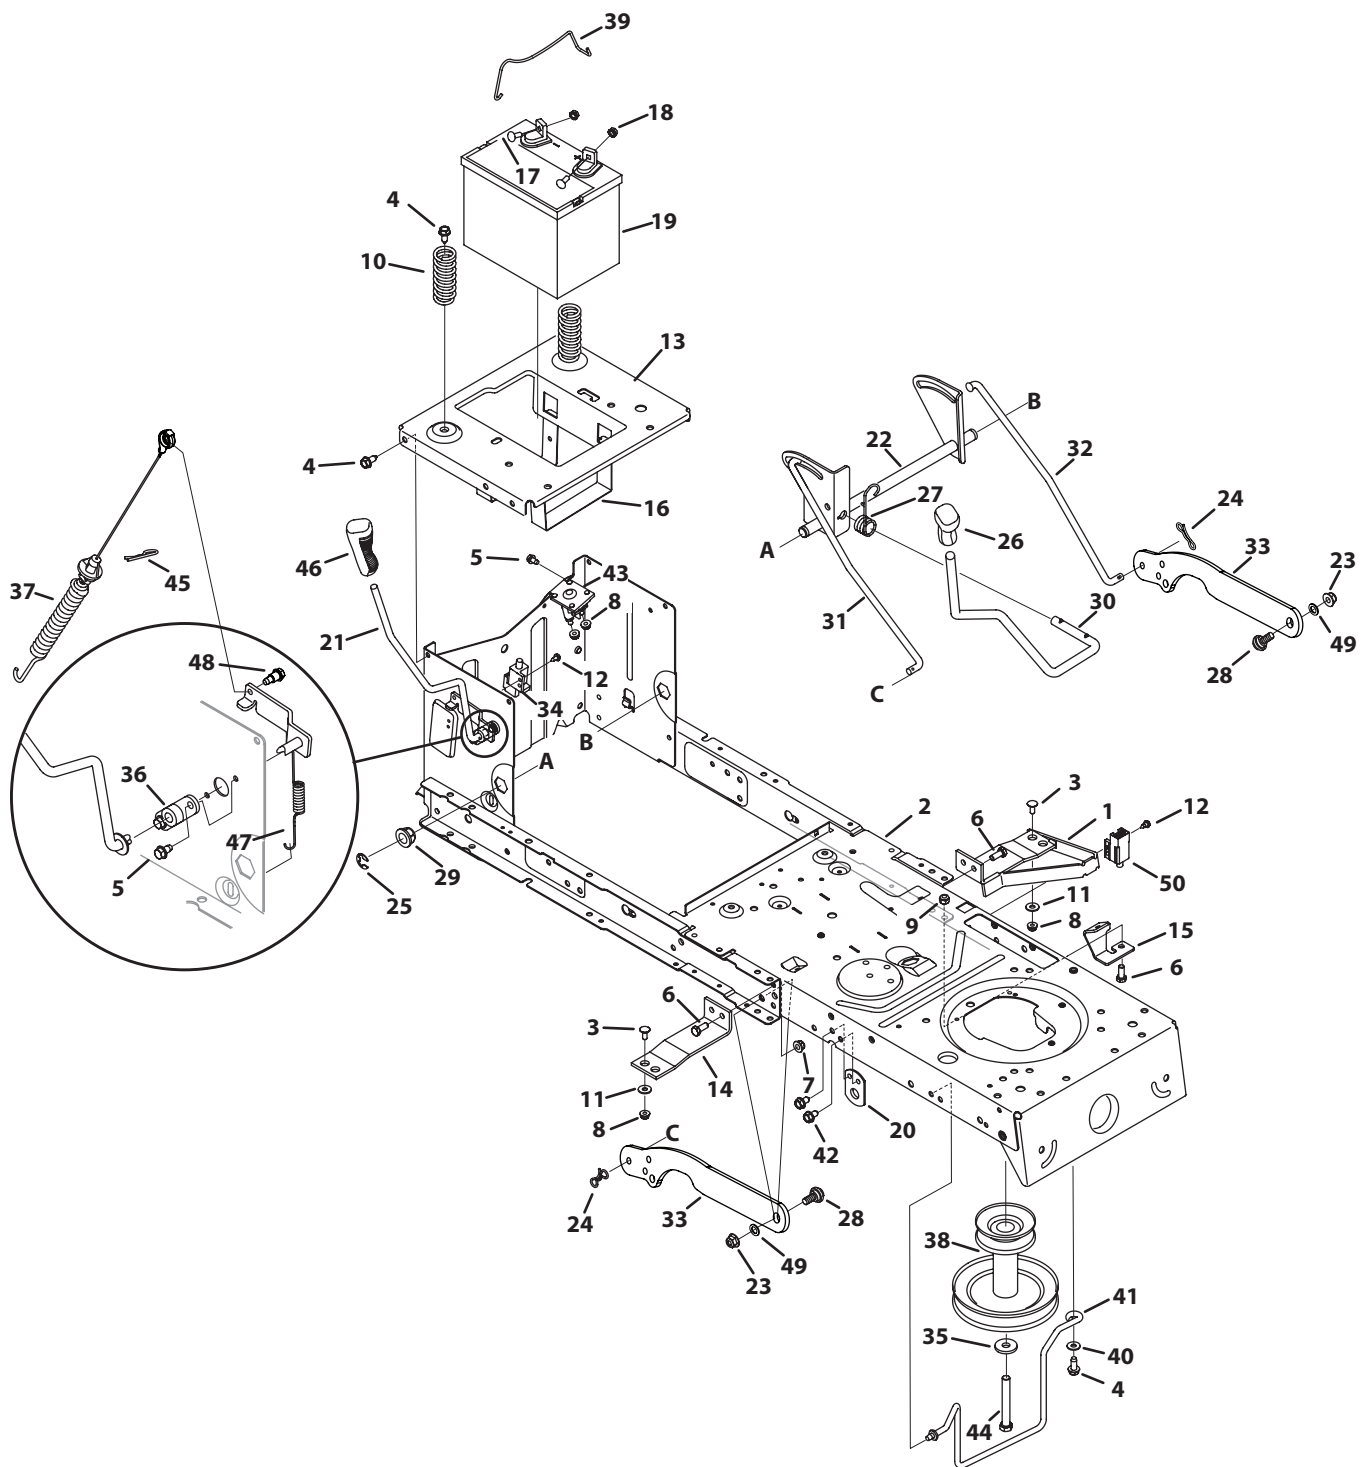

Ref. No.	Part No.	Description
1	683-04195	Support Bracket
2	683-05139	Frame Assembly
3	710-0703	Screw Carriage, 1/4-20 x .75
4	710-04484	Screw 5/16-18 x .750
5	710-0599	Screw, 1/4-20 x .500
6	710-3008	Hex Screw, 5/16-18 x .75
7	712-04063	Flangelock Nut, 5/16-18
8	712-04064	Flangelock Nut, 1/4-20
9	912-0429	Hexlock Nut, 5/16-18
10	732-0735A	Compression Spacer, 1.314 x 2.55
11	736-0173	Flat Washer, .28 x .74 x .063
12	738-04237A	Shoulder Spacer, 10-32 x .500
13	783-04548D	Seat Frame Bracket
14	783-04637	Running Board Bracket
15	783-04753	Support Frame Bracket
16	783-04869A	Battery Bracket
17	710-04666	Hex Head Flange, 1/4-20 x .75
18	712-0271	Sems Nut, 1/4-20
19	925-1707D	230 CCA Battery
20	783-04536B	Support Bracket
21	647-05041	PTO Handle Assembly
22	683-04334	Lift Assembly
23	712-04065	Flangelock Nut, 3/8-16
24	714-04040	Bow-tie Cotter Pin
25	716-0106A	E Ring


Ref. No.	Part No.	Description
26	720-0298	Handle Grip, 5/8
27	732-04438	Torsion Spring
28	938-0380	Shoulder Bolt, 3/8-16 x .50 x .270
29	941-0225	Hex Flange Bearing
30	747-04653A	Deck Lift Handle
31	747-06237	Lift Rod, RH
32	747-06253	Lift Rod, LH
33	783-0678C	Lift Arm
34	725-04363	Switch Interlock
35	736-0322	Flat Washer, .450 x 1.250 x .164
36	741-04119A	PTO Bearing
37	946-05124	Deck Engage Cable
38	756-04196A	Engine Pulley, 3.39 x 6.12
39	683-04448	Battery Hold Down Rod
40	936-0300	Flat Washer, .406 x .875 x .059
41	747-04857	42" Belt Keeper
42	710-0604A	Screw, 5/16-18.0 x .625
43	725-06153	12V Solenoid
44	710-3157A	Hex Screw, 7/16-20 x 3.25
45	914-0145	Click Pin, .092 x 1.64
46	720-04049A	Handle Grip, 3/8
47	732-04276A	PTO Spring Extension
48	738-04425	Shoulder Bolt, 1/4-28 x .342 x .335
49	936-0140	Flat Washer, .385 x .62 x .063
50	925-04039	Screw Mount Interlock Switch

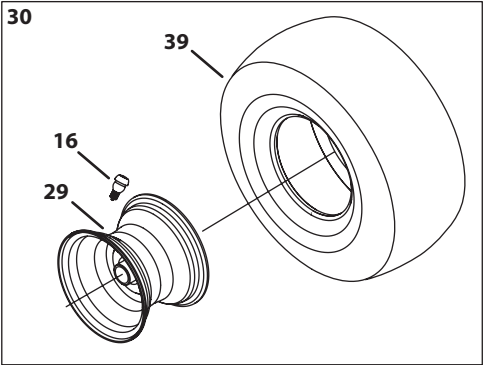

Front End Steering


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	617-04094	Front Steering Gear Assembly	23	736-04228A	Flat Washer, .781 x 1.590
2	710-0514	Hex Screw, 3/8-16 x 1.00	24	714-0162	Cotter Pin, 5/32 x 1.25
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock	25	683-0128B	Pivot Axle
4	710-1309	Machine Screw, 5/16-18 x .750	26	710-04484	Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75	27	912-0431	Flangelock Nut, 3/8-16
6	912-0240	Jam Nut, 7/16-20	28	914-0474	Cotter Pin, .125 x .75
7	912-0214	Jamlock Nut, 3/8-24	29	634-05066	Rim Asm, 6.0 x 4.5
8	712-04063	Flangelock Nut, 5/16-18	30	634-05053-0911	Wheel Assembly
9	938-04013	42" & 46" Front RH Axle		634-05067-0911	Wheel Ass'y, Sq. Shldr., 15 x 6 x 6
10	923-0448A	Ball Joint, 7/16-20	31	631-04028	Steering Wheel
11	736-0242	Bell Washer, .340 x .872 x .060		631-04008A	Steering Wheel, Softgrip
12	938-04014A	42" & 46" Front LH Axle	32	931-0484A	Hub Cap
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350	33	731-04681	Cap, Troy-Bilt
14	938-05078	Steering Shaft, 5/8	34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
15	941-04124	Flange Bearing, 5/8	35	747-04299A	Fixed Rod
16	934-0255	Valve, tubeless Air	36	783-05326B	Pivot Bar Bracket
17	747-05385	Steering Link	37	726-0341	Push Cap, 3/4
18	948-0389	Cap, 1.25 x .16	38	731-04057A	Standard Axle Cap
19	748-04278	Steering Block	39	734-04240A-0901	Tire, 15 X 6 X 6 Rd Shldr
20	748-04068	Spacer, .71 x .125 x .56		734-1731	Tire, 15 X 6 X 6 Sq Shoulder
21	741-0660A	Flange Bearing, .760 x .941 x 1.0	40	750-06192	Spacer, .38 ID x .854 OD x .20
22	783-08577	Stabilizer Plate	41	736-0331	Bell Washer, .390 x 1.13 x .062

Seat and Fender

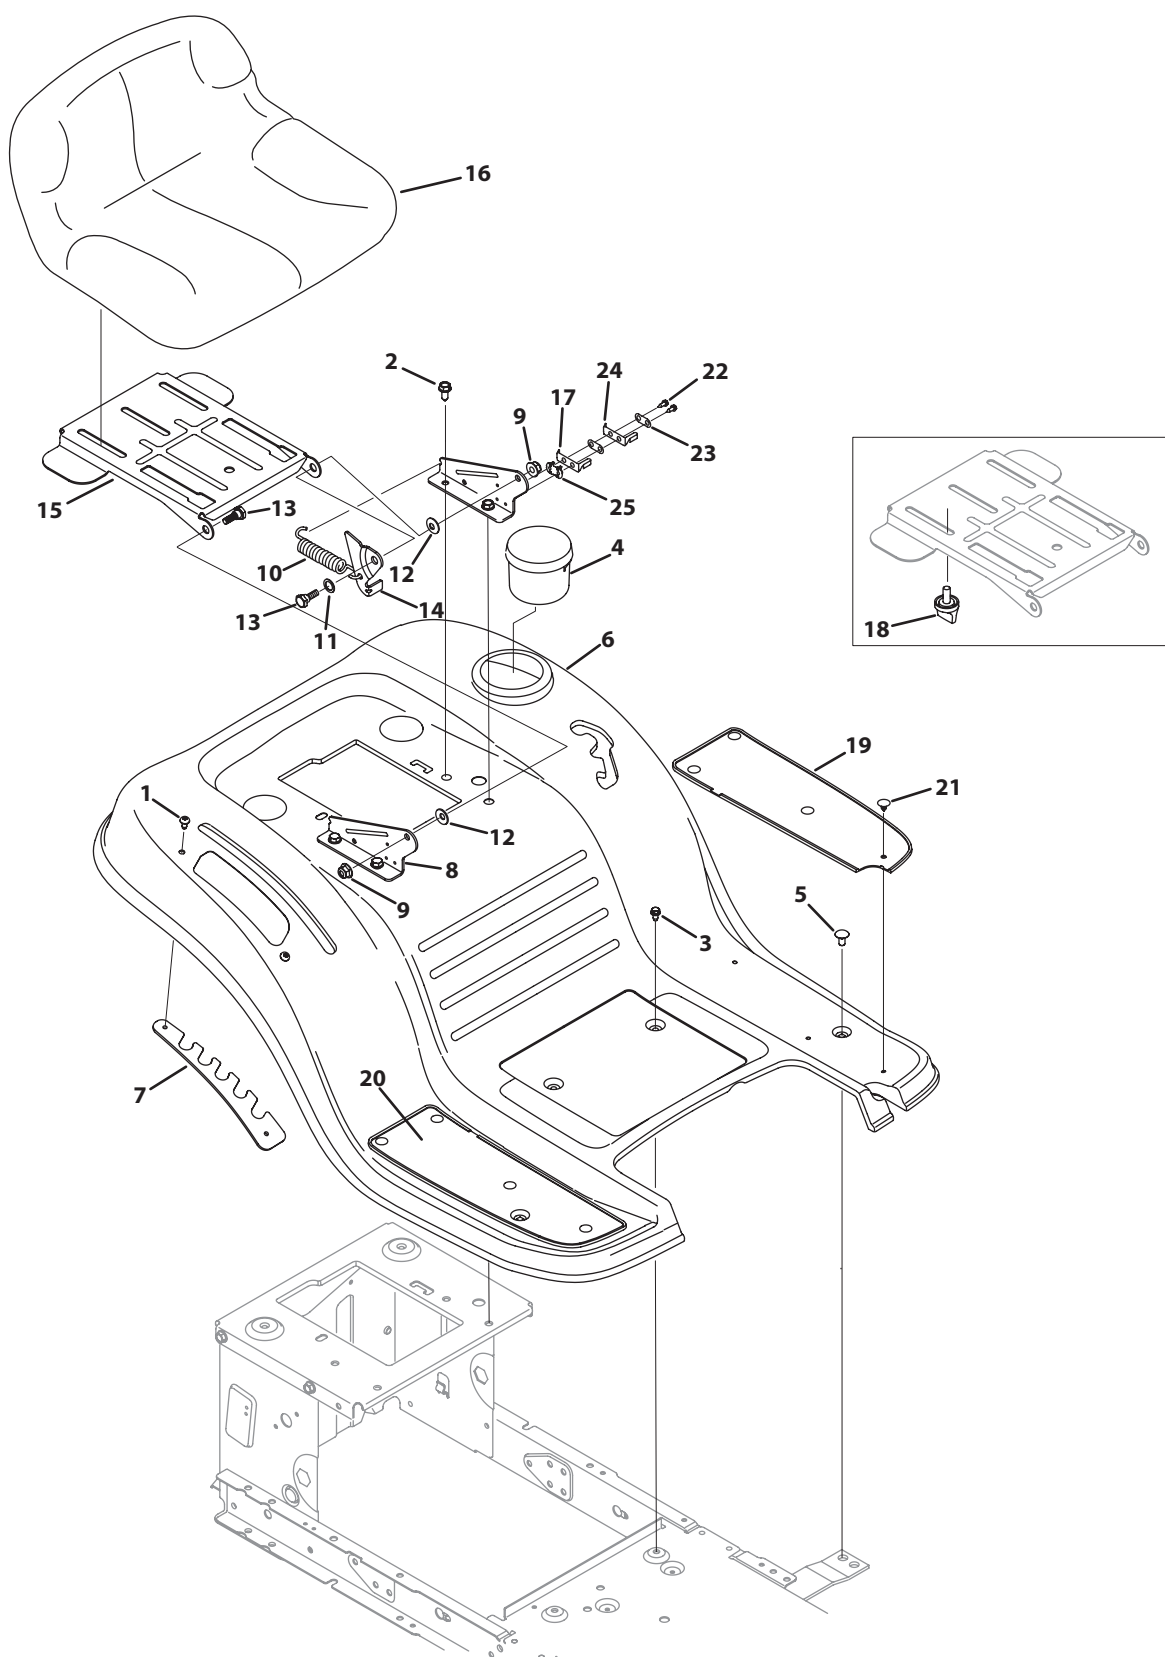

Ref. No.	Part No.	Description
1	710-05070	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	710-0134	Screw Carriage, 1/4-20 x .62
6	783-04587D	Fender - Red
7	783-04843	Lift Adjuster Bracket - Powder Black
8	783-1489D	Seat Mount Bracket - Powder Black
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	757-04083A	Med. Back Seat, Black
17	725-1439	Inner Seat Spring
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
20	735-04048	Foot Pad, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat Spring
25	726-0278	Insulator Boss Plate


Transmission

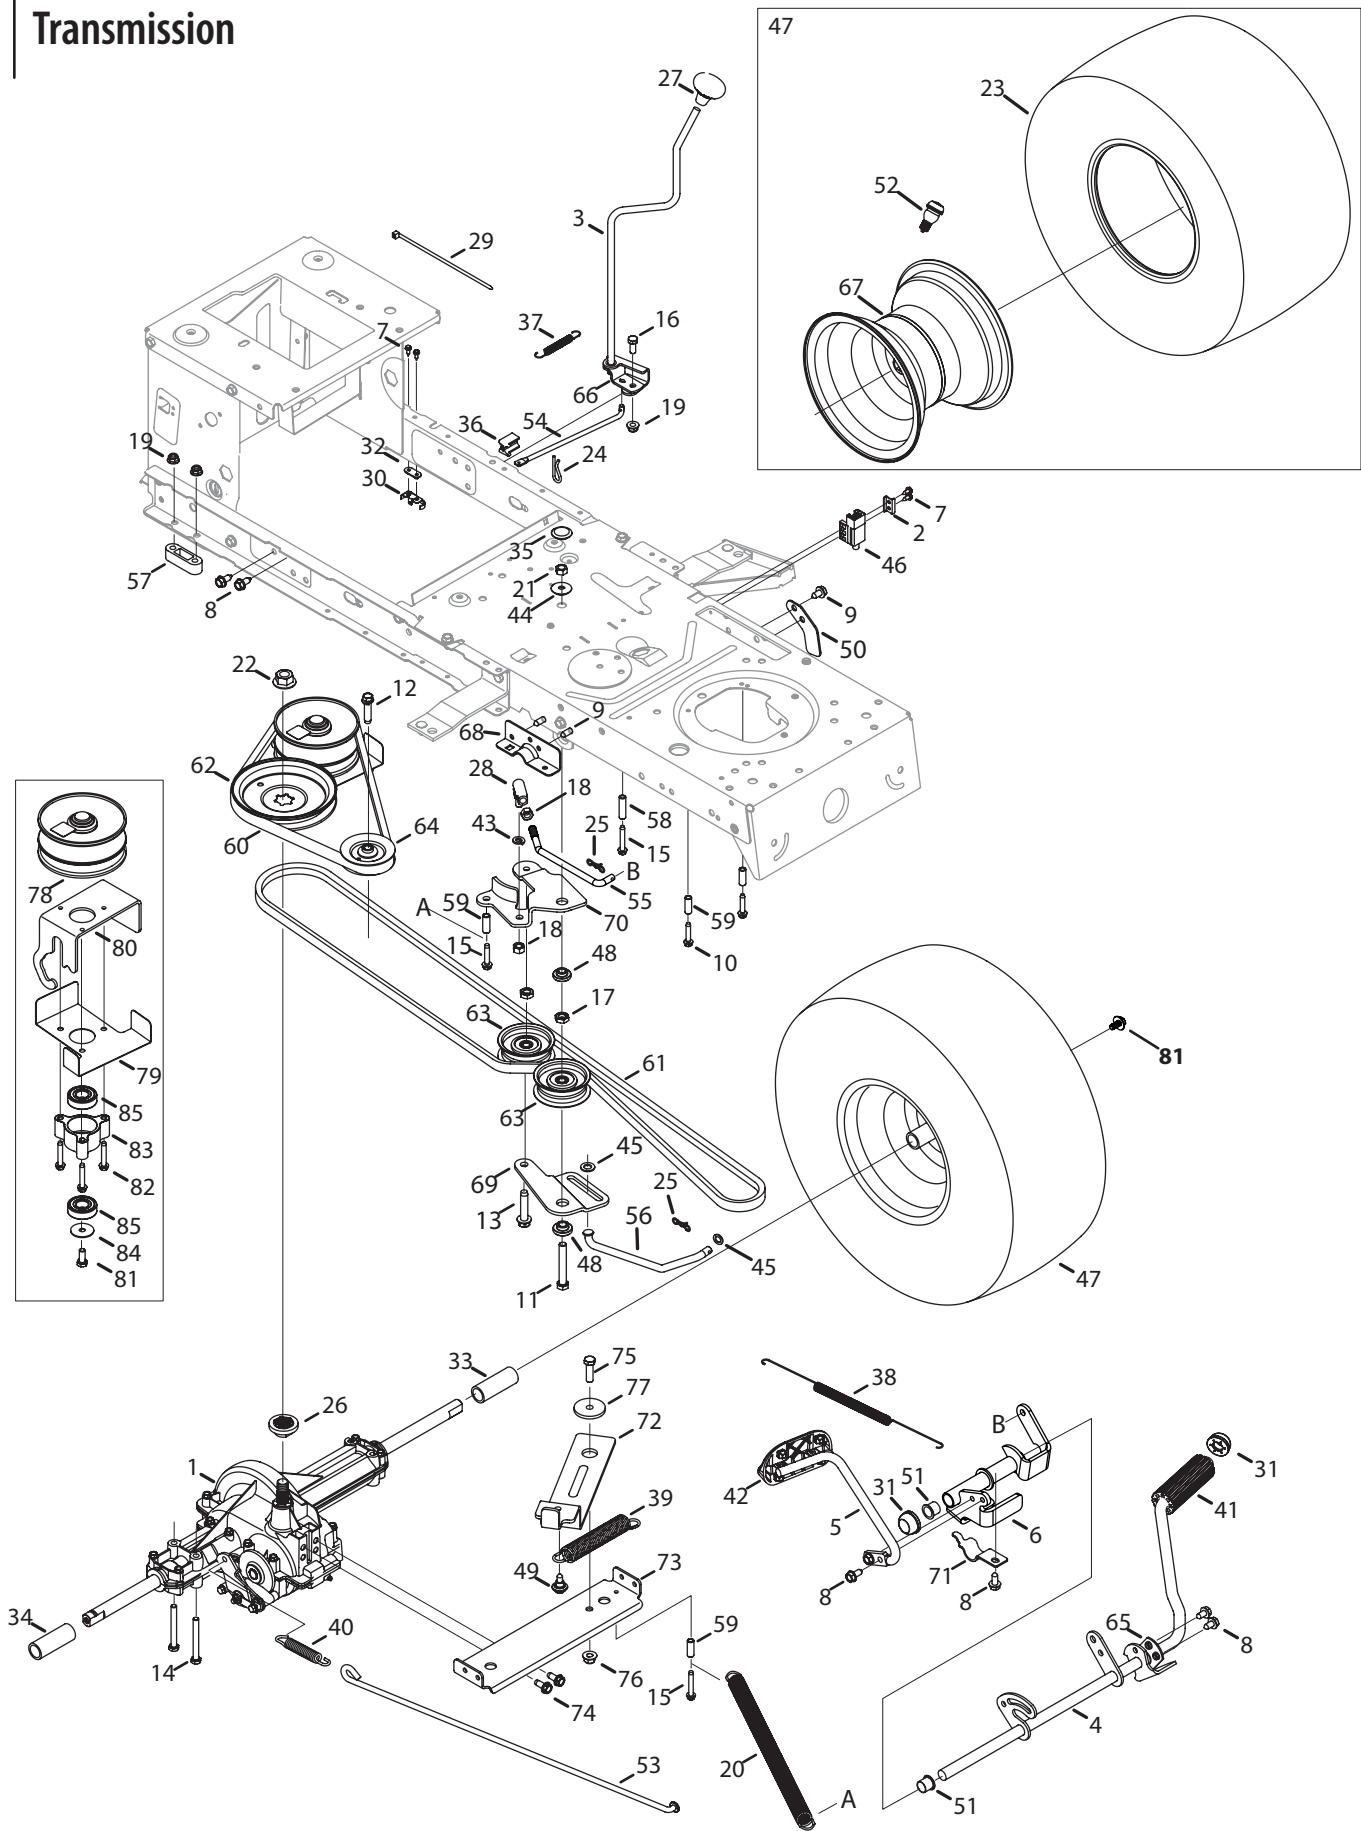

Transmission

Ref.	Part No.	Description	Ref.	Part No.	Description
1	918-04566	Transmission Drive Assembly	44	736-3040	Flat Washer, .406 x 1.920 x .060
2	17962	Plate Switch	45	936-0185	Flat Washer, .375 X .738 X .063
3	647-04266	Shaft Lever Assembly	46	725-04363	Switch Interlock
4	947-04201A	Pedal Assembly, drive	47	634-04324-0911	Wheel, 20 x 8 x 8
5	647-04203A	Pedal Assembly, control		634-0104-0911	Wheel, 20 x 8 x 8 - Grey
6	683-04736	Pedal Bracket Assembly	48	738-0372B	Shoulder Spacer, 1.00 X .38 X .38
7	710-0227	Screw, 8-18:0.500	49	738-04091A	Shoulder Screw, .43 x .29, 5/16-18
8	710-04484	Screw, 5/16-18 x .750	50	783-06807A	Stop Pedal Plate
9	710-0604A	Screw, 5/16-18 x 0.625	51	741-0495	Flng Bearing .63 Id x .695 Od X .60
10	710-0809	Screw, 1/4-20 x 1.250	52	934-0255	Valve, tubeless Air
11	710-0859	Hex Screw, 3/8-16 x 2.50	53	747-05188	Brake Rod
12	710-1007	Screw, 3/8-16 x 1.500	54	747-05243	Shift Rod, 46"
13	710-1858A	Screw, 3/8-16 x 1.750	55	747-05596	Idler Adjustment Rod
14	710-1266	Hex Screw, 5/16-18 x .625	56	747-05415	Transmission Bypass Rod
15	710-1026	Screw, 1/4-20 x 1.75	57	948-0334	Spacer, T-Axle .68
16	710-3008	Hex Screw, 5/16-18 x .75	58	750-04456	Spacer, .260 X .372 X 1.420 Lg
17	912-0240	Jam Nut, 7/16-20	59	750-0566A	Spacer, .260 X .375 X 1.030 Lg
18	712-0241	Hex Nut, 3/8-24	60	954-04208A	V Belt, 5L 40.9 Poly
19	712-04063	Flangelock Nut, 5/16-18	61	954-0467A	V Belt, 5L, 90.93 Poly
20	732-04764	Spring Extension, .56 OD x 12.05	62	956-04002	V Pulley 7.25 DIA SPUN
21	912-3000	Nut, 3/8-16, Centerlock	63	756-04224	Idler Pulley
22	712-0700	Flange Nut, 9/16-18	64	756-04325	Idler Pulley
23	734-04241-0901	Tire, 20 X 8 X 8 Rd Shldr	65	783-04536B	Pedal Support Bracket
	734-1730	Tire, 20 X 8 X 8 Sq Shldr	66	783-04595A	Shaft Adjust Bracket
24	914-0209	Cotter Pin INT- .125 DIA	67	634-04369-0662	Rim, 8.0 X 7.0 X .750
25	714-04040	Bow-Tie Cotter Pin, 72	68	783-06562A	Frame Pedal Bracket, Rh
26	718-04407	Pulley Hub, 5/8 SPLINE	69	783-06769	Center Idler Bracket
27	720-04028	Shift Knob	70	783-06592A	Idler Bracket
28	923-3018	Ball joint	71	783-06641A	Pedal Support Bracket
29	725-0157	Cable tie	72	753-06662	Idler Bracket Assembly
30	725-1644	Short Spring Switch	73	683-04606	Bracket Assembly
31	726-0214	Push Cap, 5/8	74	710-1260A	Screw, 5/16-18 x 0.750
32	926-0320	Plate Insulator Nut	75	710-3005	Hex Screw, 3/8-16 x 1.25
33	731-04602	Sleeve, .758 x .821 x 3.3125	76	712-04065	Flangelock Nut, 3/8-16
34	731-04604	Sleeve, .758 x .821 x 2.4375	77	738-04162C	Shoulder Spacer, .8840 X .190
35	731-06330	Plug, 7/8	78	956-04015A	Variable Speed Pulley Assembly
36	731-06894	Shift Plate Bearing	79	683-04522	Belt Keepr Assembly
37	732-04488	Spring Extension, .38 OD x 3.25 LG	80	683-04612	Bracket Assembly
38	732-04612	Spring Extension, .70 OD X 12.00	81	710-05339	Screw, 5/16-24 x .750
39	732-04616B	Spring Extension, .97 Od X 6.18 Lg	82	710-0778	Screw, 1/4-20 x 1.500
40	732-0716D	Spring Extension, .59 OD x 4.00 LG	83	718-04261	Bearing Cup
41	735-0239	Foot Pad, 4.0 Long	84	736-0362	Flat Washer, .330 X 1.25 X .06
42	735-04272	Control Pad	85	941-0600	Ball Bearing, 17 x 40 x 12
43	936-0169	Lock Washer 3/8			


42" Deck

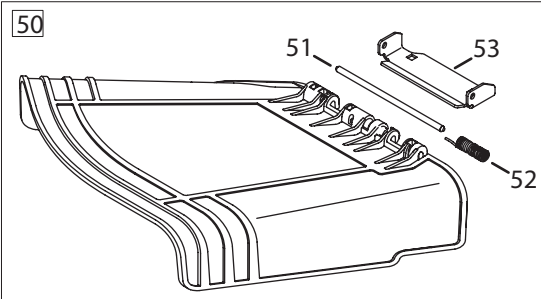

Ref.	Part Number	Description
1.	918-06991	Spindle Ass'y, Pulley, 6.2 Dia
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH
3.	783-08540	Belt Keeper
4.	683-05095	Brake Bracket Assembly, LH
5.	683-05102	Brake Bracket Assembly, RH
6.	683-05098	Deck Assembly, 42"
7.	710-0347	Hex Screw, 3/8-16 x 1.75
8.	710-0376	Hex Cap Screw, 5/16-18 x 1.00
9.	710-04484	Screw, Self-tapping, 5/16-18, .750
10.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
12.	710-1260A	Screw, 5/16-18 x 0.750
13.	710-1652	Tap Screw, 1/4-20, 0.625
14.	710-3096	Hex Screw, 3/8-16, 2.00, Gr8, Std
15.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
16.	712-0229	Nut, Push, 3/8
17.	712-04063	Nut, Flange Lock, 5/16-18, Grf
18.	712-04065	Nut, Flange Lock, 3/8-16, Grf
19.	712-0417A	Nut, Flange, 5/8-18
20.	712-05046	Hex Nut, 1/2-13
21.	714-04043	Bow-Tie Cotter Pin
22.	917-04074	Gear, Deck, Adjustment
23.	720-05010	Cap, .290 x .500
24.	728-05016	Rivet Nut, 3/8-16
25.	732-05149	Torsion Spring, RH
26.	732-05151	Torsion Spring, LH
27.	936-0119	Washer, Lock, 5/16, Regular Duty
28.	936-0300	Flat Washer, .406 x .875 x .059
29.	736-04183	Flat Washer, .395 x 1.0 x .062


Ref.	Part Number	Description
30.	736-3078	Flat Washer, .344 x 1.0 x .063
31.	738-05064	Shoulder Spacer, .854 x .190
32.	738-05088	Shoulder Spacer, .75 x .145
33.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
34.	747-05141A	Rod, Lift, Deck, Frt, 12.7
35.	747-06232	Brake Rod
36.	748-04069	Deck Lift Pivot Cup
37.	748-05029A	Shoulder Spacer, Idler
38.	748-05037	Shoulder Spacer, Pivot Idler
39.	754-05056	Belt, V Type, A Sec X 96.5
40.	756-05034	Pulley, Idler, 4.50" Dia
41.	783-06464	Deck Wash Plug
42.	783-08389	Pulley Cap
43.	783-08510	Deck Belt Cover, 42
44.	783-08530	Deck Idler Bracket
45.	936-0351	Washer, Flat, .760 ldx1.50 OD
46.	738-1186A	Shift, Spindle, 6.11.
47.	941-0919B	Bearing, Ball, .787id x 1.85 Odx.551
48.	750-04936	Spacer, .792 x 1.060 x 1.860
49.	756-05031	Pulley, Deck, 5.4 Dia
50.	631-05191	Chut Assembly, 42" Deck
51.	711-04847B	Pin, Hinge, Dia .3125 x 7.96
52.	732-04372	Spring, Torsion, .44 I.D. X 2.0
53.	783-06074A	Chute Bracket
54.	734-04155	Wheel, Deck, 5.0 Dia Ball
55.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
56.	921-04041	Water Nozzle Adapter
57.	731-07487	Deck Wash Nozzle
58.	738-04278	Shoulder Screw, 1/4-20 x 0.50

46" Deck

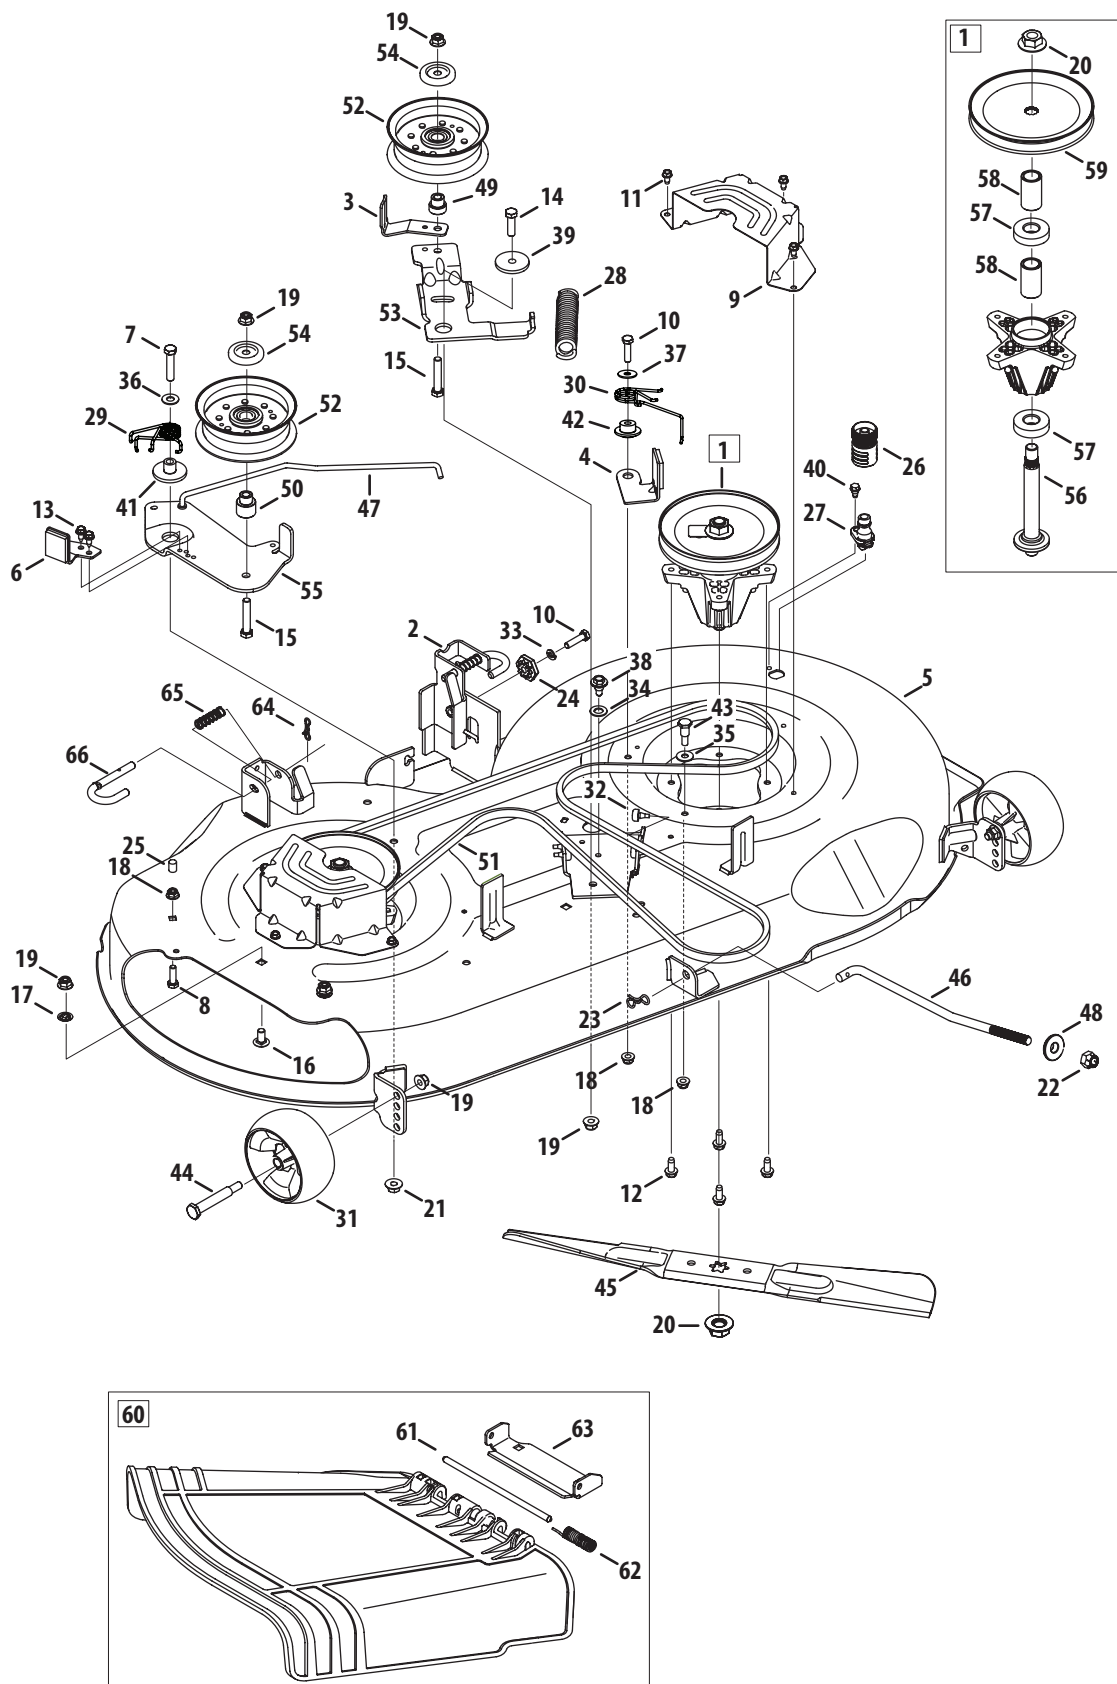


Ref.	Part Number	Description
1.	918-06989	Spindle Assembly, Pul 6.74 Dia
2.	683-0254B	Bracket Assembly, Deck Hanger, LH
3.	783-08540	Belt Keeper
4.	683-05095	Brake Bracket Assembly, LH
5.	683-05097	Deck Assembly, 46t, 2w
6.	683-05102	Brake Bracket Assembly, RH
7.	710-0347	Hex Screw, 3/8-16 x 1.75
8.	710-0376	Hex Cap Screw, 5/16-18 x 1.00
9.	783-08547	Deck Belt Cover, 46
10.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
12.	710-1260A	Screw, 5/16-18 x 0.750
13.	710-1652	Tap Screw, 1/4-20, 0.625
14.	710-3005	Hex Screw, 3/8-16 x 1.25
15.	710-3144	Hex Screw, 3/8-16 x 2.00
16.	710-3178	Bolt, Carriage, 3/8-16, 0.75, Gr1
17.	712-0229	Nut, Push, 3/8
18.	712-04063	Nut, Flange Lock, 5/16-18, Nylon
19.	712-04065	Nut, Flange Lock, 3/8-16, Nylon
20.	712-0417A	Nut, Flange, 5/8-18
21.	712-04217	Nut, Flange Lock, 3/8-16
22.	712-05046	Hex Nut, 1/2-13
23.	714-04043	Bow-Tie Cotter Pin
24.	917-04074	Gear, Deck Adjustment
25.	720-05010	Cap, .290 x .500
26.	921-04041	Water Nozzle Adapter
27.	731-07487	Deck Wash Nozzle
28.	732-04909	Spring, Extension, 1.05 X 6.346
29.	732-05149	Torsion Spring, RH
30.	732-05151	Torsion Spring, LH
31.	734-04155	Wheel, Deck, 5.0 Dia Ball
32.	735-0271A	Bumper, .62 Dia X .3
33.	936-0119	Washer, Lock, 5/16, Regular Duty


Ref.	Part Number	Description
34.	936-0226	Washer, Flat, .474 x .879 x .064
35.	736-0371	Washer, Flat, .343 X .880 X .062
36.	736-04183	Flat Washer, .395 x 1.0 x .062
37.	736-3078	Flat Washer, .344 x 1.0 x .063
38.	738-04091A	Shoulder Spacer, .43 x .29, 5/16-18
39.	738-04162C	Shoulder Spacer, .8840 X .190
40.	738-04278	Shoulder Screw, 1/4-20 x 0.50
41.	738-05064	Shoulder Spacer, .854 x .190
42.	738-05088	Shoulder Spacer, .75 x .145
43.	738-0754	Shoulder Screw, .437 Dia. X .54
44.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
45.	942-04290	Blade, Cut, 23.25" 2-In-1, Econ
46.	747-05141A	Rod, Lift, Deck, Medium
47.	747-06232	Brake Rod
48.	748-04069	Pivot Cup, Deck List
49.	748-05029A	Shoulder Spacer, Idler
50.	748-05037	Shoulder Spacer, Pivot Idler
51.	954-04219	Belt, V-Typ, A Sec
52.	756-05034	Pulley, Idler, 4.50" Dia
53.	783-07234	Bracket, Idler, 46" Lh
54.	783-08389	Pulley Cap
55.	783-08530	Deck Idler Bracket
56.	738-1186A	Spindle Shaft, 6.05 LG.
57.	941-0919A	Ball Bearing, .787ID X 1.85 ODX.551
58.	750-04936	Spacer, .792 X 1.060 X 1.860 LG
59.	756-05030	Deck Pulley, 6.74 DIA
60.	631-05191	Chute Deflector Assembly
61.	711-04847B	Hinge Pin
62.	732-04372	Torsion Spring
63.	783-06074A	Chute Bracket
64.	714-04040	Bow-Tie Cotter Pin, 72
65.	732-04652	Spring, Compression, .535 x 1.751
66.	747-1116	Rod, Deck Release

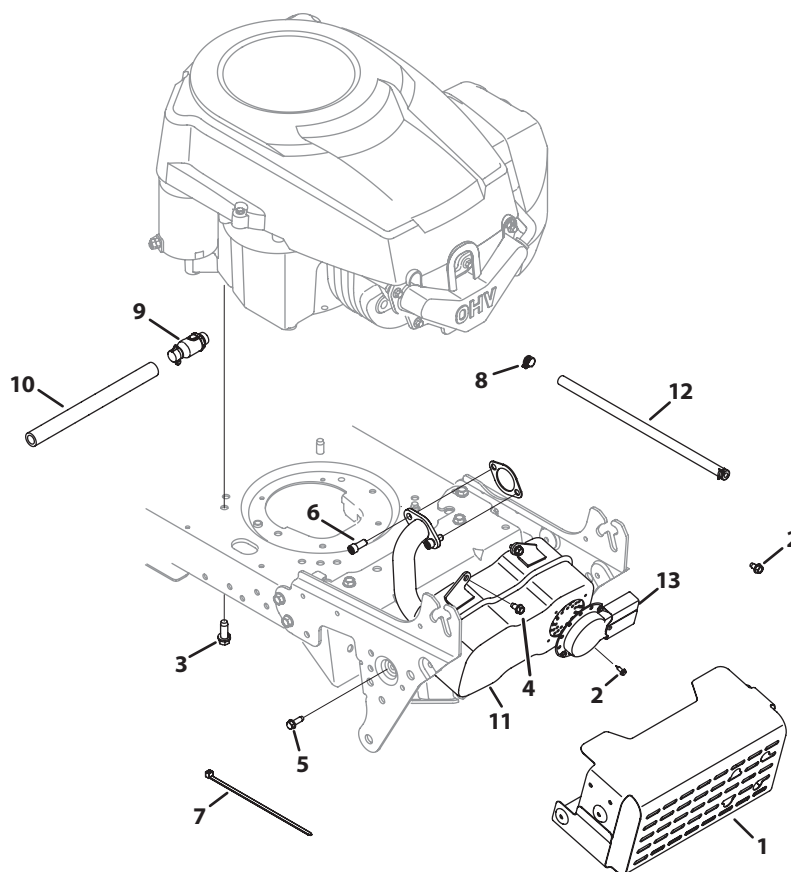


Ref. No.	Part No.	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683A	Screw, 3/8-16 x 1.0
4	710-0599	Screw, 1/4-20 x .500
5	710-0642	Screw, 1/4-20 x .750
6	710-1314A	Socket Screw, 5/16-18 x .750
7	725-0157	Cable Tie
8	726-0205	Clamp Hose, .490 diameter
9	951-10517A	Oil Drain
10	751-3141-14	Oil Drain, Extension Hose
11	751-11943A	Muffler
12	751-10349-28	Fuel Hose, Low Permeation
13	751-11053A	Muffler Deflector Long

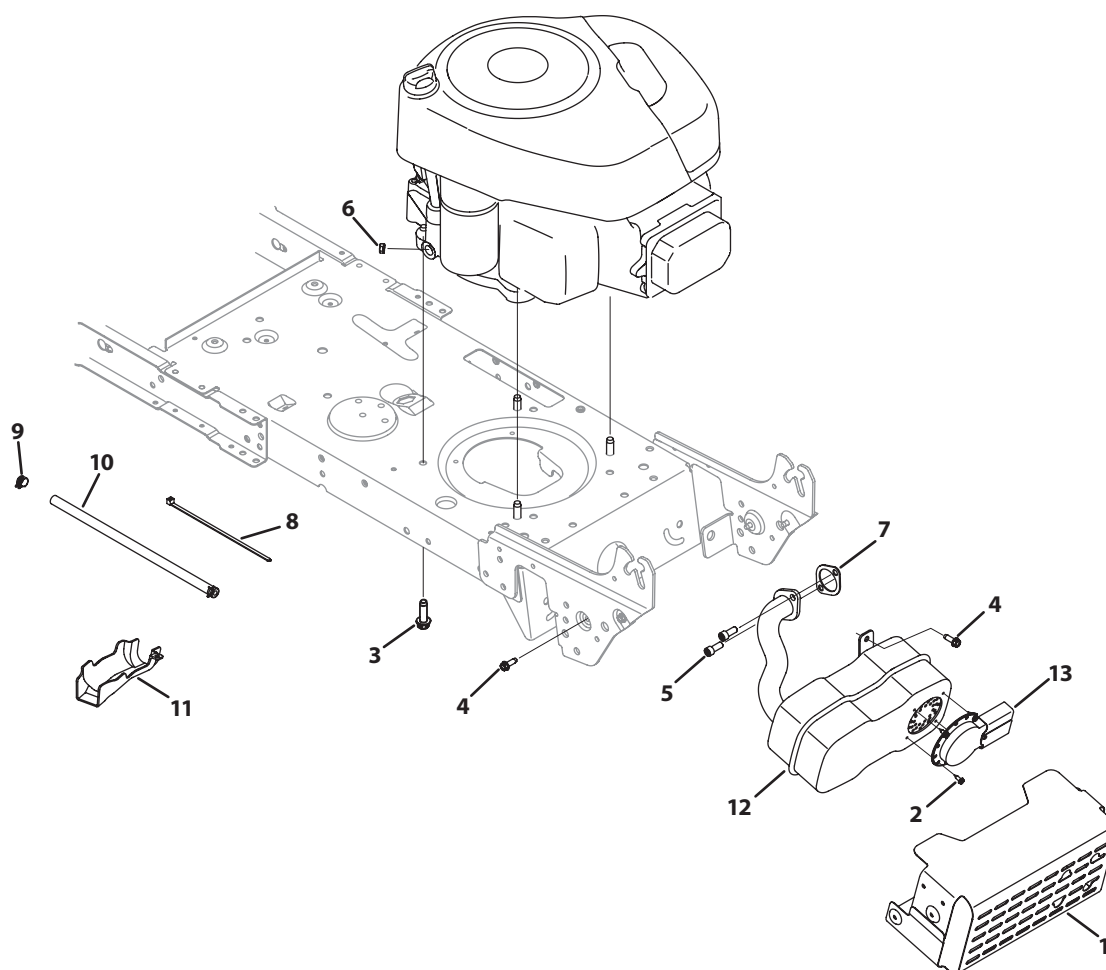

Ref.	Part Number	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683A	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349-28	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	751-10448D	Muffler, Single Inlet
13	751-11053A	Muffler Deflector Long

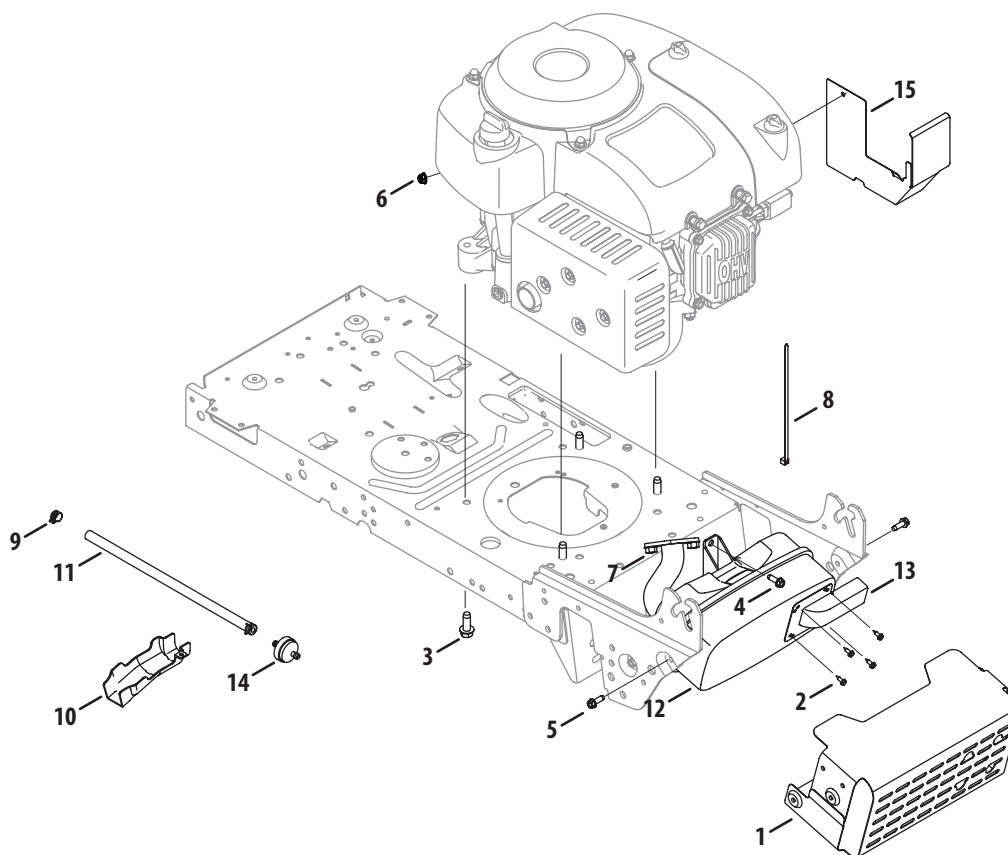

Ref. No.	Part No.	Description
1	683-04549	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683A	Screw, 3/8-16 x 1.0
4	710-0599	Screw, 1/4-20 x .500
5	710-0642	Screw, 1/4-20 x .750
6	912-0691	Nut, Hexlock, M6, Nylon
7	712-3086	Flange Nut, M8-1.25
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	731-05628	Oil Drain Sleeve
11	751-10349-28	Fuel Hose, Low Permeation
12	751-14527	Muffler
13	751-11053A	Muffler Deflector
14	BS-298090S	Fuel Filter
15	783-08122	Deflector Bracket

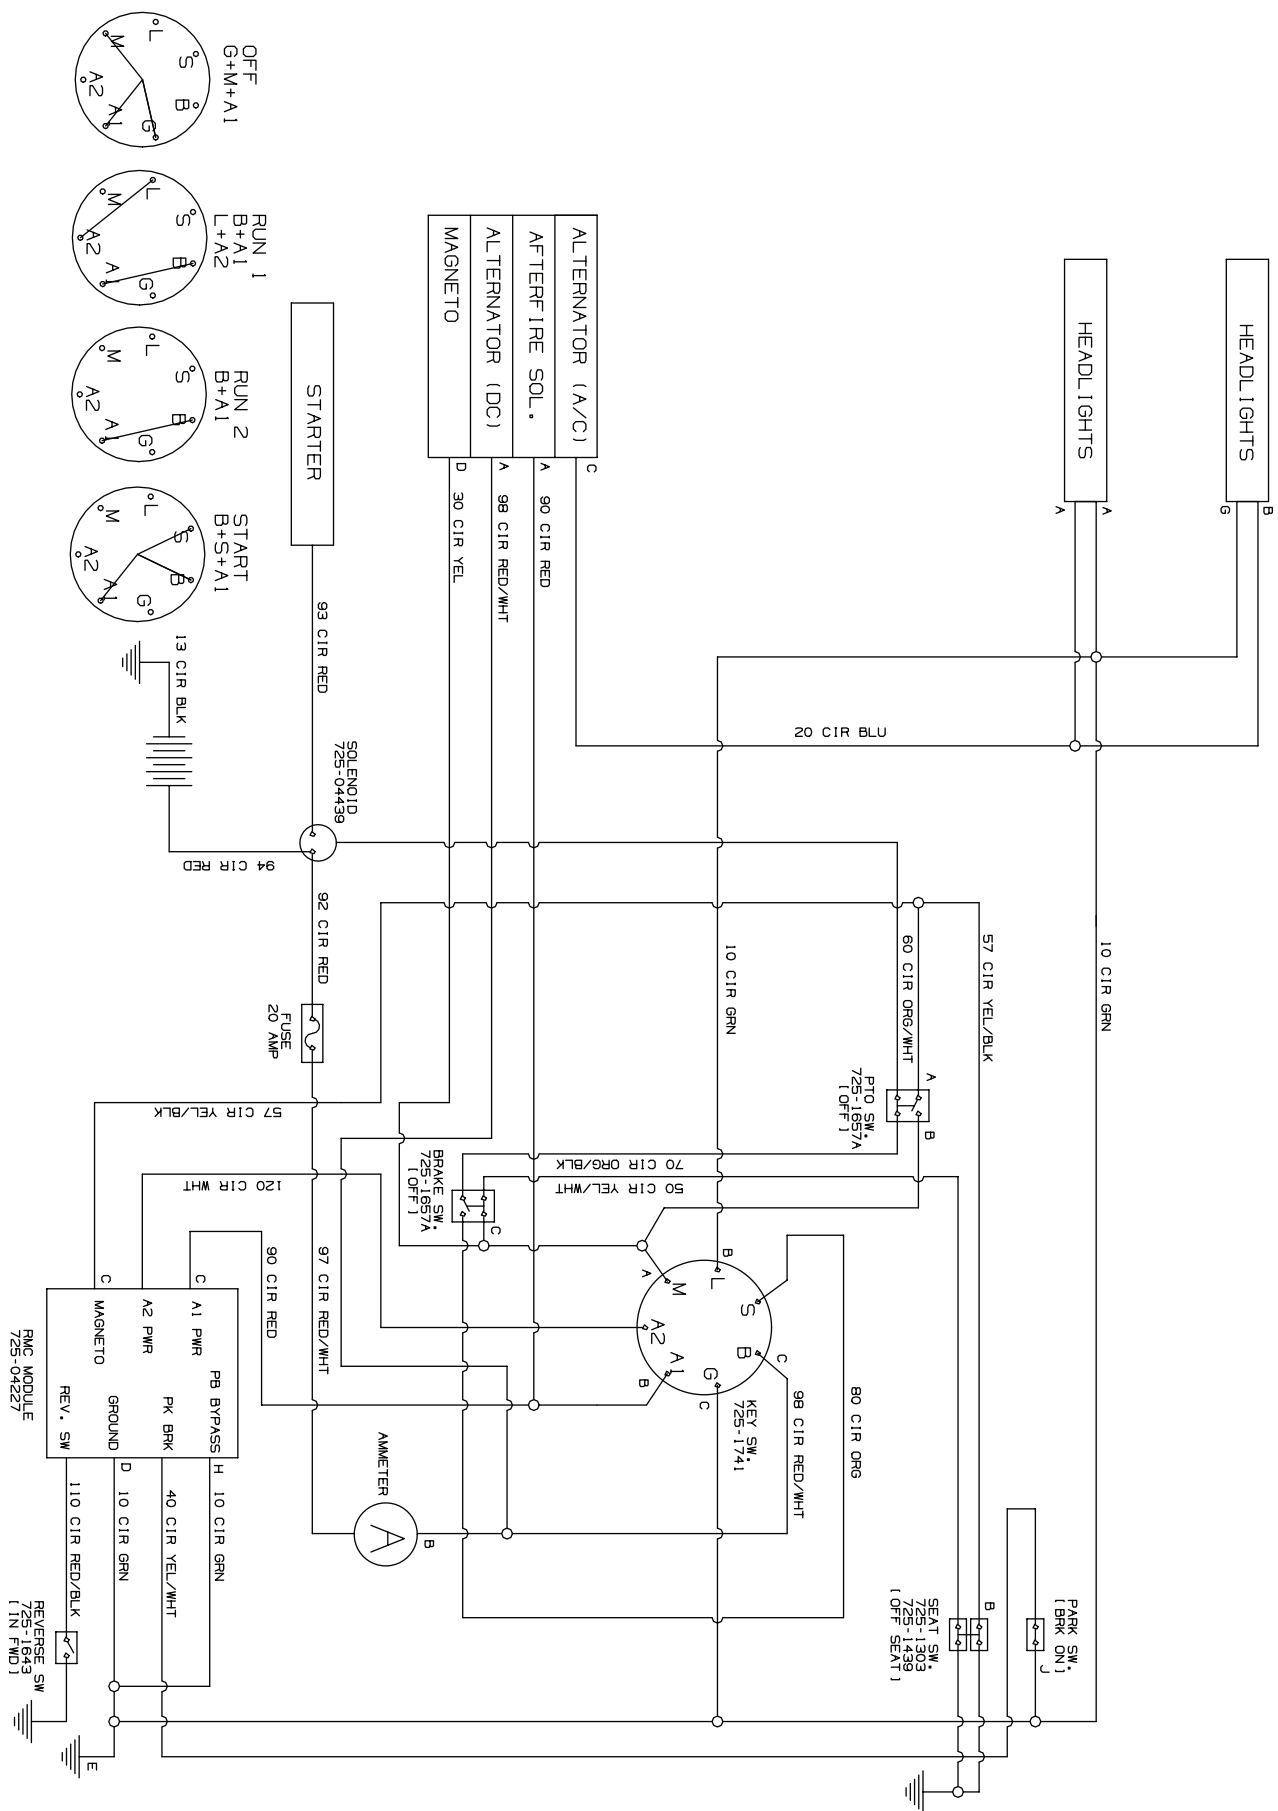

This image shows a blank sheet of white paper designed for taking notes. On the far left, there is a narrow vertical column defined by two thin black lines. The word "Notes" is printed at the top of this column in a bold, black, sans-serif font. The rest of the page is filled with horizontal black lines, providing space for writing.

[illegible]



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
