 




ILLUSTRATED PARTS MANUAL

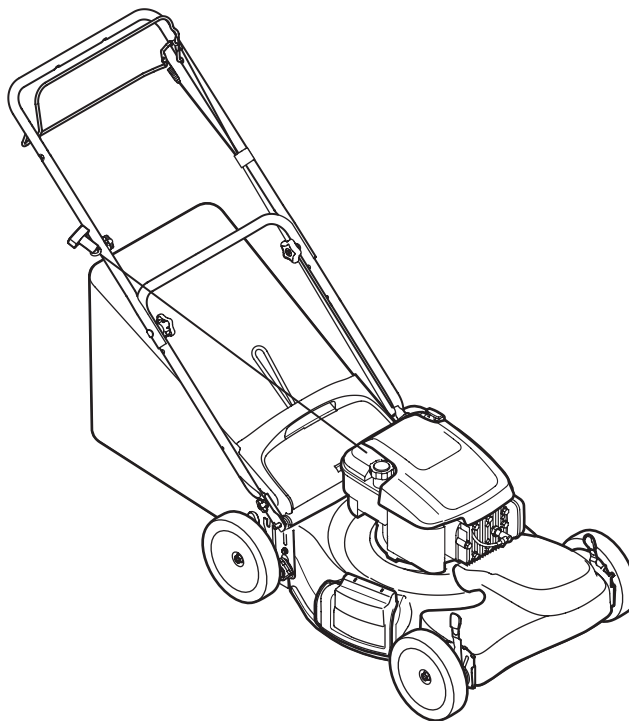

Self-Propelled Mowers

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing an MTD Lawn Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<u>Model TB200 (12A-A2B)</u>	<u>4</u>	<u>Model TB370 (12AKD6B)</u>	<u>16</u>
<u>Model TB220/230/240 (12AVB22/A).....</u>	<u>6</u>	<u>Model TB380ES (12ACC3B)</u>	<u>18</u>
<u>Model TB280 ES (12AGA2B/S).....</u>	<u>8</u>	<u>Engine Model 5X65RU.....</u>	<u>20</u>
<u>Model TB330 (12AKC3A/2)</u>	<u>10</u>	<u>Engine Model 5P71MU.....</u>	<u>30</u>
<u>Model TB360 (12ABD3B)</u>	<u>12</u>	<u>Engine Model 6X65RU.....</u>	<u>36</u>
<u>Model TB370 (12ABD3A)</u>	<u>14</u>		

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

Page Left Blank Intentionally

 Model TB200 (12A-A2B)

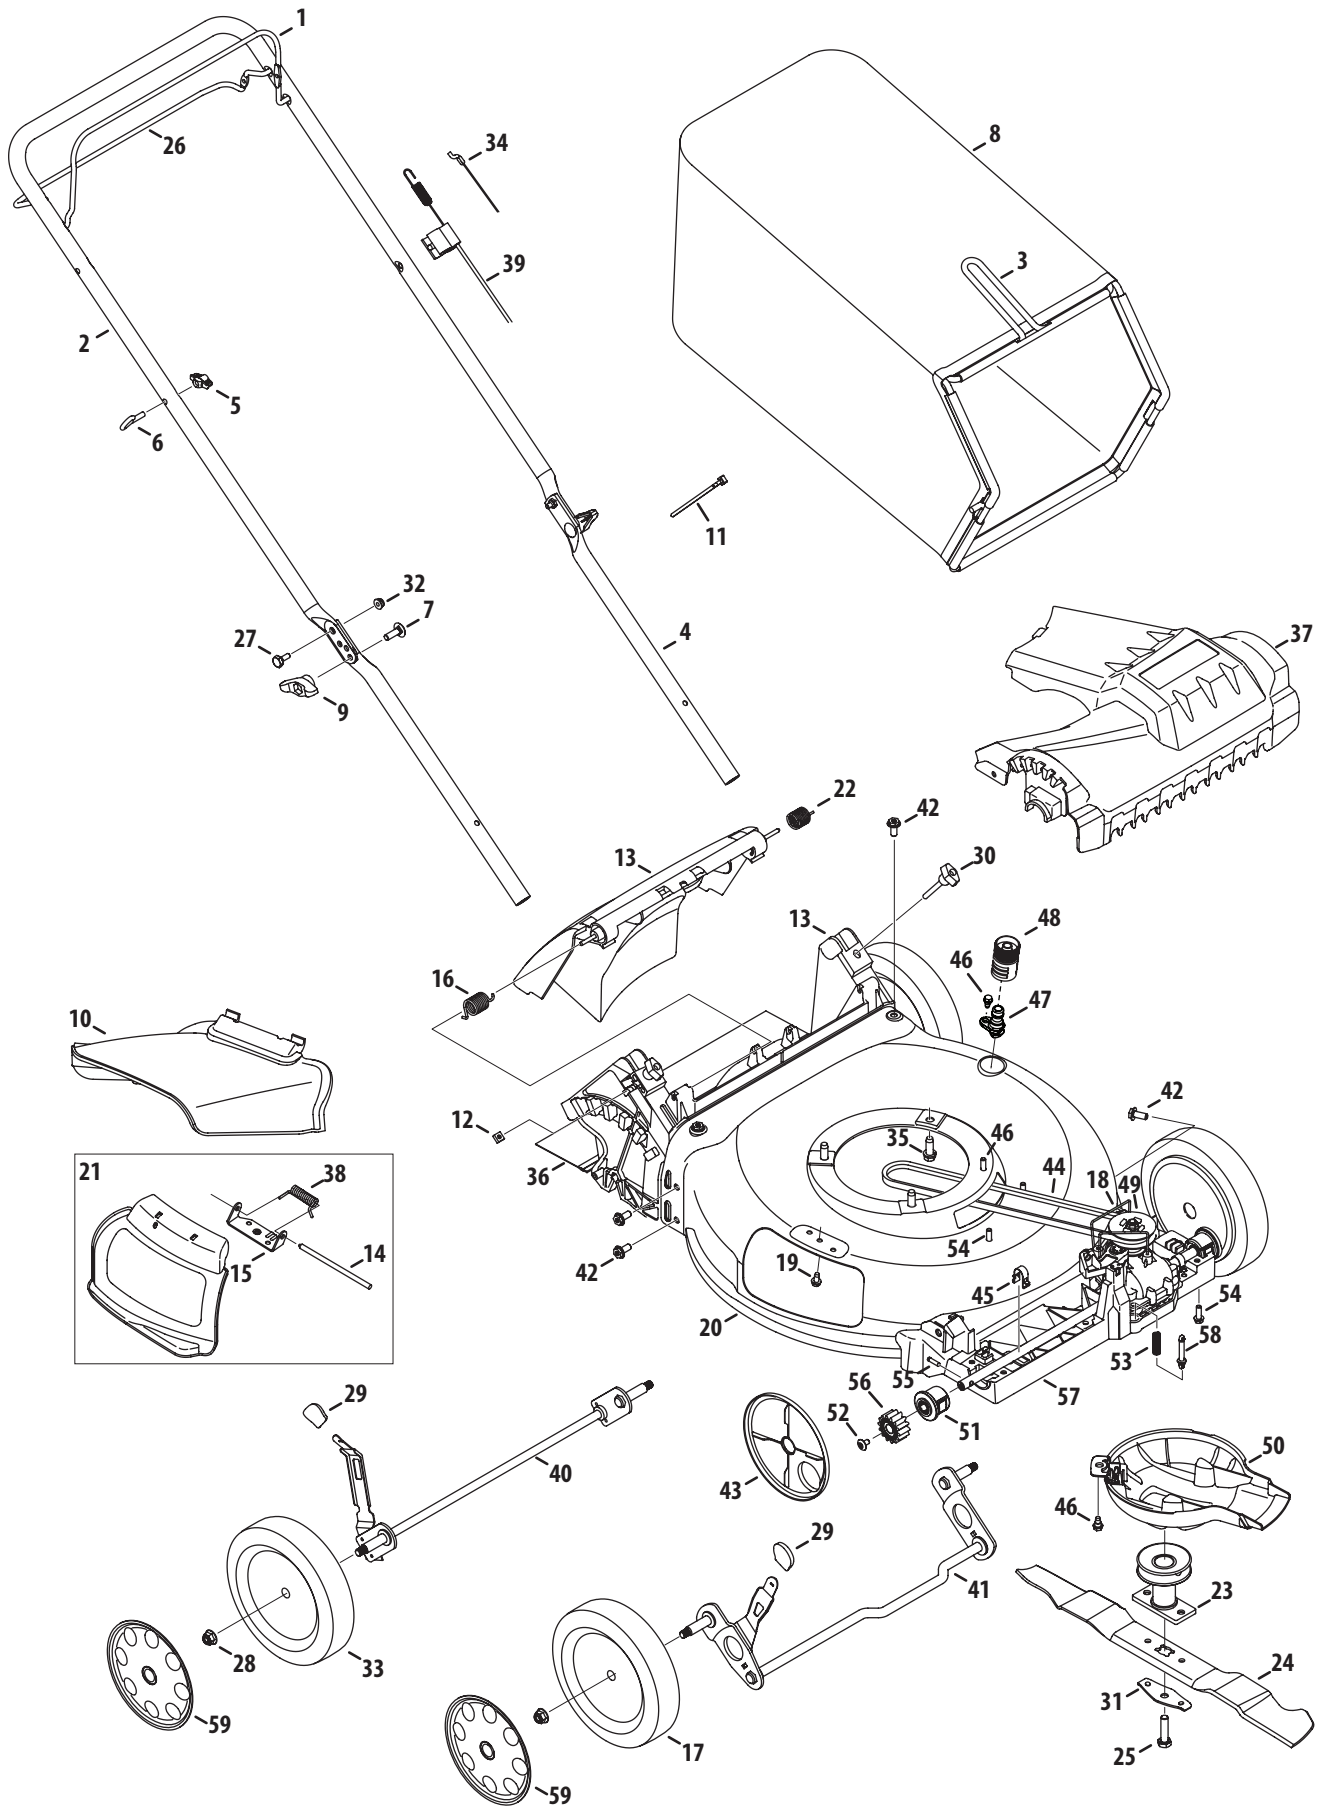


Ref No.	Part Number	Description	Ref No.	Part Number	Description
1	747-05214D	Blade Control	30	720-05066A	Wing Nut
2	749-04681B	Upper Handle	31	736-0524B	Blade Bell Support
3	647-04271	Grass Catcher Frame	32	712-04064	Nut, Flange Lock, 1/4-20
4	749-04608A	Lower Handle	33	634-04660	Rear Wheel
5	720-0279	Wing Nut	34	946-1113A	Control Cable
6	710-1205	Rope Guide	35	710-04683B	TT Sems Screw, 3/8-16 x 1.0
7	710-04998	Carriage Screw ,5/16-18	36	731-07203	Trail Shield
8	964-04117B	Grass Bag	37	731-07790	Front Cover
9	720-04124	Wing Knob	38	732-1014C	Torsion Spring
10	731-07131	Side Chute	39	946-04728	Drive Cable
11	725-0157	Cable Tie	40	911-04142A	Rear Axle Assembly
12	712-04222	Nut, Sq., 1/4-20	41	911-04150	Front Axle Assembly
13	631-04369A	Rear Discharge Door Assembly	42	710-04995A	Screw, 5/16-14 x .750
	631-04371A	Rear Discharge Door Assembly- (Lowes)	43	731-07240A	Wheel Dust Cover
14	747-0710A	Hinge Pin	44	954-04259A	V-Belt
15	787-01779	Chute Deflector Bracket	45	787-01793	Front Axle Clip
16	732-05061A	Torsion Spring - RH	46	738-04502	Shoulder Screw, 1/4-20 x 0.50
17	634-05039	Front Wheel	47	731-07487	Water Nozzle
18	732-04675A	Transmission Wire	48	921-04041	Water Nozzle Adapter
19	710-05073	Screw, 1/4-20 x .500	49	918-04881A	Transmission Assembly
20	787-01872C	Deck , 21"	50	931-04535B	Engine Baffle
21	987-02516A	Hinged Mulch Plug Assembly	51	941-00019	Bearing Assembly
22	732-05062A	Torsion Spring - LH	52	710-04531	Screw, 1/4-20 x .390
23	687-02539	Blade Adapter Assembly	53	732-04704	Compression Spring
24	942-0741A	Mulching Blade	54	710-0895	Screw, 1/4-15 x .750
25	710-1044	Screw , 3/8-24 x 1.50	55	715-04099	Dowel Pin
26	747-05210B	Drive Control	56	917-04801	Spur Gear, 14T - RH
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20		917-04802	Spur Gear, 14T - LH
28	712-04217	Flange Lock Nut, 3/8-16	57	731-07789	Lower Tray
29	720-04131A	Adjustment Lever Knob	58	731-07355	Spring Body
			59	731-07198	Hubcap, 8"

Model TB220/230/240 (12AVB22/A)

Ref No.	Part Number	Description
1	747-05267C	Blade Control
2	749-04679	Upper Handle
3	647-04271	Grass Catcher Frame
4	749-04608A	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117B	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369A	Rear Discharge Door Assembly
	631-04371A	Rear Discharge Door Assembly- (Lowes)
	631-04567A	Door Assembly, International
14	747-0710A	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-05061A	Torsion Spring - RH
17	634-05039	Front Wheel
18	731-07199	Hubcap
19	710-05073	Screw, 1/4-20 x .500
20	787-01872C	Deck , 21"
21	987-02516A	Hinged Mulch Plug Assembly
	987-02584A	Mulch Plug Ass'y, International
22	732-05062A	Torsion Spring - LH
23	687-02528	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	753-06060A	Control Lever Assembly
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131A	Adjustment Lever Knob

Ref No.	Part Number	Description
30	720-05066A	Wing Nut, Black
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	634-05063	Rear Wheel
34	946-04661A	Control Cable
	946-04703A	Control Cable (5X65RU)
35	710-04683B	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07790	Front Cover
38	732-1014C	Torsion Spring
39	946-04655A	Variable Speed Cable
40	911-04144B	Rear Axle Assembly
41	911-04150	Front Axle Assembly
42	710-04995A	Screw, 5/16-14 x .750
43	731-07240A	Wheel Dust Cover
44	954-04260	V-Belt
45	787-01793	Front Axle Clip
46	738-04502	Shoulder Screw, 1/4-20 x 0.50
47	731-07487	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881A	Transmission Assembly
50	931-04535B	Engine Baffle
51	941-00019	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	732-04704	Compression Spring
54	710-0895	Screw, 1/4-15 x .750
55	715-04099	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07789	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	731-07198	Hubcap, 8"

 Model TB280 ES (12AGA2B/S)

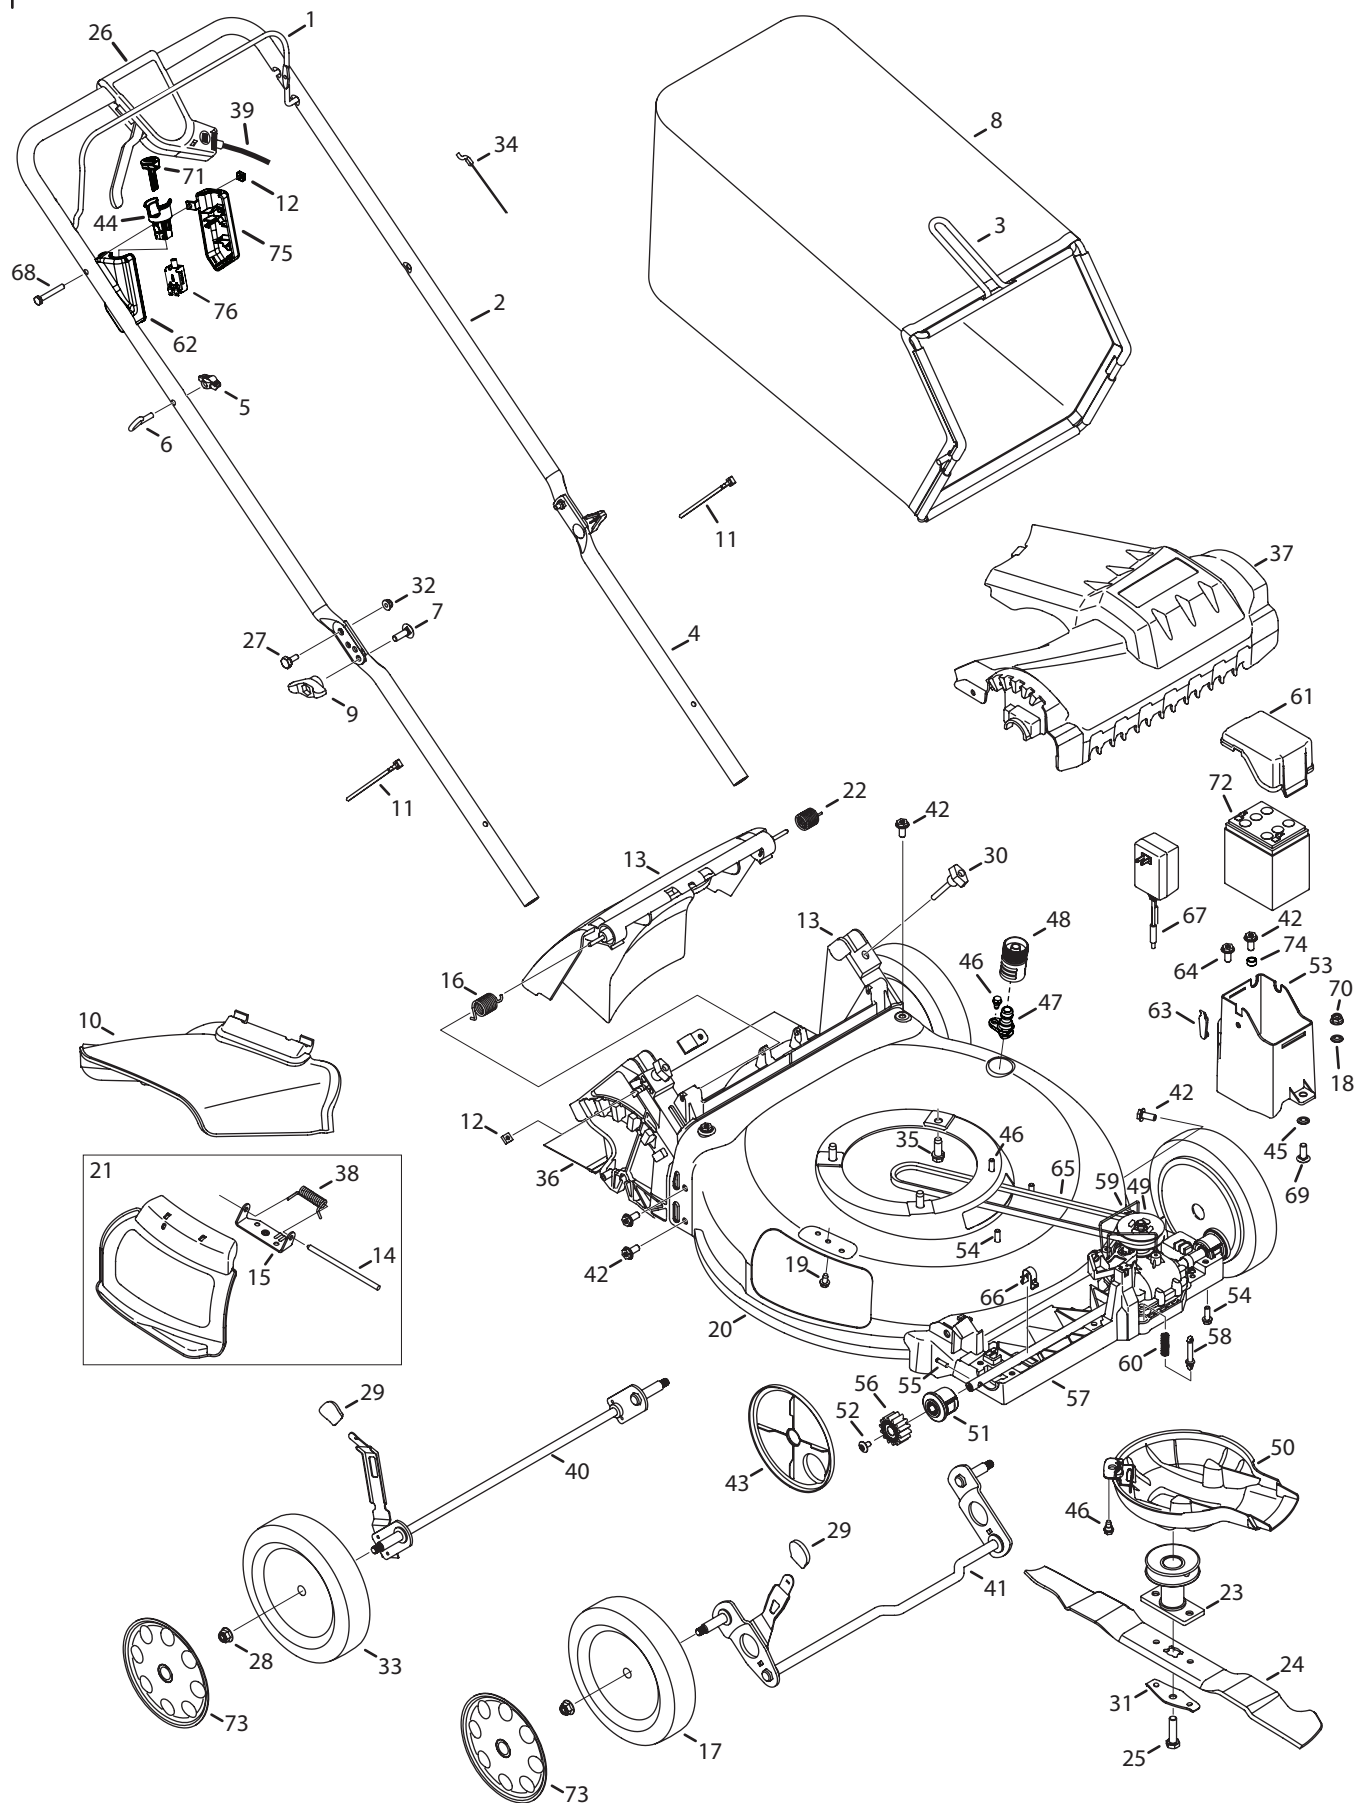


Model TB280 ES (12AGA2B/S)

Ref No.	Part Number	Description
1	747-05267C	Blade Control
2	749-04679	Upper Handle
3	647-04271	Grass Catcher Frame
4	749-04608A	Lower Handle
5	720-0279	Wing Nut
6	710-1205	Rope Guide
7	710-04998	Carriage Screw ,5/16-18
8	964-04117B	Grass Bag
9	720-04124	Wing Knob
10	731-07131	Side Chute
11	725-0157	Cable Tie
12	712-04222	Nut, Sq., 1/4-20
13	631-04369A	Rear Discharge Door Assembly
	631-04371A	Rear Discharge Door Assembly- (Lowes)
14	747-0710A	Hinge Pin
15	787-01779	Chute Deflector Bracket
16	732-05061A	Torsion Spring - RH
17	634-05039	Front Wheel
18	736-0242	Washer, Bell, .340 x .872 x .080
19	710-05073	Screw, 1/4-20 x .500
20	787-01875C	Deck, 21"
21	987-02516A	Hinged Mulch Plug Assembly
22	732-05062A	Torsion Spring - LH
23	687-02528	Blade Adapter Assembly
24	942-0741A	Mulching Blade
25	710-1044	Screw , 3/8-24 x 1.50
26	753-06060A	Control Lever Assembly
27	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
28	712-04217	Flange Lock Nut, 3/8-16
29	720-04131A	Adjustment Lever Knob
30	720-05066A	Wing Nut
31	736-0524B	Blade Bell Support
32	712-04064	Nut, Flange Lock, 1/4-20
33	634-04660	Rear Wheel
34	946-04661A	Control Cable
	946-1130	Control Cable (6X65RU)
35	710-04683B	TT Sems Screw, 3/8-16 x 1.0
36	731-07203	Trail Shield
37	731-07790	Front Cover
38	732-1014C	Torsion Spring

Ref No.	Part Number	Description
39	946-04655A	Drive Cable
40	911-04142A	Rear Axle Assembly
41	911-04150	Front Axle Assembly
42	710-04995A	Screw, 5/16-14 x .750
43	731-07240A	Wheel Dust Cover
44	931-05131A	Key Switch
45	726-0201	Speed Nut
46	738-04502	Shoulder Screw, 1/4-20 x 0.50
47	731-07487	Water Nozzle
48	921-04041	Water Nozzle Adapter
49	918-04881A	Transmission Assembly
50	931-04535B	Engine Baffle
51	941-00019	Bearing Assembly
52	710-04531	Screw, 1/4-20 x .390
53	731-07135	Battery Housing
54	710-0895	Screw, 1/4-15 x .750
55	715-04099	Dowel Pin
56	917-04801	Spur Gear, 14T - RH
	917-04802	Spur Gear, 14T - LH
57	731-07789	Lower Tray
58	731-07355	Spring Body
59	732-04675A	Transmission Wire
60	732-04704	Compression Spring
61	731-07154A	Battery Housing Top
62	731-09753A	Electric Start Housing, RH
63	735-04213B	Lid Seal
64	738-04431A	Scr., Sldr., 5/16-14 x .972
65	954-04260	V-Belt
66	787-01793	Front Axle Clip
67	725-06121A	Battery Charger
68	710-0136	Screw, 1/4-20 x 1.75
69	710-0276	Bolt, Carr., 5/16-18 x 1.00
70	912-0429	Nut, Flgk., 5/16-18
71	731-09728	Key
72	725-04903	Battery
73	731-07198	Hubcap, 8"
74	750-05377	Spacer, .340 x .460 x .246
75	731-09755	Electric Start Housing, LH
76	725-06114	Plunger Switch
—	925-06140B	Wire Harness (Not Shown)
—	725-05106	Fuse (Not Shown)

 
Model TB330 (12AKC3A/2)

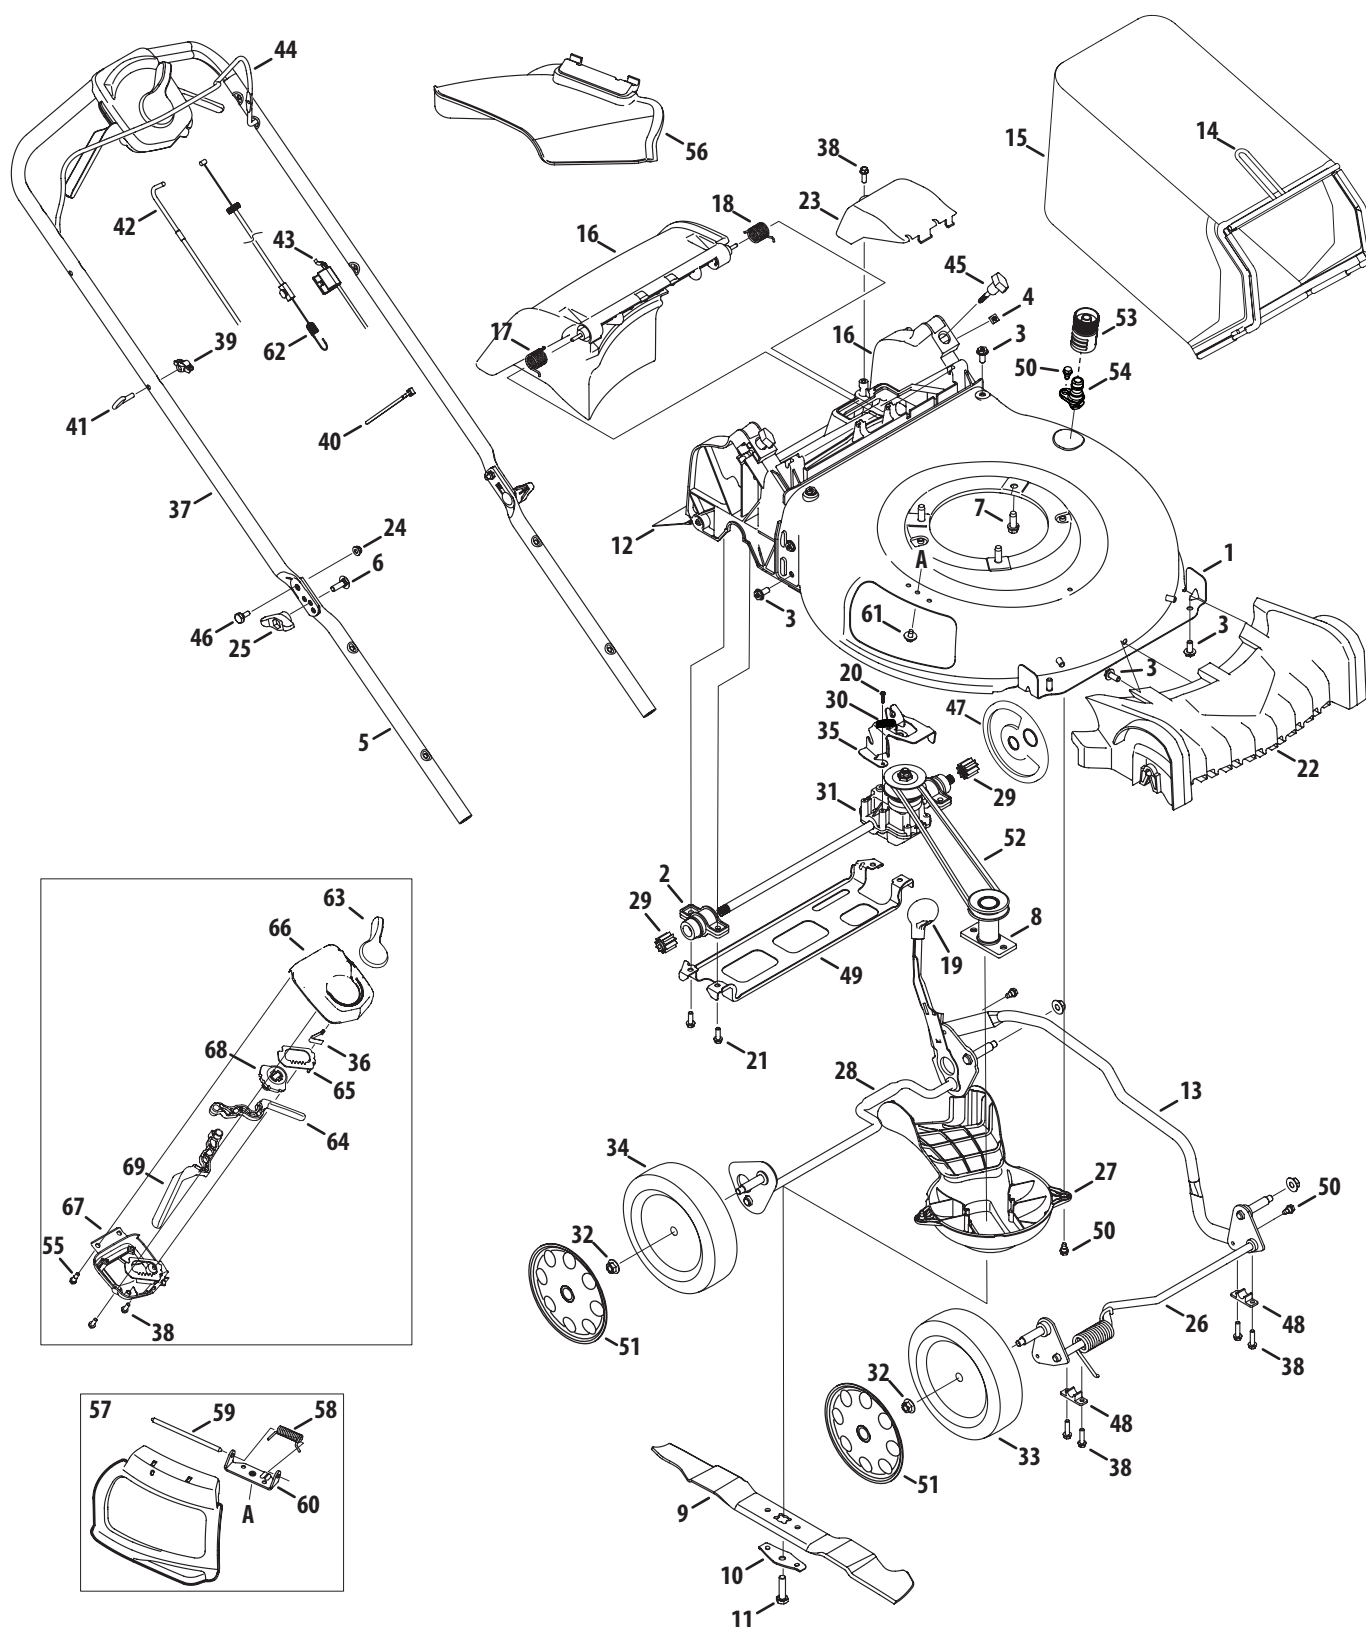

Ref No.	Part Number	Description
1	787-02002B	Deck , 21"
2	631-04501A	Bearing Assembly
3	710-04995A	Screw, 5/16-14 x .750
4	712-04222	Nut, Sq., 1/4-20
5	749-04608A	Lower Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-04683B	Screw, 3/8-16 x 1.00
8	687-02220	Blade Adapter
9	942-0741A	Mulching Blade
10	736-0524B	Blade Bell Support
11	710-1044	Screw, 3/8-24 x 1.50
12	731-07203	Trailing Shield
13	949-04841C	Cross Bracket
14	747-05362A	Grass Catcher Frame
15	964-04150B	Grass Bag
16	631-04553A	Rear Discharge Door Assembly
17	732-05061A	Torsion Spring - RH
18	732-05062A	Torsion Spring - LH
19	720-04113	Adjustment Lever Knob
20	710-04374	Screw, Hex Washer, .159 x .43
21	710-04774	Screw, 1/4-15 x 1.25
22	931-10334	Front Cover
23	731-07799	Transmission Cover
24	712-04064	Nut, Flange Lock, 1/4-20
25	720-04124	Wing Knob
26	911-04190A	Front Axle Assembly
27	631-04512C	Engine Baffle
28	911-04189	Rear Axle Assembly
29	917-04852	Spur Gear, 10T
30	732-04826A	Exten. Spring, 2.405
31	918-06000	Transmission Assembly
32	712-04217	Flange Lock Nut, 3/8-16
33	634-04660	Front Wheel
34	934-05042	Rear Wheel
35	787-01868A	Transmission Bracket

Ref No.	Part Number	Description
36	732-04937	Spring
37	749-04701A	Upper Handle
38	710-0895	Screw, 1/4-15 x .750
39	720-0279	Knob
40	725-0157	Cable Tie
41	710-1205	Rope Guide
42	946-04729	Speed Adjustment Cable
43	946-04661A	Control Cable
	946-1137	Control Cable (5P71MU)
44	747-05463A	Blade Control
45	720-05066A	Wing Nut
46	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
47	731-07795	Wheel Dust Cover
48	741-0492A	Bushing, Lock, .505 Dia. X .62
49	787-01915A	Rear Support Bracket
50	738-04502	Shoulder Screw, 1/4-20 x 0.50
51	731-07198	Hubcap, 8"
52	954-04282	V-Belt
53	921-04041	Water Nozzle Adapter
54	731-07487	Water Nozzle
55	710-05204	Scr., Shldr, 1/4-15 x .970
56	731-07131	Side Discharge Chute
57	987-02516A	Mulch Plug (Incl. 58-60)
58	732-1014C	Torsion Spring
59	747-0710A	Hinge Pin
60	787-01779	Chute Deflector Bracket
61	710-05073	Screw, 1/4-20 x .500
62	946-04816	Drive Cable
63	731-07767A	Speed Select Lever
64	731-07766	Control Lever LH
65	787-01851	Cable Adjust Plate
66	731-08750	Upper Housing
67	731-07764A	Lower Housing
68	731-07804	Speed Adjust Actuator
69	731-08759	Control Lever RH

 Model TB360 (12ABD3B)

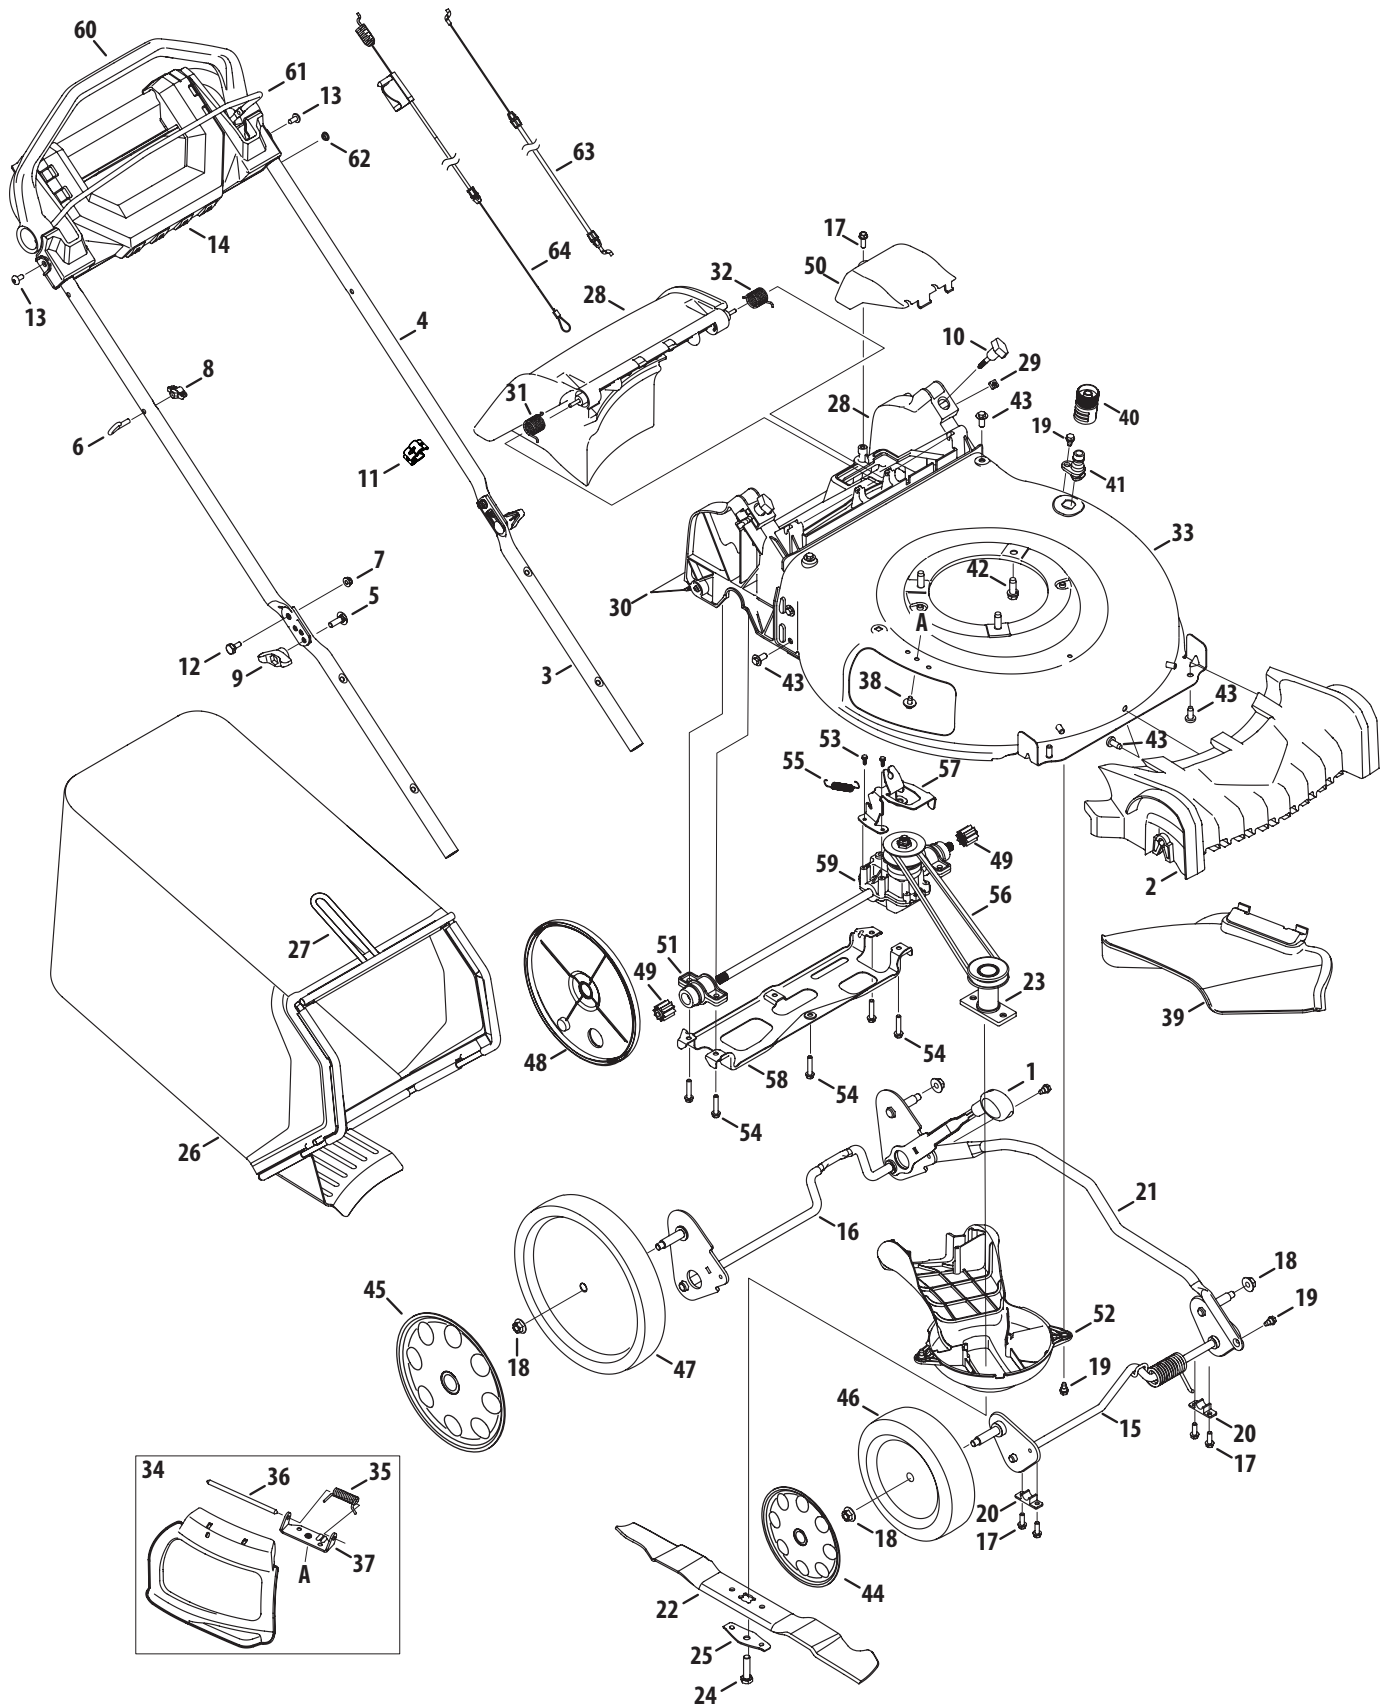


Model TB360 (12ABD3B)

Ref No.	Part Number	Description
1	720-04113	Adjustment Lever Knob
2	931-10334	Front Cover
3	749-04608A	Lower Handle
4	749-05084	Upper Handle
5	710-04998	Carriage Screw ,5/16-18
6	710-1205	Rope Guide
7	712-04064	Nut, Flange Lock, 1/4-20
8	720-0279	Knob
9	720-04124	Wing Knob
10	720-05066A	Wing Nut
11	731-08454	Conduit Clip
12	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
13	710-1017	Screw, 1/4-14 x .625
14	931-09823	Handle Console
15	911-04191A	Front Axle Assembly
16	911-04192	Rear Axle Assembly
17	710-0895	Screw, 1/4-15 x .750
18	712-04217	Flange Lock Nut, 3/8-16
19	738-04502	Shoulder Screw, 1/4-20 x 0.50
20	741-0492A	Bushing, Lock, .505 Dia. X .62
21	949-04840B	Cross Bracket
22	942-0741A	Mulching Blade
23	687-02220	Blade Adapter
24	710-1044	Screw, 3/8-24 x 1.50
25	736-0524B	Blade Bell Support
26	964-04150B	Grass Bag
27	747-05362A	Grass Catcher Frame
28	631-04514A	Rear Discharge Door Assembly
29	712-04222	Nut, Sq., 1/4-20
30	731-07203	Trailing Shield
31	732-05061A	Torsion Spring - RH
32	732-05062A	Torsion Spring - LH

Ref No.	Part Number	Description
33	787-02002A	Deck , 21"
34	987-02516A	Mulch Plug (Incl. 35-37)
35	732-1014C	Torsion Spring
36	747-0710A	Hinge Pin
37	787-01779	Chute Deflector Bracket
38	710-05073	Screw, 1/4-20 x .500
39	731-07131	Side Discharge Chute
40	921-04041	Water Nozzle Adapter
41	731-07487	Water Nozzle
42	710-04683B	Screw, 3/8-16 x 1.00
43	710-04995A	Screw, 5/16-14 x .750
44	731-07198	Hubcap, 8"
45	731-07199	Hubcap, 11"
46	634-04660	Front Wheel
47	934-04666	Rear Wheel
48	731-07731C	Wheel Dust Cover
49	917-04849	Spur Gear, 9T
50	731-08175	Transmission Cover
51	631-04501A	Bearing Assembly
52	631-04512C	Engine Baffle
53	710-04374	Screw, Hex Washer, .159 x .43
54	710-04774	Screw, 1/4-15 x 1.25
55	732-05150A	Exten. Spring, 2.405
56	954-04282	V-Belt
57	787-01868A	Transmission Bracket
58	787-01915A	Rear Support Bracket
59	918-07000	Transmission Assembly
60	731-09730	Drive Handle
61	747-06243	Blade Control
62	748-05047	Shoulder Spacer, .18 x .315 x .09
63	946-05107A	Control Cable
64	946-05121A	Drive Cable

 Model TB370 (12ABD3A)

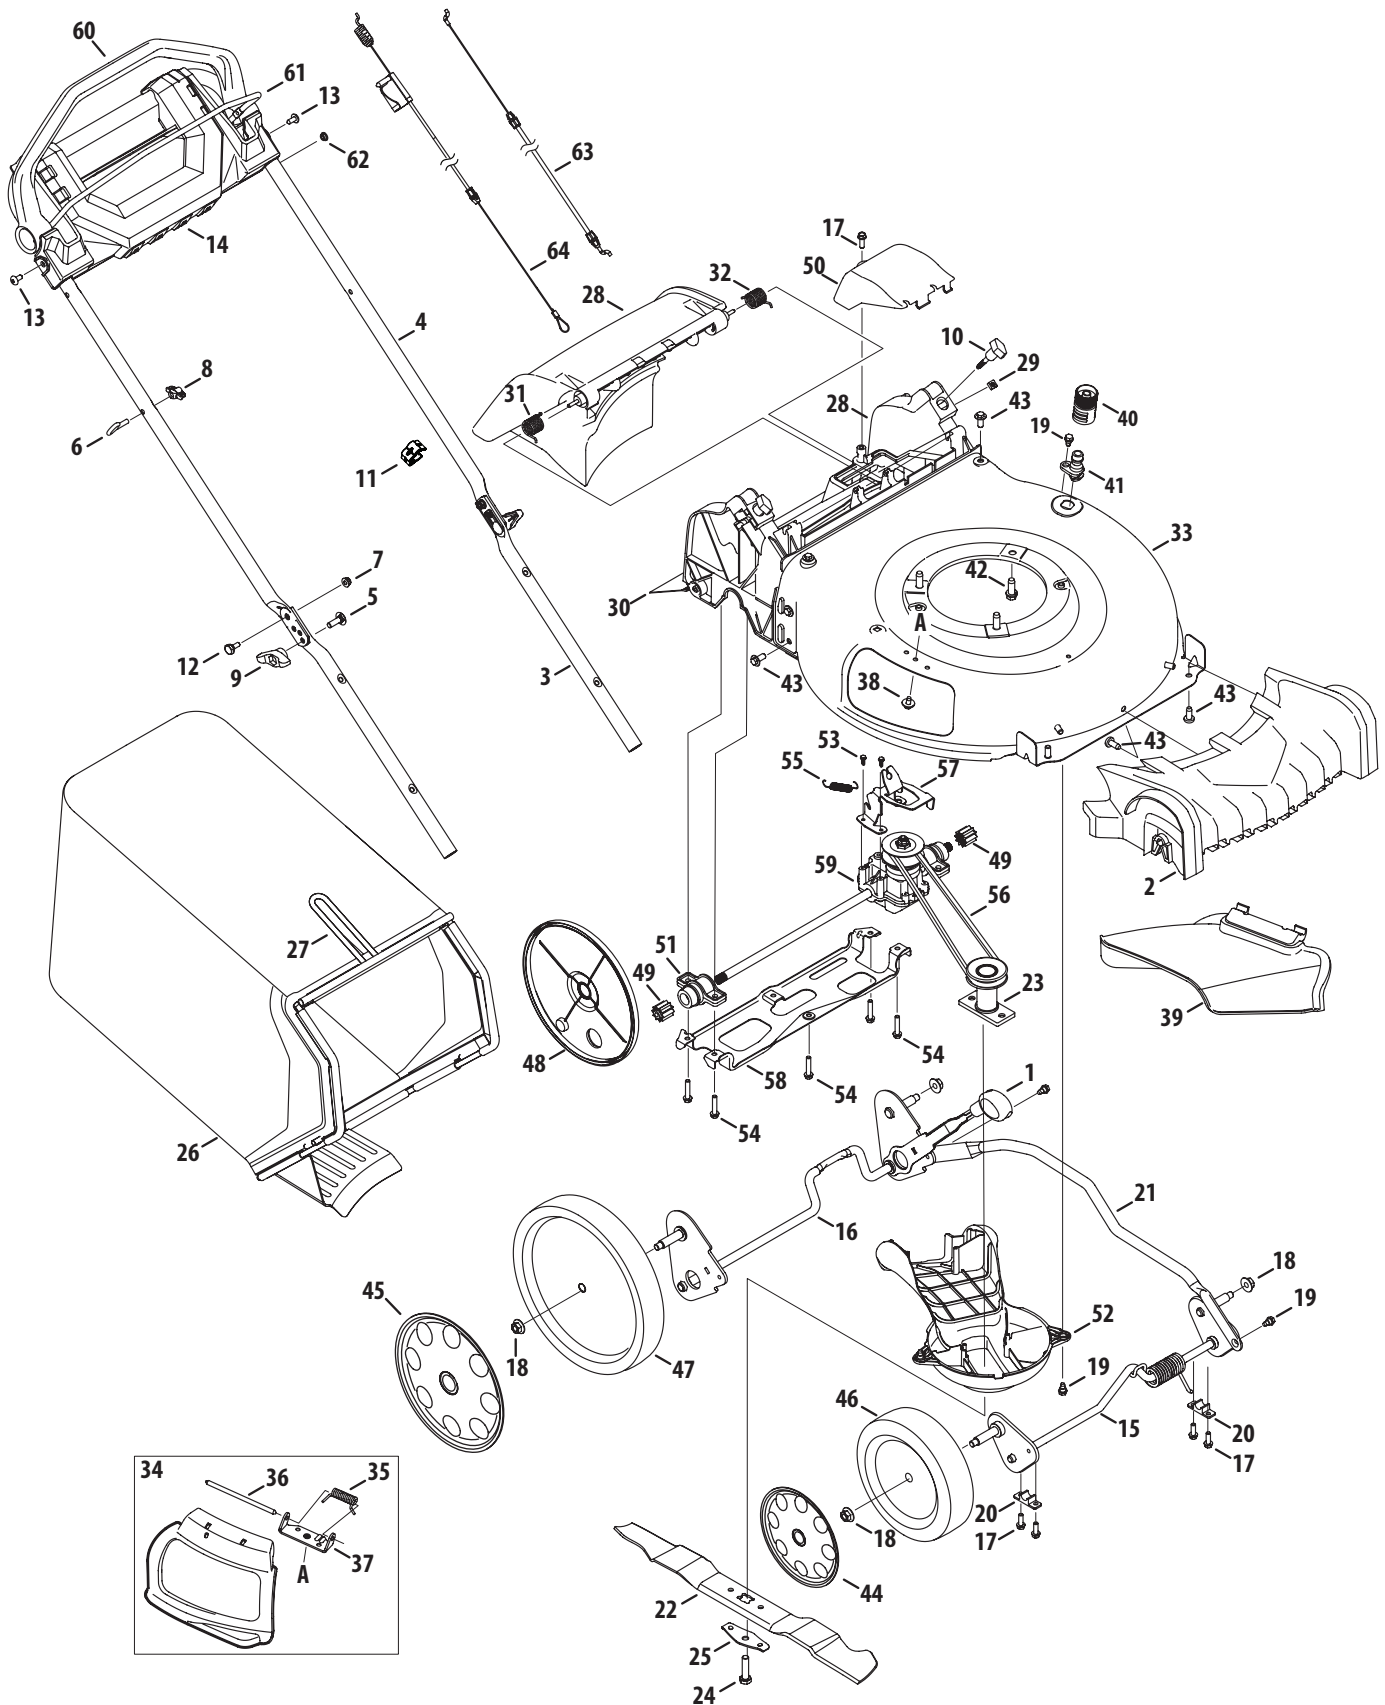


Model TB370 (12ABD3A)

Ref No.	Part Number	Description
1	720-04113	Adjustment Lever Knob
2	931-10334	Front Cover
3	749-04608A	Lower Handle
4	749-05084	Upper Handle
5	710-04998	Carriage Screw ,5/16-18
6	710-1205	Rope Guide
7	712-04064	Nut, Flange Lock, 1/4-20
8	720-0279	Knob
9	720-04124	Wing Knob
10	720-05066A	Wing Nut
11	731-08454	Conduit Clip
12	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
13	710-1017	Screw, 1/4-14 x .625
14	931-09823	Handle Console
15	911-04191A	Front Axle Assembly
16	911-04192	Rear Axle Assembly
17	710-0895	Screw, 1/4-15 x .750
18	712-04217	Flange Lock Nut, 3/8-16
19	738-04502	Shoulder Screw, 1/4-20 x 0.50
20	741-0492A	Bushing, Lock, .505 Dia. X .62
21	949-04840B	Cross Bracket
22	942-0741A	Mulching Blade
23	687-02220	Blade Adapter
24	710-1044	Screw, 3/8-24 x 1.50
25	736-0524B	Blade Bell Support
26	964-04150B	Grass Bag
27	747-05362A	Grass Catcher Frame
28	631-04553A	Rear Discharge Door Assembly
29	712-04222	Nut, Sq., 1/4-20
30	731-07203	Trailing Shield
31	732-05061A	Torsion Spring - RH
32	732-05062A	Torsion Spring - LH

Ref No.	Part Number	Description
33	787-02002B	Deck, 21"
34	987-02516A	Mulch Plug (Incl. 35-37)
35	732-1014C	Torsion Spring
36	747-0710A	Hinge Pin
37	787-01779	Chute Deflector Bracket
38	710-05073	Screw, 1/4-20 x .500
39	731-07131	Side Discharge Chute
40	921-04041	Water Nozzle Adapter
41	731-07487	Water Nozzle
42	710-04683B	Screw, 3/8-16 x 1.00
43	710-04995A	Screw, 5/16-14 x .750
44	731-07198	Hubcap, 8"
45	731-07199	Hubcap, 11"
46	634-04660	Front Wheel
47	934-04666	Rear Wheel
48	731-07731C	Wheel Dust Cover
49	917-04849	Spur Gear, 9T
50	731-08175	Transmission Cover
51	631-04501A	Bearing Assembly
52	631-04512C	Engine Baffle
53	710-04374	Screw, Hex Washer, .159 x .43
54	710-04774	Screw, 1/4-15 x 1.25
55	732-05150A	Exten. Spring, 2.405
56	954-04282	V-Belt
57	787-01868A	Transmission Bracket
58	787-01915A	Rear Support Bracket
59	918-07000	Transmission Assembly
60	731-09730	Drive Handle
61	747-06243	Blade Control
62	748-05047	Shoulder Spacer, .18 x .315 x .09
63	946-05107A	Control Cable
64	946-05121A	Drive Cable

 Model TB370 (12AKD6B)

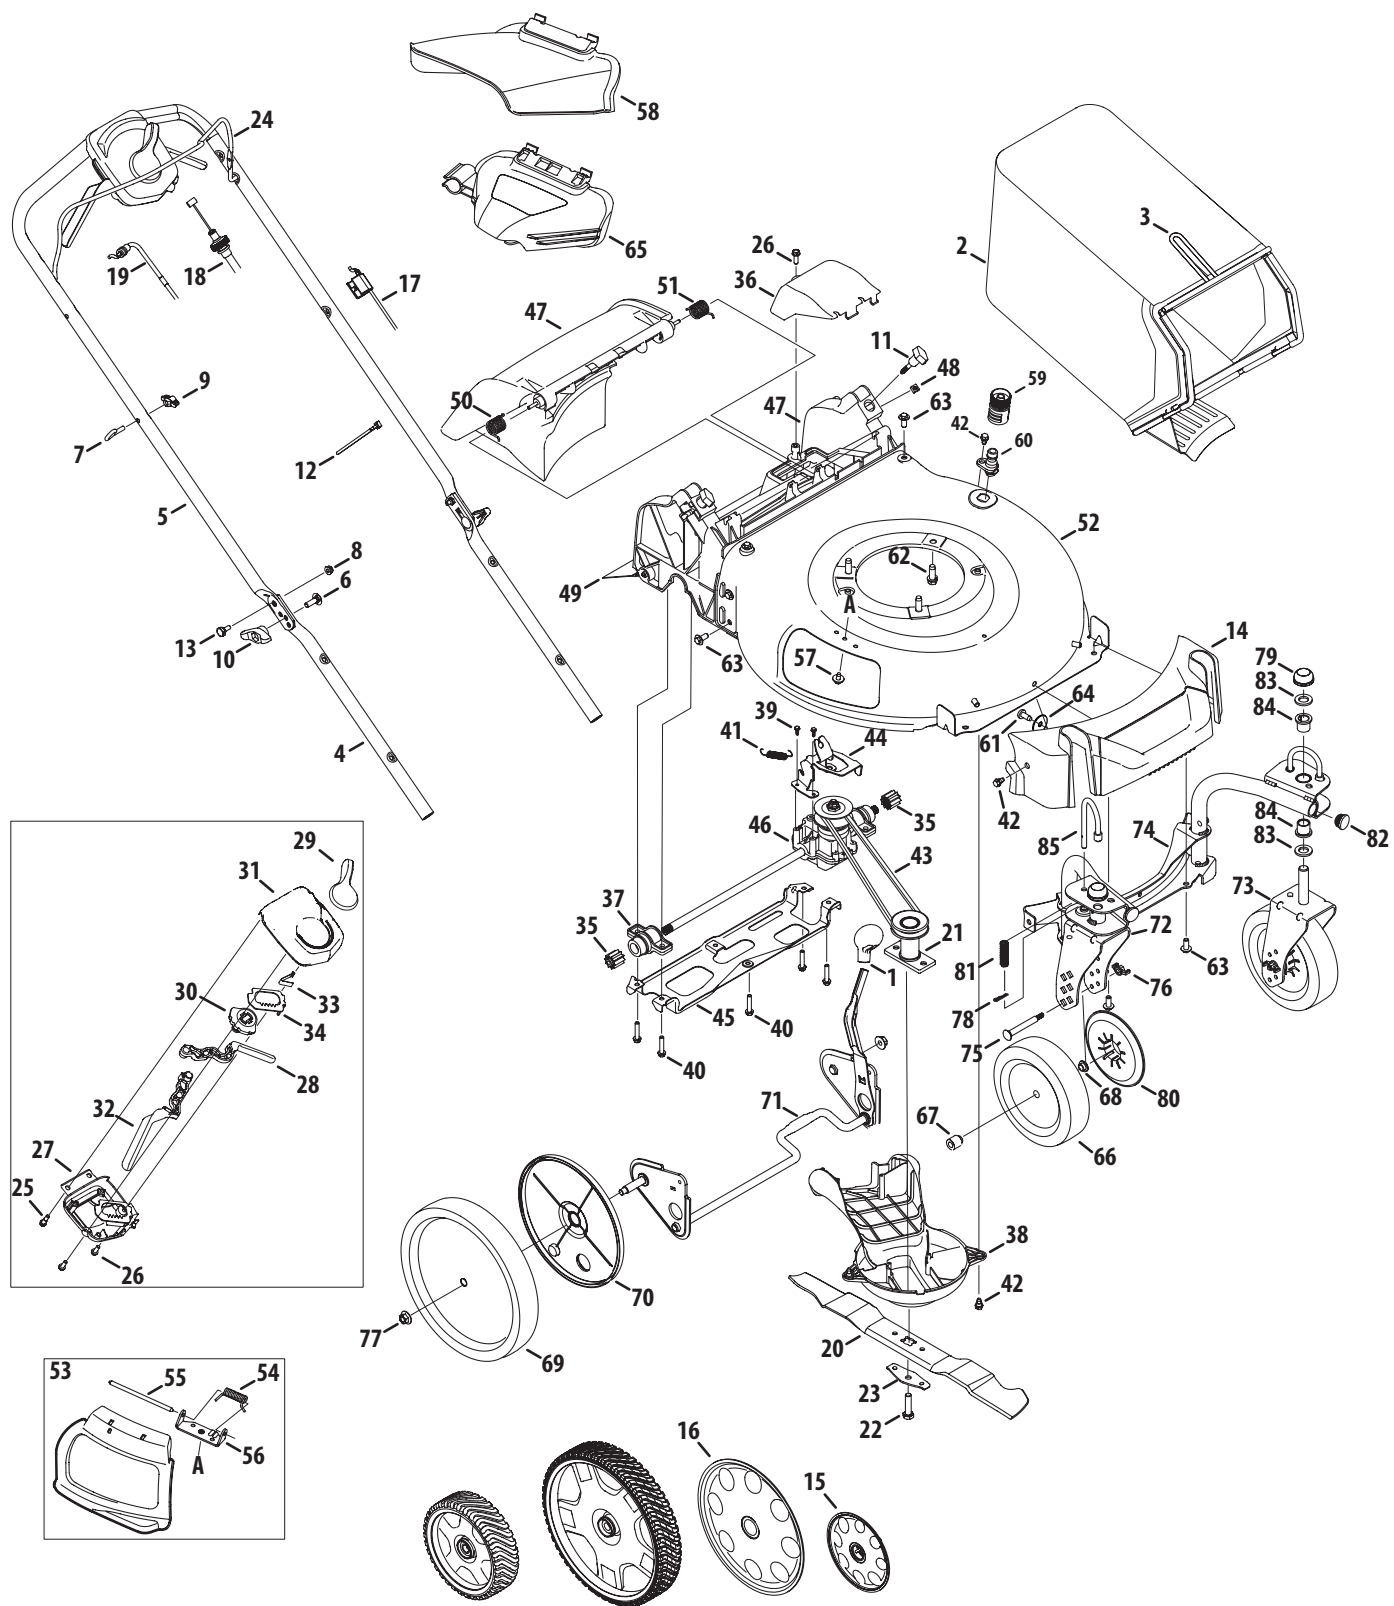


Model TB370 (12AKD6B)

Ref No.	Part Number	Description
1	720-04113	Adjustment Lever Knob
2	964-04141B	Grass Bag
3	747-05362A	Grass Catcher Frame
4	749-04608A	Lower Handle
5	749-04701A	Upper Handle
6	710-04998	Carriage Screw ,5/16-18
7	710-1205	Rope Guide
8	712-04064	Nut, Flange Lock, 1/4-20
9	720-0279	Knob
10	720-04124	Wing Knob
11	720-05066A	Wing Nut
12	725-0157	Cable Tie
13	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
14	731-11064	Front Cover
15	731-10826	Hubcap, 7"
16	731-07199	Hubcap, 11"
17	946-04661A	Control Cable
18	946-04816	Drive Cable
19	946-04729	Speed Adjustment Cable
20	942-0741A	Mulching Blade
21	687-02220	Blade Adapter
22	710-1044	Screw, 3/8-24 x 1.50
23	736-0524B	Blade Bell Support
24	747-05463A	Blade Control
25	710-05204	Scr., Shldr, 1/4-15 x .970
26	710-0895	Screw, 1/4-15 x .750
27	731-07764A	Lower Housing
28	731-07766	Control Lever LH
29	731-07767A	Speed Select Lever
30	731-07804	Speed Adjust Actuator
31	731-08750	Upper Housing
32	731-08759	Control Lever RH
33	732-04937	Spring
34	787-01851	Cable Adjust Plate
35	917-04849	Spur Gear, 9T
36	731-07799	Transmission Cover
37	631-04501A	Bearing Assembly
38	631-04512C	Engine Baffle
39	710-04374	Screw, Hex Washer, .159 x .43
40	710-04774	Screw, 1/4-15 x 1.25
41	732-04826A	Exten. Spring, 2.405
42	738-04502	Shoulder Screw, 1/4-20 x 0.50
43	954-04282	V-Belt

Ref No.	Part Number	Description
44	787-01868A	Transmission Bracket
45	787-01915A	Rear Support Bracket
46	918-06000	Transmission Assembly
47	631-04514A	Rear Discharge Door Assembly
48	712-04222	Nut, Sq., 1/4-20
49	731-07203	Trailing Shield
50	732-05061A	Torsion Spring - RH
51	732-05062A	Torsion Spring - LH
52	687-05086	Deck, 21"
53	987-02516A	Mulch Plug (Incl. 54-56)
54	732-1014C	Torsion Spring
55	747-0710A	Hinge Pin
56	787-01779	Chute Deflector Bracket
57	710-05073	Screw, 1/4-20 x .500
58	731-07131	Side Discharge Chute
59	921-04041	Water Nozzle Adapter
60	731-07487	Water Nozzle
61	710-04484	Self Tapping Screw, 5/16-18 x .750
62	710-04683B	Screw, 3/8-16 x 1.00
63	710-04995A	Screw, 5/16-14 x .750
64	736-0362	Washer, Flat, .330 x 1.25 x .06
65	731-08945	Chute Blower
66	634-04606	Front Wheel, 7 x 2
67	750-06036	Caster Hub, Long
68	750-06065	Caster Hub, Short
69	934-04666	Rear Wheel
70	731-07731C	Wheel Dust Cover
71	911-04192	Rear Axle Assembly
72	682-9024	Caster Bracket Assembly, RH
73	682-9026	Caster Bracket Assembly, LH
74	687-05033	Caster Bracket Assembly
75	911-1146	Caster Axle, .374 Dia. x 2.59
76	712-0397A	Wing Nut, 1/4-20 w/Bell Washer
77	712-04217	Flange Lock Nut, 3/8-16
78	914-0104	Cotter Pin, .072 Dia. x 1.13 Lg.
79	726-0214	Push Cap, 5/8
80	731-09479	Dust Cover, 7"
81	932-0306A	Compr. Sprng., .531 OD x 1.75 Lg
82	735-0246A	Plug
83	736-0366	Flat Washer, .640 x 1.12 x .125
84	741-0685	Flange Bearing, .631 ID
85	747-0924	Lock Pin: Front Wheel

 Model TB380ES (12ACC3B)

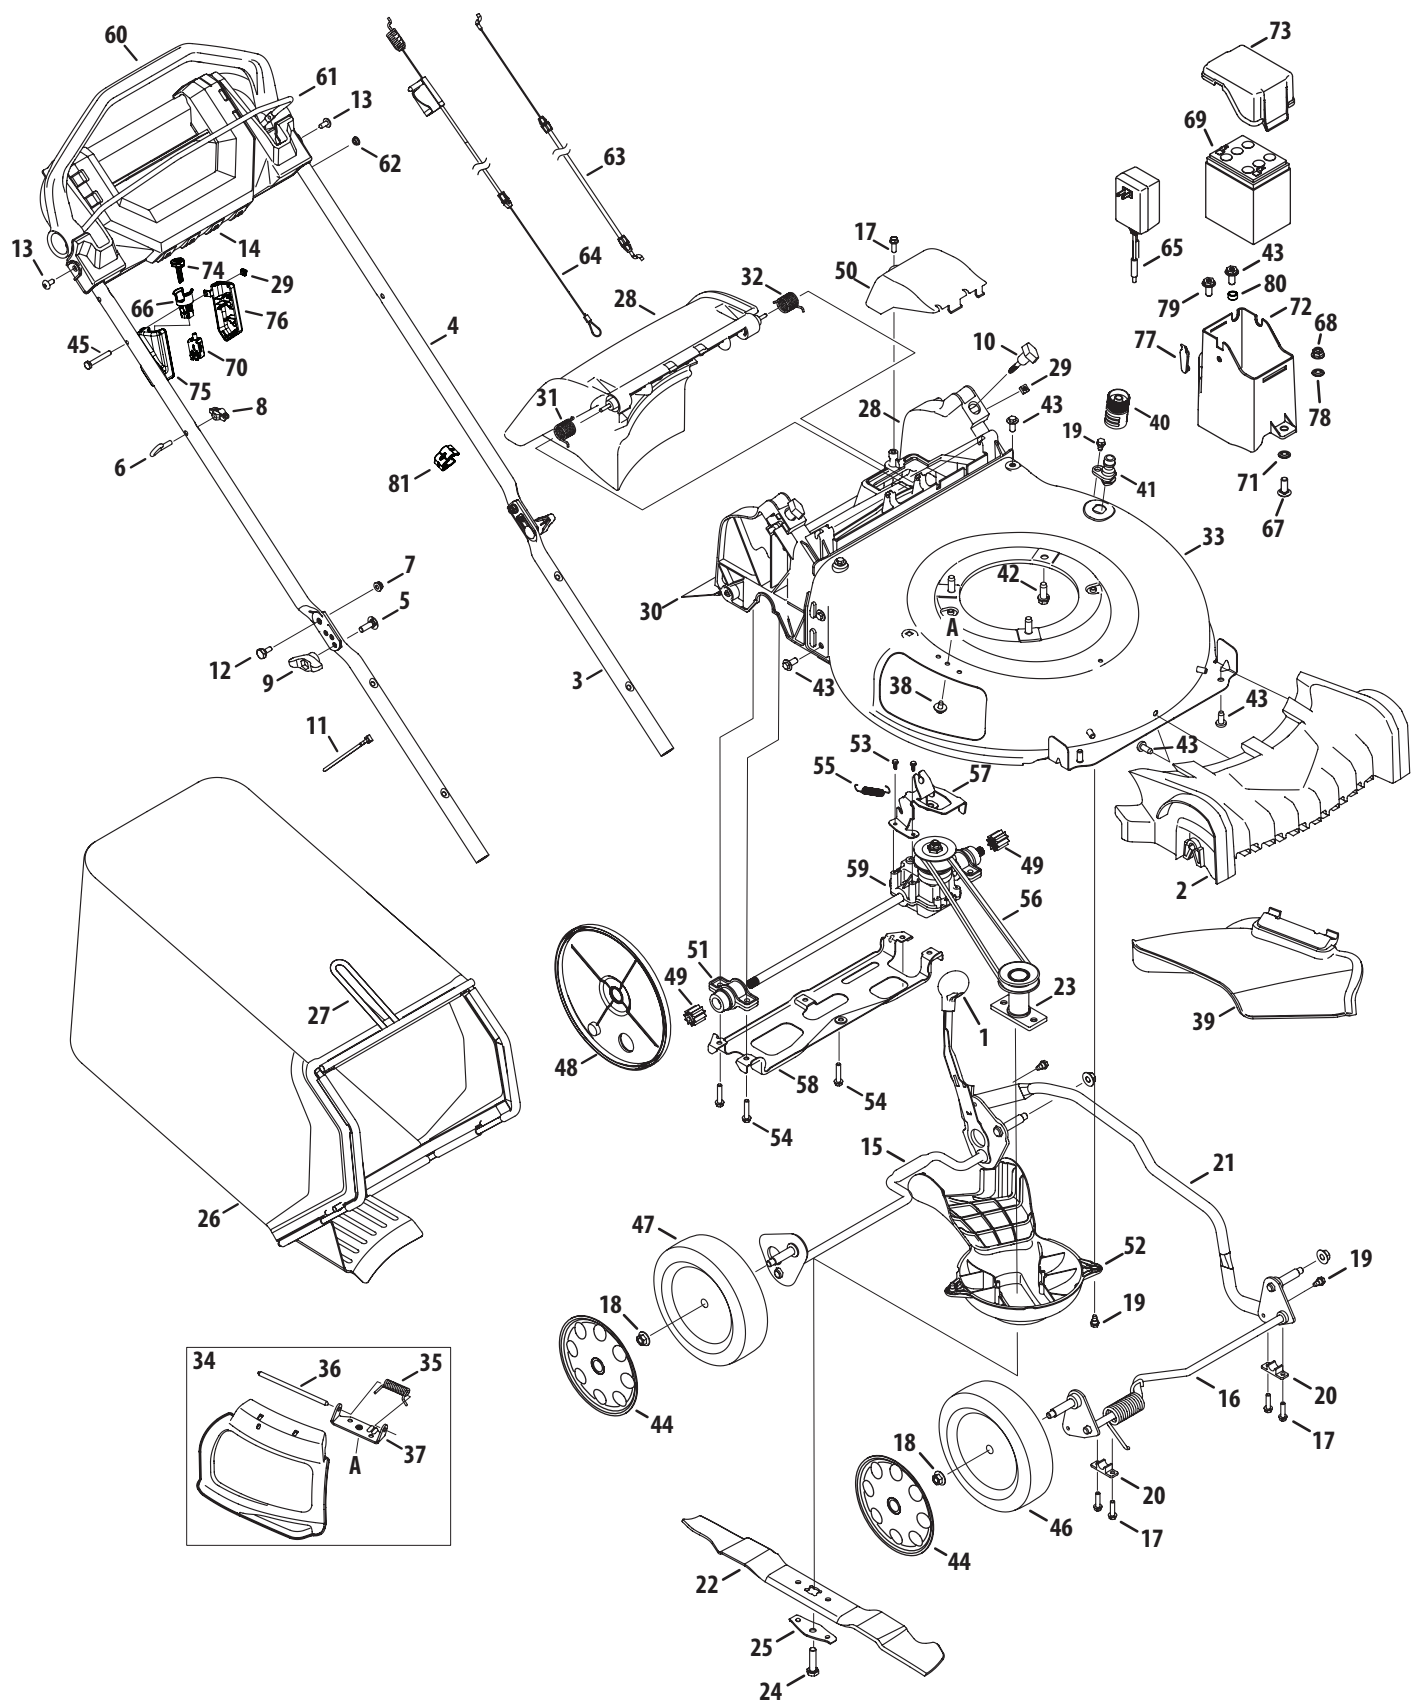


Model TB380ES (12ACC3B)


Ref No.	Part Number	Description
1	720-04113	Adjustment Lever Knob
2	931-10334	Front Cover
3	749-04608A	Lower Handle
4	749-05084	Upper Handle
5	710-04998	Carriage Screw ,5/16-18
6	710-1205	Rope Guide
7	712-04064	Nut, Flange Lock, 1/4-20
8	720-0279	Knob
9	720-04124	Wing Knob
10	720-05066A	Wing Nut
11	725-0157	Cable Tie
12	738-04419A	Sldr. Screw, .375 x .126 x 1/4-20
13	710-1017	Screw, 1/4-14 x .625
14	931-09823	Handle Console
15	911-04189	Rear Axle Assembly
16	911-04190A	Front Axle Assembly
17	710-0895	Screw, 1/4-15 x .750
18	712-04217	Flange Lock Nut, 3/8-16
19	738-04502	Shoulder Screw, 1/4-20 x 0.50
20	741-0492A	Bushing, Lock, .505 Dia. X .62
21	949-04841C	Cross Bracket
22	942-0741A	Mulching Blade
23	687-02220	Blade Adapter
24	710-1044	Screw, 3/8-24 x 1.50
25	736-0524B	Blade Bell Support
26	964-04150B	Grass Bag
27	747-05362A	Grass Catcher Frame
28	631-04553A	Rear Discharge Door Assembly
29	712-04222	Nut, Sq., 1/4-20
30	731-07203	Trailing Shield
31	732-05061A	Torsion Spring - RH
32	732-05062A	Torsion Spring - LH
33	787-02003B	Deck, 21"
34	987-02516A	Mulch Plug (Incl. 35-37)
35	732-1014C	Torsion Spring
36	747-0710A	Hinge Pin
37	787-01779	Chute Deflector Bracket
38	710-05073	Screw, 1/4-20 x .500
39	731-07131	Side Discharge Chute
40	921-04041	Water Nozzle Adapter
41	731-07487	Water Nozzle
42	710-04683B	Screw, 3/8-16 x 1.00

Ref No.	Part Number	Description
43	710-04995A	Screw, 5/16-14 x .750
44	731-07198	Hubcap, 8"
45	710-0136	Screw, 1/4-20 x 1.75
46	634-04660	Front Wheel
47	934-05042	Rear Wheel
48	731-07795	Wheel Dust Cover
49	917-04852	Spur Gear, 10T
50	731-08175	Transmission Cover
51	631-04501A	Bearing Assembly
52	631-04512C	Engine Baffle
53	710-04374	Screw, Hex Washer, .159 x .43
54	710-04774	Screw, 1/4-15 x 1.25
55	732-05150A	Exten. Spring, 2.405
56	954-04282	V-Belt
57	787-01868A	Transmission Bracket
58	787-01915A	Rear Support Bracket
59	918-07000	Transmission Assembly
60	731-09730	Drive Handle
61	747-06243	Blade Control
62	748-05047	Shoulder Spacer, .18 x .315 x .09
63	946-05107A	Control Cable
64	946-05121A	Drive Cable
65	725-06121A	Battery Charger
66	931-05131A	Key Switch
67	710-0276	Bolt, Carr., 5/16-18 x 1.00
68	912-0429	Nut, Flgk., 5/16-18
69	725-04903	Battery
70	725-06114	Plunger Switch
71	726-0201	Speed Nut
72	731-07135	Battery Housing
73	731-07154A	Battery Housing Top
74	731-09728	Key
75	731-09753A	Electric Start Housing, RH
76	731-09755	Electric Start Housing, LH
77	735-04213B	Lid Seal
78	736-0242	Washer, Bell, .340 x .872 x .080
79	738-04431A	Scr., Sldr., 5/16-14 x .972
80	750-05377	Spacer, .340 x .460 x .246
81	731-08454	Conduit Clip
—	925-06140B	Wire Harness (Not Shown)
—	725-05106	Fuse (Not Shown)

 
Engine Model 5X65RU Air Cleaner

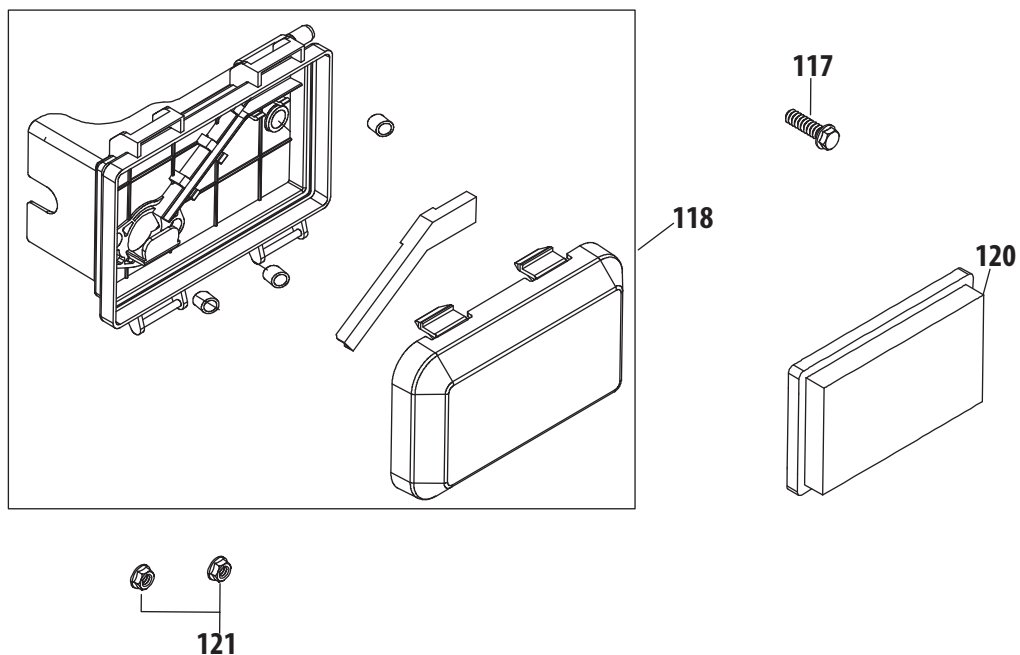

Ref.	Part Number	Description
117	710-04969	Bolt M6X30 Af Base/Coil/E-Starter
118	951-14439	Air Cleaner Housing Assembly
120	951-10298	Air Cleaner Kit
121	712-05015	Nut M6X10Mm Starter/Carb/Muff

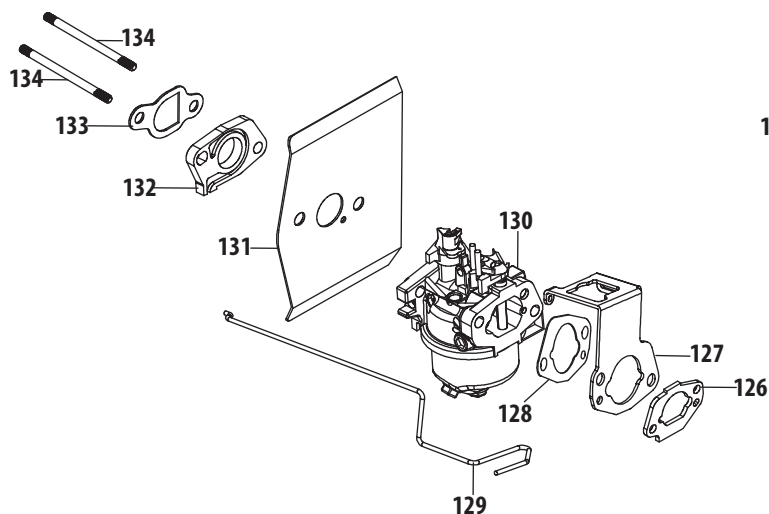 

179 - Carburetor Kit

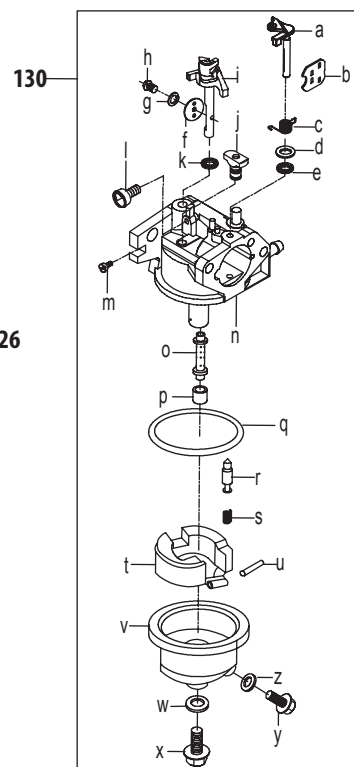 

Ref.	Part Number	Description
126	951-14419	Air Filter Base Gasket
127	951-14420	Choke Temp Control Bracket
128	951-14422	Choke Temp Control Bracket Gasket
129	951-14421	Choke Temp Control Linkage
130	951-14423	Carburetor Assembly
131	951-14424	Carburetor Gasket
132	951-11738	Carburetor Insulator
133	951-11528	Carburetor Insulator Gasket
134	951-14425	Carb Stud M6x87
179	951-14446	Carburetor Kit (Incl.e,j,k,l,o,p,q,r,s,t,u,w,z)
a	n/a	Choke Shaft
b	n/a	Choke Plate
c	n/a	Choke Return Spring
d	n/a	Choke Shaft Washer
e	n/a	Choke Shaft Fiber O-Ring
f	n/a	Throttle Plate
g	n/a	Throttle Plate Lock Washer
h	n/a	Screw M3X6 Throttle Plate


Ref.	Part Number	Description
i	n/a	Throttle Shaft
j	n/a	Idle Jet Assembly
k	n/a	Throttle Shaft Fiber O-Ring
l	n/a	Idle Speed Adjusting Screw
m	n/a	Idle Mixture Screw
n	n/a	Carburetor Body
o	n/a	Emulsion Tube
p	n/a	Main Jet
q	n/a	Fuel Bowl O-Ring
r	n/a	Needle Valve
s	n/a	Needle Valve Spring
t	n/a	Float
u	n/a	Float Pin
v	n/a	Fuel Bowl
w	n/a	Fuel Bowl Gasket
x	n/a	Fuel Bowl Mounting Bolt
y	n/a	Fuel Drain Plug
aa	n/a	Fuel Drain Plug Gasket

5X65RU Crankcase

176 - Gasket Kit - Complete

177 - Gasket Kit - External

 
178 - Complete Engine

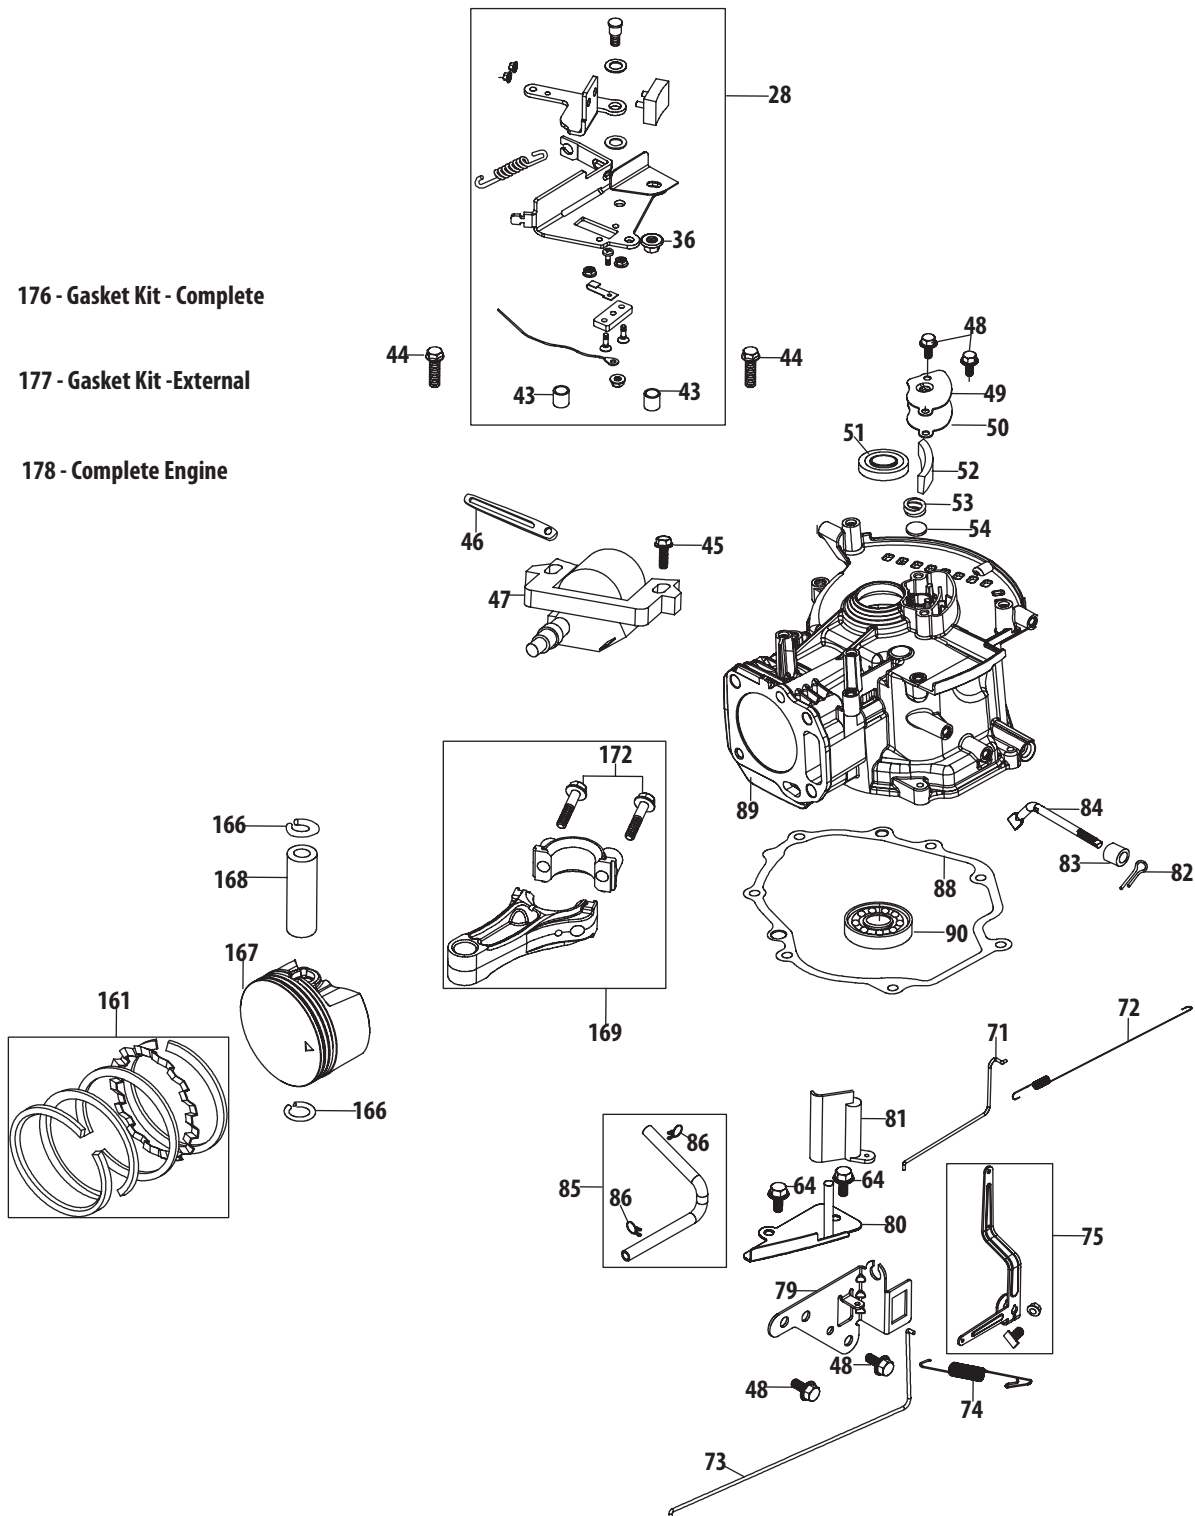

Ref.	Part Number	Description
28	951-14402	Brake Assembly
36	712-04219	Brake Arm Nut
38	712-04209	Ground Switch Nuts M4
43	750-05384	Brake Spacer
44	710-04980	Bolt M6X35 Af Base/Brake/Dipstick
45	710-04918	Bolt M6x20 Ignition Coil
46	951-11622	Flexible Clamp, Ignition Coil
47	951-14403	Ignition Coil Assembly
48	710-04916	Bolt M6X14 Multi-Purpose
49	951-14404	Breather Cover Plate
50	951-14405	Breather Gasket
51	951-11596	Upper Crankshaft Seal
52	951-11730	Breather Screen
53	732-04718	Breather Valve Spring
54	951-11614	Breather Valve
64	710-04915	Bolt M6X12 Multi-Purpose
71	951-14408	Choke Linkage
72	951-14409	Throttle Linkage Spring
73	951-14410	Throttle Linkage
74	951-14411	Governor Spring
75	951-14412	Governor Arm Assembly
79	951-14413	Component Bracket
80	951-14414	Air Vane Bracket
81	951-11529	Air Vane


Ref.	Part Number	Description
82	714-04074	Governor Arm Shaft Cotter Pin
83	951-11574	Governor Seal
84	951-14416	Governor Arm Shaft
85	951-11520	Breather Hose Assembly
86	726-04101	Breather Hose Clamp
88	951-14415	Crankcase Cover Gasket
89	951-14447	Short Block (Incl.48-54,82-84,88-92,95,97-100, 110-116,126,132,133,149,152,156, 157,159-161,166-169,172)
90	951-11369	Main Bearing
161	951-14433	Piston Ring Set
166	951-11603	Piston Pin Snap Ring
167	951-14434	Piston
168	951-14435	Piston Pin
169	951-14436	Connecting Rod Assembly
172	710-05115	Connecting Rod Bolt
176	951-14443	Gasket Kit - Complete (Incl.50,51,83,88,95,113,116,126, 128,131-133,149,152,156)
177	951-14444	Gasket Kit -External (Incl.50,95,113,126,128, 131-133,149,152)
178	952Z5X65RU	Complete Engine

 5X65RU Crankshaft & Crankcase Cover

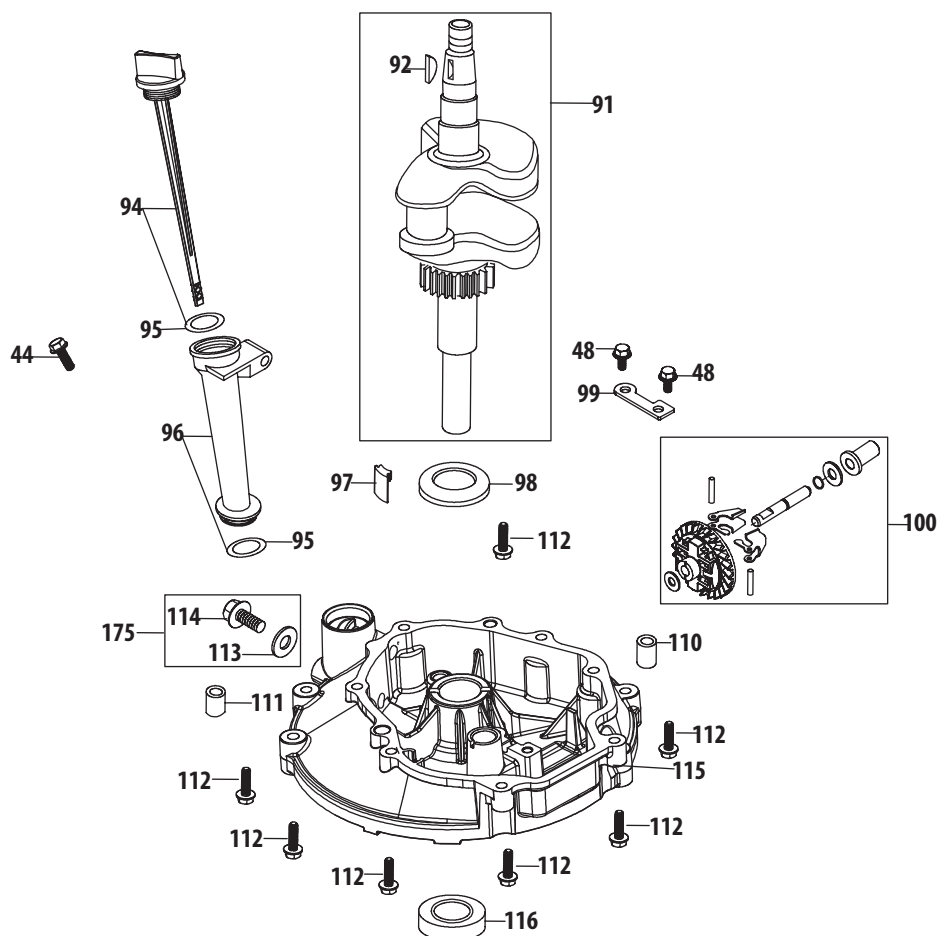

Ref.	Part Number	Description
44	710-04980	Bolt M6X35 Af Base/Brake/Dipstick
48	710-04916	Bolt M6X14 Multi-Purpose
91	951-14417	Crankshaft Assembly
92	951-10307	Flywheel Key
94	951-14440	Oil Dipstick Assembly
95	951-11546	Dipstick / Oil Fill Tube O-Ring
96	951-14441	Oil Fill Tube Assembly
97	951-11733	Oil Return Seal
98	736-04491	Crankshaft Thrust Washer
99	951-11609	Governor Gear Mounting Plate


Ref.	Part Number	Description
100	951-11549	Governor Gear/Shaft Assembly
110	715-04092	Crankcase Cover Dowel Pin 7×14
111	715-04089	Crankcase Cover Dowel Pin 9×14
112	710-04931	Bolt M6X28 X65/P65 Crankcase
113	736-04440	Oil Drain Plug Washer
114	710-04906	Oil Drain Plug
115	951-14418	Crankcase Cover
116	951-11545	Lower Crankshaft Seal
175	951-10370	Oil Drain Plug & Washer Assembly

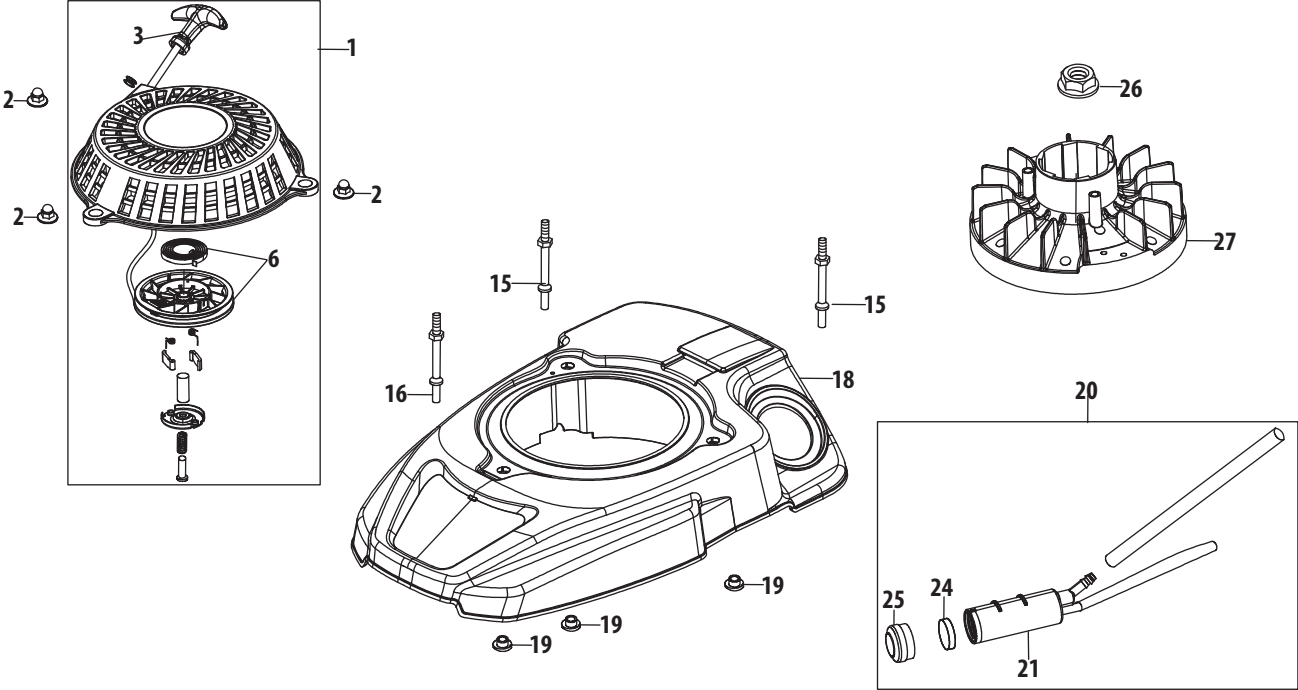 

Ref.	Part Number	Description
1	951-14396	Starter Recoil Assembly
2	712-04290	Starter Acorn Nut
3	731-07925	Starter Handle
6	951-11721	Recoil Pulley & Spring Assembly
15	951-14397	Starter/Shroud Rear Stud M6×78.5
16	951-14398	Starter/Shroud Front Stud M6×74
18	951-14399	Engine Shroud Assembly

Ref.	Part Number	Description
19	750-05320	Engine Shroud Spacer
20	951-14442	Carbon Canister Assembly
21	951-14126	Carbon Canister
24	951-14400	Carbon Canister Filter
25	951-14127	Carbon Canister Filter Cap
26	712-04287	Flywheel Nut M14
27	951-14401	Flywheel

 5X65RU Cylinder Head

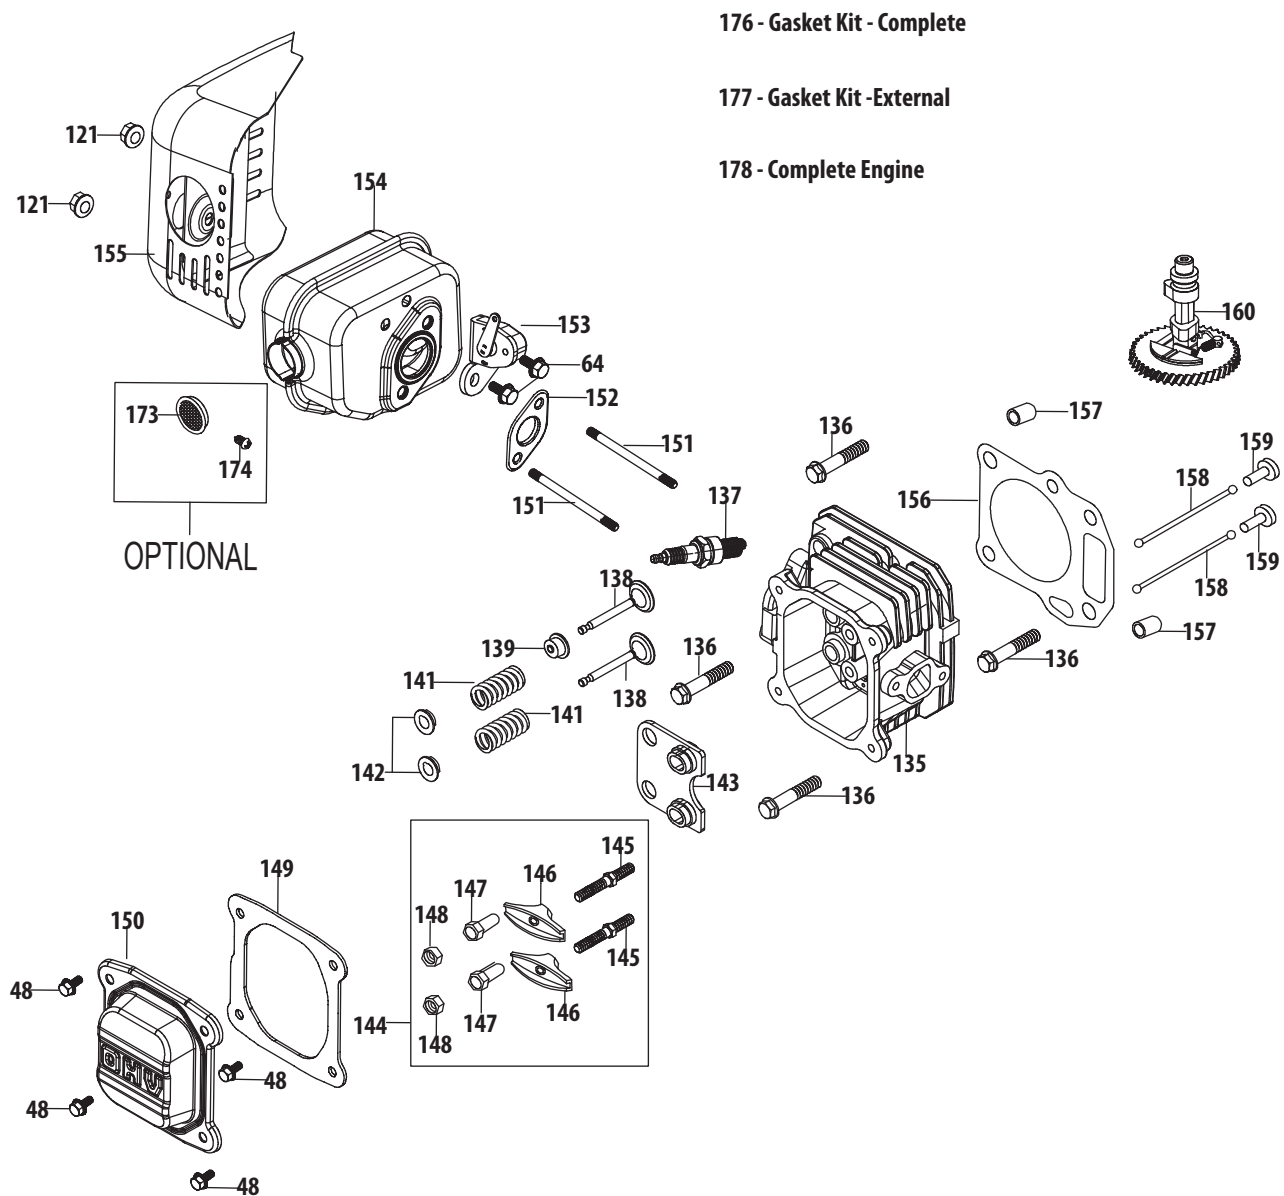


5X65RU Cylinder Head

Ref.	Part Number	Description
48	710-04916	Bolt M6X14 Multi-Purpose
135	951-14448	Cylinder Head Asm (Incl.132,133,135,138-143, 145-149,152,156)
	951-14445	Cylinder Head Service Kit (Incl.136,139,149,156)
136	710-04982	Bolt M8X54 Cylinder Head
137	951-14437	Spark Plug, F5Rtc
138	951-10313	Valve Kit
139	951-11818	Intake Valve Seal
140	951-10313	Valve Kit
141	951-12004	Valve Spring
142	951-11977	Valve Spring Retainer
143	951-11687	Push Rod Guide
144	951-11606	Rocker Arm Assembly
145	710-04902	Rocker Arm Stud
146	951-12001	Rocker Arm
147	751-11123	Fulcrum Nut
148	751-11124	Jam Nut
149	951-11551	Valve Cover Gasket
150	951-14426	Valve Cover

Ref.	Part Number	Description
151	710-05094	Muffler Stud M6X95
151	951-10342	Muffler Stud Assembly
152	951-14427	Muffler Gasket
153	951-14428	Choke Temp Control Thermostat
154	951-14429	Muffler Assembly
155	951-14430	Muffler Shield
156	951-14431	Cylinder Head Gasket
157	715-04108	Cylinder Head Dowel Pin 10x16
158	951-10314	Push Rod Kit
159	951-14432	Tappet
160	951-11741	Camshaft Assembly
173	951-10351	Spark Arrestor
174	710-04983	Spark Arrestor Screw
176	951-14443	Gasket Kit - Complete (Incl.50,51,83,88,95,113,116,126, 128,131-133,149,152,156)
177	951-14444	Gasket Kit -External (Incl.50,95,113,126,128, 131-133,149,152)
178	952Z5X65RU	Complete Engine

 
5X65RU Fuel Tank

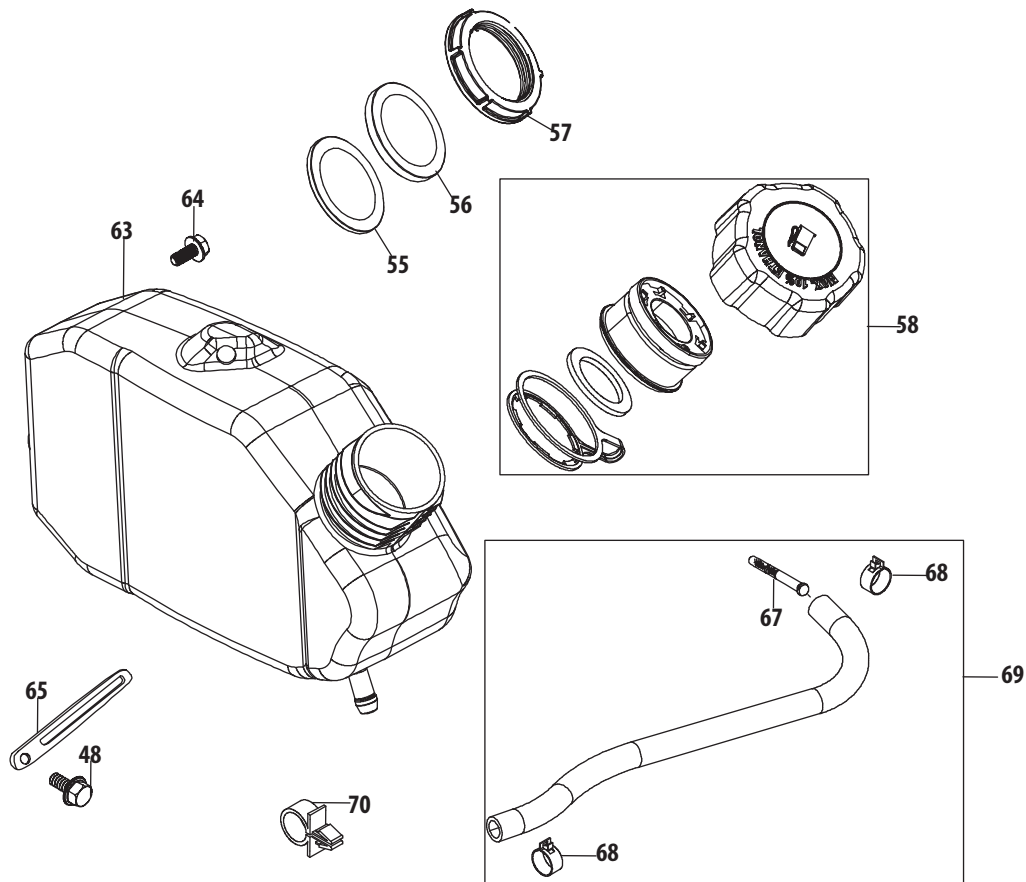


Ref.	Part Number	Description
48	710-04916	Bolt M6X14 Multi-Purpose
55	731-08133	Fuel Tank Lower Grommet
56	951-14406	Fuel Tank Upper Grommet
57	731-08104	Fuel Tank Nut
58	951-14407	Fuel Cap Assembly
63	931-04629	Fuel Tank
64	710-04915	Bolt M6X12 Multi-Purpose
65	951-11680	Flexible Clamp, Vent Hose
67	951-10358A	Fuel Filter
68	951-11700	Fuel Hose Clamp
69	951-14438	Fuel Line Kit
70	723-04071	Plastic Support Clamp

[illegible]

 Engine Model 5P71MU Muffler

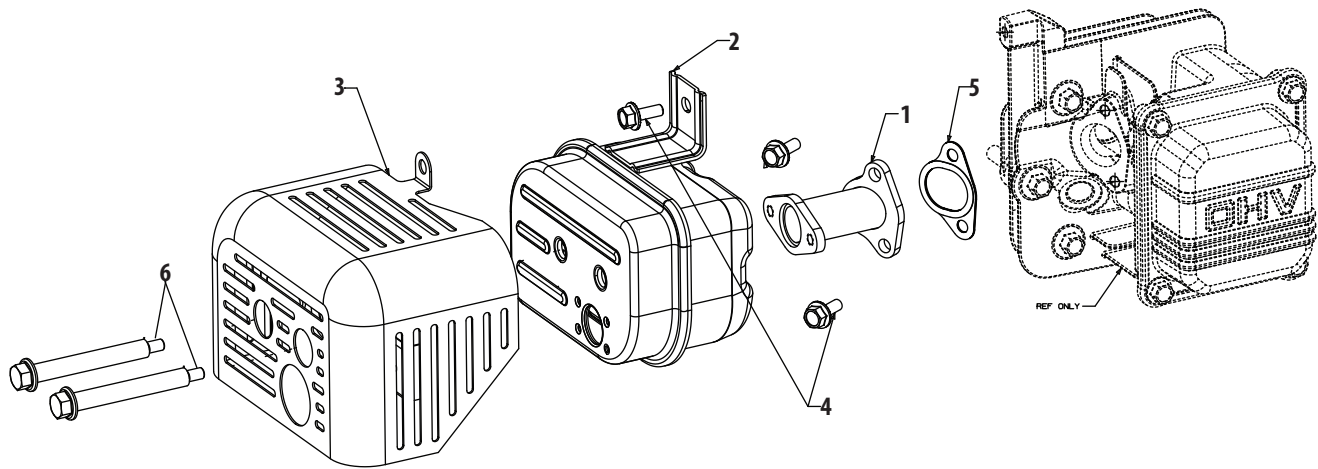


Ref.	Part Number	Description
1	908-04114	Tube Asm-Exh 195
2	908-04117	Muffler Asm-Clmsh
3	908-04119	Cover-Muffler Asm
4	710-05191	Hhflg-M6-1:16 Cl8.
5	921-04420	Gasket-Exhaust
6	738-04473	Screw-Shoulder 9.5

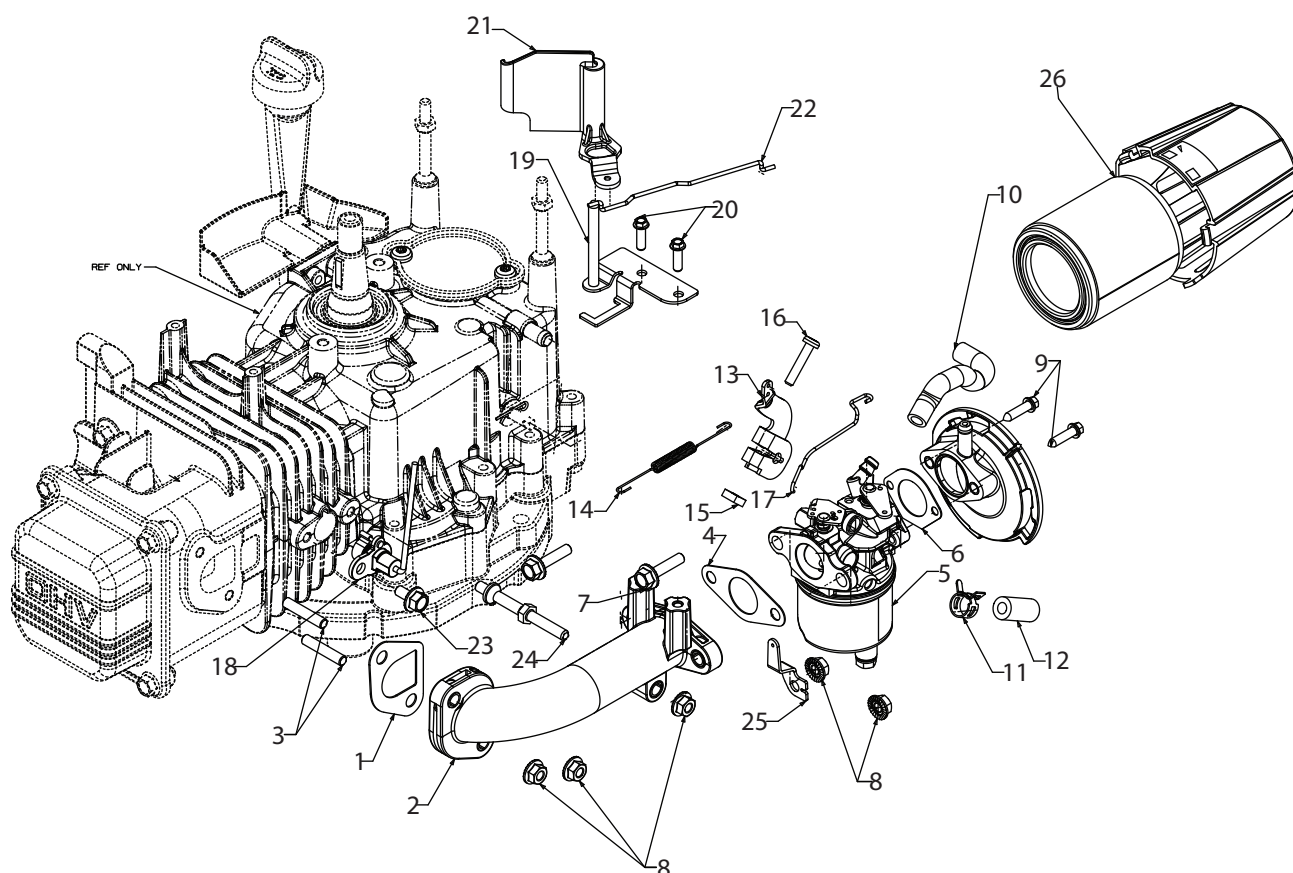 

Ref.	Part Number	Description
1	921-04419	Gasket-Manifold 19
2	631-04519P	Manifold Asm-Intnk
3	710-05192	Hhflg-M6-1:20:CL5.8
4	921-04407	Gasket-Manifold Ca
5	993-00001	Carb Asm-Choke 195
	951-14519	Carb Kit-Svc 195
6	921-04408	Gasket-Carb 195
7	710-05194	Hhflg-M6-1:25 Cl5.
8	712-04267	Nut-Hex Flange M6-
9	710-05360	Screw-Machine M5-8
10	735-04250	Tube-Breather
11	926-04122	Clamp-Hose 12Mm
12	751-10349-13	Hose:Fuel Low Perm
13	908-04158	Bracket-Governor C
14	732-04835	Spring-Extension .

Ref.	Part Number	Description
15	712-04277	Nut-Sq M5-0.8
16	710-05282	Screw-Machine M5-8
17	747-05469	Rod-Throttle Contr
18	947-04244	Rod Asm-Choke Over
19	908-04168	Bracket-Support Ai
20	710-05299	Screw-M5-2.2:16 Pl
21	931-08209	Vane-Choke 195
22	747-05476	Rod-Choke Control
23	710-05190	Hhflg-M6-1:12 Cl8.
24	710-05370	Stud-M6-1:30.5 Lg
25	908-04155	Bracket-Governor S
26	931-04669	Filter Asm-Air Cle
	951-14506	Air Filter Housing
	951-14512	Air Filter Asm

 
5P71MU Crankcase

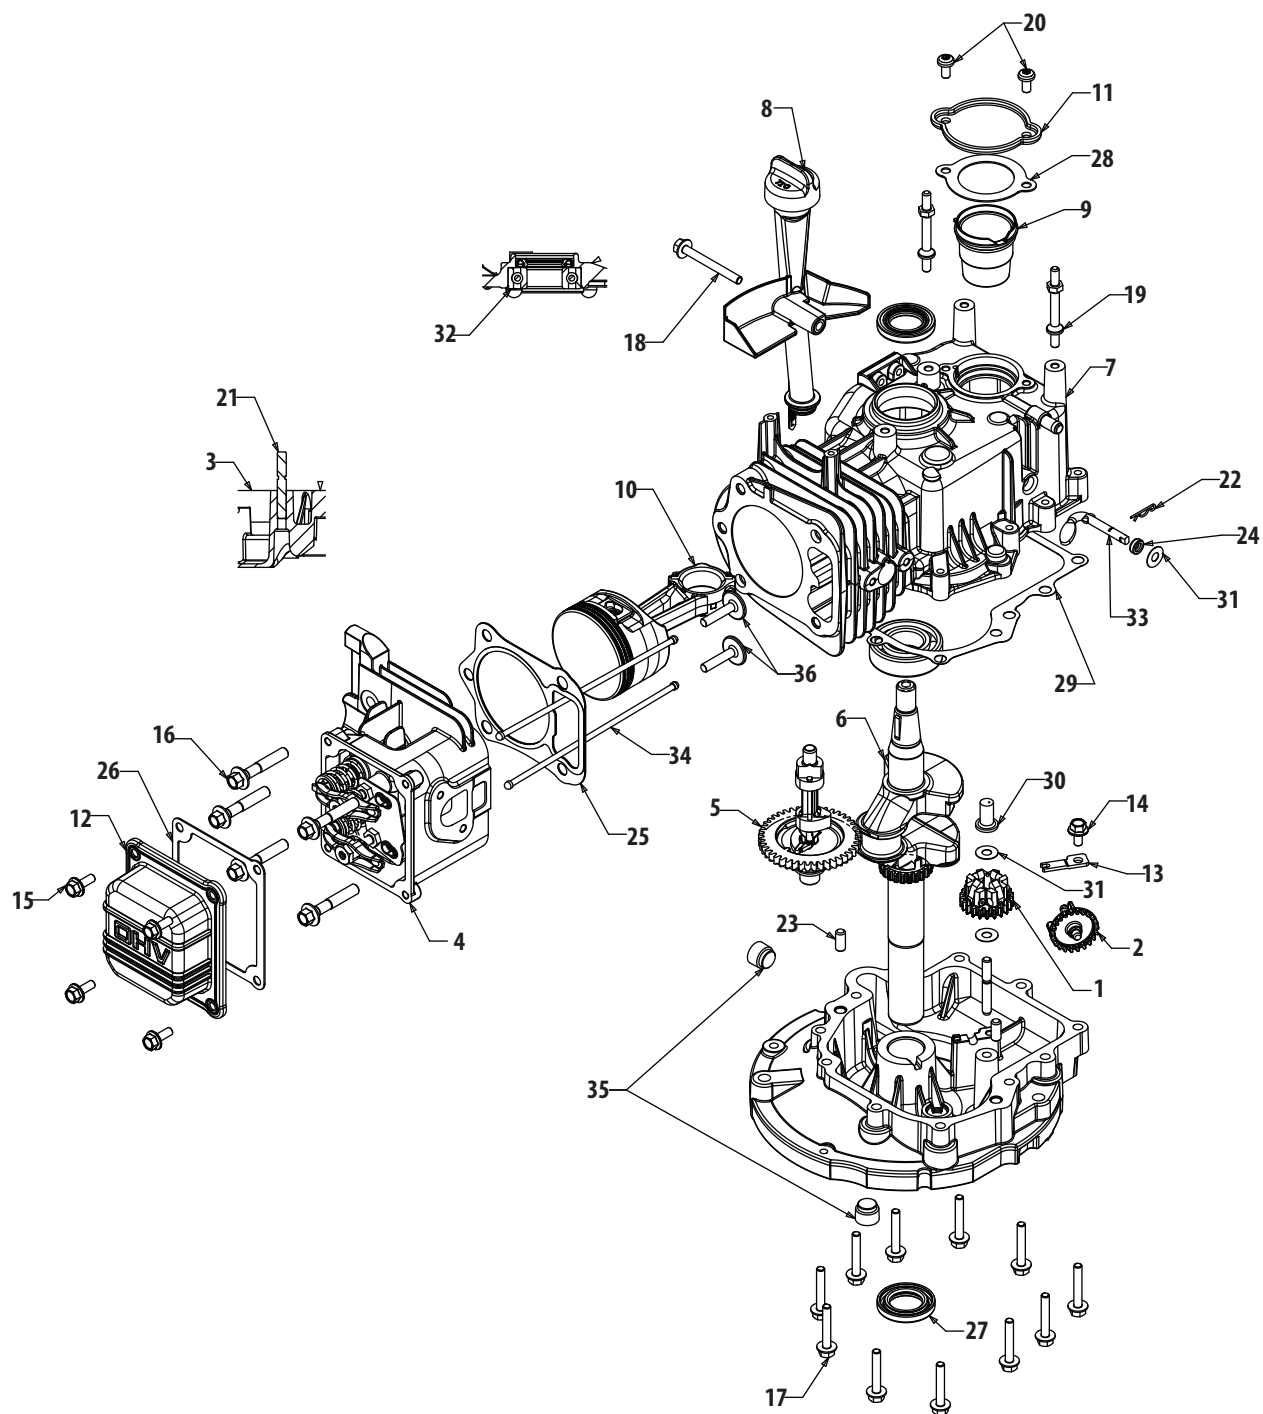

Ref.	Part Number	Description
1	917-04093	Gear Asm-Gov 195
	951-14514	Gov Gear/Shaft Asm
	951-14513	Gov Arm Asm
2	917-04108	Gear Asm-Oil Sling
3	919-04287	Cover-Cr/Case Mach
4	919-04296	Head Asm-Compl 195
	951-14518	Cylinder Head Kit
5	919-04300	Camshaft Assembly
6	919-04336	Cr/Shf-End 195 25M
7	951-14523	Short Block Asm
8	931-04670	Dipstick Asm-Engin
	951-14510	Dipstick Asm-Oil
9	951-14520	Breather Asm
10	951-04299	Piston Asm-Engine
11	908-04162	Cover-Breather 195
12	908-04163	Cover-Valve Ohv 19
13	908-04182	Bracket-Support Oi
14	710-05190	Hhflg-M6-1:12 Cl8.
15	710-05191	Hhflg-M6-1:16 Cl8.
16	710-05195	Hhflg-M8-1.25:45:C
17	710-05198	Hhflg-M6-1:35 Cl8.
18	710-05234	Hhflg-M6-1:50:Cl5.
19	710-05240	Stud-M6-1:40 Lg


Ref.	Part Number	Description
20	710-05293	Screw-Machine M6-1
21	911-05431	Shaft-Governor 6.3
22	714-04100	Pin-Cotter 1.2 X 2
23	715-04116	Pin-Dowel 7 X 16
24	921-04410	Seal-Oil 11 X 4 X
25	921-04413	Gasket-Head 195
26	921-04414	Gasket-Valve Cover
27	921-04418	Seal-Oil 41.25 X 2
28	921-04430	Gasket-Breather 19
29	921-04433	Gasket-Cr/Case 195
30	931-08086	Cap-Push Gov 195
31	736-04527	Washer-Flat 6.8 X
32	941-3037	Pto Shaft Ball Bearing
33	747-05399	Rod-Gov Control
34	750-05444	Tube-Push Rod 195
	951-14509	Kit-Push Rod
35	951-11644	Plug-Engine 3/8 Np
36	951-11891	Tpt-Cam 195
NS	951-14507	Valve Kit
NS	951-14511	Oil Fill Tube Asm
NS	951-14516	Gasket Kit-Comple
NS	951-14517	Gasket Kit-Externa
NS	951-14521	Ring Set-195

 5P71MU Flywheel, Shroud & Tank

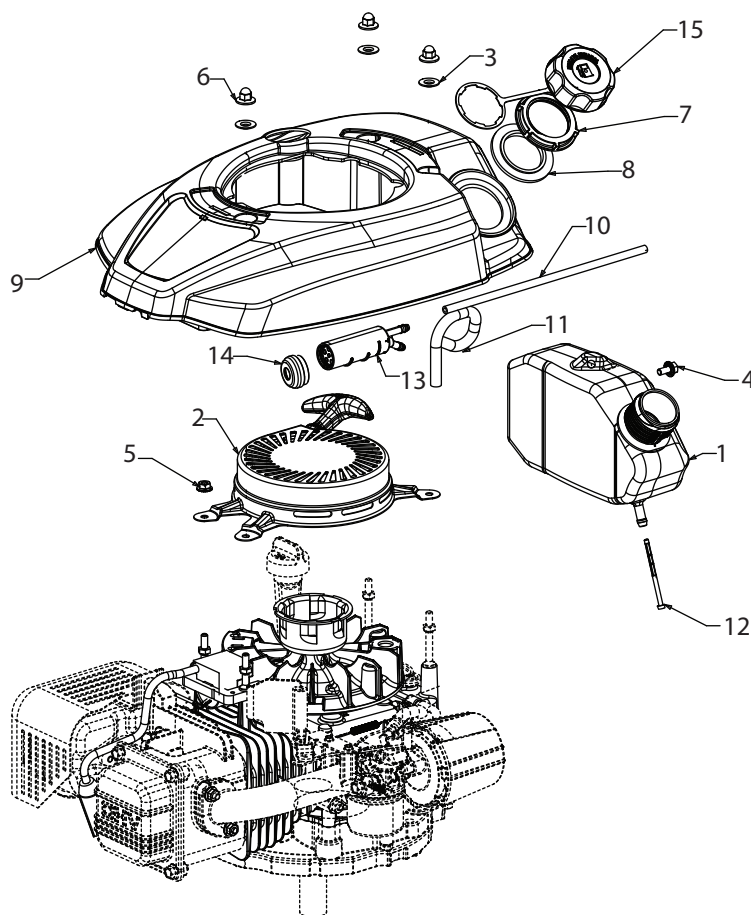


Ref.	Part Number	Description
1	931-04629	Fuel Tank
2	951-04301	Start Asm-Pull Rec
	951-14508	Pulley/Spring Asm
3	908-04171	Spacer-Shroud 195
4	710-05190	Hhflg-M6-1:12 Cl8.
5	712-04267	Nut-Hex Flange M6-
6	712-04276	Nut-Acorn M6-1
7	731-08104	Fuel Tank Nut
8	731-08133	Fuel Tank Lower Grommet

Ref.	Part Number	Description
9	931-08495	Shroud-Engine Reco
10	735-04275	Hose-5 Id X 8 Od
11	735-05005	Hose-5Mm Id Evap
11	951-14505	Fuel Line Kit-5P71
12	951-12296	Fuel Filter-Zs Ver
13	951-14126	Carbon Canister
	951-14515	Canister/Carbon Asm
14	951-14127	Carbon Canister Filter Cap
15	951-14407	Fuel Cap Assembly


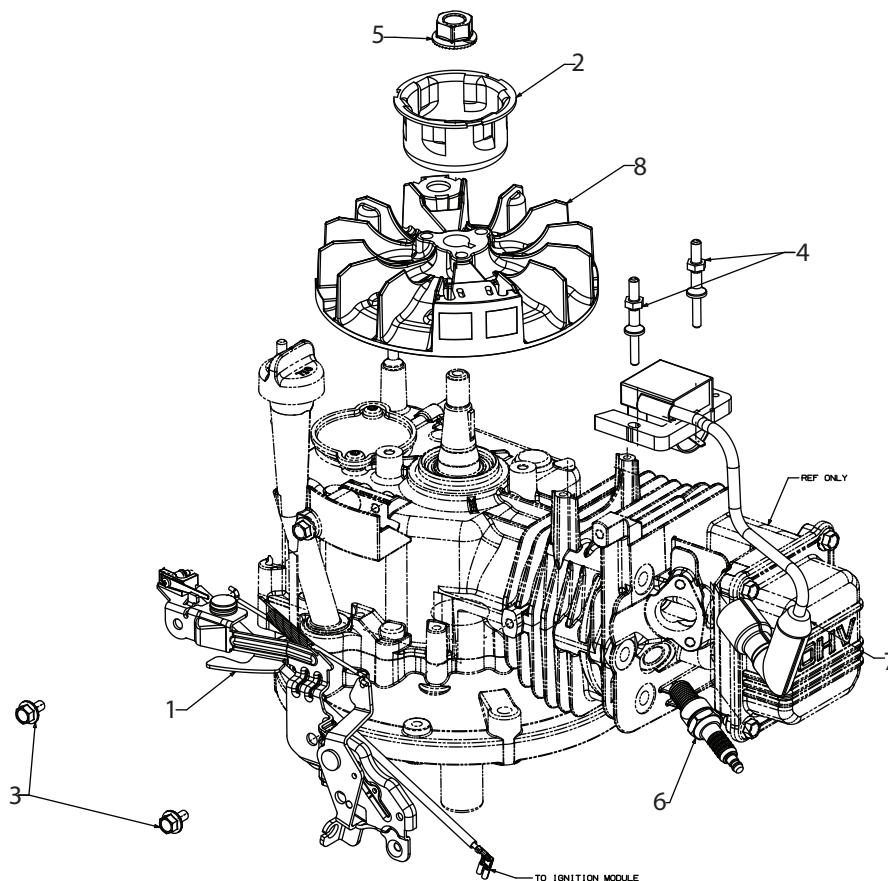 


Ref.	Part Number	Description
1	608-05027	Brake Asm:Flywhl
2	908-04144	Cup-Start 195
3	710-05190	Hhflg-M6-1:12 Cl8.
4	710-05269	Stud-M5-8:22
5	712-04266	Nut-Hex Flange M14
6	951-10292	Plug:Spark
7	794-00064	Ignition Module
8	794-00067	Flywheel-195

 Engine Model 6X65RU Air Cleaner

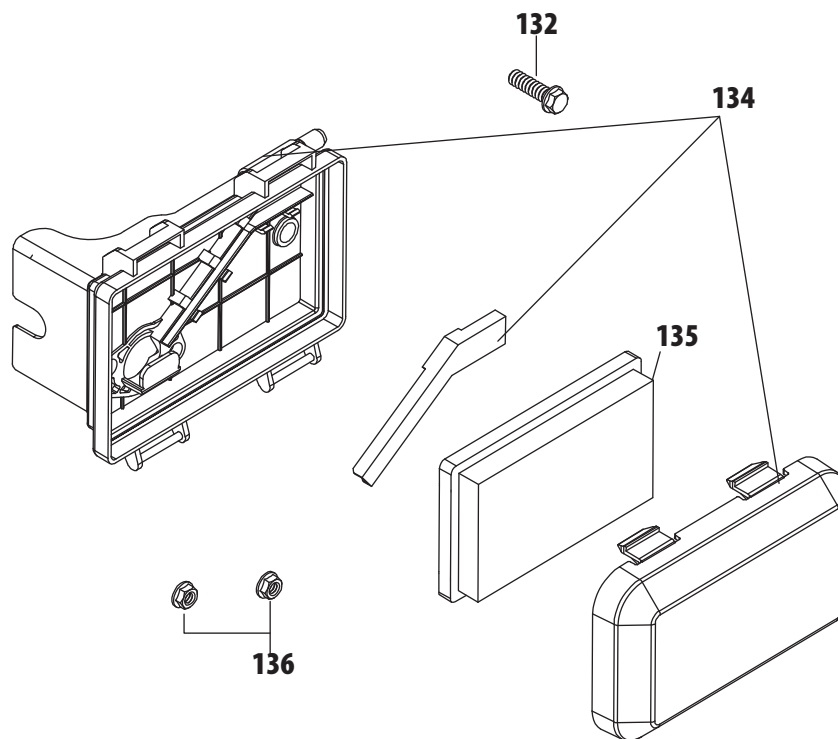


Ref.	Part Number	Description
132	710-04969	Bolt M6X30 Af Base/Coil/E-Starter
134	751-14439	Air Filter Cover Kit
135	951-14632	Air Filter Element, Paper
136	712-05015	Nut M6X10Mm Starter/Carb/Muff

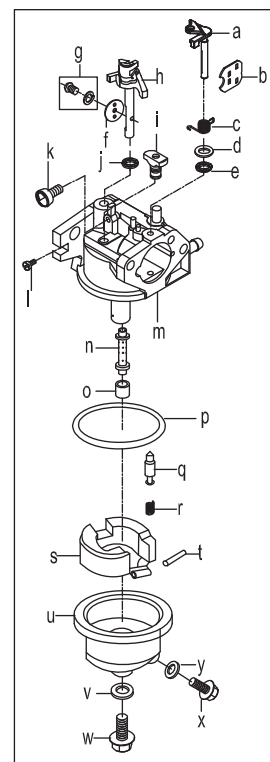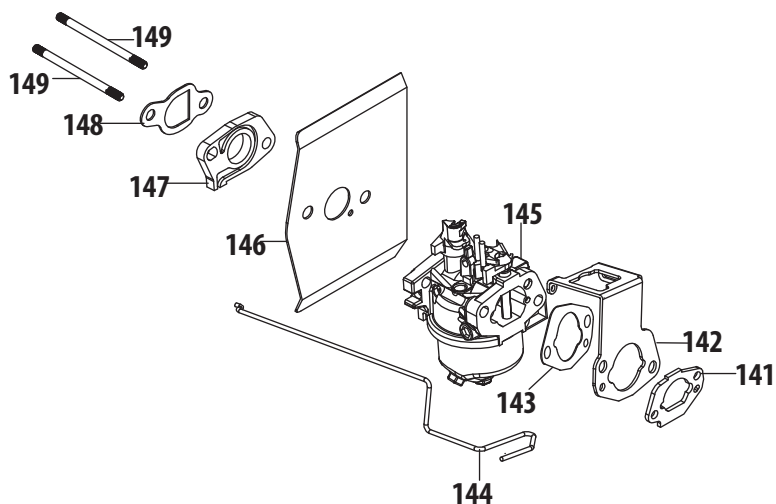  

Ref.	Part Number	Description
141	951-14419	Air Filter Base Gasket
142	951-14420	Temp Control Guide Bracket
143	951-14422	Temp Control Guide Bracket Gasket
144	951-14421	Temp Control Linkage
145	951-14423	Carburetor Assembly
146	751-14758	Carburetor Rebuild Kit
146	951-14424	Carburetor Gasket
147	951-11738	Carburetor Insulator
148	951-11528	Carburetor Insulator Gasket
149	951-14425	Carb Stud M6x87
a	n/a	Choke Shaft
b	n/a	Choke Plate
c	n/a	Choke Return Spring
d	n/a	Choke Shaft Washer
e	n/a	Choke Shaft Fiber O-Ring
f	n/a	Throttle Plate
g	n/a	Screw M3X6 Throttle Plate
h	n/a	Throttle Shaft


Ref.	Part Number	Description
i	n/a	Idle Jet Assembly
j	n/a	Throttle Shaft Fiber O-Ring
k	n/a	Idle Speed Adjusting Screw
l	n/a	Idle Mixture Screw
m	n/a	Carburetor Body
n	n/a	Emulsion Tube
o	n/a	Main Jet
p	n/a	Fuel Bowl O-Ring
q	n/a	Needle Valve
r	n/a	Needle Valve Spring
s	n/a	Float
t	n/a	Float Pin
u	n/a	Fuel Bowl
v	n/a	Fuel Bowl Mounting Bolt Gasket
w	n/a	Fuel Bowl Mounting Bolt
x	n/a	Fuel Drain Plug
y	n/a	Fuel Drain Plug Gasket

 6X65RU Crankcase

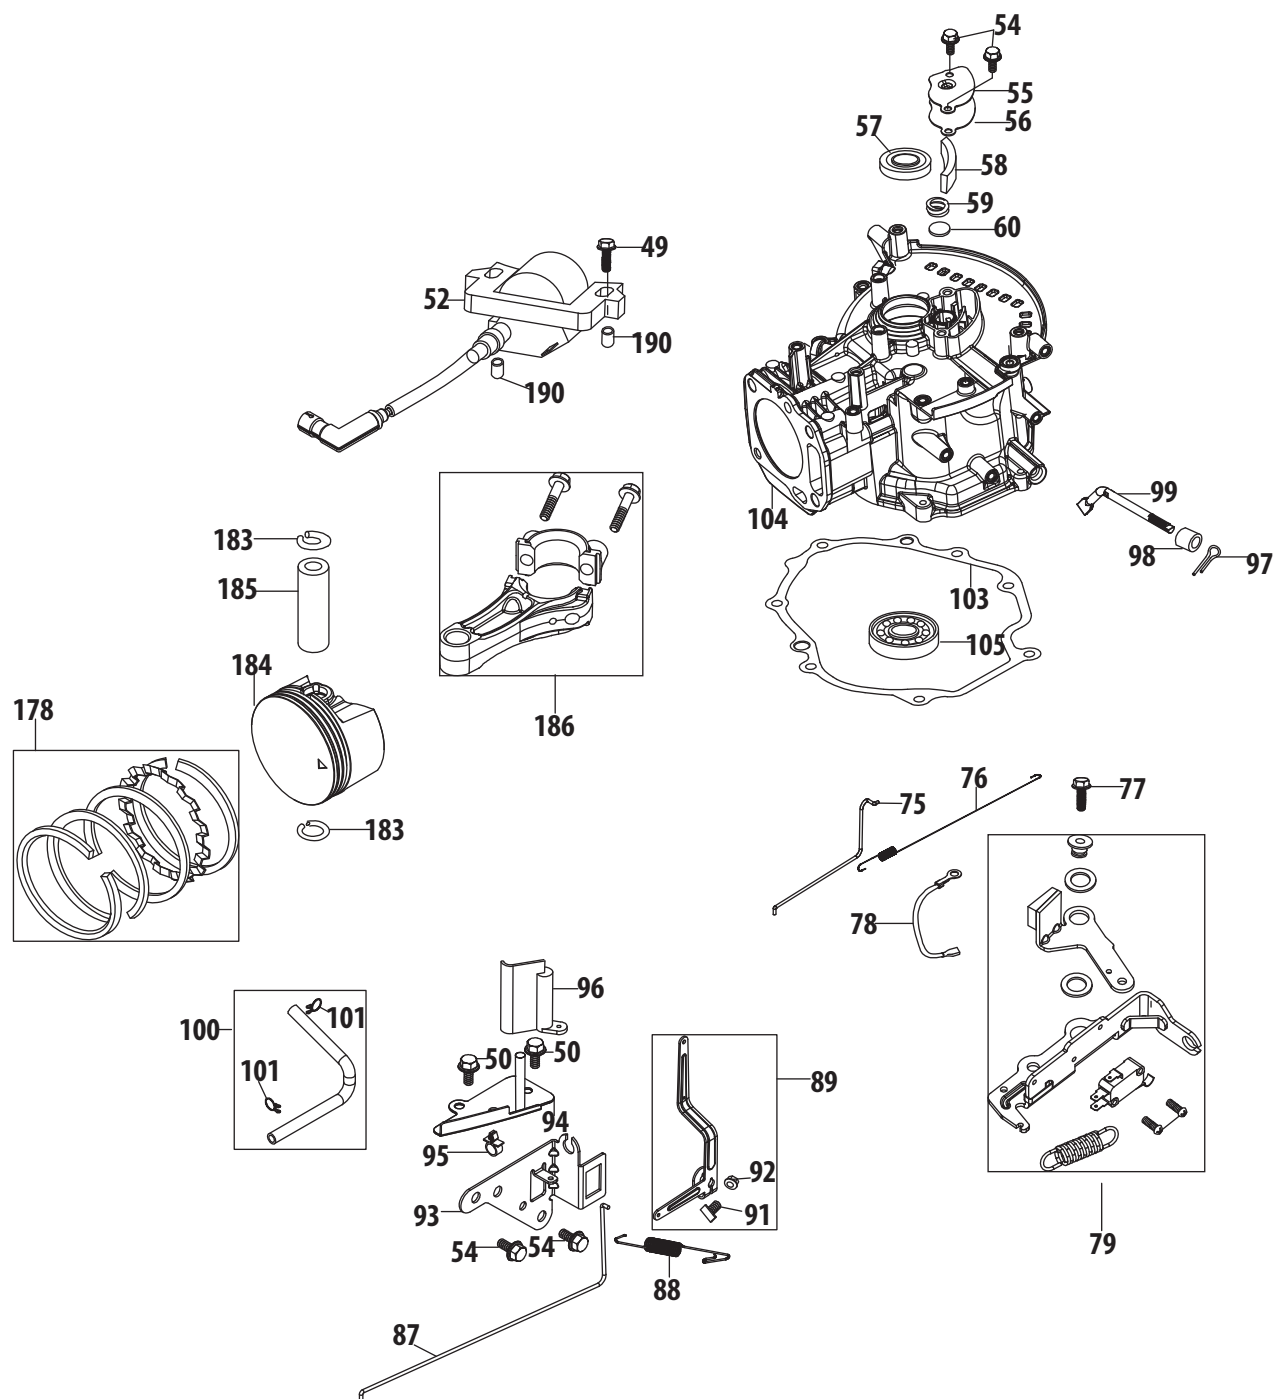


Ref.	Part Number	Description	Ref.	Part Number	Description
49	710-04943	Bolt M6X28 T/X/P Crankcase/Dp Stick	93	951-14413	Component Bracket
50	710-04915	Bolt M6X12 Multi-Purpose	94	751-14719	Air Vane Bracket
52	725-06178	Ignition Coil Assembly	95	731-10630	Plastic Support Clamp
54	710-04916	Bolt M6X14 Multi-Purpose	96	951-11529	Air Vane
55	951-14404	Breather Cover Plate	97	714-04078	Governor Arm Shaft Cotter Pin
56	951-14405	Breather Gasket	98	951-11574	Governor Seal
57	951-11596	Upper Crankshaft Seal	99	951-14416	Governor Arm Shaft
58	951-11730	Breather Screen	100	951-11520	Breather Hose Assembly
59	732-04718	Breather Valve Spring	101	726-04101	Breather Hose Clamp
60	951-11614	Breather Valve	103	951-14415	Crankcase Cover Gasket
75	951-14408	Choke Linkage	104	751-14720	Crankcase
76	951-14409	Throttle Linkage Spring	104	651-05227	(Mtd Srvc Kit) Short Block
77	710-04919	Bolt M6x25 Ign/Brake/Cvr Plt	105	951-11369	Main Bearing
78	725-06179	Grounding Wire	178	951-14433	Piston Ring Set
79	651-05222	Brake Assembly	183	951-11603	Piston Pin Snap Ring
87	751-14721	Throttle Linkage	184	951-14434	Piston
88	751-14718	Governor Spring	185	951-14435	Piston Pin
89	951-05160	Governor Arm Assembly	186	951-14436	Connecting Rod Assembly
91	710-04908	Governor Arm Bolt	190	750-06314	Ignition Coil Spacer
92	712-05015	Governor Arm Nut M6		952Z6X65RU	Complete Engine

 6X65RU Crankshaft & Cover

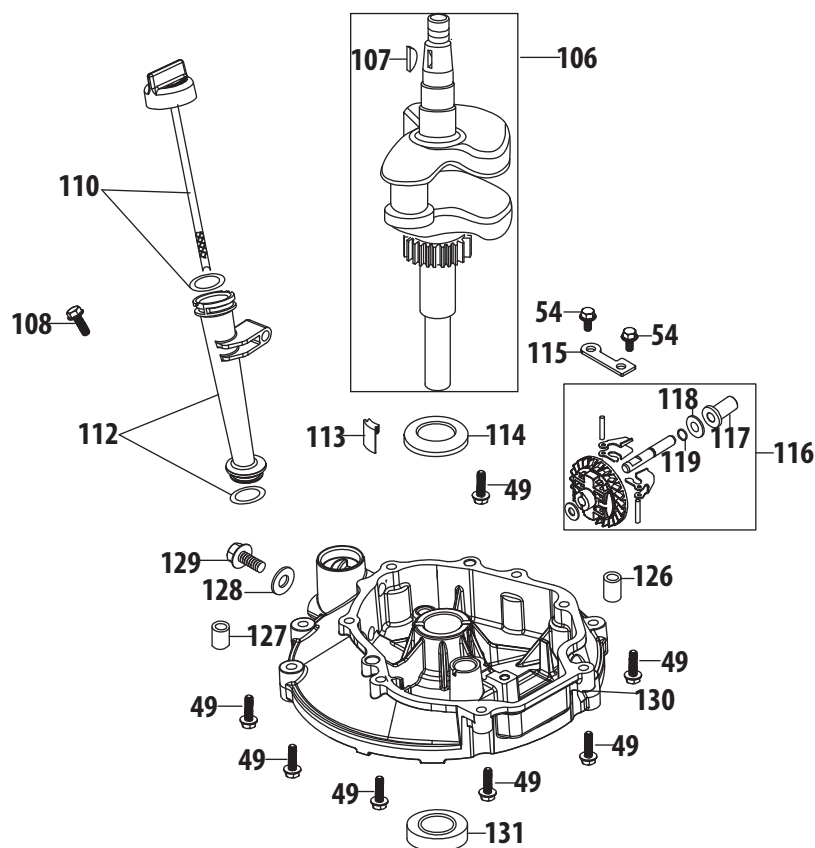

Ref.	Part Number	Description
49	710-04943	Bolt M6X28
54	710-04916	Bolt M6X14 Multi-Purpose
106	951-14417	Crankshaft Assembly
107	951-10307	Flywheel Key
108	710-04980	Bolt M6X35
110	751-14440	Dipstick
112	751-14441	Oil Fill Tube
113	951-11733	Oil Return Seal
114	736-04491	Crankshaft Thrust Washer
115	951-11609	Governor Gear Mounting Plate


Ref.	Part Number	Description
116	951-11549	Governor Gear/Shaft Assembly
117	931-09595	Governor Slide Cap
118	936-05038	Governor Slide Cap Washer
119	916-05003	Governor Shaft Stop Ring
126	715-04092	Crankcase Cover Dowel Pin
127	715-04096	Crankcase Cover Dowel Pin $\Phi 9 \times 14$
128	736-04440	Oil Drain Plug Washer
129	710-04906	Oil Drain Plug
130	951-14418	Crankcase Cover
131	951-11545	Lower Crankshaft Seal

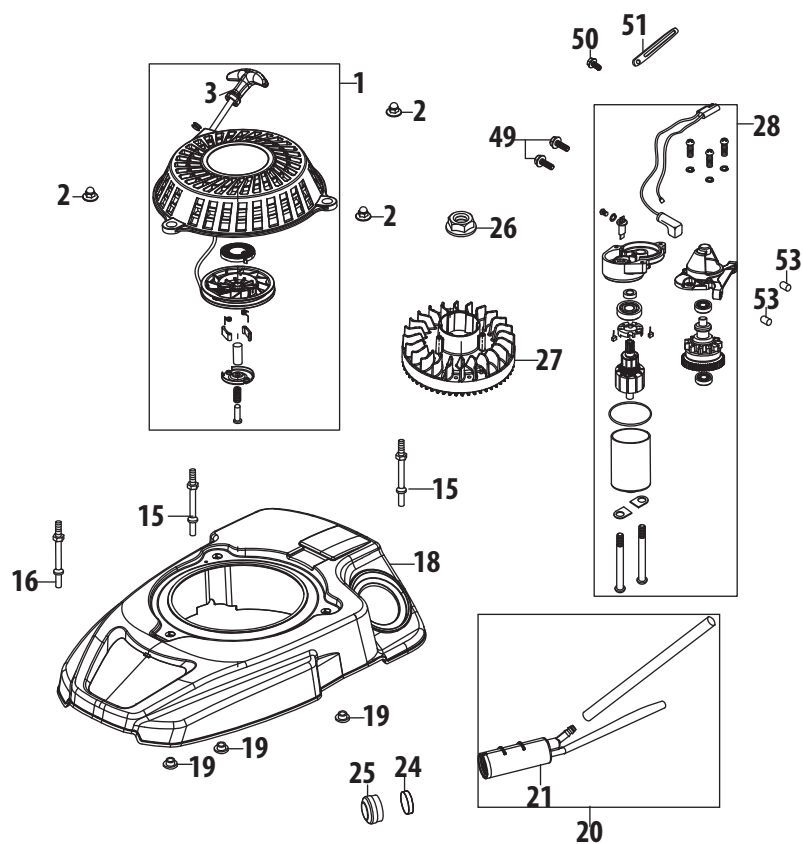 

Ref.	Part Number	Description
1	951-14396	Recoil Starter Assembly
2	712-04276	Starter Acorn Nut
3	731-07925	Starter Handle
15	951-14397	Starter/Shroud Rear Stud M6×78.5
16	751-14819	Starter/Shroud Front Stud M6×74
18	731-10631	Engine Shroud
19	750-05320	Engine Shroud Spacer
20	751-14442	Carbon Canister Assembly
21	951-14126	Carbon Canister
24	951-14400	Carbon Canister Filter

Ref.	Part Number	Description
25	951-14127	Carbon Canister Filter Cap
26	712-04287	Flywheel Nut M14
27	751-14722	Flywheel
28	951-05207	Electric Starter Assembly (53:9)
49	710-04943	Bolt M6X28 T/X/P Crankcase/Dp Stick
50	710-04915	Bolt M6X12 Multi-Purpose
51	951-11680	Flexible Clamp, Vent Hose
53	715-05016	Starter Housing Dowel Pin Ø8×8

 
6X65RU Cylinder Head

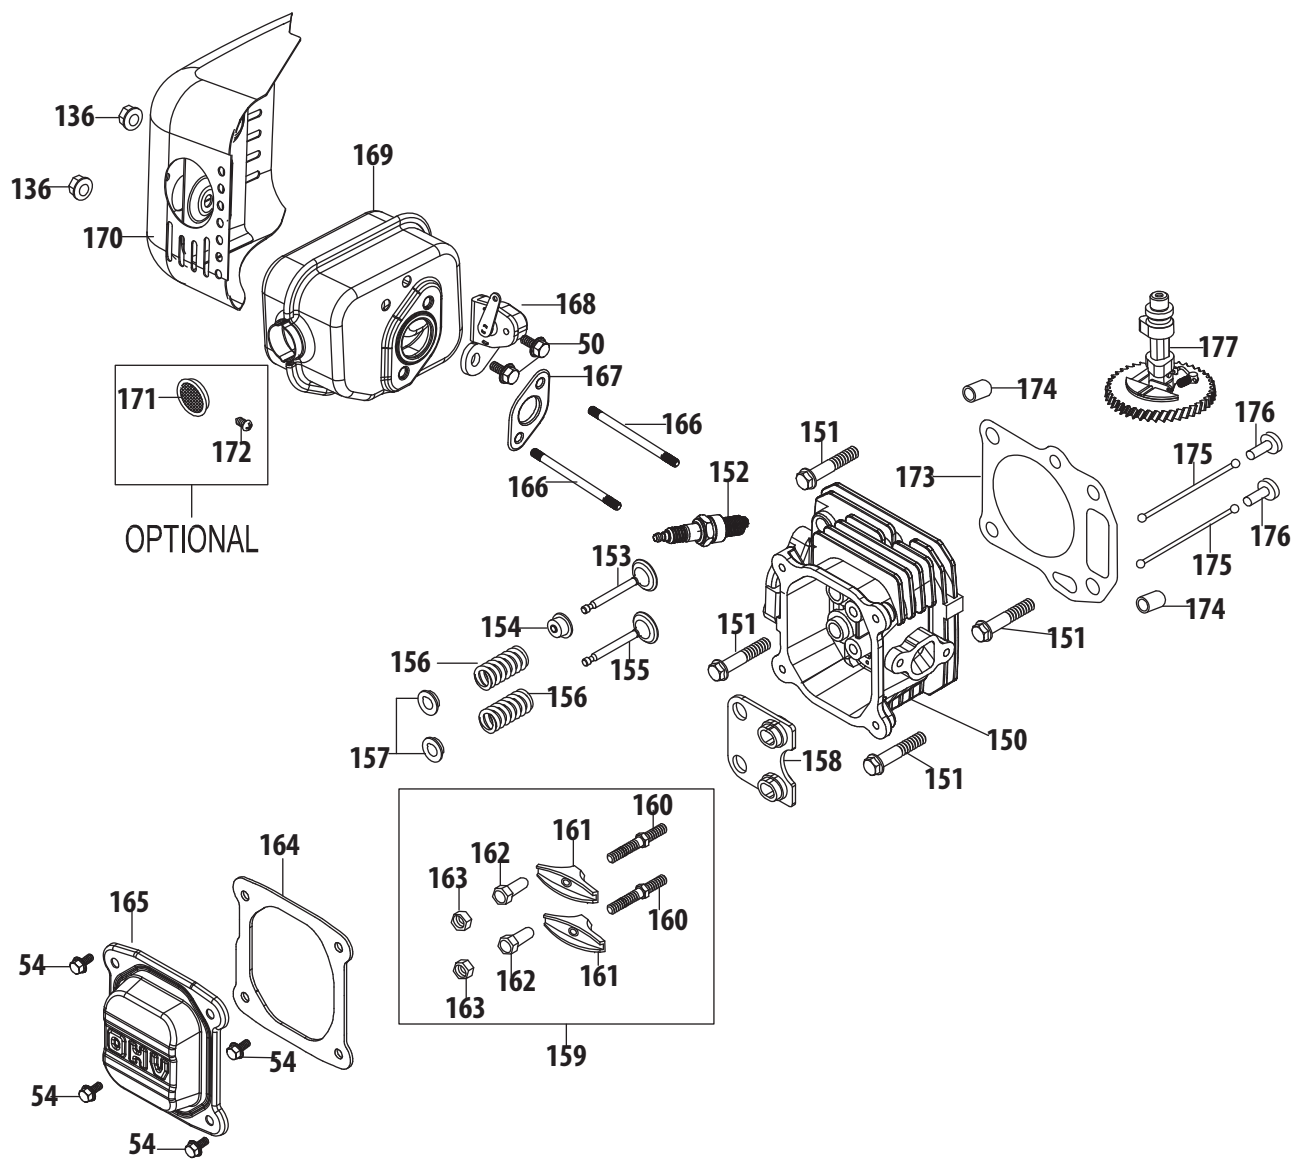

Ref.	Part Number	Description
50	710-04915	Bolt M6X12 Multi-Purpose
54	710-04916	Bolt M6X14 Multi-Purpose
136	712-05015	Nut M6X10Mm Starter/Carb/Muff
150	951-05151	(Mtd Srvc Kit) Cylinder Head Assy
150	751-14639	Cylinder Head
151	710-06185	Bolt M8X54 Cylinder Head
152	951-14437	Spark Plug/F5Rtc
153	951-14640	Intake Valve
154	721-04237	Intake Valve Seal
155	951-14641	Exhaust Valve
156	951-12004	Valve Spring
157	951-11977	Valve Spring Retainer
158	951-11687	Push Rod Guide
159	951-11606	Rocker Arm Assembly
160	710-04902	Rocker Arm Stud
161	951-12001	Rocker Arm
162	751-11123	Fulcrum Nut

Ref.	Part Number	Description
163	751-11124	Jam Nut
164	951-11551	Valve Cover Gasket
165	951-14609	Valve Cover
166	710-05094	Muffler Stud M6X95
167	951-14427	Muffler Gasket
168	951-14428	Choke Temp Control Thermostat
169	951-14429	Muffler Assembly
170	951-14430	Muffler Shield
171	951-10351	Spark Arrestor
172	710-04983	Spark Arrestor Screw
173	951-14431	Cylinder Head Gasket
174	715-04108	Cylinder Head Dowel Pin Φ 10x16
175	747-04862	Push Rod
176	951-14432	Tappet
177	951-11741	Camshaft Assembly
	952Z6X65RU	Complete Engine

 6X65RU Fuel Tank

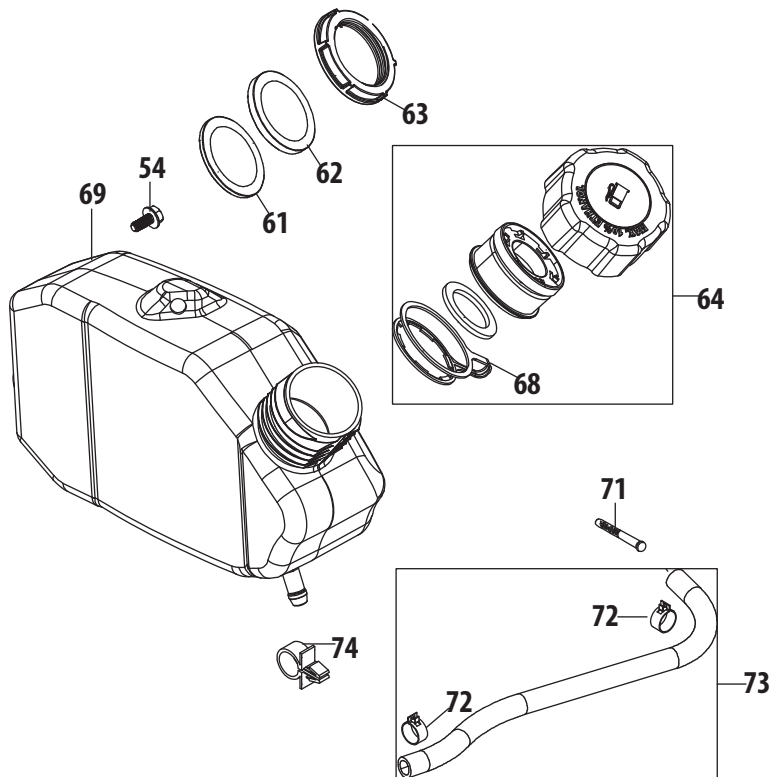

Ref.	Part Number	Description
54	710-04916	Bolt M6X14 Multi-Purpose
61	731-08133	Fuel Tank Lower Grommet
62	951-14406	Fuel Tank Upper Grommet
63	731-08104	Fuel Tank Nut
64	951-14407	Fuel Cap Assembly
68	951-14695	Fuel Cap Tether
69	931-04629	Fuel Tank
71	951-10358A	Fuel Filter
72	951-11700	Fuel Hose Clamp
73	751-14438	Fuel Hose
74	723-04071	Plastic Support Clamp

To order replacement parts or locate your nearest service dealer call Customer Support at (800) 828-5500.
or visit www.troybilt.com to find the nearest authorized dealer in your area.

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
