




ILLUSTRATED PARTS MANUAL

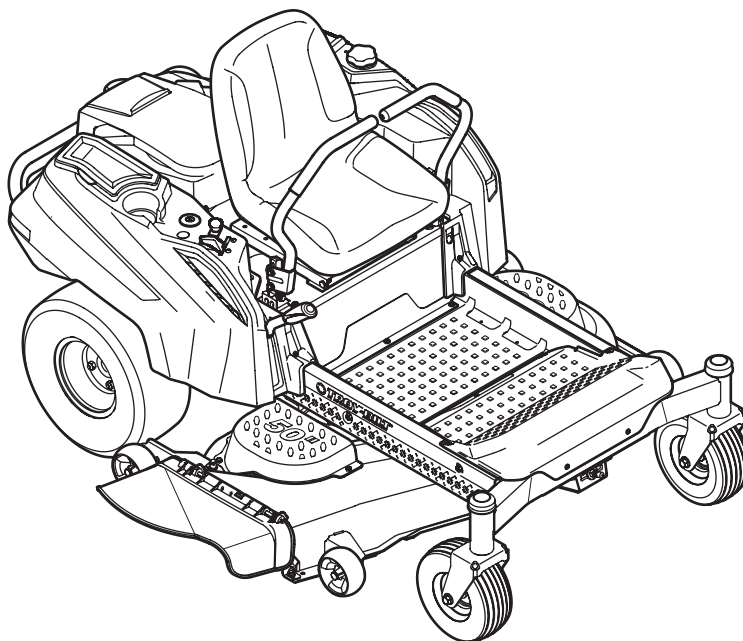

Mustang Series RZT

TROY-BILT LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing an MTD Zero-Turn Tractor. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

Deck Lift	3	Fuel Tank	14
Drive System	4	Fuel Tank (CA Models).....	15
Frame & Electrical	6	Controls	16
Engine Accessories (B&S)	8	42" Deck	18
Engine Accessories (Kohler)	9	46" Deck	20
Operator's Platform	10	50" Deck	22
Seat Adjustment	11	54" Deck	24
Front Axle 42"	12	Bumper	26
Front Axle 46/50/54"	13	Wiring Harness Schematic - 725-06000A	27

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--


SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--

Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0674	Yellow (Yard-Man)
0709	Dark Green (Bolens, Yard-Man)	0650	Metallic Red (White Outdoor)
0662	Oyster Gray (MTD Gold)	0629	Silver Flake (MTD Platinum)
0638	Red (Yard Machines, Huskee, Troy-Bilt, MTD)	04038	Day Orange (Daedong)
0691	Black Jack (MTD Gold, MasterCut)	04033	Flint Mica (Troy-Bilt XP)

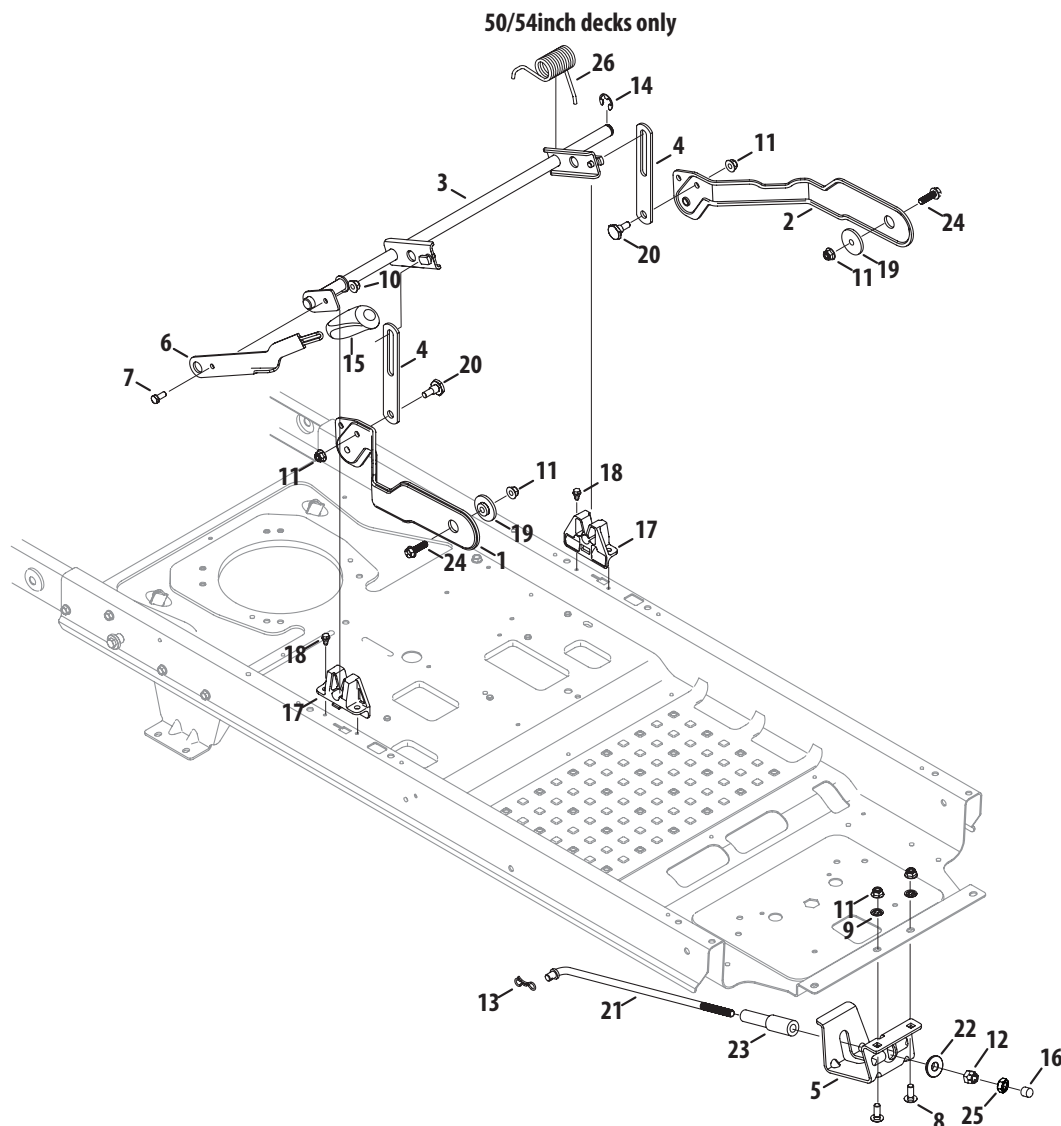


Ref	Part Number	Description
1	603-05107B	Deck Lift Plate, RH
2	603-05108B	Deck Lift Plate, LH
3	903-05138	Deck Lift Shift Assembly
4	703-08591A	Lift Link Plate
5	703-08644	Rod Support Mounting Bracket
6	703-09621	Deck Lift Handle
7	710-3008	Hex Cap Screw, 5/16-18 x .75
8	710-3168	Carriage Bolt, 3/8-16 x 1.00
9	712-0229	Push Nut, 3/8
10	712-04063	Flange Lock Nut, 5/16-18
11	712-04065	Flange Lock Nut, 3/8-16
12	712-05046	Hex Nut, 1/2-13
13	714-05005	Bow-Tie Cotter Pin

Ref	Part Number	Description
14	916-0231	E-Type Ring, .750
15	720-04139B	Grip, .50 ID
16	726-05009	End Cap
17	731-08782	Deck Lift Bracket
18	738-04278	Shoulder Screw, .500 x 1/4-20
19	738-05029	Shoulder Spacer, .854 x .232
20	938-0507B	Shoulder Screw, .500 Dia. x .434
21	747-05552C	Deck Lift Rod
22	748-04069	Deck Lift pivot Cup
23	750-05658	Nylon Sleeve, .55 ID x 4.50 LG
24	710-04683C	Screw, 3/8-16 x 1.00
25	912-3048	Jam Nut, 1/2-13
26	732-04947A†	Torsion Spring, 1.323 ID x 2.83 LG


† If Equipped

Drive System

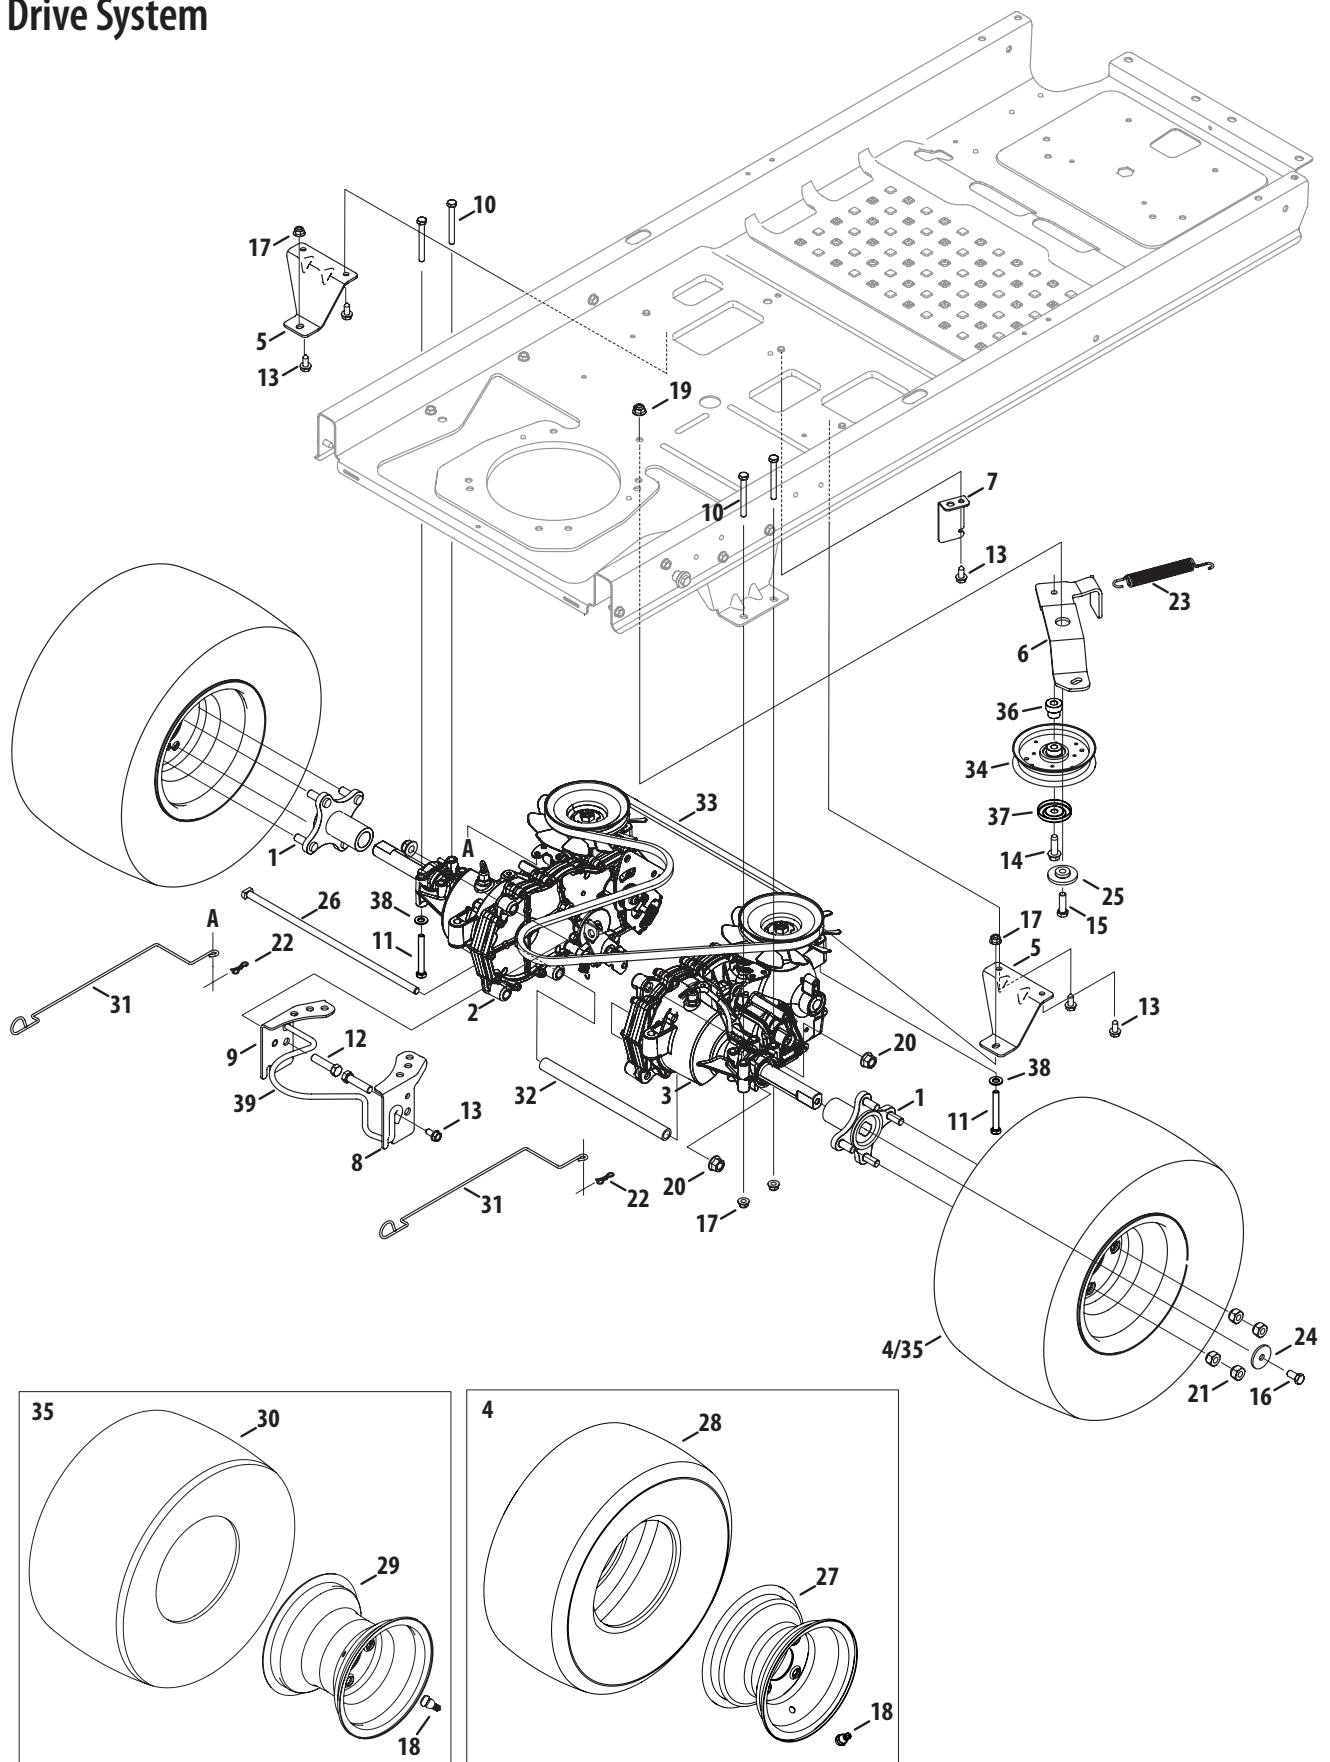


Ref.	Part Number	Description
1	918-04317	Wheel Hub Assembly
2	918-05128A	Transmission Assembly, LH
3	918-05129A	Transmission Assembly, RH
4	634-04293-0911	Complete Wheel, 18 x 8.5-8 (42" & 46)
5	703-08570	Transmission Mounting Bracket
6	703-08605	Idler Bracket
7	703-08613A	Spring Mounting Bracket
8	703-08614A	Transmission Bracket
9	703-08615A	Transmission Bracket
10	710-0176	Hex Screw, 5/16-18 x 2.75
11	710-0395	Hex Screw, 5/16-18 x 2.25
12	710-04092	Hex Screw, 7/16-20 x 1.75
13	710-04484	Hex Washer Screw, 5/16-18 x .750
14	710-1315	Hex Washer Screw, 3/8-16 x 1.250
15	710-0514	Hex Screw, 3/8-16 x 1.00
16	710-3119	Hex Screw, 3/8-16 x .75
17	712-04063	Flange Lock Nut, 5/16-18
18	934-0255	Valve Tubeless
19	912-3020	Jam Lock Nut, 3/8-16
20	712-0459	Flange Lock Nut, 7/16-20
21	712-3050	Lug Nut, 7/16-14
22	714-04040	Bow-Tie Cotter Pin
23	732-04229	Extension Spring, .75 Dia. x 6.02
24	936-0227	Flat Washer, .390 x 1.50 x .134
25	738-04162C	Shoulder Spacer, .884 x .190
26	738-04192B	Rod, .405 Dia. x 14.0 LG
27	603-04173-0662	Rim Only, (42" & 26")
28	734-04246-0901	Tire Only, 18 x 8.5-8 (42" & 46")
29	603-04175-0662	Rim Only, (50" & 54")
30	734-1729-0901	Tire Only, 18 x 9.5-8 (50" & 54")
31	747-05657A	Bypass Rod
32	750-04561A	Tube, .51 ID x .75 OD x 10.2
33	954-04317A	Belt, A-Type x 67.0
34	756-05042	Idler Pulley, 4.25 Dia.
35	634-04128-0911	Complete Wheel, 18 x 9.5-8 (50" & 54")
36	748-05029A	Shoulder Spacer
37	783-08389	Pulley Cap
38	936-0264	Flat Washer, .330 x .630 x .064
39	747-06037	Engine Keeper Rod (42")
	747-06070	Engine Keeper Rod (46", 50" & 54")

Frame & Electrical

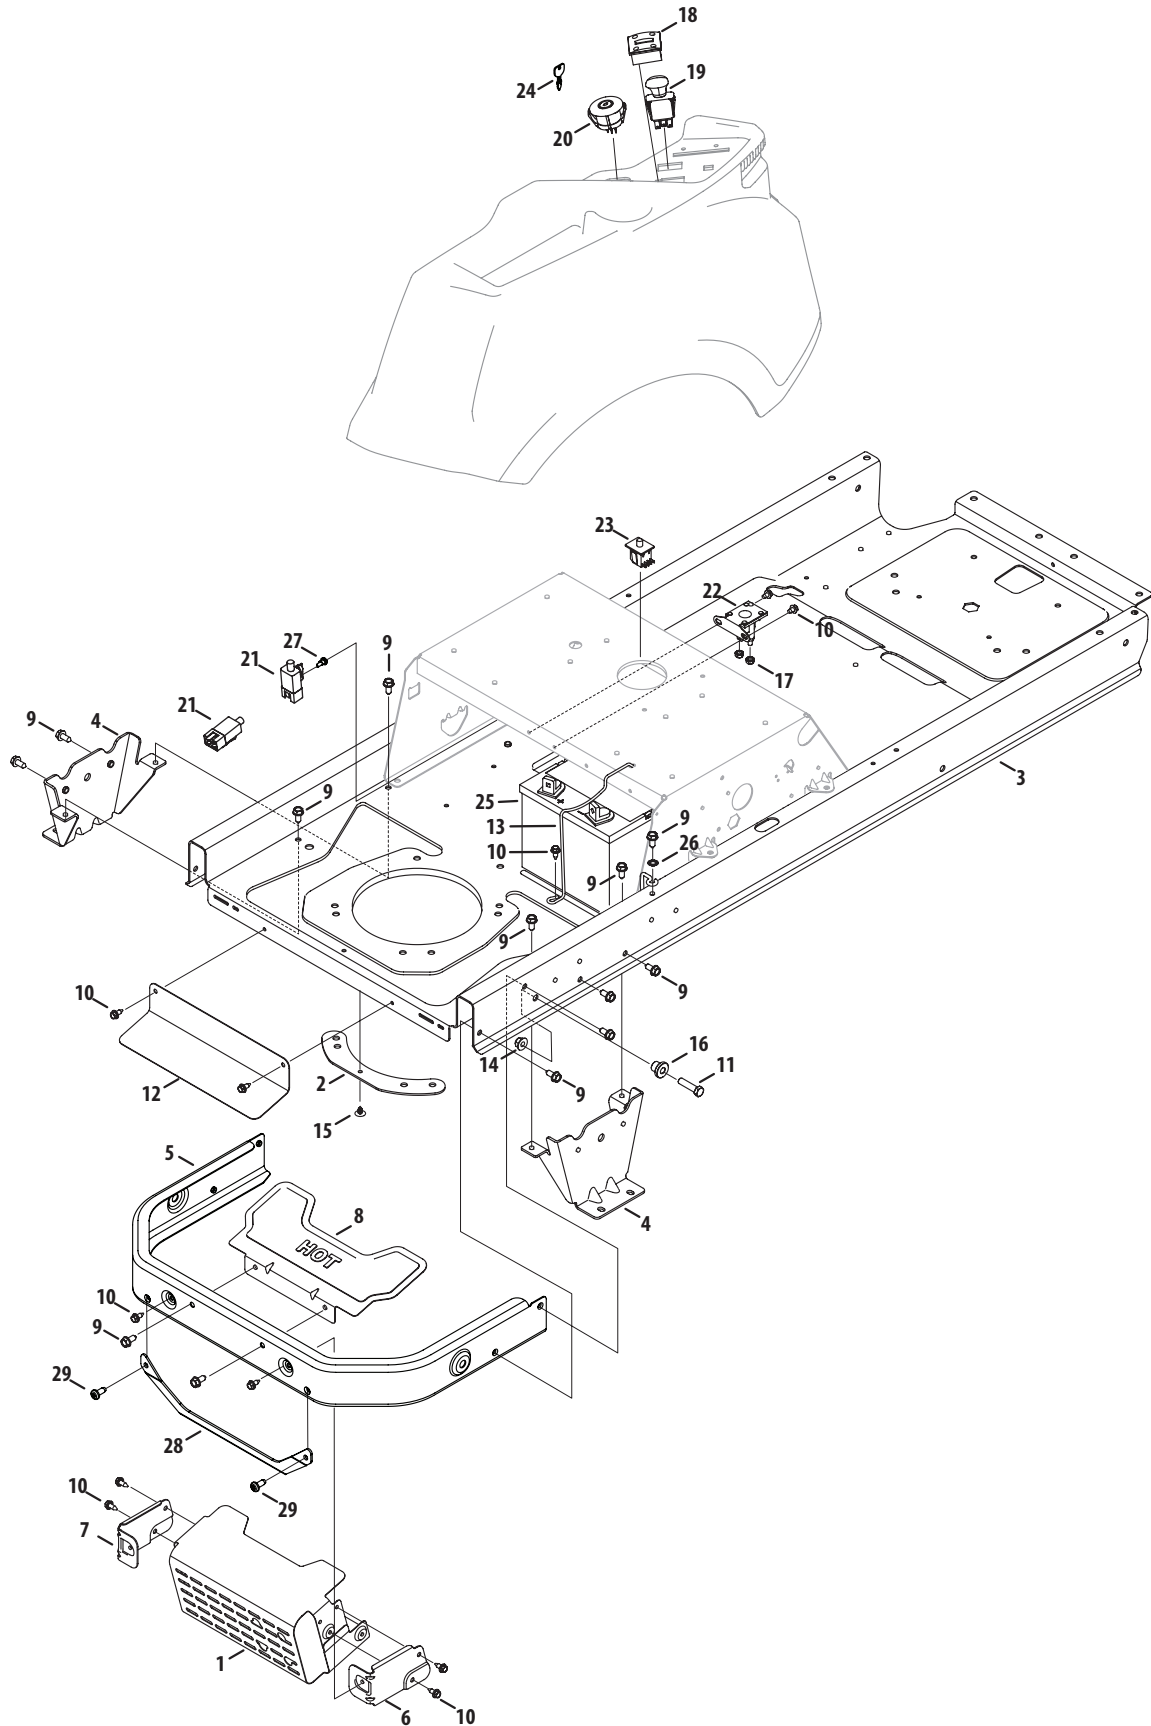

Ref	Part Number	Description
1	603-05156A	Muffler Shield Assembly
2	703-05383B	Retainer Plate
3	703-09578B	Frame Assembly
4	703-08555	Transmission Mounting Bracket
5	703-08558B	Rear Bumper
6	703-08671A	Muffler Mounting Shield Bracket, RH
7	703-08695	Muffler Mounting Shield Bracket, LH
8	703-09083	Muffler Shield
9	710-04484	Hex Washer Screw, 5/16-18 x .750
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3005	Hex Screw, 3/8-16 x 1.25
12	703-09195	Lower Heat Shield
13	747-05685	Battery Rod
14	712-04065	Flange Lock Nut, 3/8-16
15	726-04072A	Clip, .250 Dia. x .500 LG
16	738-04058	Shoulder Spacer, .38 x 1.0 x .70
17	712-04064	Flange Lock Nut, 1/4-20
18	925-06170	Hour Meter/Service Minder
19	925-3233	Electric PTO Switch
20	925-04228	Key Switch
21	725-04363	Interlock Switch
22	725-06153	Solenoid
23	925-05013	Seat Switch
24	625-05002	Key, Assembly
25	925-1707D	Battery
26	736-0607	Lock Washer, 5/16
27	738-04237A	Shoulder Screw, #10-32 x .500
28	703-09884	Rear Muffler Shield Bracket
29	710-06096	Screw, Self-Tapping, 5/16-18, 0.750
—	925-06000A	Harness Assembly


Engine Accessories (B&S)

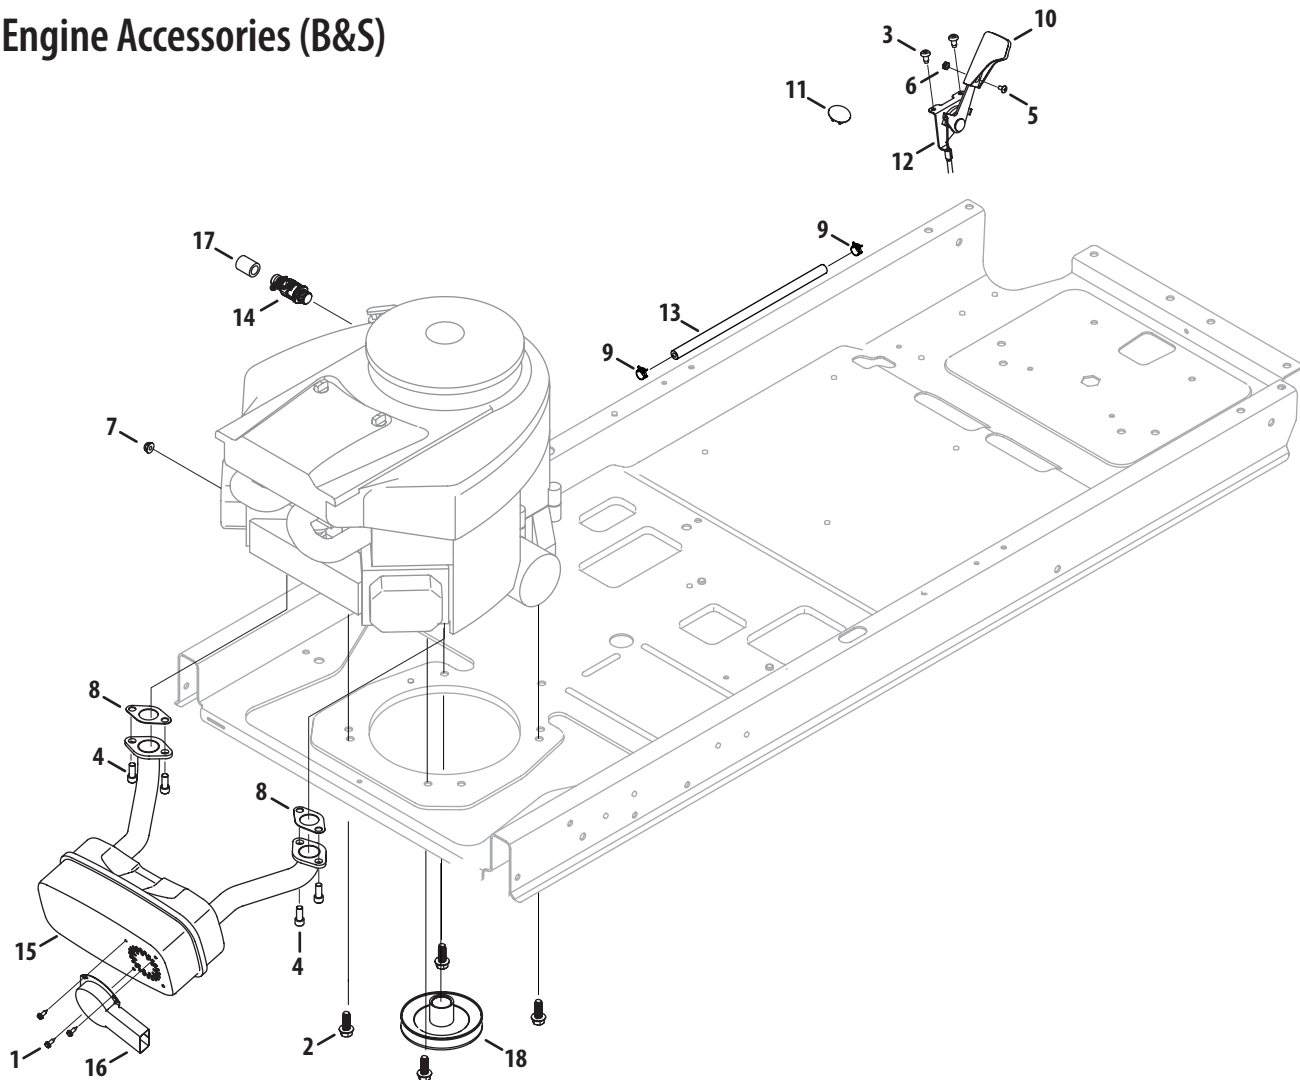

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683C	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070A	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp, .490 Dia.

Ref.	Part Number	Description
10	731-09637	Throttle Control Knob
11	731-1999	Choke Plug
12	946-05130	Throttle/Choke Control Cable
13	751-10349-28	Fuel Hose, 1/4
14	951-10517A	Oil Drain
15	751-10542A	Muffler, Intek Twin
16	751-11053A	Muffler Deflector Long
17	751-3141-14	Oil Drain Hose
18	756-04494	Engine Pulley


Engine Accessories (Kohler)

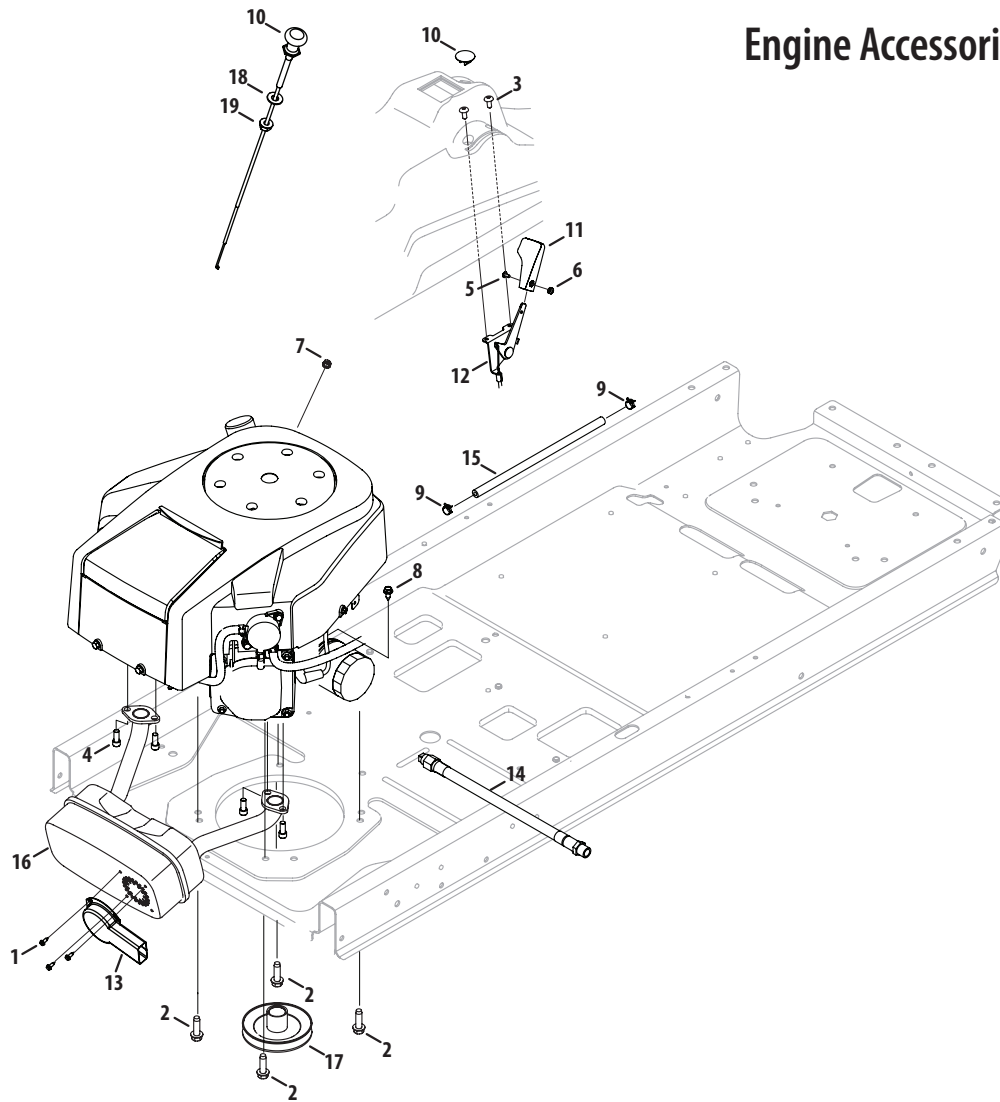

Ref.	Part Number	Description
1	710-0227	Hex Washer Screw, #8-18 x .500
2	710-04683C	Hex Washer Screw, 3/8-16 x 1.00
3	710-05070A	Screw, 1/4-20 x .50
4	710-1314A	Socket Head Screw, 5/16-18 x .750
5	710-3217	Screw, #8-32 x .375
6	712-0142	Hex Nut, #8-32
7	712-04064	Flange Lock Nut, 1/4-20
8	710-1652	Hex Washer Screw, 1/4-20 x .625
9	726-0205	Hose Clamp, .490 Dia.
10	731-1999	Choke Plug
	946-04847	Choke Control (International)


Ref.	Part Number	Description
11	731-09637	Throttle Control Knob
12	946-05145	Throttle/Choke Control Cable
	946-05129	Throttle Cable (International)
13	751-11053A	Muffler Deflector Long
14	751-10291A	Oil Drain Hose
15	751-10349-28	Fuel Hose, 1/4
16	751-10528B	Twin Muffler
17	756-04494	Engine Pulley
18	936-0300	Flat Washer, .406 x .875 x .059
19	912-3005	Flange Lock Nut, 3/8-16

Operator's Platform

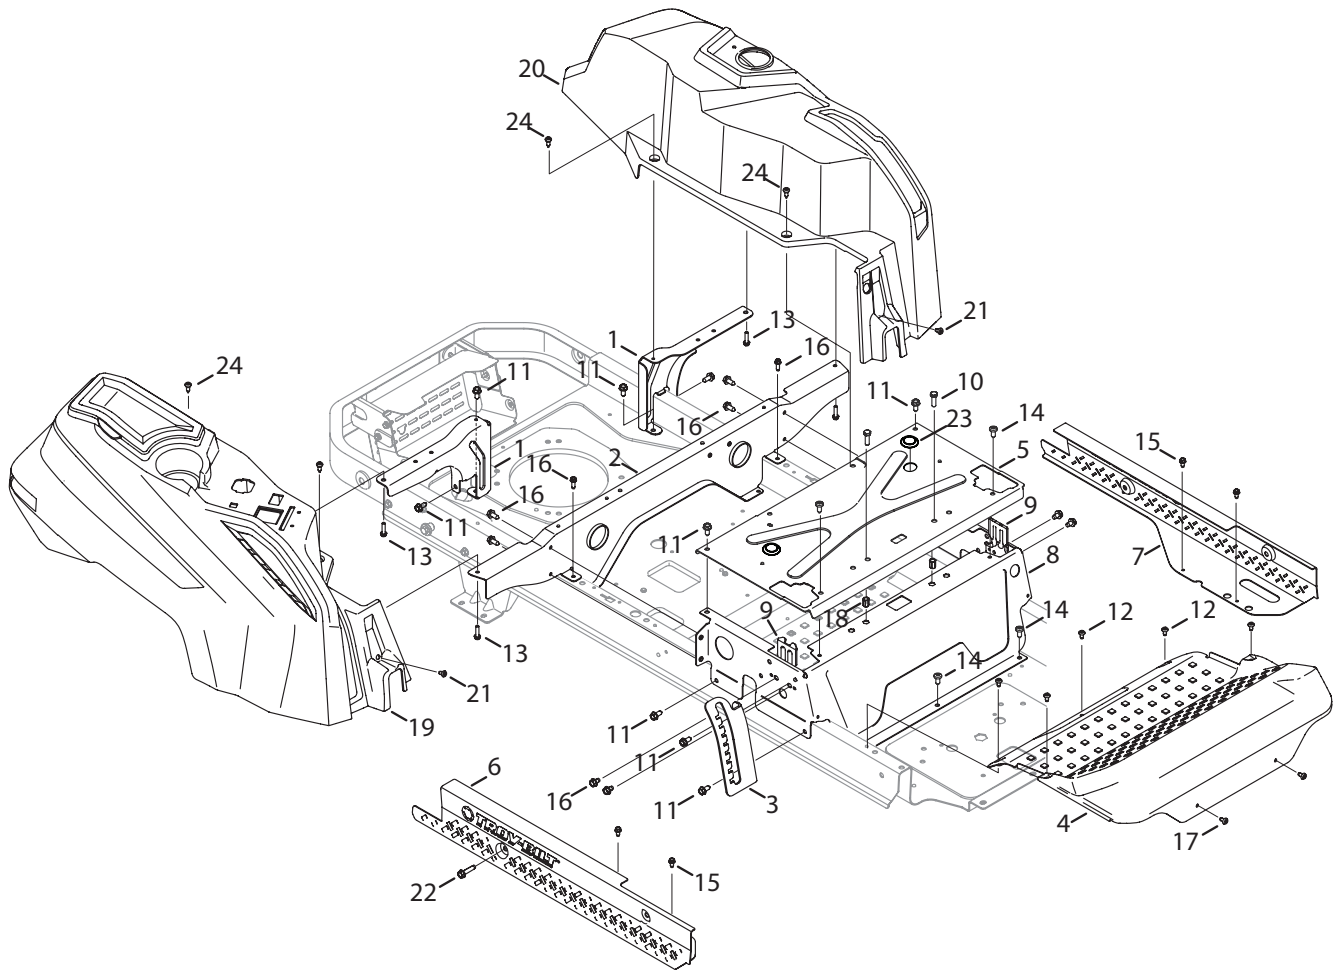


Ref.	Part Number	Description
1	703-08720A	Rear Tank Bracket
2	703-09332A	Rear Seatbox Brace
3	703-08762C	Height Index Bracket
4	703-08902A	Floor Board
5	703-09045D	Seatbox Plate
6	703-09119	Frame Support, RH
7	703-09139	Frame Support, LH
8	703-09320	Seat Frame
9	703-09211A	Lapbar Brace Bracket
10	710-0643	Hex Cap Screw, 5/16-18 x 1.00
11	710-04484	Hex Washer Screw, 5/16-18 x .750
12	710-05070A	Self Tapping Screw, 1/4-20 x .50

Ref.	Part Number	Description
13	710-05109	Hex Washer Screw, 5/16-14 x 1.00
14	710-05424	Self Tapping Screw, 5/16-18 x .750
15	710-0599	Hex Washer Screw, 1/4-20 x .500
16	710-0607	Hex Washer Screw, 5/16-18 x .50
17	710-06096	Screw, Self-Tapping, 5/16-18, 0.750
18	728-04068	Nut, 5/16-18
19	931-09040	RH Console
20	931-10106	LH Console
21	738-04549A	Shoulder Screw, 1/4-20
22	710-1315	Hex Washer Screw, 3/8-16 x 1.25
23	726-3045A	Button Plug
24	738-05090	Shoulder Screw, .368 x .115, M6-1

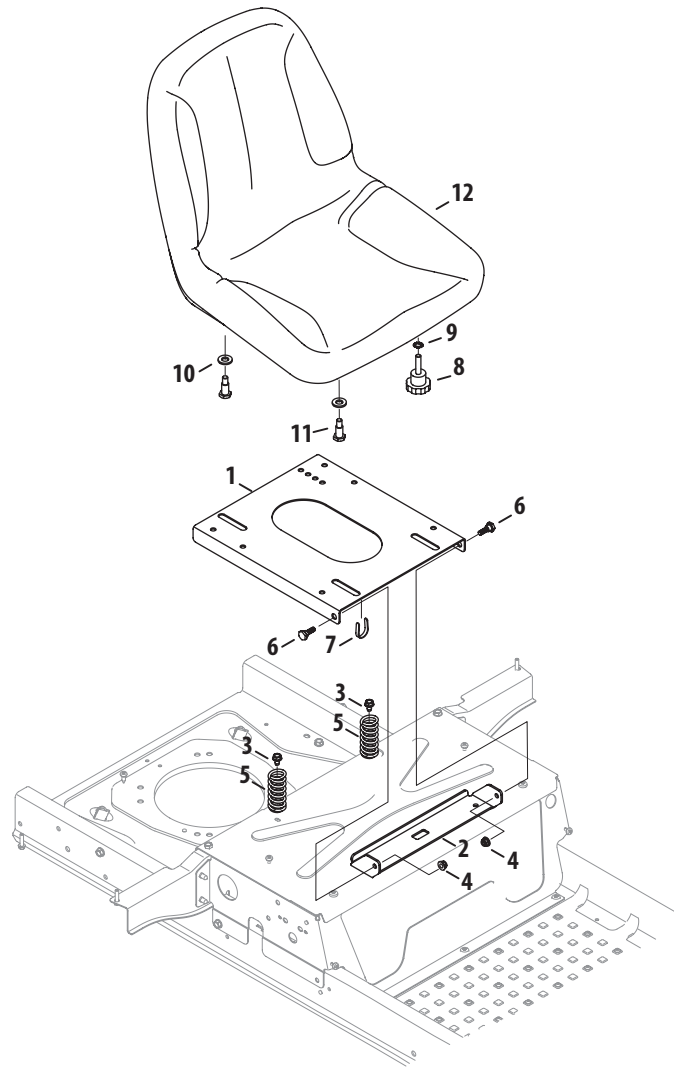

Ref.	Part Number	Description
1	703-09603A	Seat Mount Bracket
2	703-09633	Seat Bracket
3	710-1260A	Hex Washer Screw, 5/16-18 x .750
4	712-04063	Flange Lock Nut, 5/16-18
5	732-04035	Spring, Compression, 1.28 OD x 3.125 Lg
6	938-0296	Shoulder Screw, .437 x .268, 5/16-18
7	783-06448	Clip
8	731-05131	Knob Assembly
9	736-0148	External Tooth Lock Washer, 3/8
10	936-0326	Flat Washer, .510 x 1.00 x .125
11	938-0145	Shoulder Screw, 3/8-16
12	757-05004	Seat


Front Axle 42"

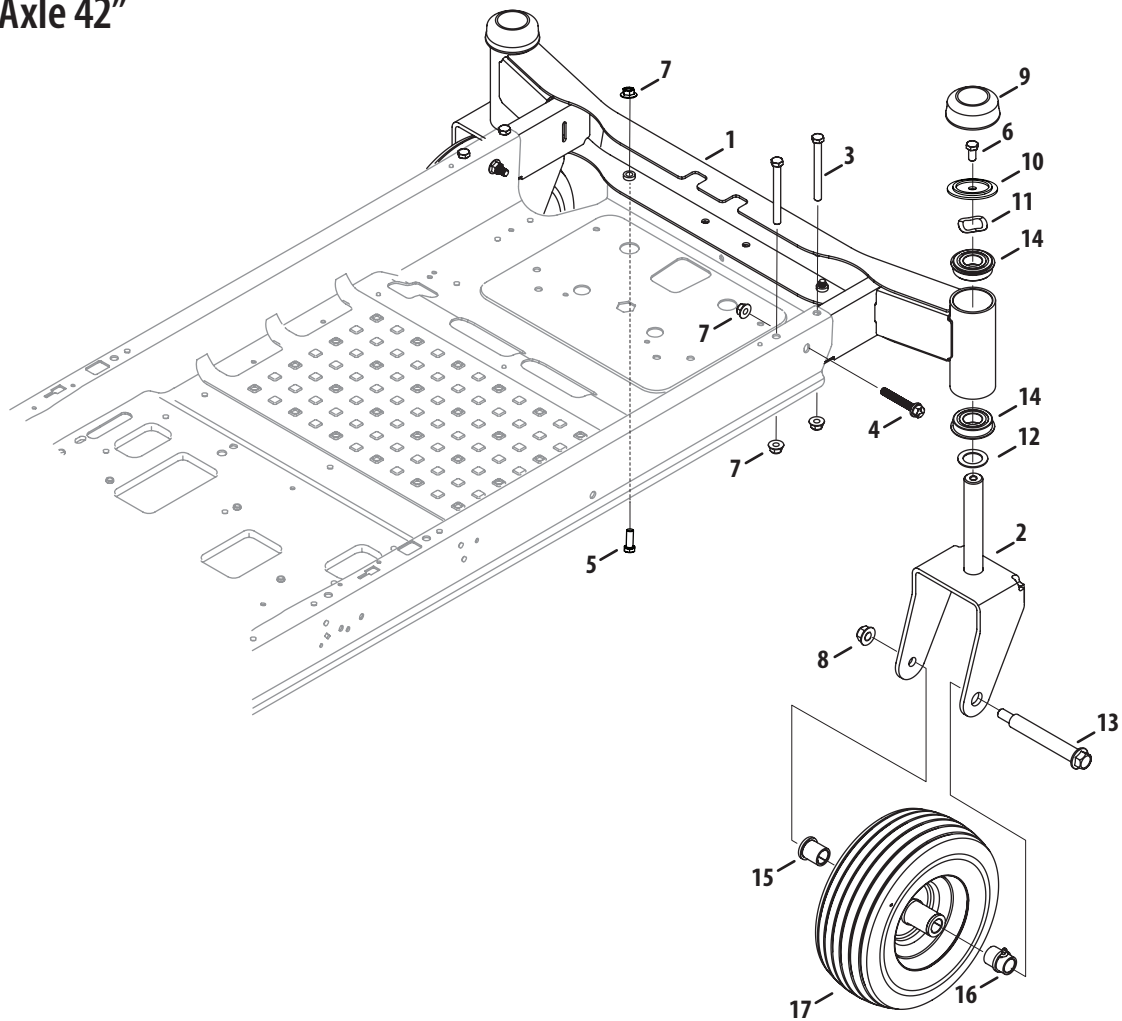

Ref.	Part Number	Description
1	603-05134	Front Axle
2	603-05057C	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-06093	Hex Flange Screw, 3/8-16 x 2.00
5	710-0514	Hex Cap Screw, 3/8-16 x 1.00
6	710-3119	Hex Cap Screw, 3/8-16 x .750
7	712-04217	Flange Lock Nut, 3/8-16
8	712-04150	Flange Lock Nut, 1/2-13
9	731-09347	Cap

Ref.	Part Number	Description
10	738-05091	Shoulder Spacer, 2.50 x .200
11	736-05033A	Wave Washer, 1.25 x 1.00 x .300
12	736-0745	Flat Washer, 1.010 x 1.56 x .060
13	738-04182B	Shoulder Screw, 1/2-13
14	941-05022A	Ball Bearing
15	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
16	741-0990B	Flange Bearing, .76 ID w/Lube Ftg.
17	634-04237B	Wheel Assembly, 11.0 x 4.0 x 5.0


Front Axle 46/50/54"

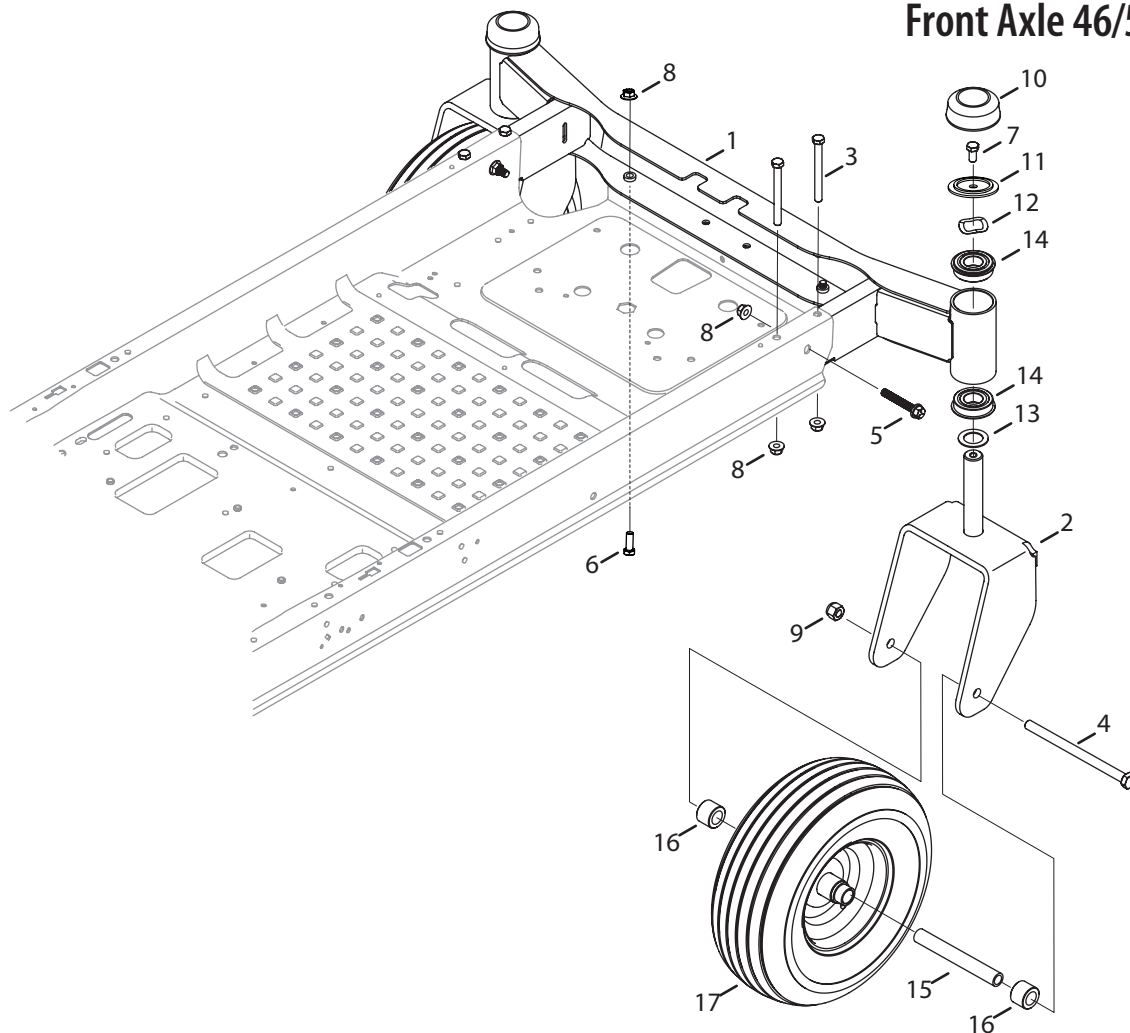

Ref.	Part Number	Description
1	603-05135	Front Axle
2	603-05058B	Caster Wheel Bracket
3	710-04576	Hex Cap Screw, 3/8-16 x 3.75
4	710-04652	Hex Cap Screw, 1/2-20 x 7.25
5	710-06093	Hex Flange Screw, 3/8-16 x 2.00
6	710-0514	Hex Cap Screw, 3/8-16 x 1.00
7	710-3119	Hex Cap Screw, 3/8-16 x .750
8	712-04217	Flange Lock Nut, 3/8-16
9	912-3058	Hex Lock Nut, 1/2-20


Ref.	Part Number	Description
10	731-09347	Cap
11	738-05091	Shoulder Spacer, 2.50 x .200
12	736-05033A	Wave Washer, 1.25 x 1.00 x .300
13	736-0745	Flat Washer, 1.010 x 1.56 x .060
14	941-05022A	Ball Bearing
15	750-04775A	Spacer, .51 x .75 x 5.825
16	750-04792	Hub, .76 x 1.23 x .92
17	634-04711-0931	Wheel Assembly, 13 x 5 x 6

Fuel Tank

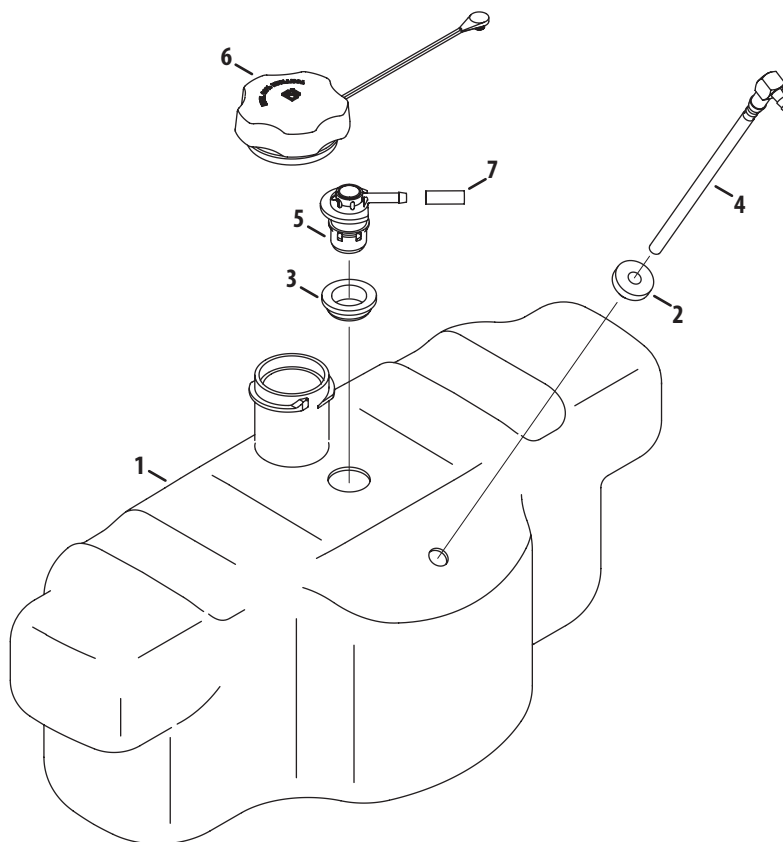


Ref.	Part Number	Description
1	951-05137	Fuel Tank
	951-05138	Fuel Tank (International)
2	935-0149	Fuel Tank Bushing
3	735-04081†	Rubber Grommet
4	751-10442	Fuel Pickup Fitting
5	751-12118†	Rollover Valve
6	951-12179B	Fuel Cap
7	751-12089-51†	Vent Hose

† If Equipped

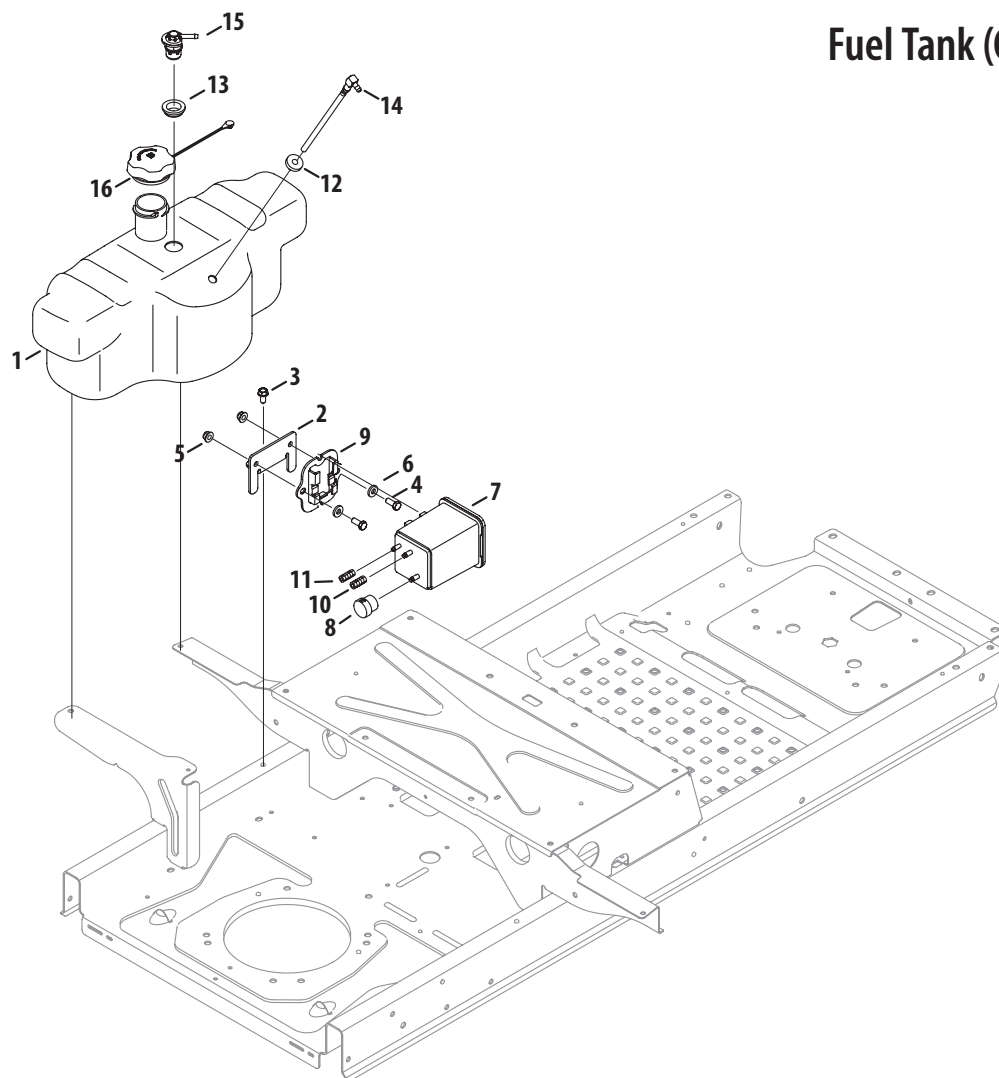


Ref.	Part Number	Description
1	951-05137	Fuel Tank
2	703-08769	Carbon Canister Bracket
3	710-04484	Hex Washer Screw, 5/16-18 x .750
4	710-3008	Hex Screw, 5/16-18 x .75
5	712-04063	Flange Lock Nut, 5/16-18
6	936-3008	Flat Washer, .344 x .750 x .120
7	951-10589	Carbon Canister
8	951-10590	Cannister Filter Vent
9	951-10610	Cannister Adapter Bracket
10	751-10750	Low Perm Fuel Hose 7/32 Yellow
11	751-10749	Vent Hose, Carb
12	935-0149	Fuel Tank Bushing
13	735-04081	Rubber Grommet
14	751-10442	Fuel Pickup Fitting
15	751-12118	Rollover Valve
16	951-12426A	Fuel Cap

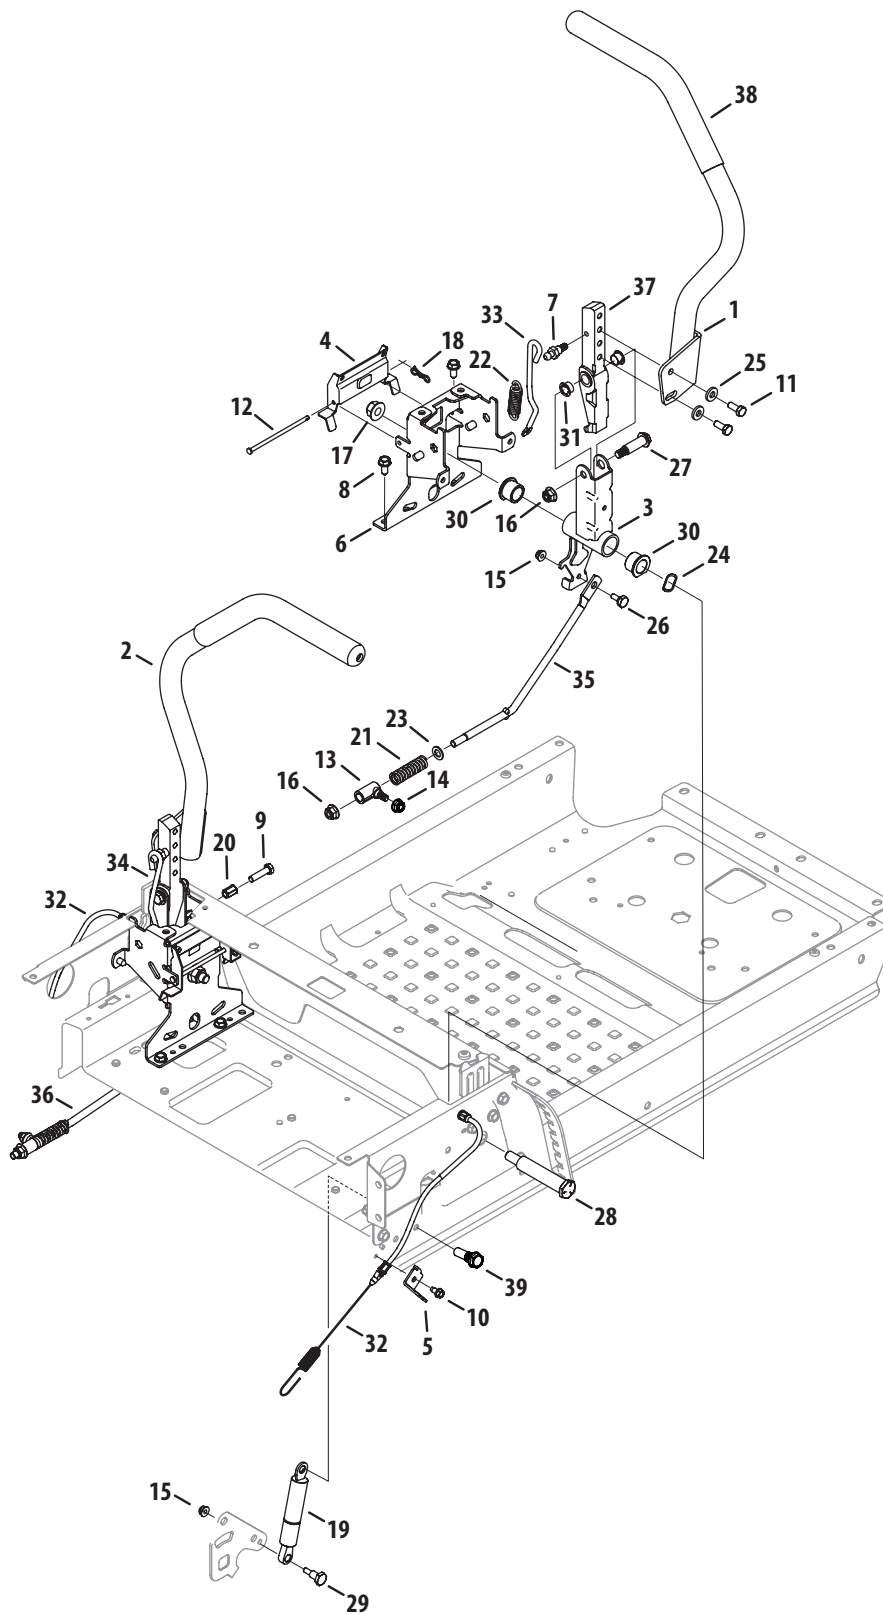

Ref.	Part Number	Description
1	603-05124A	RH Lapbar Lever Assembly
2	603-05126A	LH Labpar Lever Assembly
3	603-05033A	Lapbar Pivot Bracket
4	703-09069	Brake Lever Actuator
5	703-09220	Brake Cable Bracket
6	703-09325A	Lapbar Pivot Support Bracket
7	710-04471	Screw, Shoulder Ball, 5/16-18 x .48
8	710-04484	Hex Washer Screw, 5/16-18 x .750
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25
10	710-0599	Hex Washer Screw, 1/4-20 x .500
11	710-1880	Hex Head Screw, 5/16-18 x .75 Patch
12	711-06068	Pin, .188 x 4.1
13	711-06094A	Ferrule, 3/8 ID x .420 Shldr
14	712-04063	Flange Lock Nut, 5/16-18
15	712-04064	Flange Lock Nut, 1/4-20
16	712-04065	Flange Lock Nut, 3/8-16
17	712-04150	Flange Lock Nut, 1/2-13
18	714-04040	Bow-Tie Cotter Pin
19	727-04400A	Dampener, .87 OD x 7.06 Lg
20	728-05012	Nut, 5/16-18

Ref.	Part Number	Description
21	732-05075	Compression Spring, .45 x 3.215
22	732-1162	Extension Spring, .56 x 2.31 x .105
23	936-0140	Flat Washer, .385 x .62 x .063
24	736-0621	Washer, Wave, .785 x 1.0 x .012
25	936-3008	Flat Washer, .344 x .750 x .120
26	938-0255	Shoulder Screw, .375 Dia. x .181
27	738-05025	Shoulder Screw, .498 Dia. x 1.296
28	738-05033	Shoulder Screw, .75 x 3.25 x 1/2-13
29	738-05034	Shoulder Screw, .395 Dia. x .56
30	741-04050	Bearing, .75 x 1.00 x .73
31	741-0748	Flange Bearing, .500 x .627
32	946-05008	Park Brake Cable
33	747-06295	Lapbar Detent Rod, RH
34	747-06294	Lapbar Detent Rod, LH
35	747-06149A	Hydro Control Rod, RH
36	747-06160A	Hydro Control Rod, LH
37	941-00022	Lower Arm
38	720-05008	Lapbar Grip
39	738-05074	Shoulder Screw, .395 Dia. x .83


42" Deck

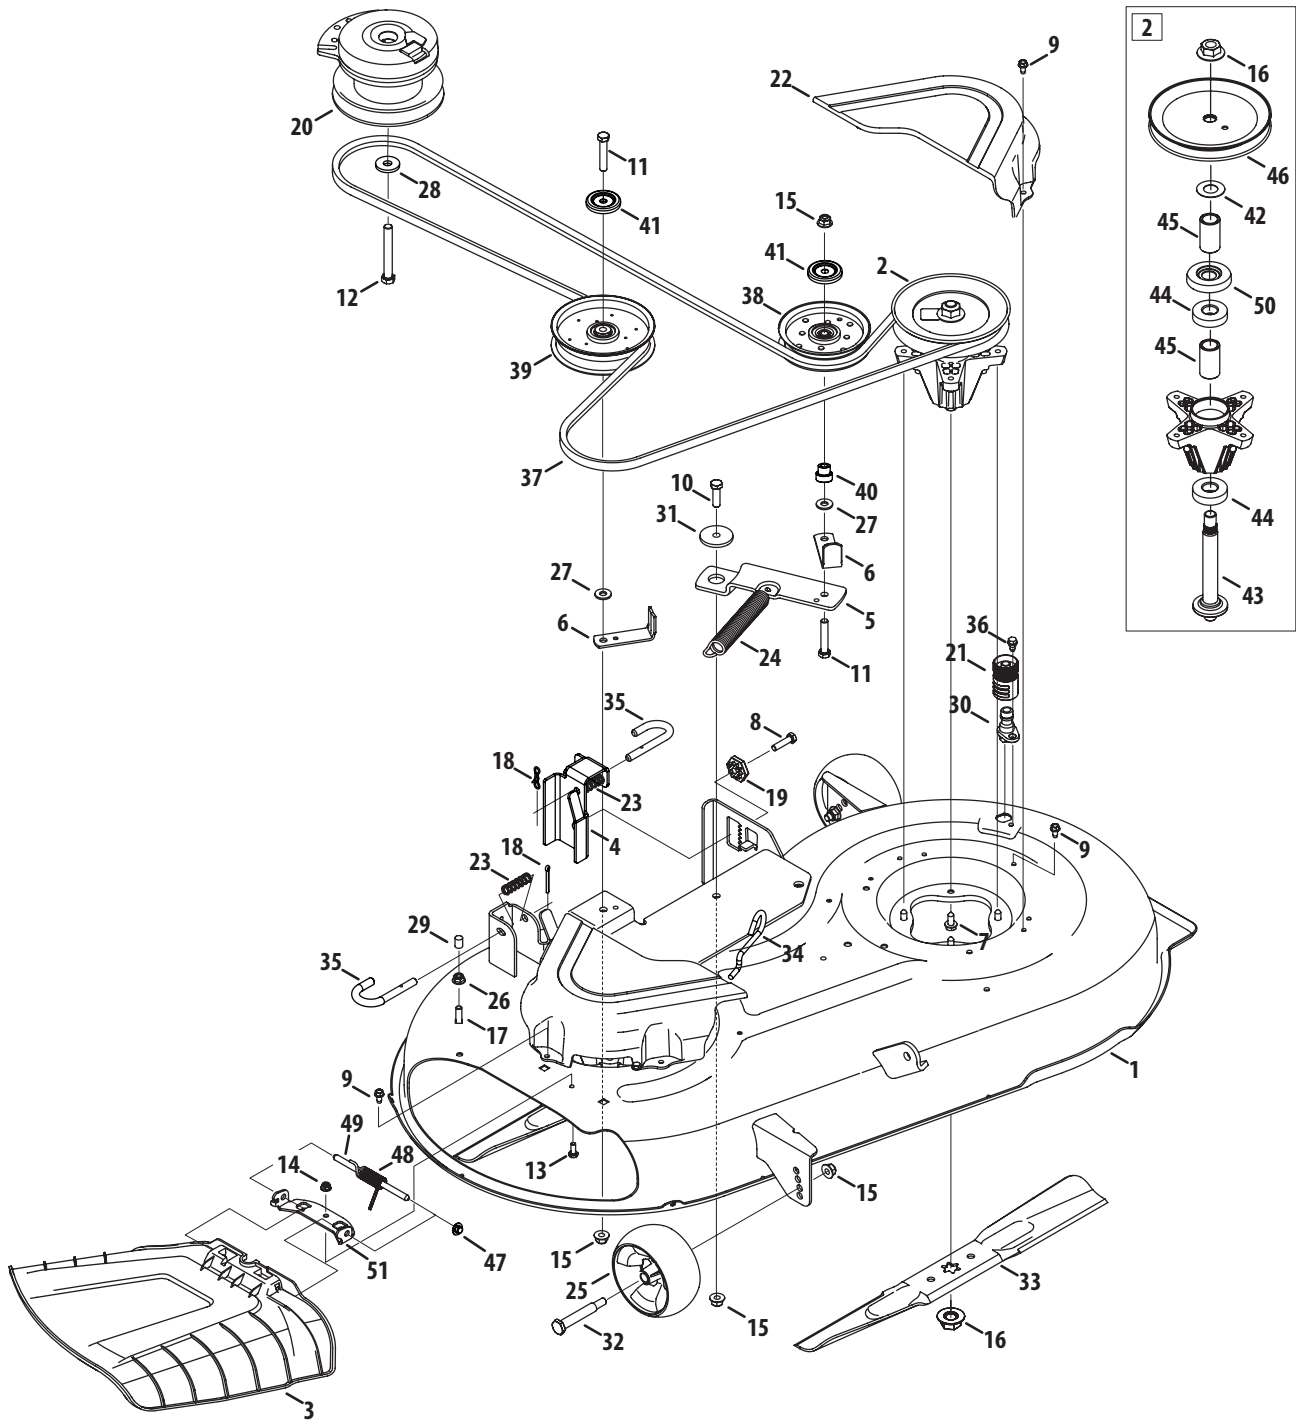

Ref.	Part Number	Description
1	903-05209	42" Deck Assembly
2	918-04822B	Spindle Assembly
3	631-04354B	Chute Deflector Assembly
4	603-05215	Deck Lift Bracket
5	703-08336C	Pivot Idler Bracket
6	703-09583	Bracket Belt Guard
7	710-1260A	Hex Washer Screw, 5/16-18 x .750
8	710-3120	Hex Cap Screw, 3/8-16 x 1.50
9	710-1652	Hex Washer Screw, 1/4-20 x .625
10	710-3005	Hex Cap Screw, 3/8-16 x 1.25
11	710-3144	Hex Cap Screw, 3/8-16 x 2.00
12	710-3157A	Screw, 7/16-20 x 3.25
13	710-0751	Hex Cap Screw, 1/4-20 x .62
14	712-04064	Nut, Flange Lock, 1/4-20, Nylon
15	712-04065	Flange Lock Nut, 3/8-16
16	712-0417A	Hex Flange Nut, 5/8-18
17	710-0376	Hex Cap Screw, 5/16-18 x 1.00
18	714-0162	Cotter Pin, 5/32 x 1.25
19	917-05298	Deck Adjustment Gear
20	917-05121	Electric PTO Clutch
21	921-04041	Water Nozzle Adapter
22	731-08698	Belt Cover
23	932-3127	Compression Spring, .66 x 1.9
24	732-04960	Extension Spring, .94 Dia. x 7.57
25	734-04155	Deck Ball Wheel, 5.0
26	712-04063	Flange Lock Nut, 5/16-18

Ref.	Part Number	Description
27	736-0262	Flat Washer, .385 x .870 x .092
28	736-0322	Flat Washer, .450 x 1.25 x .164
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	738-04162C	Shoulder Spacer, .884 x .190
32	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
33	942-04312	Blade, 2 in 1, 21.23
34	747-05608	Deck Spring Rod
35	747-06292	Deck Hanger Rod
36	738-04502	Shoulder Screw, 1/4-20 x 0.50
37	954-04033A	V-Belt
38	756-05042	Idler Pulley, 4.25 Dia.
39	756-04511B	Idler Pulley, 5.00 Dia.
40	748-05029A	Shoulder Spacer
41	783-08389	Pulley Cap
42	936-0351	Washer, .760 x 1.50 x .030
43	738-1186A	Spindle Shaft
44	941-0919B	Ball Bearing
45	750-04936	Spacer, .792 x 1.060 x 1.860
46	756-05111	Deck Pulley
47	726-04009	Push Cap
48	732-05261	Spring, Torsion, .440 ID x 1.75
49	747-06290B	Hinge Pin
50	783-08435	Bearing Shield
51	783-08504A	Bracket, Chute, 42"


46" Deck

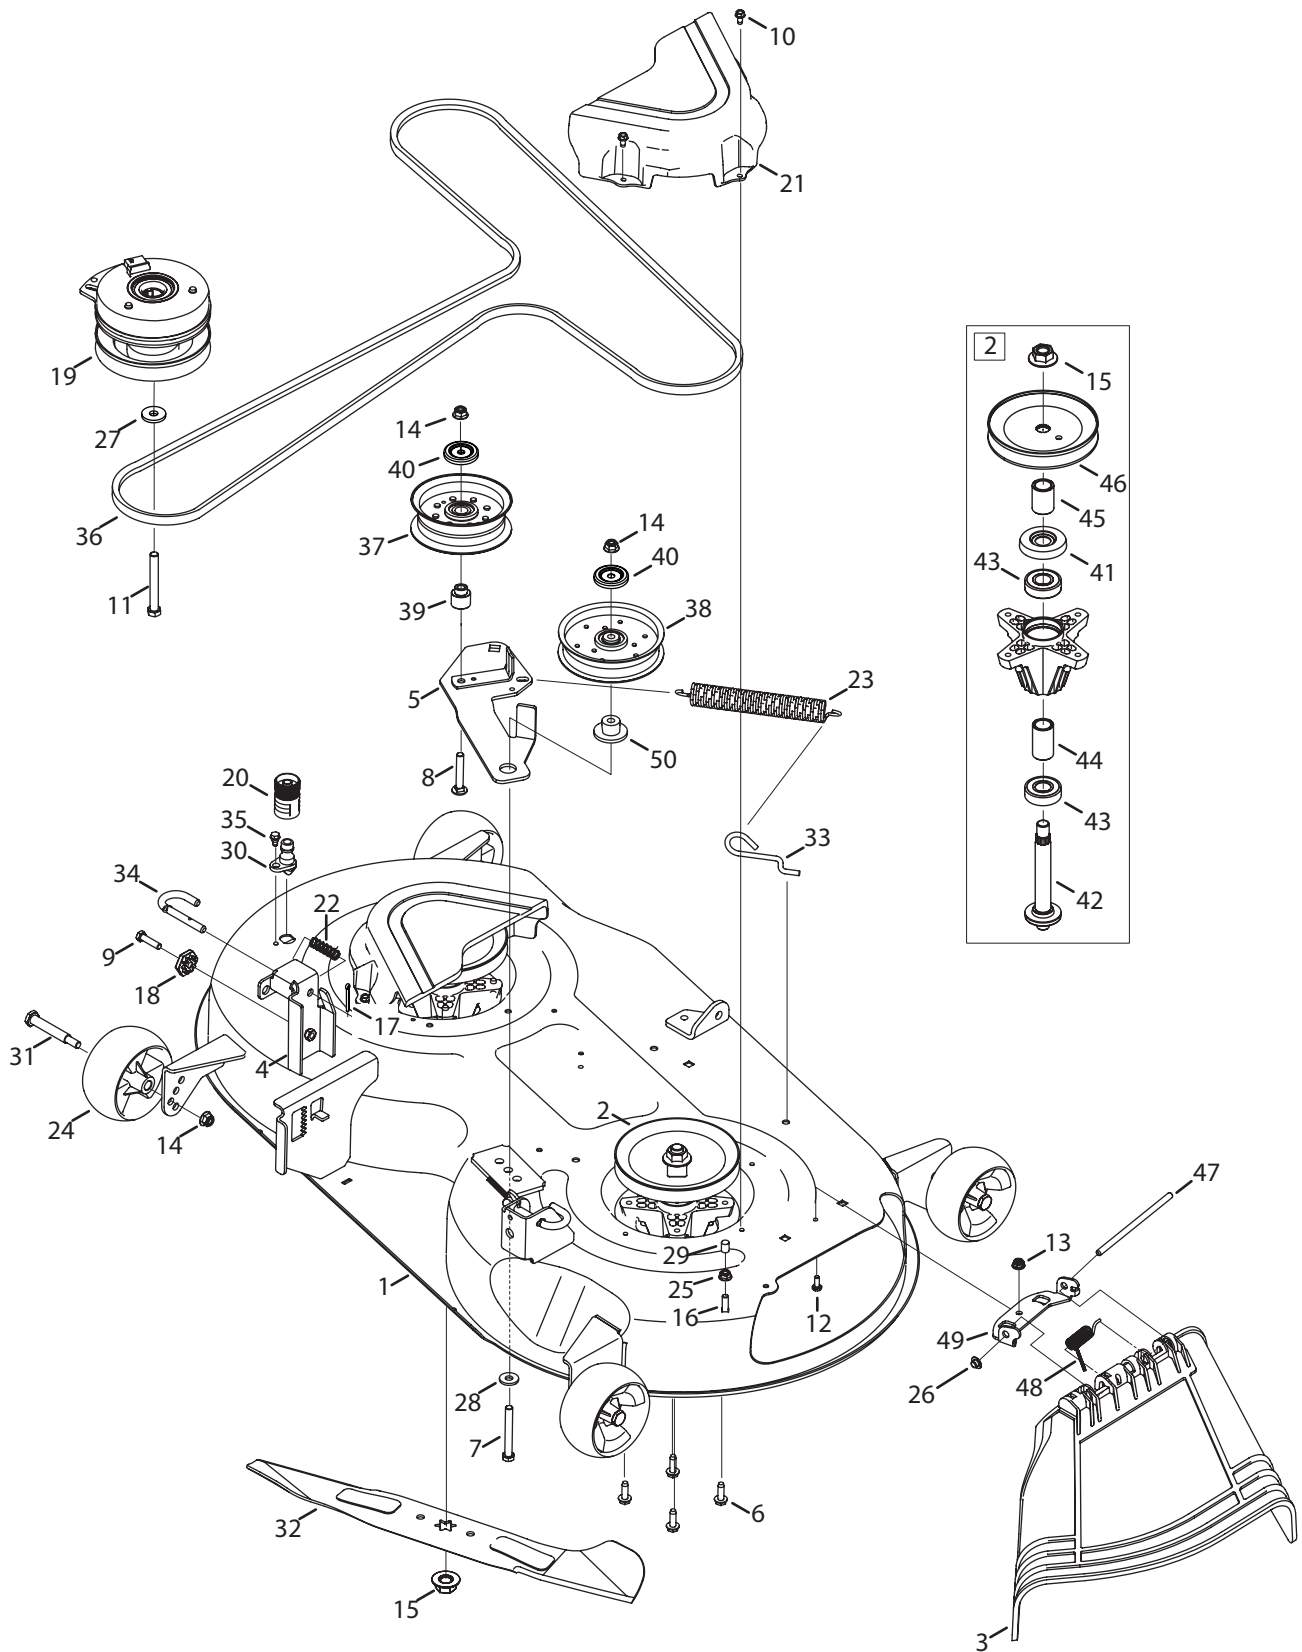

Ref.	Part Number	Description
1	903-05210	46"Deck Assembly
2	918-05078A	Spindle Assembly
3	631-04354B	Chute Deflector Assembly
4	603-05215	Deck Lift Bracket
5	903-05214	Deck Idler Assembly
6	710-1260A	Hex Washer Screw, 5/16-18 x .750
7	710-3085	Hex Cap Screw, 3/8-16 x 3.50
8	710-04157	Carriage Screw, 3/8-16 x 2.00
9	710-3120	Hex Flange Screw, 3/8-16
10	710-1652	Hex Washer Screw, 1/4-20 x .625
11	710-3157A	Screw, 7/16-20 x 3.25
12	710-0751	Hex Cap Screw, 1/4-20 x .62
13	712-04064	Nut, Flange Lock, 1/4-20, Nylon
14	712-04217	Flange Lock Nut, 3/8-16
15	712-0417A	Hex Flange Nut, 5/8-18
16	710-0376	Hex Cap Screw, 5/16-18 x 1.00
17	714-0162	Cotter Pin, 5/32 x 1.25
18	917-05298	Deck Adjustment Gear
19	917-05209	Electric PTO Clutch
20	921-04041	Water Nozzle Adapter
21	731-08698	Belt Cover
22	932-3127	Compression Spring, .66 x 1.9
23	732-04927	Extension Spring, 1.25 OD x 1.751
24	734-04155	Deck Ball Wheel, 5.0
25	712-04063	Flange Lock Nut, 5/16-18

Ref.	Part Number	Description
26	726-04009	Push Cap
27	736-0322	Flat Washer, .450 x 1.25 x .164
28	736-3052	Flat Washer, .406 x 1.00 x .105
29	720-05010	Cap, .290 x .500
30	731-07487	Deck Wash Nozzle
31	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
32	942-04244A	Blade, 2 in 1, 23.25
33	747-05608	Deck Spring Rod
34	747-06292	Deck Hanger Rod
35	738-04502	Shoulder Screw, 1/4-20 x 0.50
36	954-04325	V-Belt
37	756-05034	Pulley, Idler, 4.50" Dia.
38	756-04511B	Idler Pulley, 5.00 Dia.
39	748-05037A	Shoulder Spacer
40	783-08389	Pulley Cap
41	783-08435	Bearing Shield
42	938-1128	Spindle Shaft
43	941-0919B	Ball Bearing
44	750-04936	Spacer, .792 x 1.060 x 1.860
45	750-1343	Spacer, .8 x 1.1 x 2.26
46	756-04356	Deck Pulley
47	747-06290B	Hinge Pin
48	732-05261	Spring, Torsion, .440 ID x 1.75
49	783-08504A	Bracket, Chute, 42"
50	738-05132	Shoulder Spacer


50" Deck

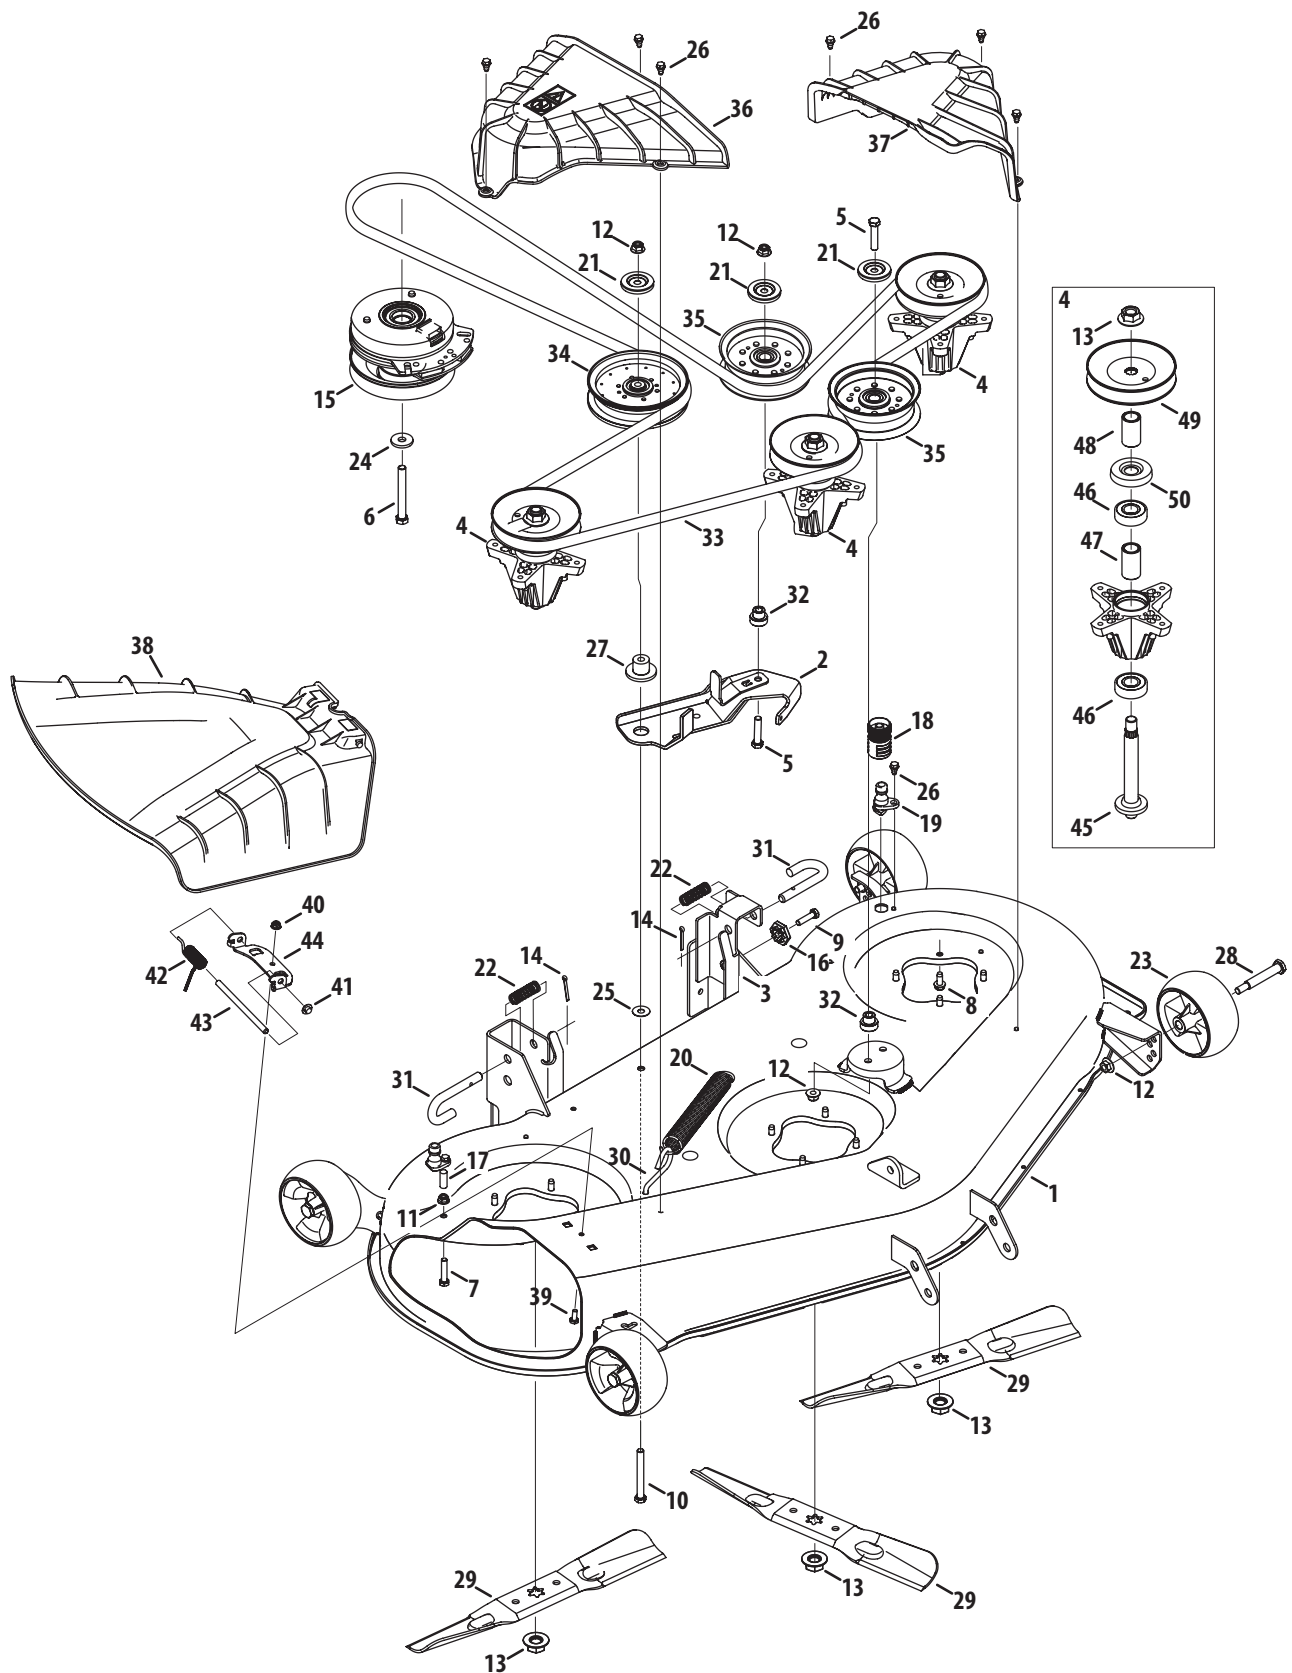

Ref.	Part Number	Description
1	903-05189	50" Deck Assembly
2	903-05211	Deck Idler Assembly
3	603-05215	Deck Lift Bracket
4	918-06980	Spindle Assembly
5	710-0347	Hex Cap Screw, 3/8-16 x 1.75
6	710-04379A	Hex Cap Screw, 7/16-20 x 3.50
7	710-0805A	Hex Head Screw, 5/16-18 x 1.50
8	710-1260A	Hex Washer Screw, 5/16-18 x .750
9	710-3120	Hex Flange Screw, 3/8-16
10	710-3130	Hex Bolt 3/8-16 x 3.25"
11	712-04063	Flange Lock Nut, 5/16-18
12	712-04065	Flange Lock Nut, 3/8-16
13	712-0417A	Hex Flange Nut, 5/8-18
14	714-0162	Cotter Pin, 5/32 x 1.25
15	917-05209	Clutch, Electric PTO
16	917-05298	Deck Adjustment Gear
17	720-05075	Vinyl Cap, .29 x 1.00
18	921-04041	Water Nozzle Adapter
19	731-07487	Deck Wash Nozzle
20	732-04927	Extension Spring, 1.25 OD x 1.751
21	783-08389	Pulley Cap
22	932-3127	Compression Spring, .66 x 1.9
23	734-04155	Deck Ball Wheel, 5.0
24	736-0322	Flat Washer, .450 x 1.25 x .164
25	936-0344	Flat Washer, .385 x 1.0 x .030

Ref.	Part Number	Description
26	738-04502	Shoulder Screw, 1/4-20 x 0.50
27	738-05081	Shoulder Spacer
28	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
29	942-05052A	Blade, Cut, 17.27" 2-In-1
30	747-05608	Deck Spring Rod
31	747-06292	Deck Hanger Rod
32	748-05029A	Shoulder Spacer
33	954-05078	V-Belt
34	756-04511B	Idler Pulley, 5.00 Dia.
35	756-05034	Pulley, Idler, 4.50" Dia.
36	731-09968	Belt Cover, RH
37	731-09969A	Belt Cover, LH
38	631-05116B	Chute Deflector Assembly
39	710-0751	Hex Cap Screw, 1/4-20 x .62
40	712-04064	Nut, Flange Lock, 1/4-20, Nylon
41	726-04009	Push Cap
42	732-05261	Spring, Torsion, .440 ID x 1.75
43	747-06290B	Hinge Pin
44	783-08504A	Bracket, Chute, 42"
45	738-1186A	Spindle Shaft, 6.11 Long
46	941-0919B	Ball Bearing
47	750-04936	Spacer, .792 x 1.060 x 1.860
48	750-06152	Spacer, .792 x 1.060 x 1.782
49	756-05036	Deck Pulley
50	783-08435	Bearing Shield


54" Deck

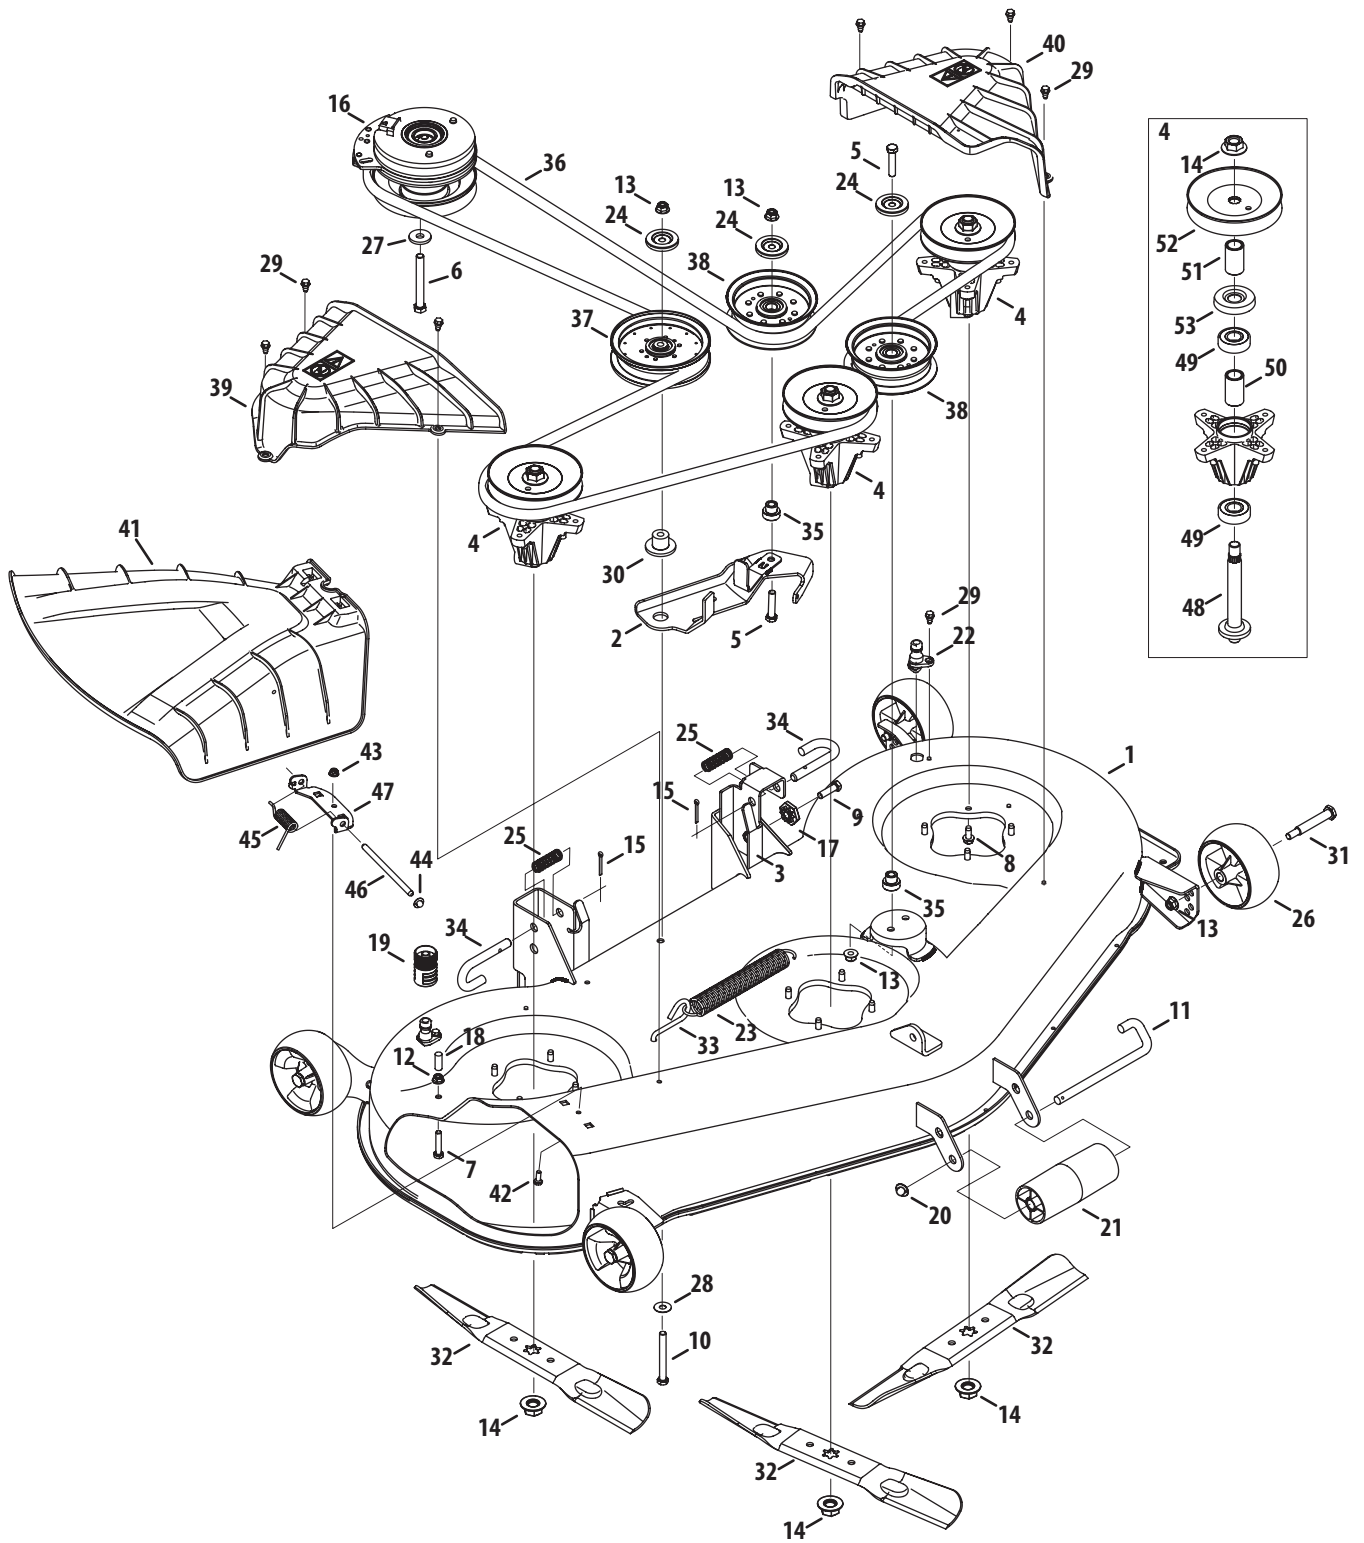

Ref.	Part Number	Description
1	903-05190	54" Deck Assembly
2	903-05211	Deck Idler Assembly
3	603-05215	Deck Lift Bracket
4	918-06978	Spindle Assembly
5	710-0347	Hex Cap Screw, 3/8-16 x 1.75
6	710-04379A	Hex Cap Screw, 7/16-20 x 3.50
7	710-0805A	Hex Head Screw, 5/16-18 x 1.50
8	710-1260A	Hex Washer Screw, 5/16-18 x .750
9	710-3120	Hex Flange Screw, 3/8-16
10	710-3130	Hex Bolt 3/8-16 x 3.25"
11	711-06377	Roller Pin, 1/2 x 7.31 Lg
12	712-04063	Flange Lock Nut, 5/16-18
13	712-04065	Flange Lock Nut, 3/8-16
14	712-0417A	Hex Flange Nut, 5/8-18
15	714-0162	Cotter Pin, 5/32 x 1.25
16	917-05209	Clutch, Electric PTO
17	917-05298	Deck Adjustment Gear
18	720-05075	Vinyl Cap, .29 x 1.00
19	921-04041	Water Nozzle Adapter
20	726-0299	Push Cap, 1/2
21	731-05679B	Front Roller
22	731-07487	Deck Wash Nozzle
23	732-04927	Extension Spring, 1.25 OD x 1.751
24	783-08389	Pulley Cap
25	932-3127	Compression Spring, .66 x 1.9
26	734-04155	Deck Ball Wheel, 5.0
27	736-0322	Flat Washer, .450 x 1.25 x .164


Ref.	Part Number	Description
28	936-0344	Flat Washer, .385 x 1.0 x .030
29	738-04502	Shoulder Screw, 1/4-20 x 0.50
30	738-05081	Shoulder Spacer
31	938-3056	Shoulder Screw, .5 x 2.5 x 3/8-16
32	942-05056A	Blade, 18.67
33	747-05608	Deck Spring Rod
34	747-06292	Deck Hanger Rod
35	748-05029A	Shoulder Spacer
36	954-04329A	V-Belt
37	756-04511B	Idler Pulley, 5.00 Dia.
38	756-05034	Pulley, Idler, 4.50" Dia.
39	731-09968	Belt Cover, RH
40	731-09969A	Belt Cover, LH
41	631-05116B	Chute Deflector Assembly
42	710-0751	Hex Cap Screw, 1/4-20 x .62
43	712-04064	Nut, Flange Lock, 1/4-20, Nylon
44	726-04009	Push Cap
45	732-05261	Spring, Torsion, .440 ID x 1.75
46	747-06290B	Hinge Pin
47	783-08504A	Bracket, Chute, 42"
48	738-1186A	Spindle Shaft, 6.11 Long
49	941-0919B	Ball Bearing
50	750-04936	Spacer, .792 x 1.060 x 1.860
51	750-06152	Spacer, .792 x 1.060 x 1.782
52	756-05038	Deck Pulley
53	783-08435	Bearing Shield

Bumper

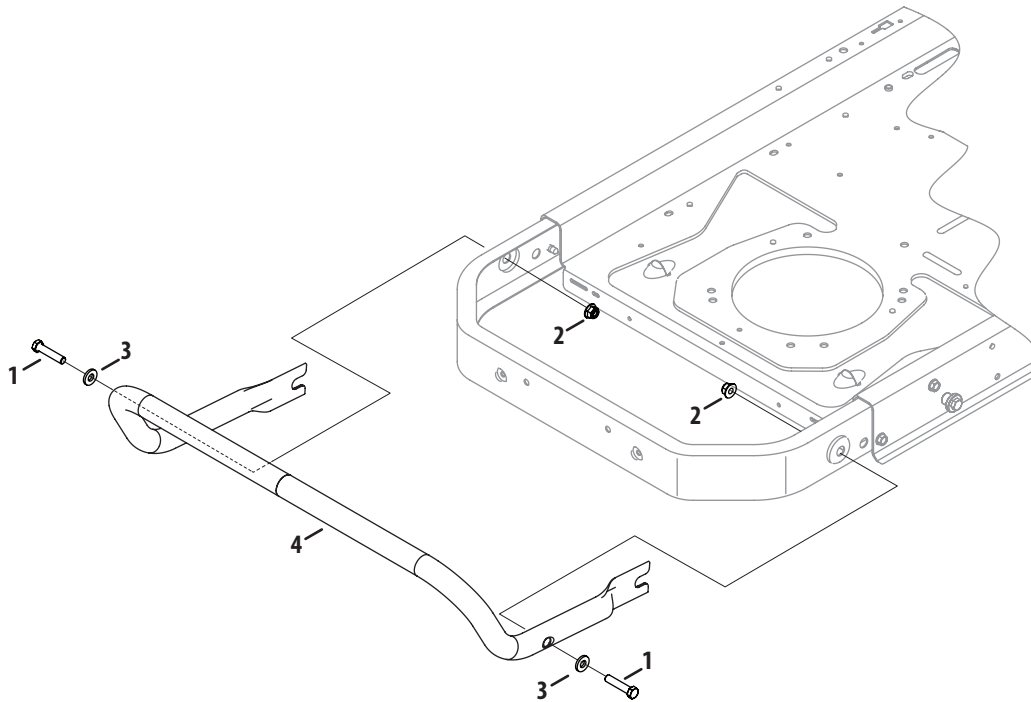

Ref. No.	Part No.	Description
1	710-0347	Hex Cap Screw, 3/8-16 x 1.75
2	712-04065	Flange Lock Nut, 3/8-16
3	936-3004	Flat Washer, .406 x .875 x .105
4	749-05068	Bumper

Wiring Harness Schematic - 725-06000A

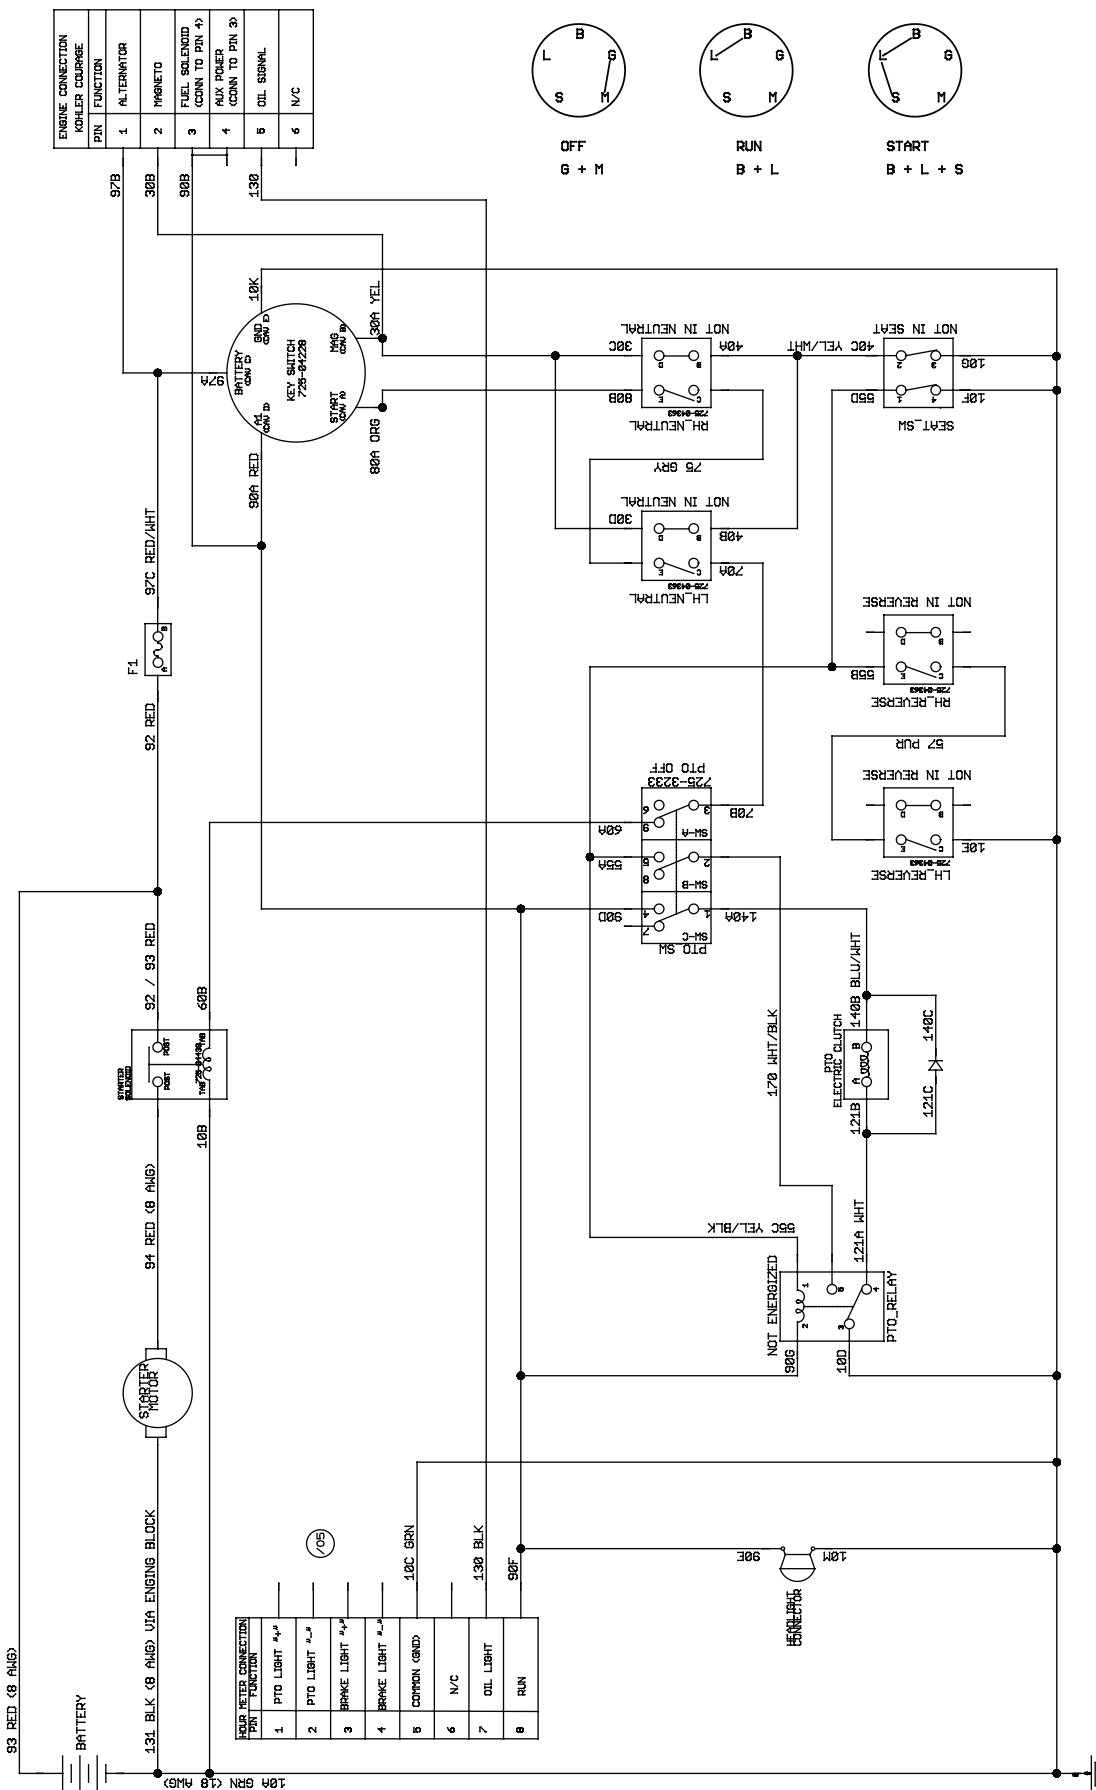



To order replacement parts or locate your nearest service dealer call a Customer Support at (800) 800-7310.
or visit www.mtdproducts.com to find the nearest authorized dealer in your area.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
