


REPLACEMENT PARTS - MODEL TB2BP EC 2-CYCLE BACKPACK BLOWER

PPN 41BR2BEG766

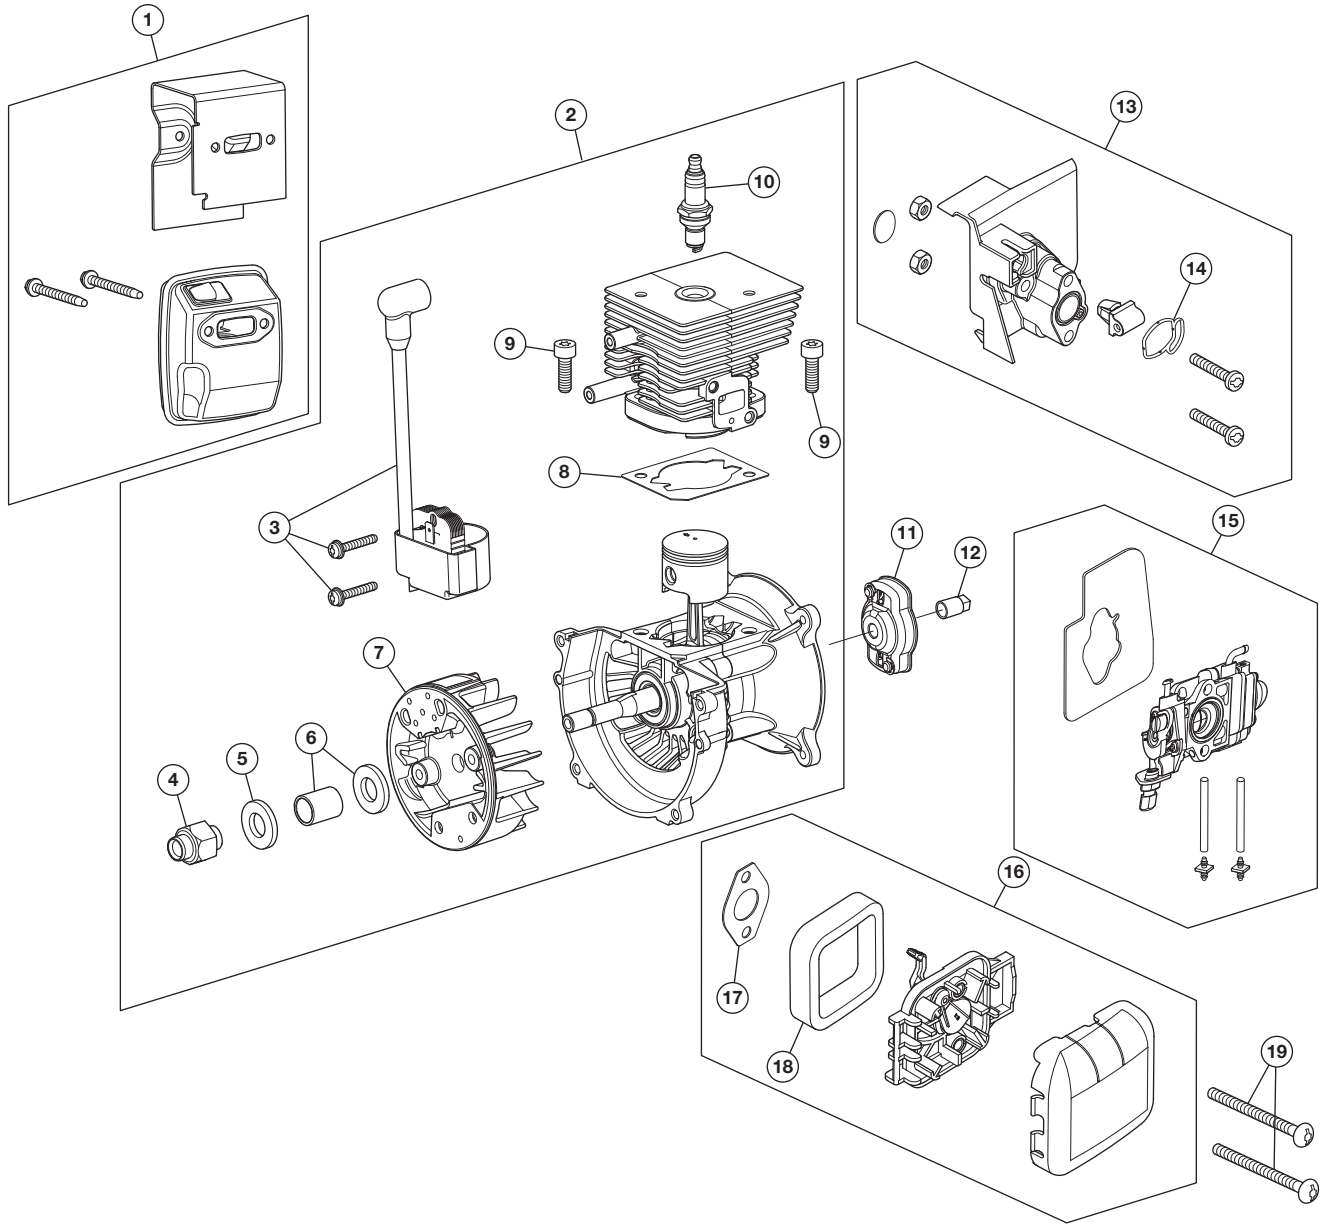


Item	Part No.	Description
1	753-06418	Muffler Assembly
2	753-06441	Shortblock Assembly (includes 3 - 10)
3	753-06443	Module Assembly
4	753-05705	Flywheel Adaptor
5	753-05706	Washer
6	753-05707	Bushing
7	753-06246	Flywheel Assembly
8	753-06827	Cylinder Gasket
9	710-04715	Screw
10	753-06193	Spark Plug

Item	Part No.	Description
11	753-06091	Pawl Assembly
12	753-06104	Electric Start Adaptor
13	753-06189	Insulator Assembly (includes 14)
14	753-06184	Insulator O-Ring
15	753-06442	Carburetor Assembly
16	753-05634	Air Cleaner Assembly (includes 17 and 18)
17	753-06253	Carburetor Gasket
18	791-181757	Air Filter
19	710-04517	Air Cleaner Screw

REPLACEMENT PARTS - MODEL TB2BP EC 2-CYCLE BACKPACK BLOWER

PPN 41BR2BEG766

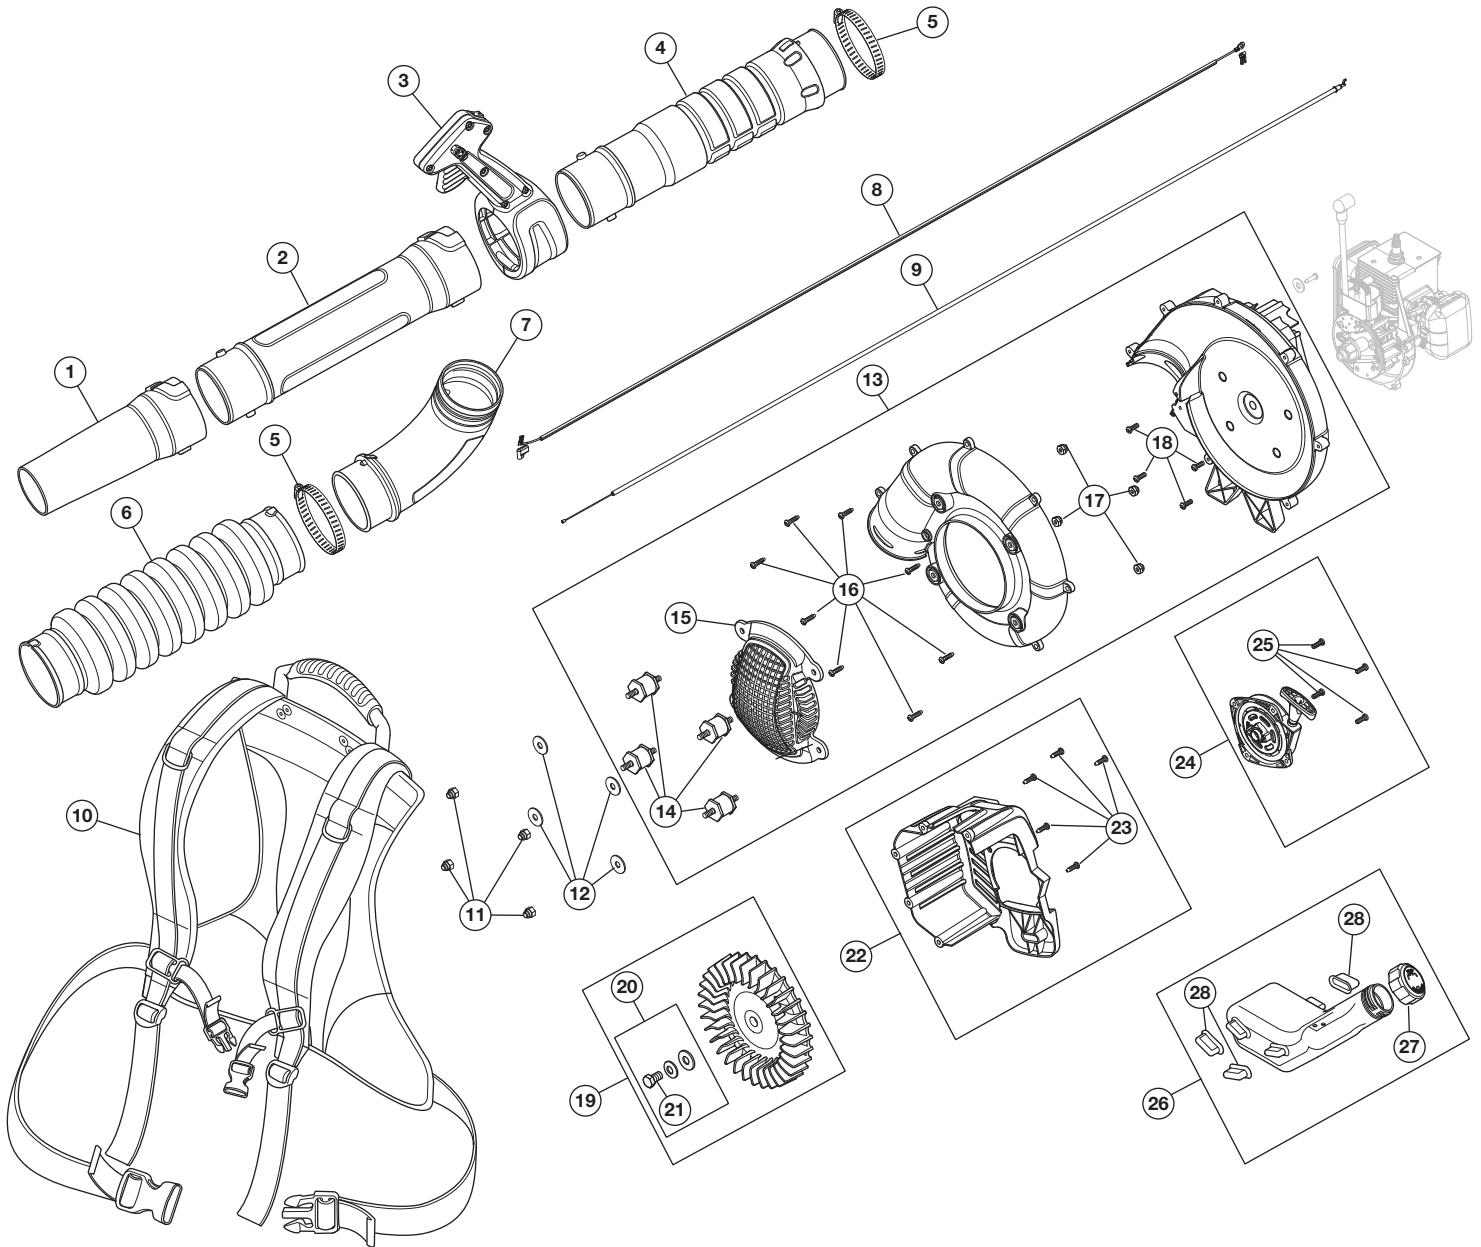

Item	Part No.	Description
------	----------	-------------

1	753-06000	Nozzle
2	753-05971	Lower Blower Tube
3	753-05975	Throttle Grip Assembly
4	753-05991	Upper Blower Tube
5	753-05640	Clamp
6	753-05641	Flex Tube
7	753-05990	Elbow
8	753-06994	Lead Wire
9	753-06434	Throttle Cable
10	751-15097	Harness
11	753-05647	Nut
12	4150	Washer
13	753-06597	Impeller Housing Assembly (includes 14 - 18)
14	753-05648	Insulator Mount

Item	Part No.	Description
------	----------	-------------

15	753-05786	Intake Cover
16	791-181345	Screw
17	2952	Nut
18	791-181862	Screw
19	753-05651	Impeller (includes 20 & 21)
20	753-04482	Impeller Hardware (includes 21)
21	2591	Bolt
22	753-06598	Housing Assembly (includes 23)
23	791-181345	Screw
24	753-06596	Starter Assembly (includes 25)
25	791-181862	Screw
26	753-05654	Fuel Tank Assembly (includes 27 & 28)
27	791-182529	Fuel Cap
28	753-05259	Fuel Tank Pads