


REPLACEMENT PARTS - MODEL TB4BP EC 4-CYCLE BACKPACK BLOWER

PPN 41BR4BEG766

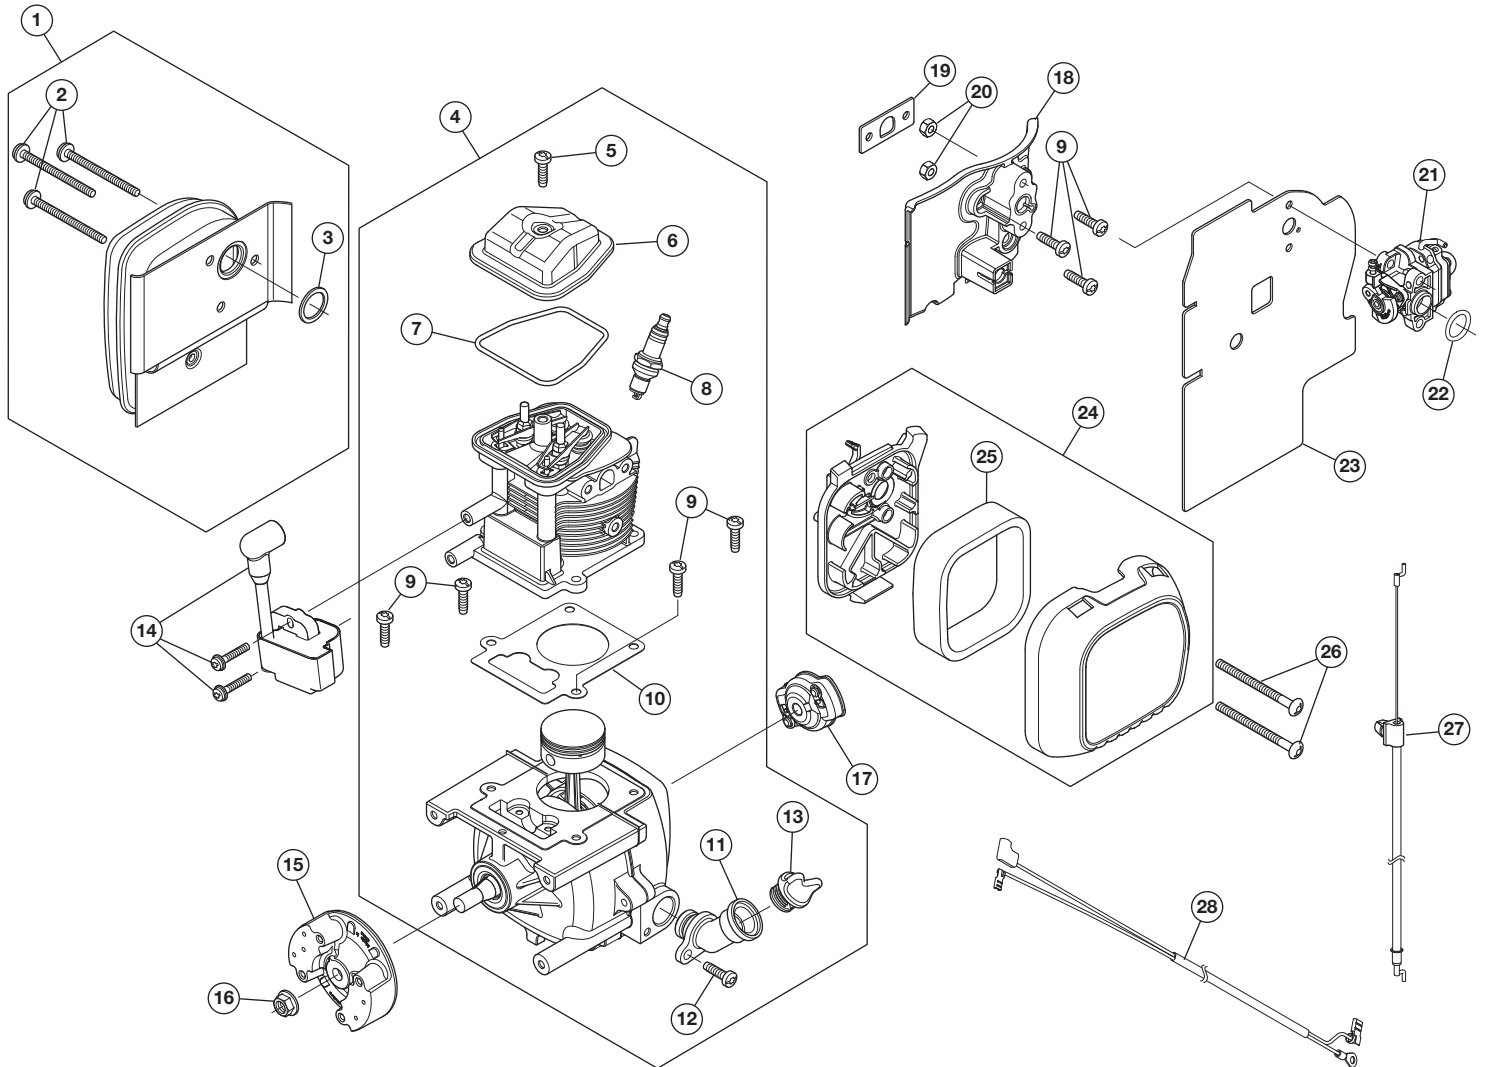


Item	Part No.	Description
1	753-05669	Muffler Assembly (includes 2 & 3)
2	791-182361	Muffler Screw
3	753-05670	Muffler Gasket
4	753-08026	Short Block Assembly (includes 5 - 13)
5	792-9057	Screw
6	753-05671	Rocker Cover
7	753-05672	Rocker Cover O-Ring
8	794-00082	Spark Plug
9	791-181003	Screw
10	753-05681	Cylinder Gasket
11	753-05682	Oil Fill Tube (includes 12)
12	9054	Screw
13	753-05400	Oil Plug
14	753-05907	Module Assembly

Item	Part No.	Description
15	753-05688	Flywheel Assembly
16	712-04137	Nut
17	753-06091	Pawl Assembly
18	753-05674	Insulator Assembly
19	753-05673	Insulator Gasket
20	712-04099	Nut
21	753-08025	Carburetor Assembly
22	791-181751	Carburetor O-Ring
23	753-05675	Carburetor Gasket
24	753-05711	Air Cleaner Assembly (includes 25)
25	753-05677	Air Filter
26	710-04517	Screw
27	753-05970	Throttle Cable
28	753-05690	Lead Wire

REPLACEMENT PARTS - MODEL TB4BP EC 4-CYCLE BACKPACK BLOWER

PPN 41BR4BEG766

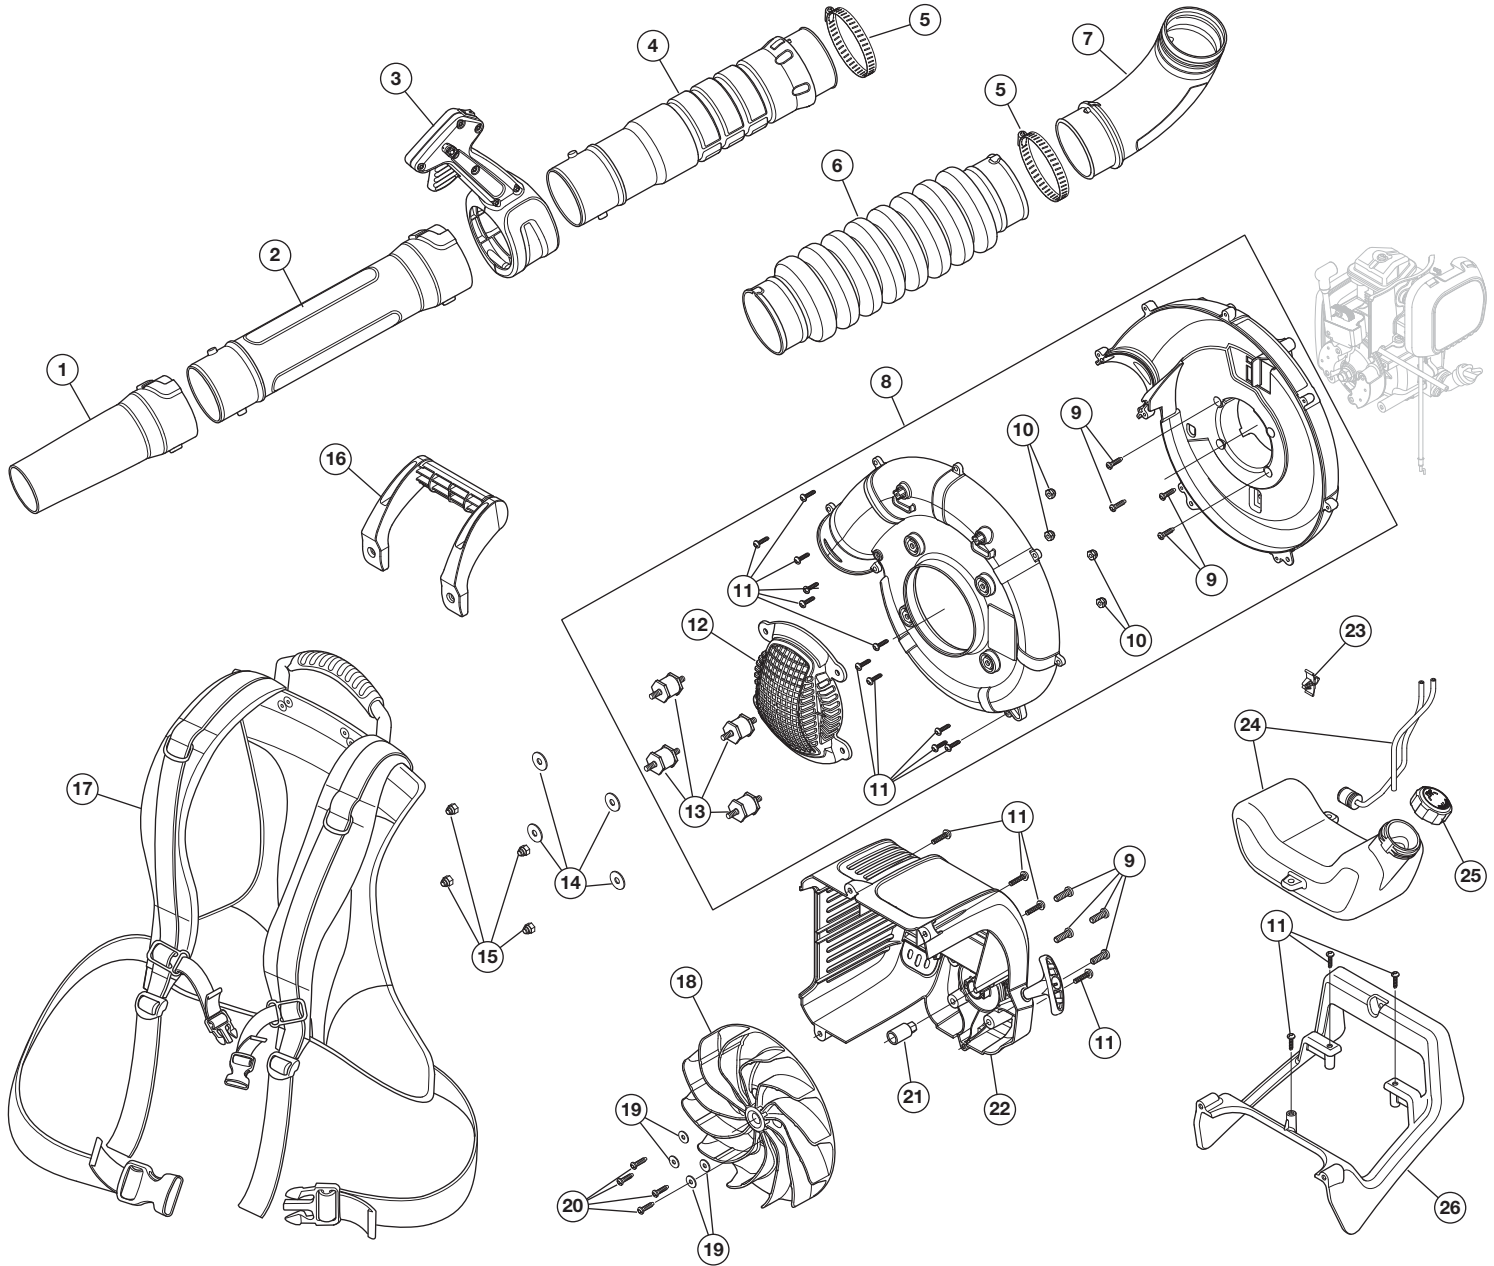

Item	Part No.	Description
1	753-06000	Concentrator Nozzle
2	753-05971	Lower Blower Tube
3	753-05975	Throttle Grip Assembly
4	753-05991	Upper Blower Tube
5	726-04080	Clamp
6	753-05641	Flex Tube
7	753-05990	Elbow Tube
8	753-05658	Impeller Housing Assembly
9	710-04604	Housing Screw
10	712-0324	Nut
11	710-04194	Screw
12	753-05649	Intake Cover
13	753-05648	Isolator Mount

Item	Part No.	Description
14	4150	Washer
15	753-05647	Nut
16	753-05771	Impeller Housing Handle
17	751-15097	Harness
18	753-07100	Impeller (includes 19 & 20)
19	2220	Washer
20	792-9517-1	Impeller Screw
21	753-06104	Electric Starter Adapter
22	753-06683	Engine Cover Assembly (includes 9 & 11)
23	753-05661	Throttle Retaining Clip
24	753-05715	Fuel Tank Assembly (includes 25)
25	753-05289	Fuel Tank Cap
26	753-05663	Stand