


REPLACEMENT PARTS - MODEL TB27BC

ELECTRIC START CAPABLE 2-CYCLE BRUSHCUTTER / TRIMMER

PPN 41AD27BA766

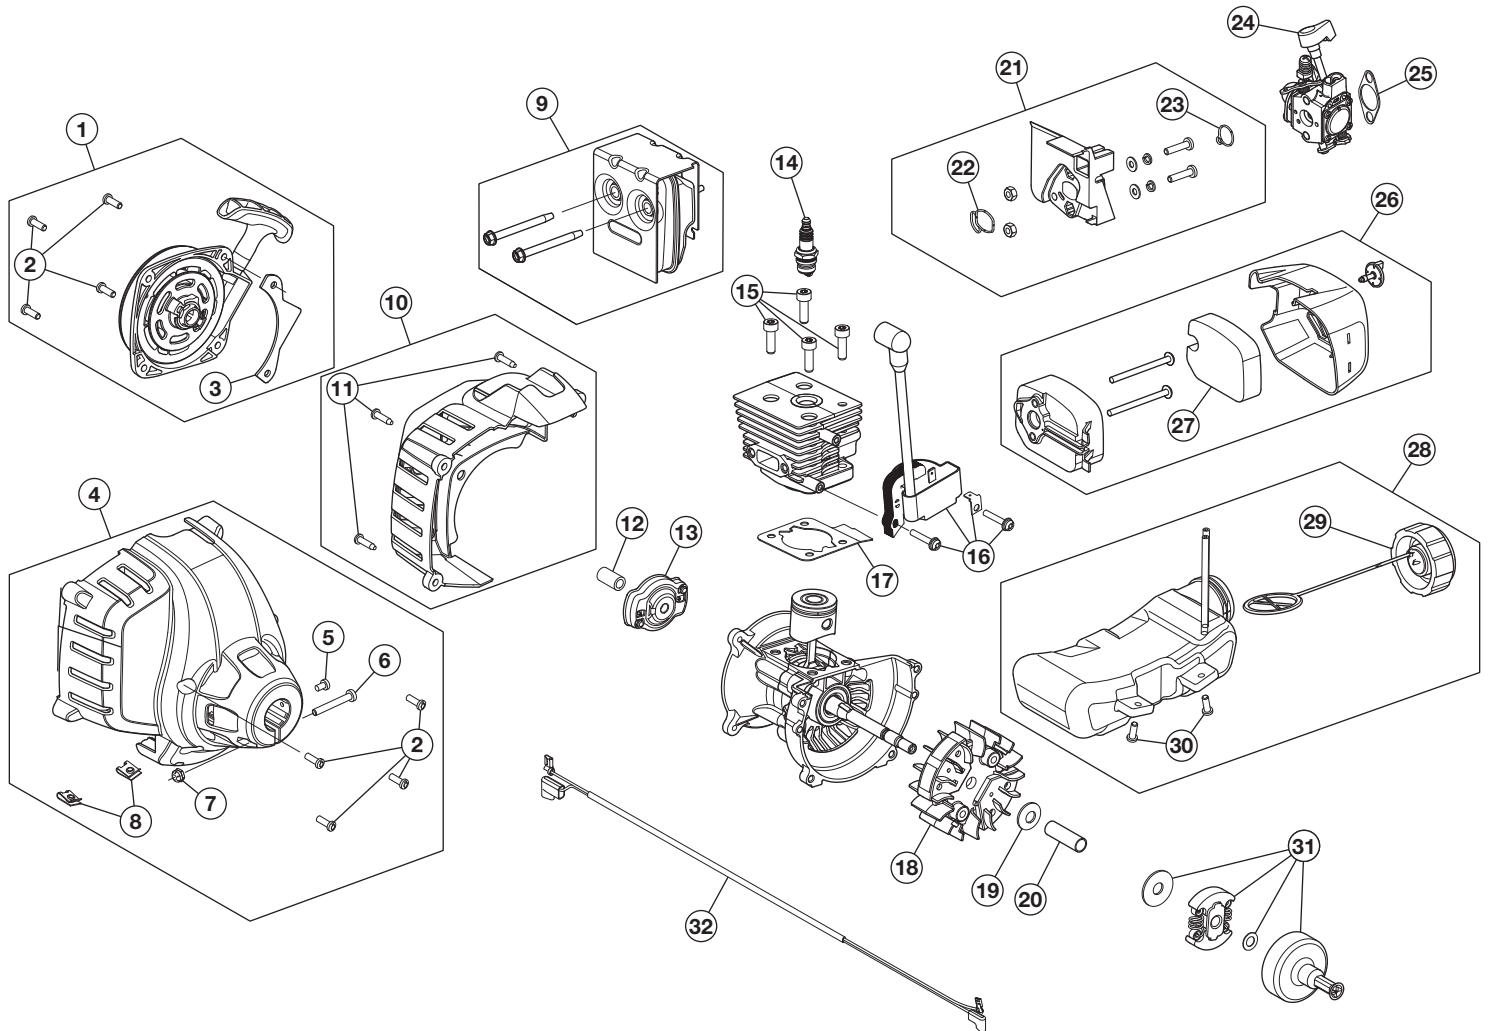

Item	Part No.	Description
1	753-06829	Starter Assembly (includes 2 & 3)
2	791-181862	Starter Screw
3	753-06244	Starter Assembly Guard (includes 2)
4	753-06249	Clutch Cover Assembly (includes 2 and 5 - 8)
5	791-182519	Anti-Rotation Screw
6	9689A	Clamp Screw
7	712-0161	Clamp Nut
8	791-182366	U-shaped Nut
9	753-08745	Muffler Assembly
10	753-06245	Rear Engine Cover (includes 11)
11	791-181345	Cover Screw
12	753-06104	Adapter
13	753-06091	Pawl Assembly
14	753-06193	Spark Plug
15	753-05703	Cylinder Bolt
16	753-06892	Module Assembly
17	753-06827	Cylinder Gasket
18	753-06246	Flywheel Assembly

Item	Part No.	Description
19	753-06247	Washer
20	753-06248	Spacer
21	753-06189	Insulator Assembly (includes 22 and 23)
22	753-06184	Insulator O-Ring
23	753-06185	Carburetor O-Ring
24	753-08984	Carburetor
25	753-06253	Carburetor Gasket
26	753-06953	Air Cleaner Assembly (includes 27)
27	753-06954	Air Cleaner Filter
28	753-06250	Fuel Tank Assembly (includes 29 and 30)
29	753-06857	Fuel Tank Cap
30	9206A	Fuel Tank Screw
31	753-05860	Clutch Assembly
32	753-05877	Lead Wires
* Items Not Shown		
* 753-08582 Short Block Assembly (includes Crankcase, Cylinder, Piston, 14 - 20 & 31)		

REPLACEMENT PARTS - MODEL TB27BC

ELECTRIC START CAPABLE 2-CYCLE BRUSHCUTTER / TRIMMER

PPN 41AD27BA766

Item	Part No.	Description
1	753-08344	Throttle Housing Assembly (includes 2 - 5)
2	731-08433C-10	Throttle Trigger Lock-Out
3	791-182405	Switch Assembly
4	753-05007	Throttle Trigger Spring
5	753-05517	Throttle Trigger
6	753-06825	Throttle Cable Assembly
7	791-181099	J-Handle Assembly
8	791-683295	J-Handle Bracket Assembly (includes 9 - 14)
9	9210	Screw
10	791-181812	Upper Handle Clamp
11	791-181813	Middle Handle Clamp
12	791-181814	Lower Handle Clamp
13	791-181815	Nut
14	791-182519	Anti-Rotation Screw
15	753-06880	Upper Drive Shaft Housing Assembly
16	791-610327	Harness Clip
17	731-08926	Hanger
18	791-160226	Lower Drive Shaft Housing Assembly
19	753-05267	Lower Flexible Drive Shaft
20	753-1190	Split Boom Coupler (includes 21)
21	791-182057	Screw
22	791-182200	Shield Mount Screw Assembly
23	753-07006	2 Piece Gearbox Assembly (includes 24 - 27)
24	791-182195	Gearbox Mounting Hardware
25	791-182519	Anti-Rotation Screw
26	791-182196	Blade Driver
27	753-04348	Palnut
28	791-147492	Blade Shield / Shield Mount
29	753-1191	Shield Assembly (includes 30)
30	791-682061	Blade Assembly
31	791-683304	Shield Mounting Screw
32	791-612483	Spool Shaft
33	791-683301	Outer Spool Assembly (includes 34)
34	791-612026	Retainer
35	791-610636B	Spring
36	791-147495	Inner Reel
37	791-180814B	Bump Head Knob Assembly
38	791-145873B	4-Tooth Blade
39	791-147490	Retaining Washer
40	712-04105	Nut

Items Not Shown

- * 791-180014B Blade Retaining Kit
(includes 39 and 40)
- * 791-613226 Locking Rod Tool
- * 791-682075B Shoulder Harness

Optional Accessories

- * 753-04216 Replacement Line, 0.105 Diameter
- * 753-1224 Reel and Line Assembly
- * 753-1161 Bump Head Assembly
(includes 32 - 37)

