


Read and understand all instruction, warning and danger labels.

Lea el manual de operación anexo sobre ensamblaje e inicio.

1

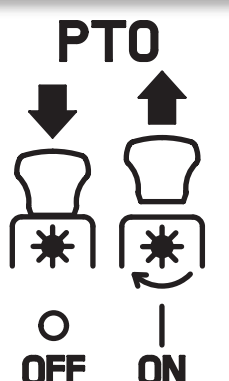


PTO

Place *PTO (Blade Engage) Lever* in *Off* position.


OFF ON

2

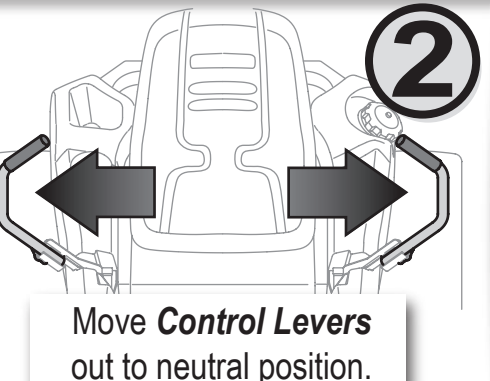


Move *Control Levers* out to neutral position.


3

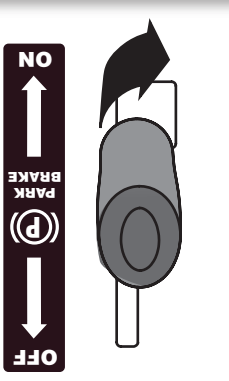

Engage *Parking Brake Lever*.

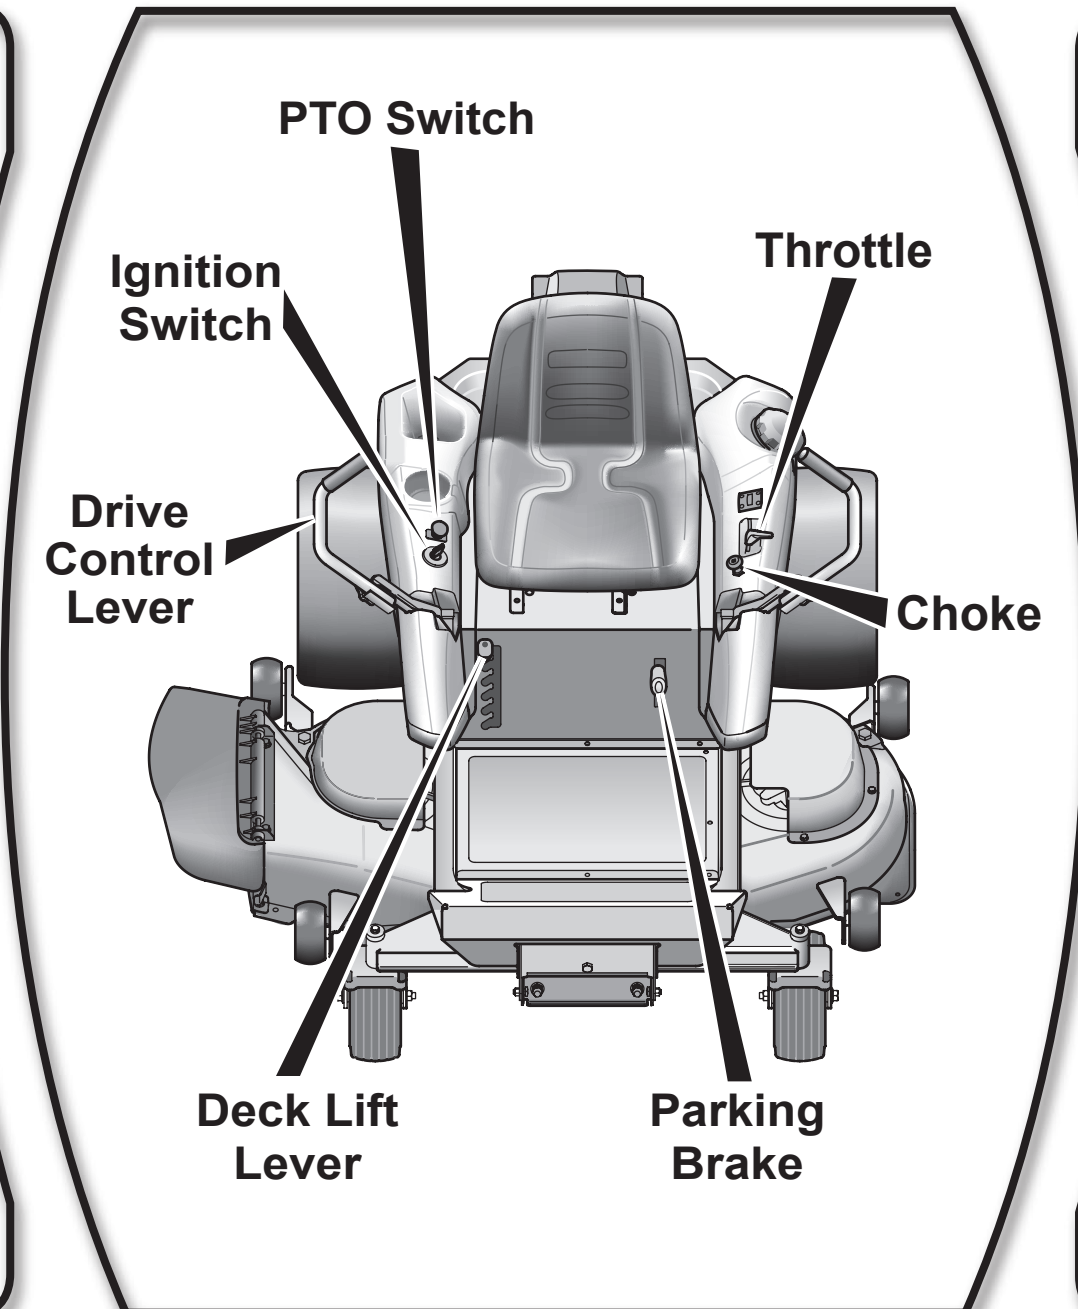


4

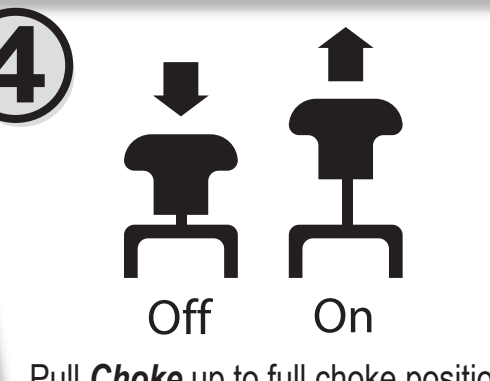

Off On


Pull *Choke* up to full choke position.

5

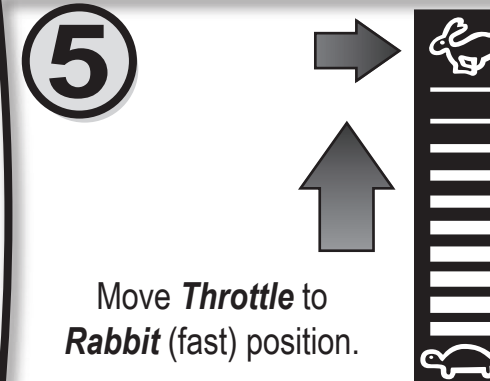

Move *Throttle* to *Rabbit* (fast) position.

6

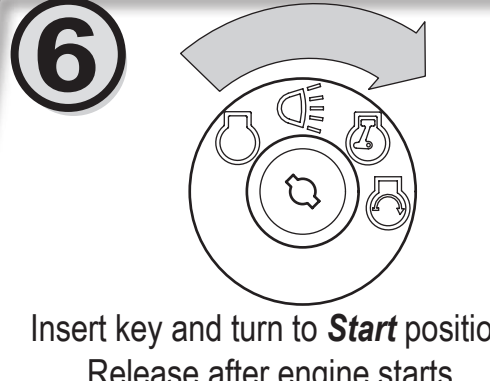

Insert key and turn to *Start* position. Release after engine starts.

Didn't Start?

Is the battery connected? Fresh gas in the unit?
See Operator's Manual for additional troubleshooting tips.

Stopping the Unit

1 Put *PTO* (blade engage) lever in the *Off* position.

2 Move *Drive Control* levers to neutral position.

3 Engage *Parking Brake*.

4 Move *Throttle Control* Lever to *Turtle* (slow) position.

5 Turn key counterclockwise to *Stop* position and remove.