

# FAST START


## GUIDE

# FAST START

## GUIDE


Read and understand all instruction, warning, and danger labels.

Lea el manual de operación anexo sobre ensamblaje e inicio.

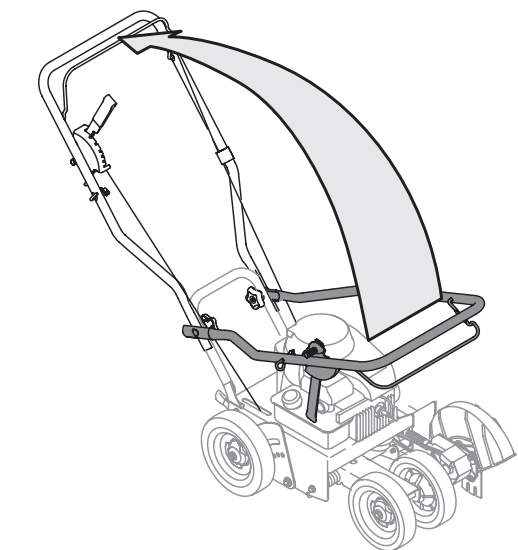


Unfold handle into operating position.

1

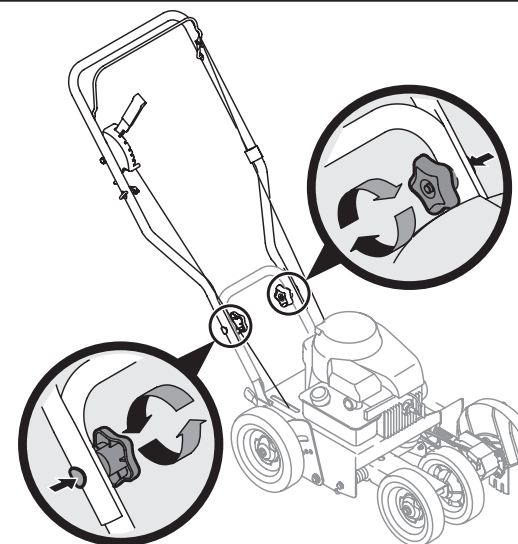


Secure handle by tightening hand knobs.

2

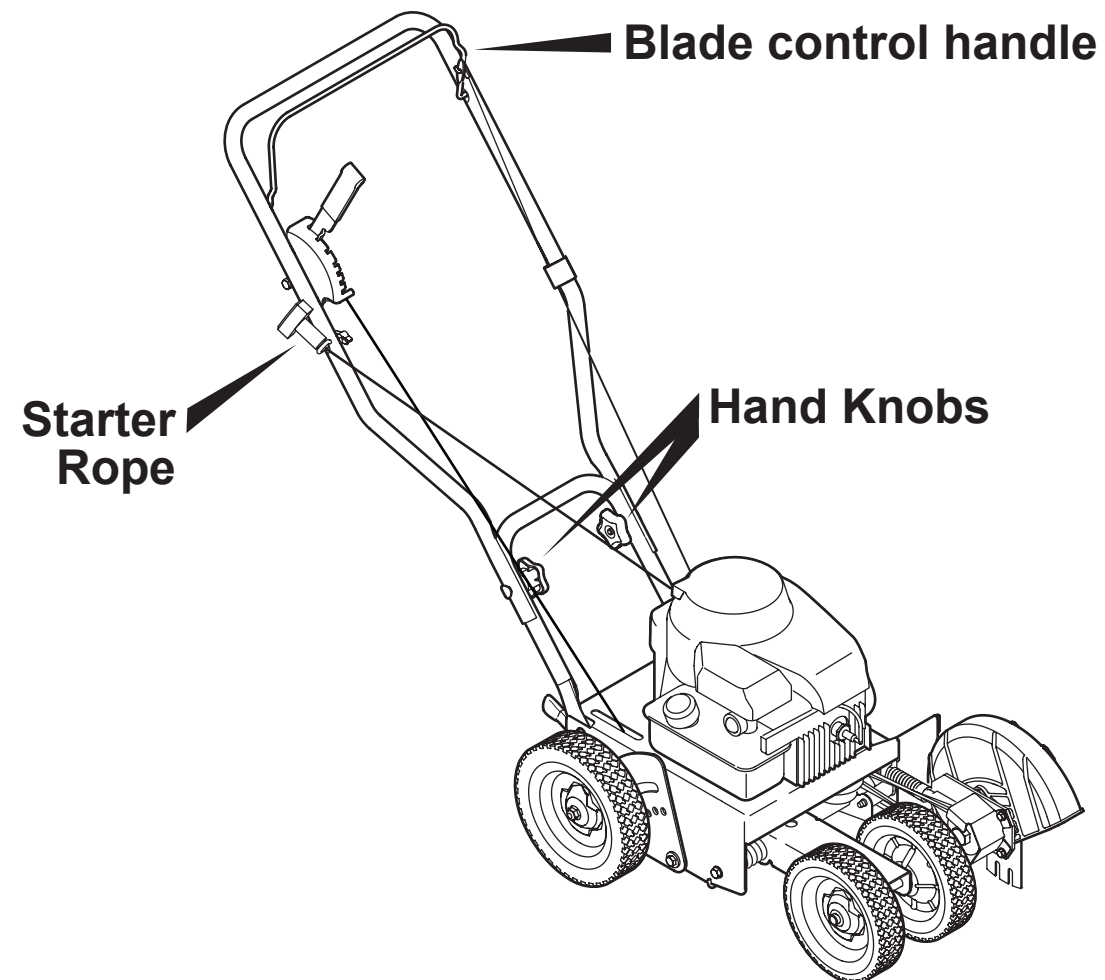


3

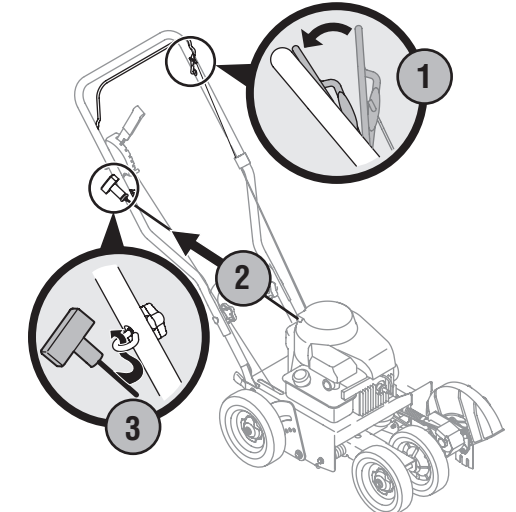

Hold blade control handle against upper handle.  
Slowly slip starter rope into rope guide.

4

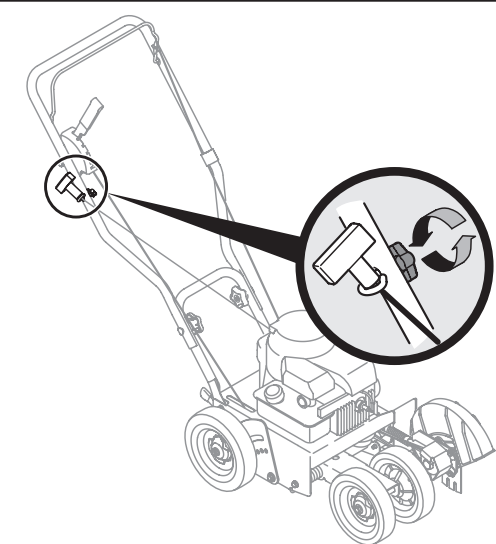

Tighten rope guide wing nut.

25B-554E011  
25B-554E711 © 2006

Need Help? **Call 1-888-TO-HELP-U** (1-888-864-3578)

778-11111A



**IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .**



# FAST START


## GUIDE

# FAST START

## GUIDE

Read and understand all instruction, warning, and danger labels.

Lea el manual de operación anexo sobre ensamblaje e inicio.

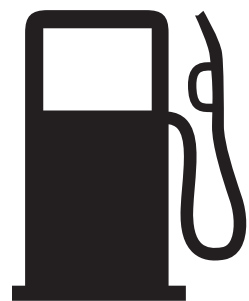


Fill tank with gas to within 1/2 inch of top of tank.




Fill engine with entire contents of oil bottle supplied with your edger.

◀◀ 5x ▶▶▶

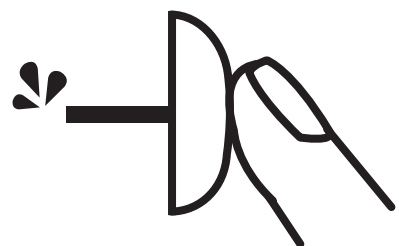


Push primer five times.

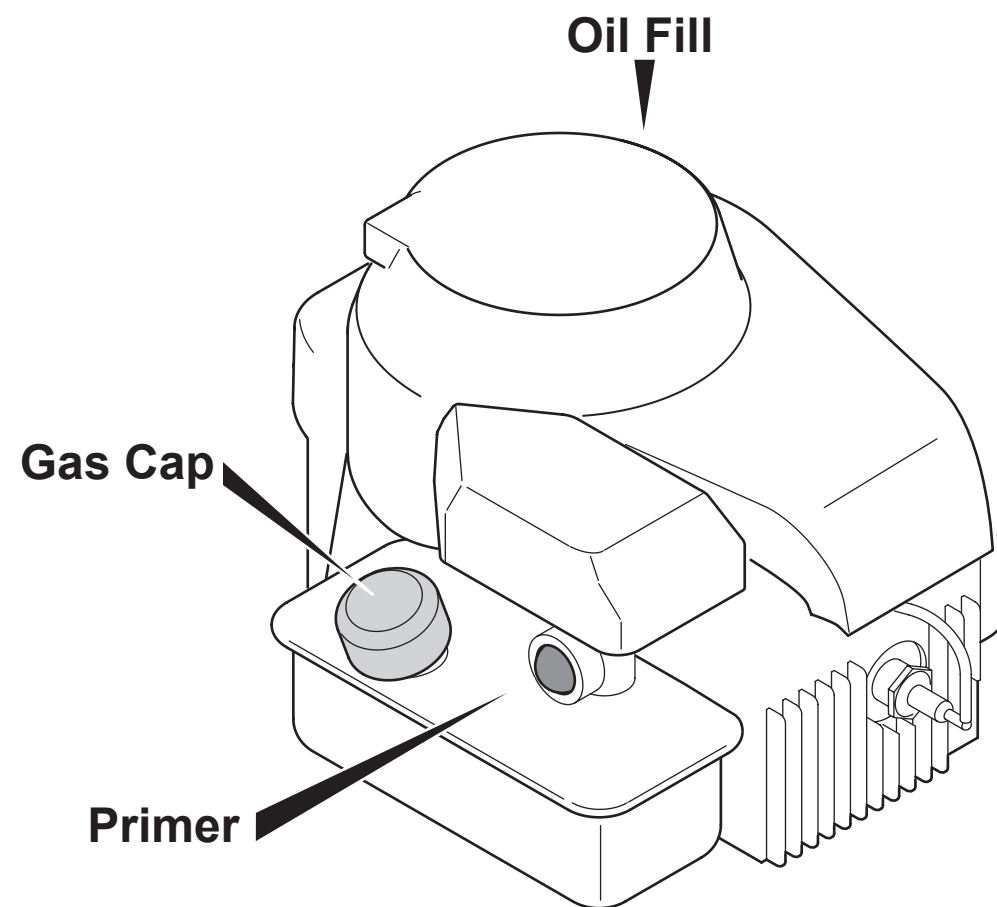


Need Help?

**Call 1-888-TO-HELP-U**

8

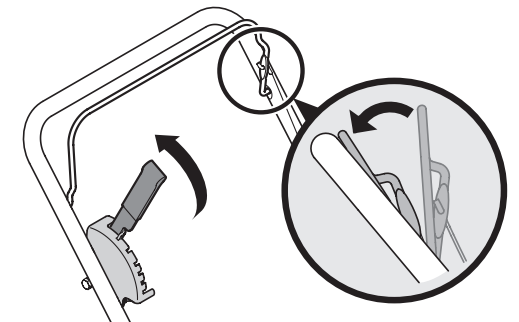

Set depth blade to highest position.  
Depress blade control handle and hold.

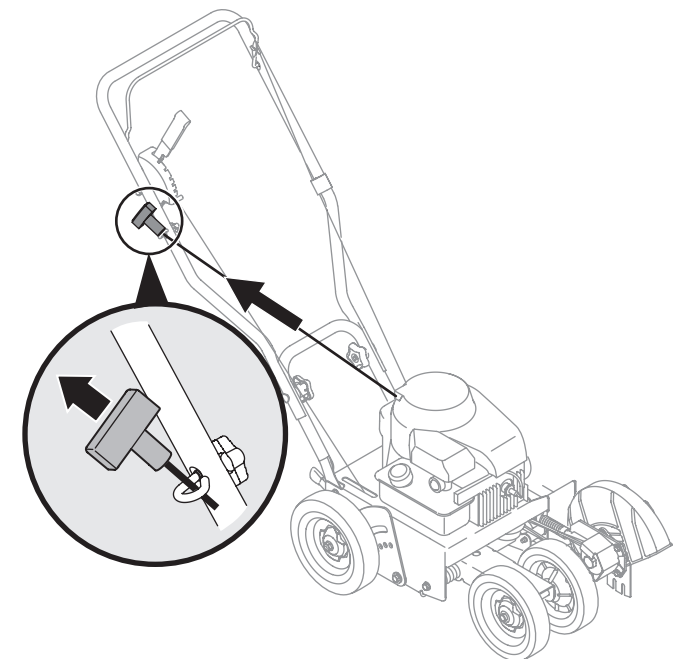

9

Pull starter rope with quick, full arm stroke.  
If engine does not start after five pulls,  
repeat steps 7 through 9.



**IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .**

