



**Read and understand all instruction, warning, and danger labels.**

**Lea el manual de operación anexo sobre ensamblaje e inicio.**

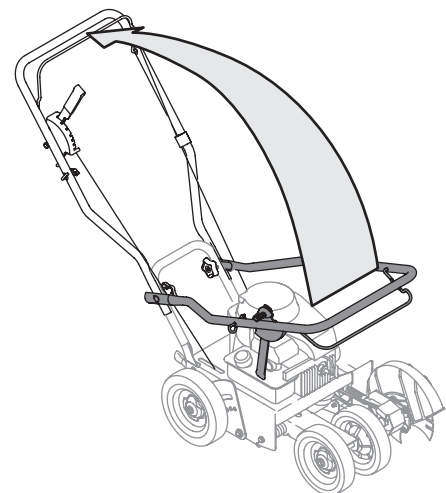


Unfold handle into operating position.

**1**

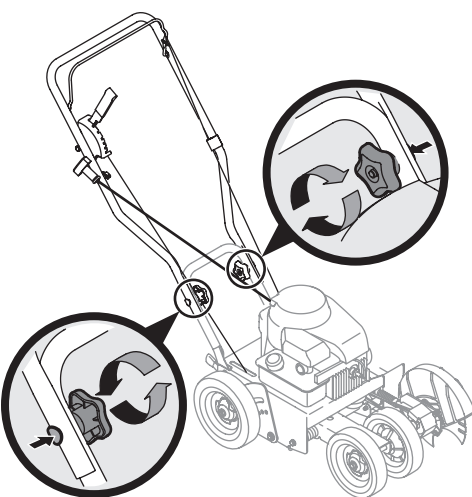


Secure handle by tightening hand knobs.

**2**

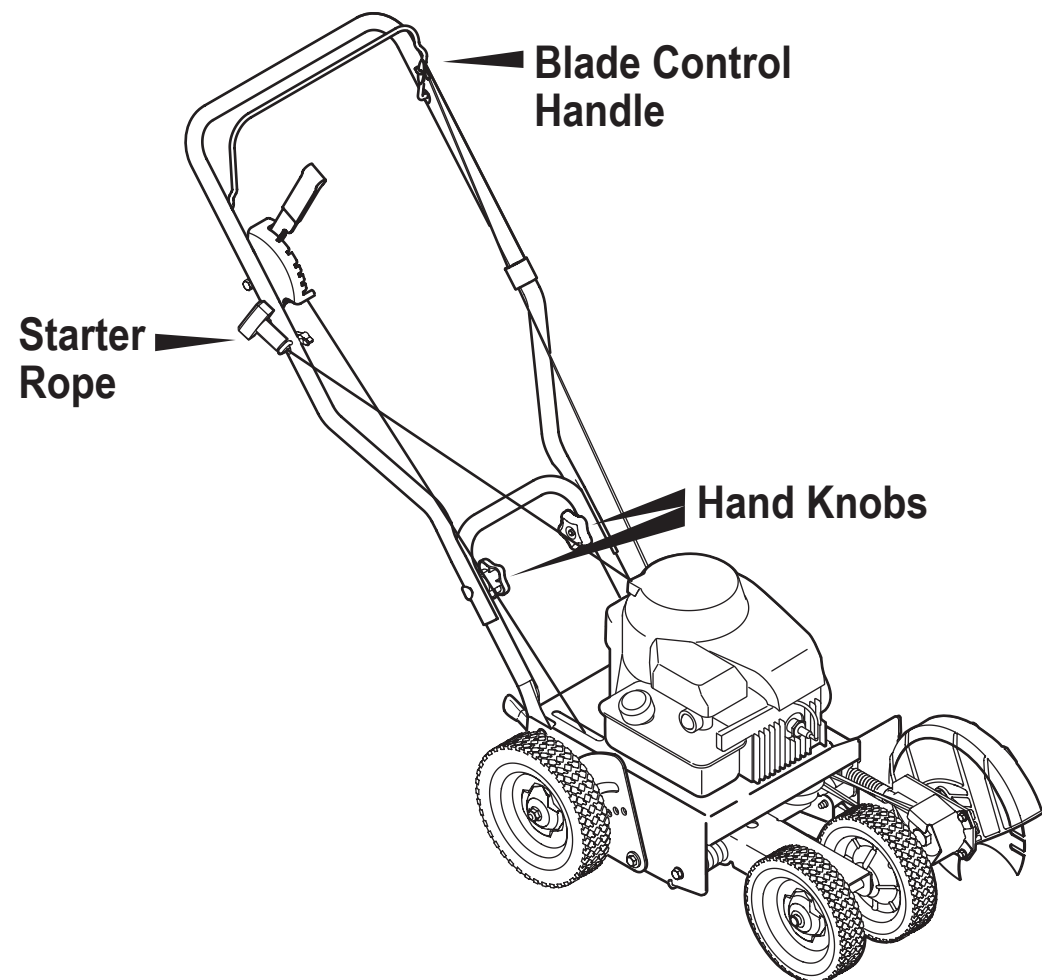


**3**

(A) Hold blade control handle against upper handle.  
(B)(C) Slowly slip starter rope into rope guide.

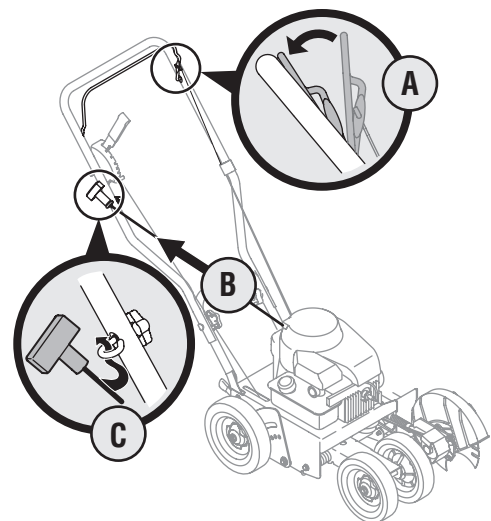

Tighten rope guide wing nut.

**4**

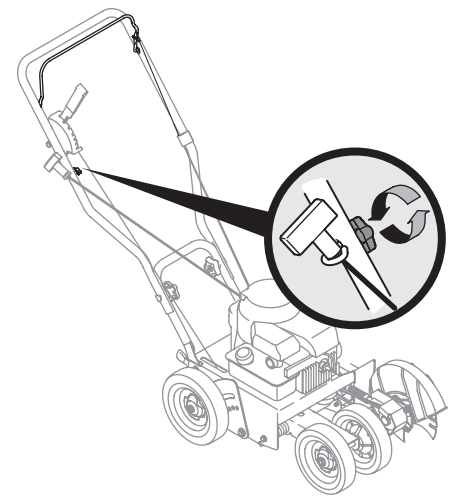

25B-554E

© 2007


Need Help? **Call 1-888-TO-HELP-U** (1-888-864-3578)

778-11500





**IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .**



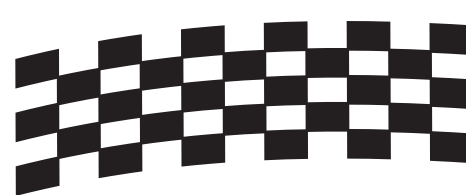


# FAST START

GUIDE

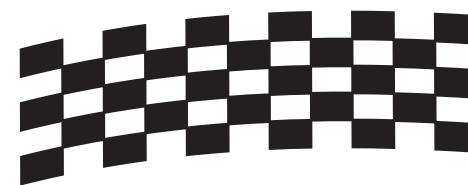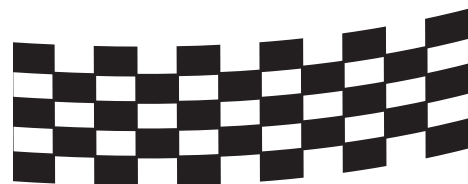


# FAST START

GUIDE

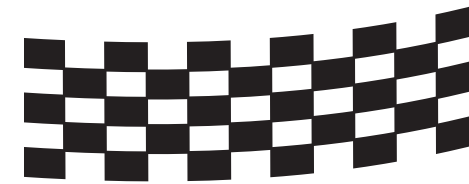

**Read and understand all instruction, warning, and danger labels.**

**Lea el manual de operación anexo sobre ensamblaje e inicio.**

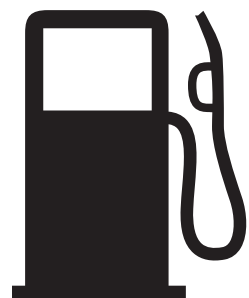

Fill tank with gas to within 1/2-inch of top of tank.


5



Fill engine with entire contents of oil bottle supplied.


6

5x

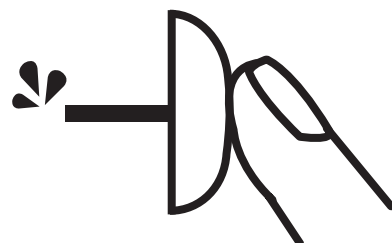

Push primer five times.

7


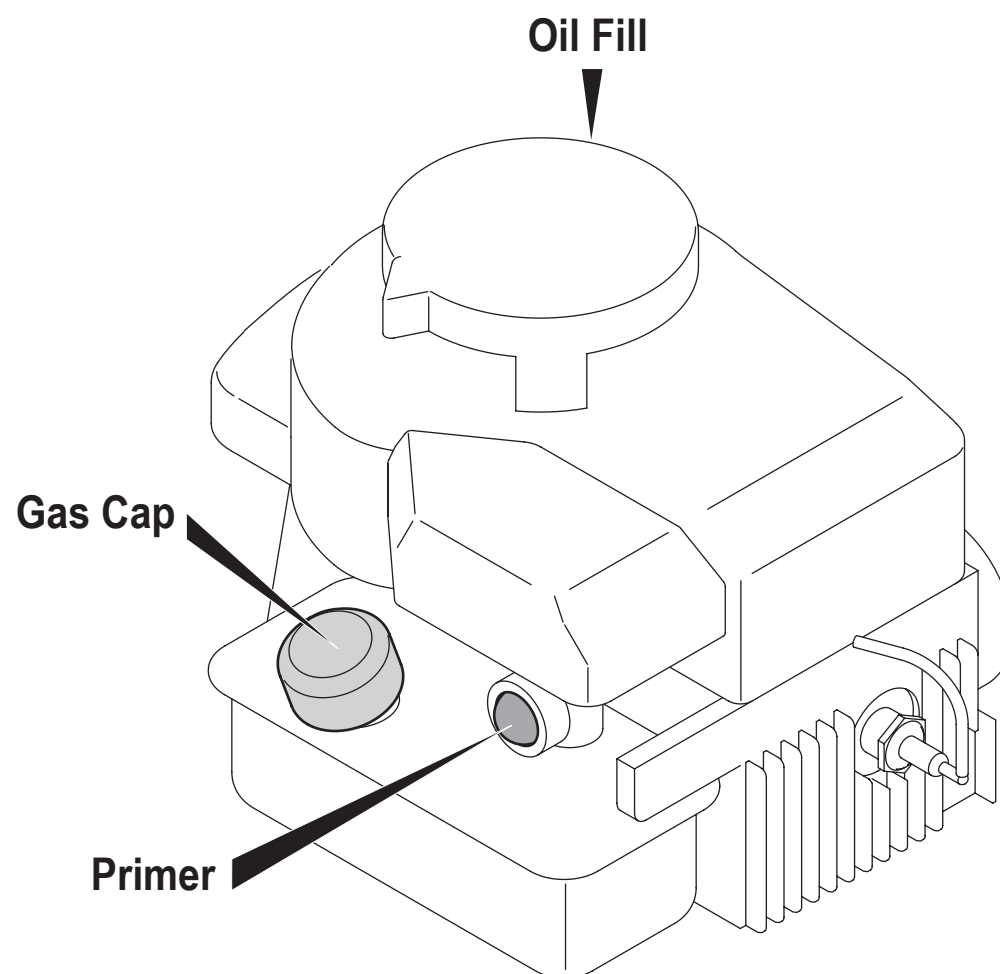


Need Help?

**Call 1-888-TO-HELP-U**

8

Set depth blade to highest position. Depress blade control handle and hold.

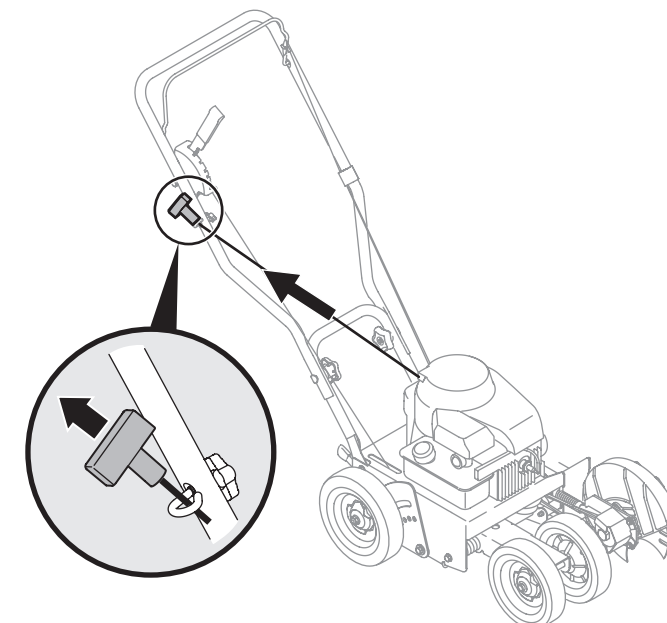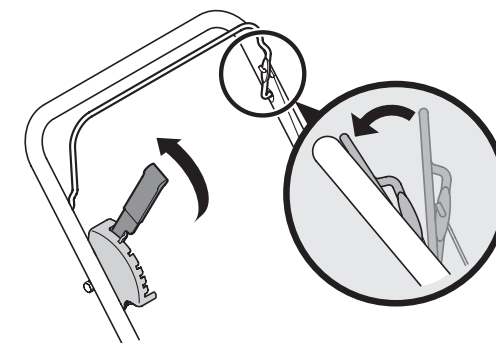

9

Pull starter rope with quick, full arm stroke. If engine does not start after five pulls, repeat steps 7 through 9.



**IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .**

