

Read and understand all instruction, warning, and danger labels.


Lea el manual de operación anexo sobre ensamblaje e inicio.

1

Loosely attach lower handle to frame using the 5/16-18 x .75 hex head cap screws and 5/16-18 flange lock nuts. Do not tighten hardware.

2

Attach upper handle and handle support brackets to lower handle using the 5/16-18 x 1.50 screws and 5/16-18 flange lock nuts. Tighten all hardware in Step 1 and Step 2.

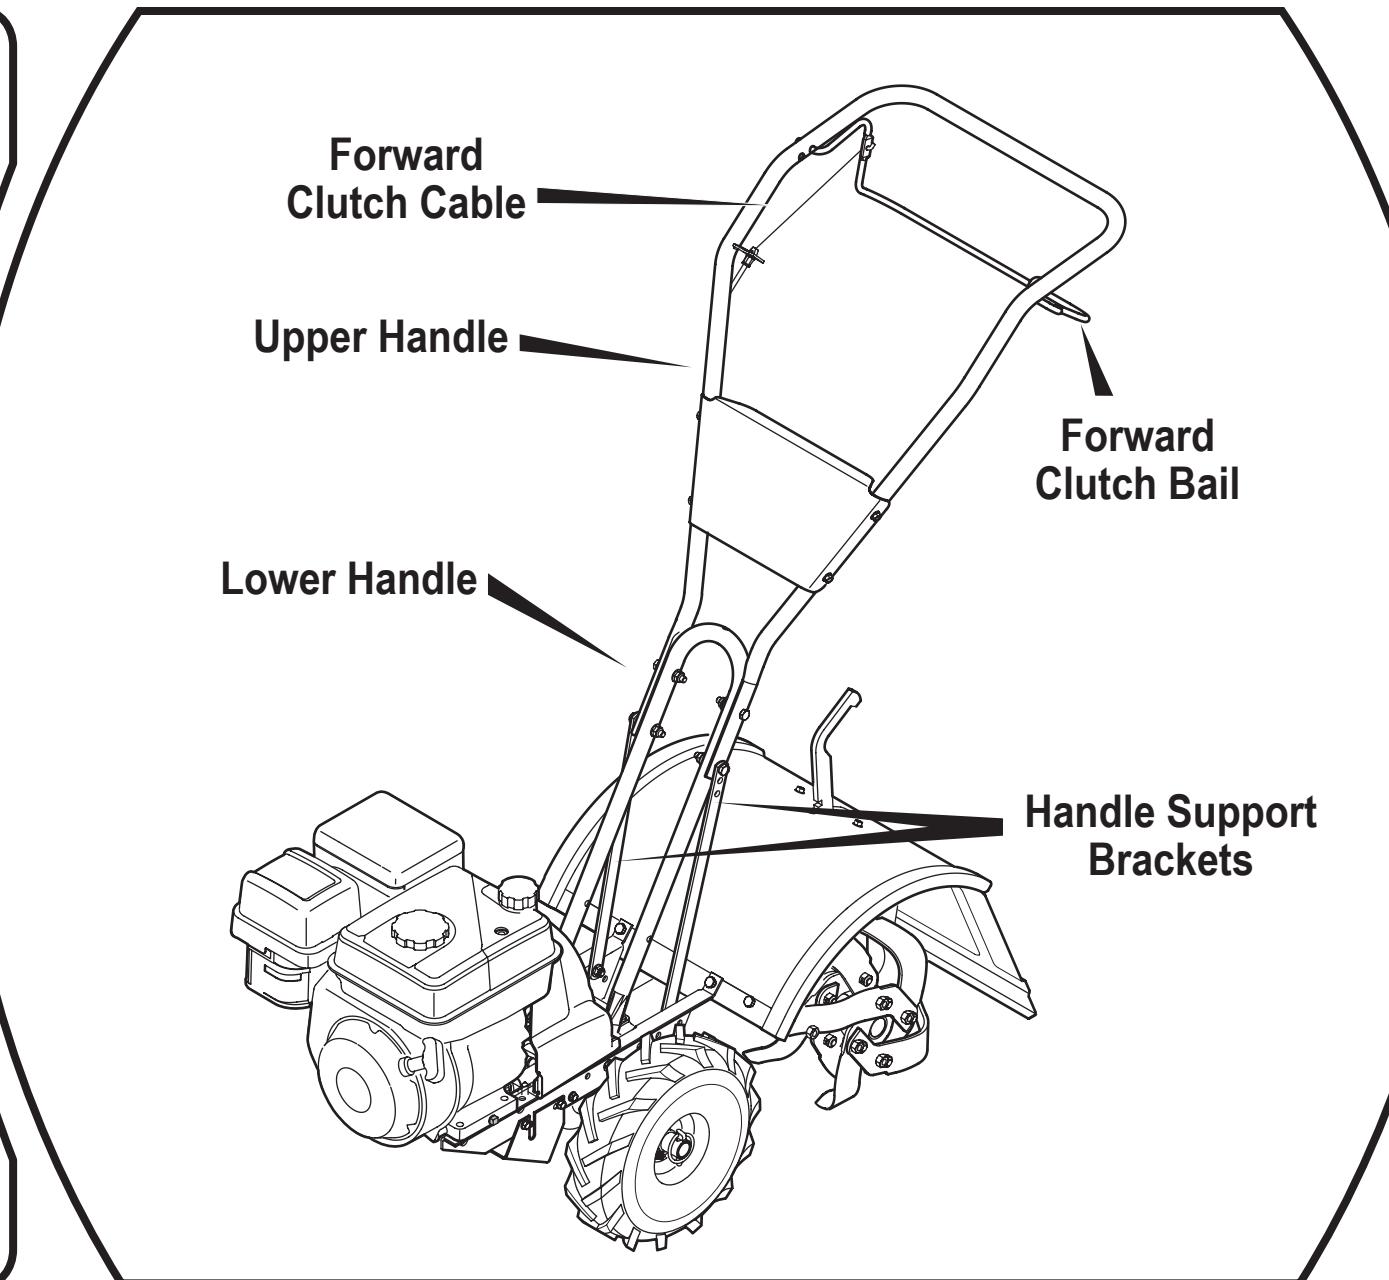





3

Snap cable connector into bottom hole in cable bracket.

4

Insert the Z-fitting into the hole in the Forward Clutch Bail.



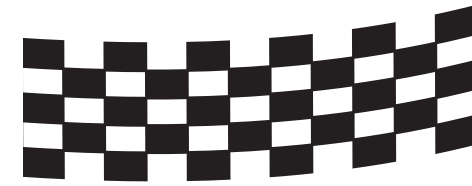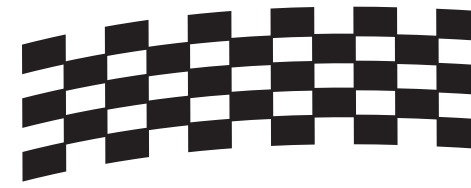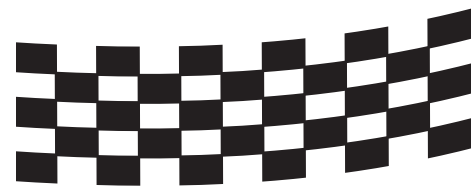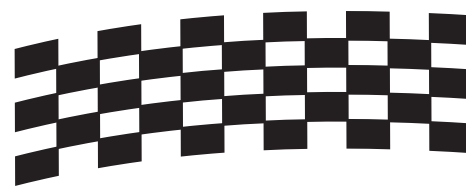

Read and understand all instruction, warning, and danger labels.


Lea el manual de operación anexo sobre ensamblaje e inicio.

5




Fill engine with entire contents of oil bottle supplied.
Do not overfill.

6

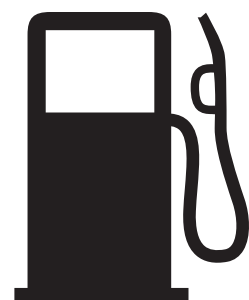

Fill tank with gas until fuel reaches the fuel level indicator. Do not overfill.

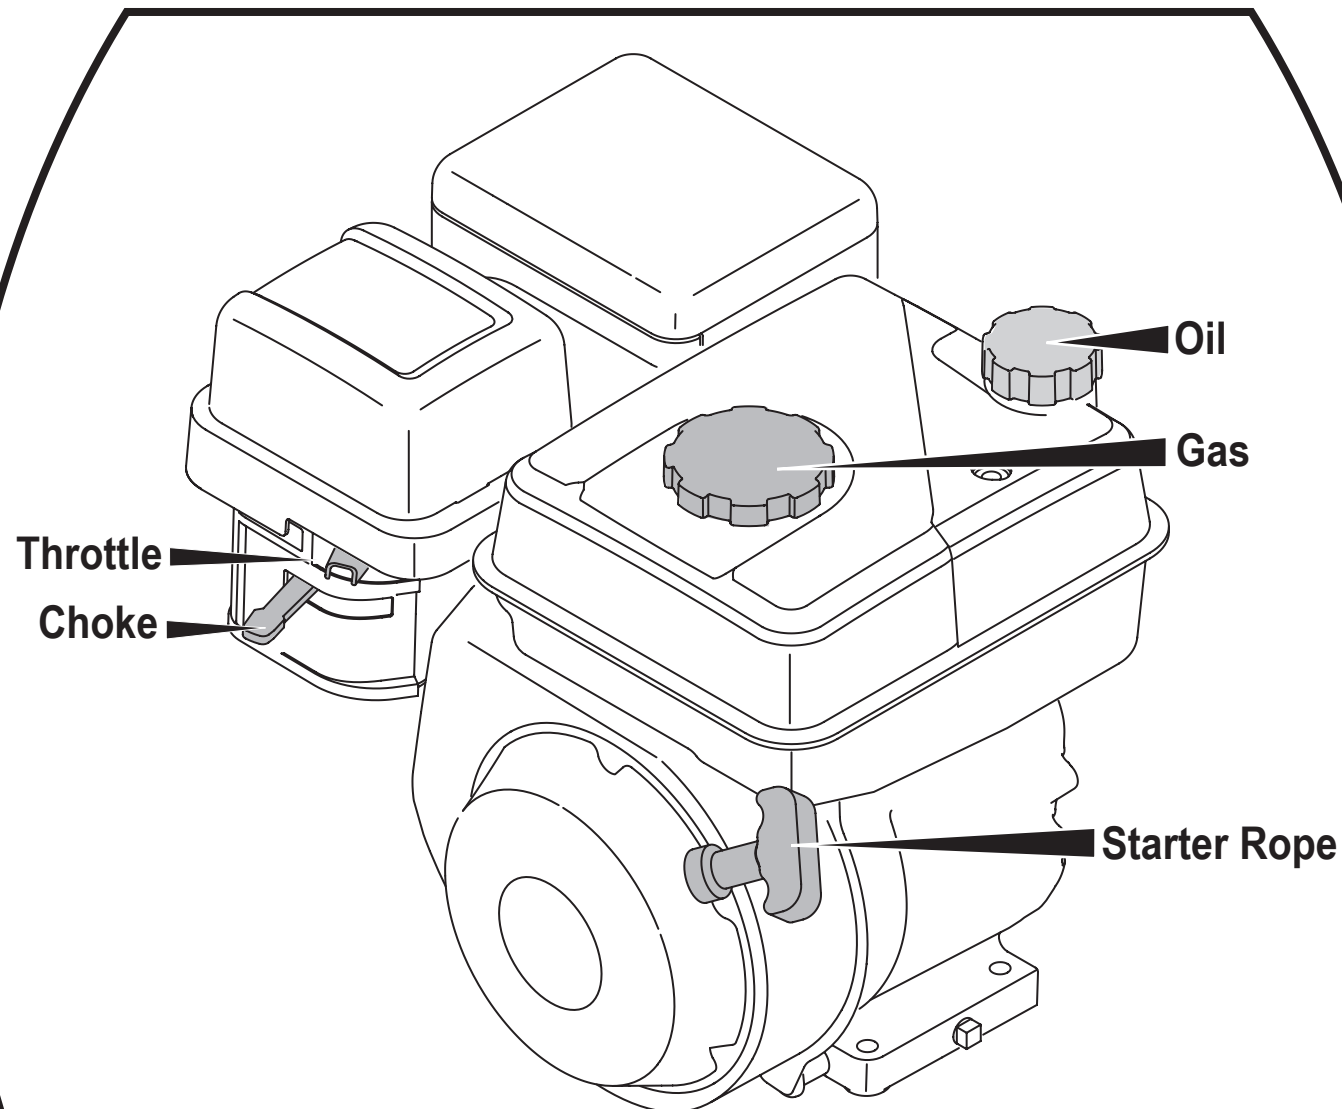


Need Help?

Call 1-888-TO-HELP-U

(1-888-864-3578)


7

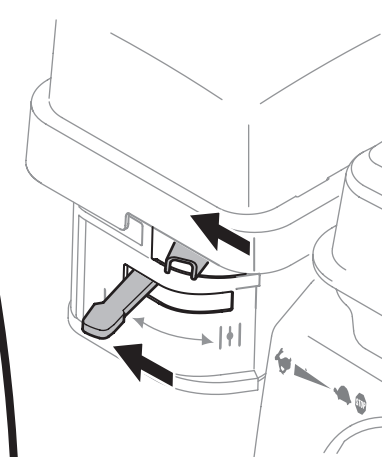

Move choke control to full choke position.

Move throttle control to rabbit (fast) position.

8

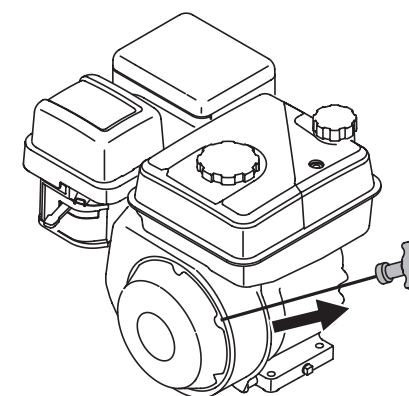

Pull starter rope with quick, full arm stroke. It may take more than one pull to start cold engine. Once started, slowly move choke control to off (run) position.



IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING.

