







A. Remove the wing nuts and carriage bolts securing the upper handle to the lower handle.

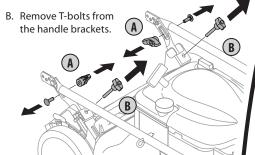

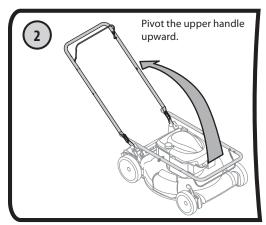

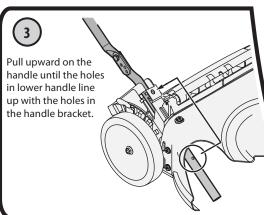





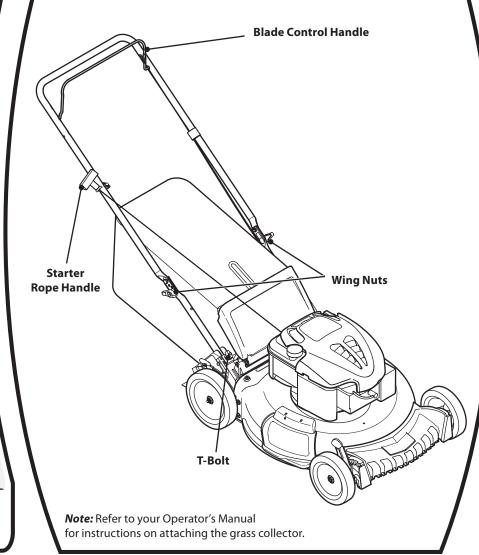

A. Insert the T-bolts removed in Step 1B through the handle brackets to secure the handle in place.



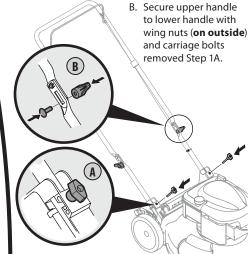

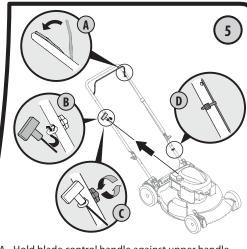


- A. Hold blade control handle against upper handle.
- B. Slowly pull starter rope handle from engine and slip starter rope into the rope guide.
- C. Tighten rope guide wing knob.
- D. Use cable tie to secure cables to lower handle.


© 2010 11A-A26





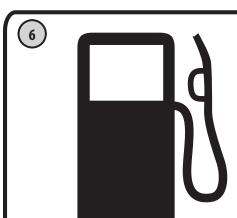



Fill fuel tank with clean, fresh gasoline. Do not fill above the base of fuel tank neck.

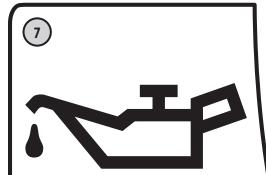

Pour the entire contents of the oil bottle (supplied) into the oil fill. Check the oil level using the dipstick. (Refer to the Operator's Manual)

FAST START GUIDE

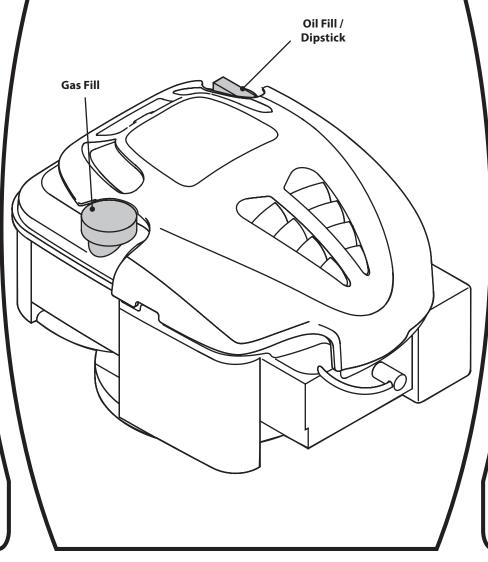

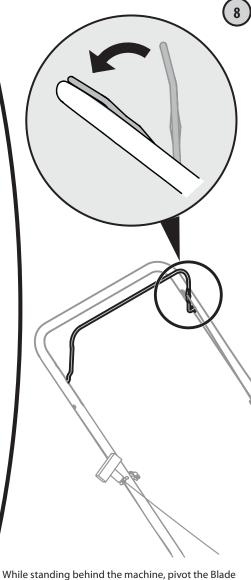

Control Handle against the upper handle.

Grasp the starter rope handle and pull with quick, full-arm stroke. If the engine does not start after three pulls, wait a few minutes and repeat.

© 2010 11A-A26

Form No. 778-11916



