







A. Remove the wing nuts and carriage bolts securing the upper handle to the lower handle.

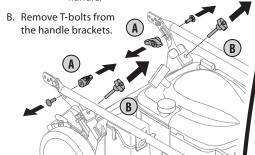

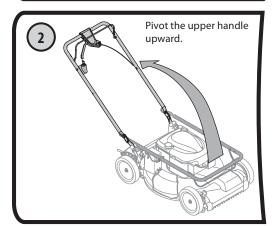

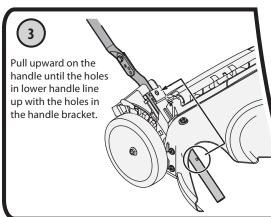




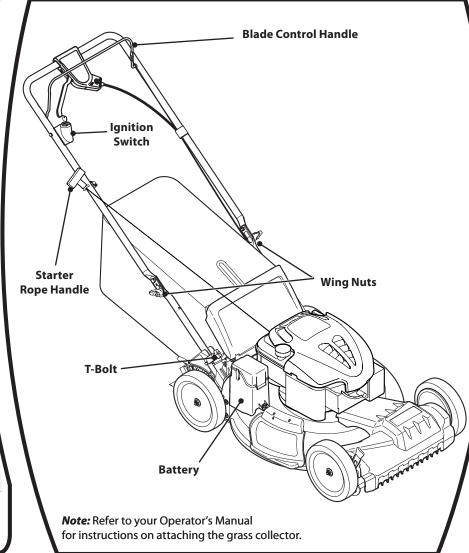

A. Insert the T-bolts removed in Step 1B through the handle brackets to secure the handle in place.



B. Secure upper handle to lower handle with wing nuts (on outside) and carriage bolts removed Step 1A.

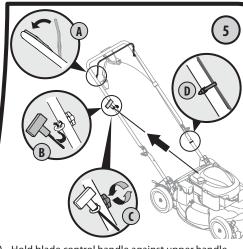

- A. Hold blade control handle against upper handle.
- B. Slowly pull starter rope handle from engine and slip starter rope into the rope guide.
- C. Tighten rope guide wing knob.
- D. Use cable tie to secure cables to lower handle.

Form No. 778-12230A




© 2011 12AGA26








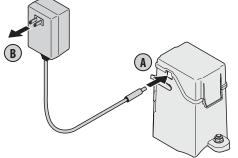

- A. Plug the battery charger into the port on the side of the battery housing.
- B. Insert the battery charger plug into a standard 120 volt outlet. Charge battery for eight


Do not charge longer than 12 hours.



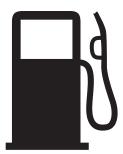


Fill fuel tank with clean, fresh gasoline. Do not fill above the base of fuel tank neck.



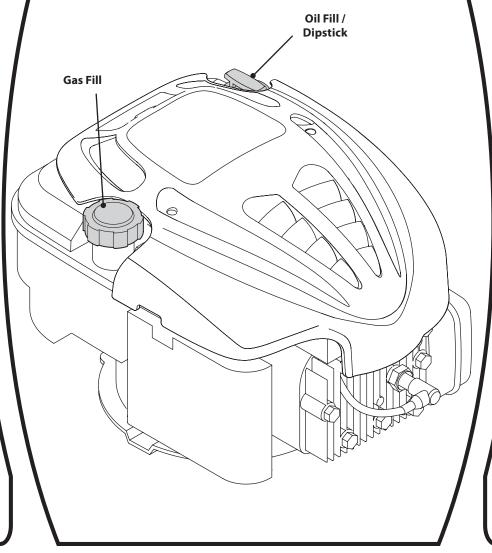



Pour the entire contents of the oil bottle (supplied) into the oil fill. Check the oil level using the dipstick. (Refer to the Operator's Manual)

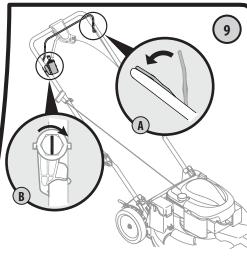

- A. While standing behind the machine, pivot the Blade Control Handle against the upper handle.
- B. Turn the ignition key clockwise to start the engine. If the engine does not start after repeated attempts, wait a few minutes and repeat.

© 2011 12AGA26

Form No. 778-12230A



