
READ AND UNDERSTAND ALL INSTRUCTION, WARNING, AND DANGER LABELS. PARA INSTRUCCIONES EN ESPAÑOL, REFIÉRASE AL MANUAL DEL OPERADOR.

Install the wire spring into the discharge opening of the snow thrower by inserting both ends into the slots provided. Refer to figure below for proper location and orientation of the spring. The inset of the figure shows the spring properly installed with the ends fitted into the slots provided.


NOTE: Place some of the white lithium grease provided on the wire spring and chute adapter ring prior to assembly as shown.

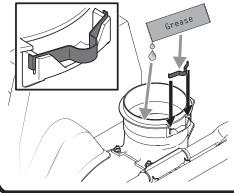


Install the discharge chute, packed loose in the carton, onto the snow thrower attachment.


Note: Position the discharge chute at an angle to the right for ease of installation.

Important: Apply white lithium grease (included with this attachment) onto the chute ring, chute spring, and chute adapter ring prior to assembly.

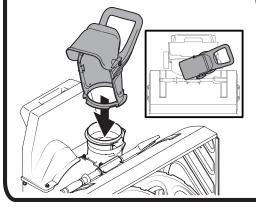

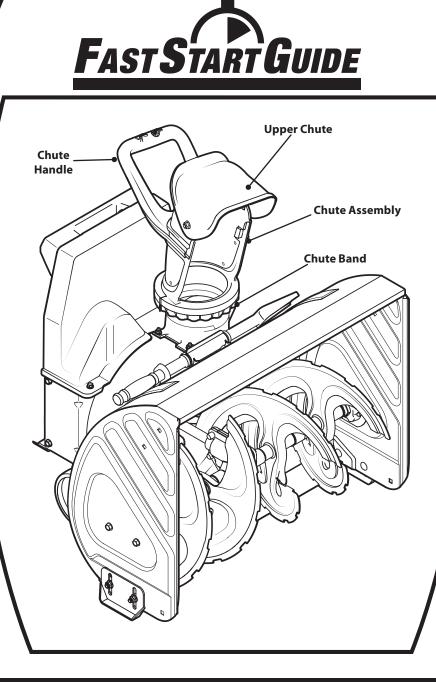

Gip the discharge chute handle onto the discharge chute, as shown in the figure below.

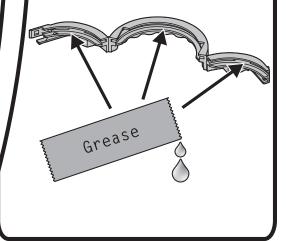


© 2015 23AABA6X



IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE IMPORTANT SAFE OPERATION PRACTICES BEFORE OPERATING

Need Help? Call 1-888-TO-HELP-U

READ AND UNDERSTAND ALL INSTRUCTION, WARNING, AND DANGER LABELS. PARA INSTRUCCIONES EN ESPAÑOL, REFIÉRASE AL MANUAL DEL OPERADOR.

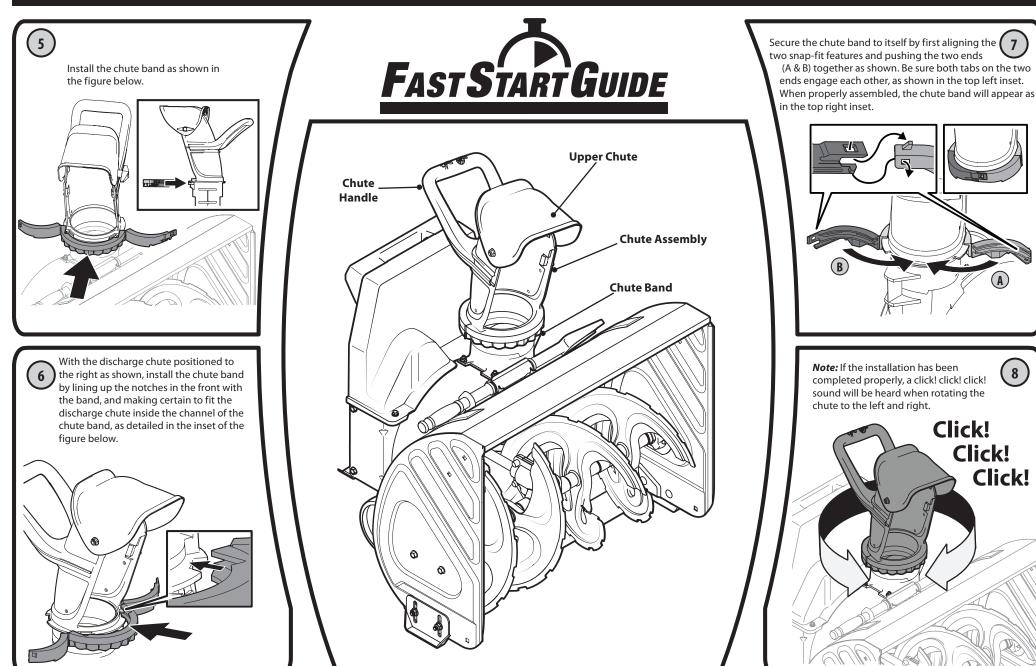

8

© 2015 23AABA6X



IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE IMPORTANT SAFE OPERATION PRACTICES BEFORE OPERATING

Need Help? Call 1-888-TO-HELP-U