
## READ AND UNDERSTAND ALL INSTRUCTION, WARNING, AND DANGER LABELS. PARA INSTRUCCIONES EN ESPAÑOL, REFIÉRASE AL MANUAL DEL OPERADOR.







A. Remove the wing nuts and carriage bolts securing the upper handle to the lower handle.


B. Remove T-bolts from the handle brackets.

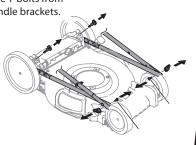

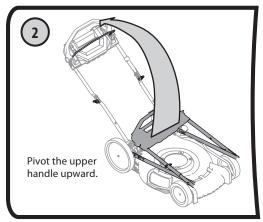


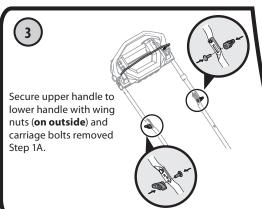




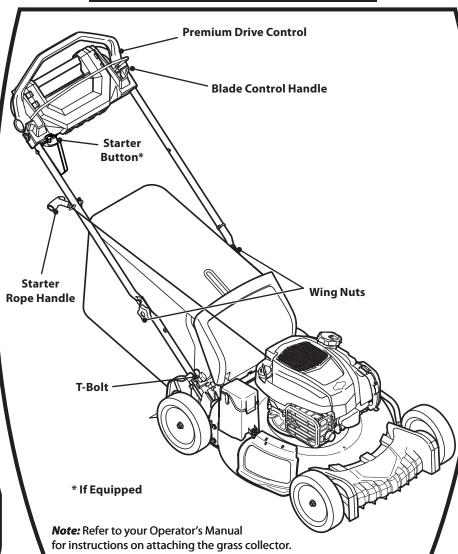

Insert the T-bolts removed in Step 1B through the handle brackets to secure the handle in place.

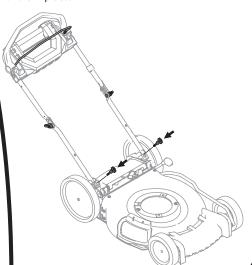

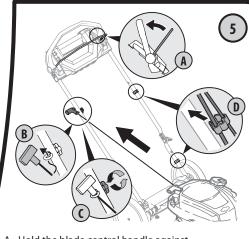

- A. Hold the blade control handle against the premium drive control.
- B. Slowly pull starter rope handle from engine and slip starter rope into the rope guide.
- C. Tighten rope guide wing knob.
- D. Use clips to secure cables to lower handle.


© 2018 12XXP3A









Pour the entire contents of the oil bottle (supplied) into the oil fill. Check the oil level using the dipstick. (Refer to the Operator's Manual)

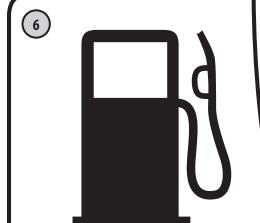


Fill fuel tank with clean, fresh gasoline. Do not fill above the base of fuel tank neck.

## FAST START GUIDE

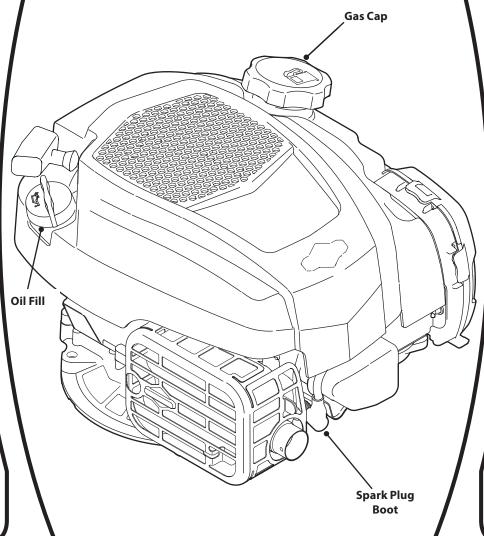

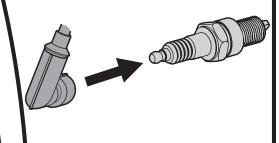

Make sure the spark plug boot is connected to the spark plug before attempting to start.

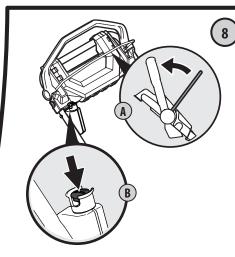

- A. While standing behind the machine, pivot the Blade Control Handle against the upper handle.
- B. Insert and push the electric starter push key to start the engine. If the engine does not start after repeated attempts, wait a few minutes and repeat.

© 2018 12XXP3A





